

# User Manual for DEVO-8

## Part one: General information 7

1.0 General information.....	7
1.1 Foreword	8
1.2 Important statements	8
1.3 Safety needing attention	9
1.4 Attention before flight	11
2.0 Features .....	
2.1 Features of DEVO-8	12
2.2 Features of RX1201	13
3.0 Specification .....	
3.1 DEVO-8 specification	13
3.2 Receiver specification	14
4.0 Definition of DEVO-8 .....	
4.1 Panel definition	14
4.2 Rear definition	16
4.3 Wiring Diagram	18
4.4 Function keys in panel	19
5.0 Control stick adjustment.....	
5.1 Control stick length adjustment	20
5.2 Control stick tension adjustment	21
6.0 Neck strap usage.....	
7.0 Stick mode switch.....	
8.0 Switches between left-hand and right-hand throttles.....	
8.1 Right-hand throttle switched to left-hand throttle	25
8.2 Left-hand throttle switched to right-hand throttle	28
9.0 Training function .....	

10.0 Customized fixed ID .....	
11.0 Installation requirements for receiver.....	
12.0 Installation requirement for DEVO-8 Battery pack.....	
12.1 Matters needing attention on battery pack	44
12.2 DEVO-8 battery charging	45
12.3 Voltage parameters	46
12.4 Indication for charging status	47
<b>Part two: Helicopter</b>	<b>49</b>
<b>1.0 System menu</b> .....	
1.1 Language setting	51
1.2 Skin selection	52
1.3 Display	53
1.4 Buzzer warning	55
1.5 Date & Time	56
1.6 TFT screen calibration	59
1.7 Stick mode	60
1.8 Stick and lever	61
1.9 Power amplifier	65
1.10 About	66
<b>2.0 Model menu</b> .....	
2.1 Model select	67
2.2 Model name	67
2.3 Model copy	70
2.4 Model wireless copy	72
2.5 Model reset	75
2.6 Type select	78
2.7 Trim system	79
2.8 Stick position	80
2.9 Warning	84
2.10 Device select	86
2.11 Device Output	89

2.12 Swash type 95

2.13 Fixed ID 96

3.0 Function Menu .....

3.1 Reverse Switch 101

3.2 Travel adjust 102

3.3 Sub Trim 103

3.4 Dual Rate and Exponential 105

3.5 Throttle hold 114

3.6 Throttle curve 117

3.7 Mix to throttle 120

3.8 Gyro sensor **Error! Bookmark not defined.**

3.9 Governor **Error! Bookmark not defined.**

3.10 Tail curve **Error! Bookmark not defined.**

3.11 Dual pitch **Error! Bookmark not defined.**

3.12 Swash mix **Error! Bookmark not defined.**

3.13 Pitch curve **Error! Bookmark not defined.**

3.14 Program mix **Error! Bookmark not defined.**

3.15 Monitor **Error! Bookmark not defined.**

3.16 Fail safe **Error! Bookmark not defined.**

3.17 Trainer **Error! Bookmark not defined.**

3.18 Timer **Error! Bookmark not defined.**

Part three: Airplane 122

1.0 System menu .....

1.1 Language setting 123

1.2 Skin selection 124

1.3 Display 125

1.4 Buzzer warning 127

1.5 Date & Time 128

1.6 TFT screen calibration 131

1.7 Stick mode 132

1.8 Stick and lever 133

1.9 Power amplifier 137

1.10 About 138

2.0 Model menu .....

2.1 Model select 139

2.2 Model name 139

2.3 Model copy 142

2.4 Model copy 144

2.5 Model reset 147

2.6 Type select 150

2.7 Trim system 151

2.8 Stick position 152

2.9 Warning 156

2.10 Device select 159

2.11 Device Output 161

2.12 Wing type 169

2.13 Fixed ID 179

3.0 Function Menu .....

3.1 Reverse switch 185

3.2 Travel adjust 185

3.3 Sub trim 187

3.4 Dual rate and exponential 189

3.5 Throttle hold 194

3.6 Throttle curve 196

3.7 Snap roll 201

3.8 Differential 203

3.9 Balance 208

3.10 Gyro sensor 211

3.11 Governor 214

3.12 Aileron to Rudder Mix 216

3.13 Elevator to flap mix 218

3.14 Rudder to aileron/elevator mix 221

- 3.15 Flap system 224
- 3.16 Aileron to flap mix 227
- 3.17 Pitch curve 229
- 3.18 Program mix 233
- 3.19 Monitor 241
- 3.20 Fail safe 242
- 3.21 Trainer 244
- 3.22 Timer 251

**Part four: Glider 254**

- 1.0 System menu**.....
- 1.1 Language setting 256
- 1.2 Skin selection 256
- 1.3 Display 257
- 1.4 Buzzer warning 259
- 1.5 Date & Time 260
- 1.6 TFT screen calibration 263
- 1.7 Stick mode 264
- 1.8 Stick and lever 265
- 1.9 Power amplifier 269
- 1.10 About 270

- 2.0 Model menu** .....
- 2.1 Model select 271
- 2.2 Model name 271
- 2.3 Model copy 273
- 2.4 Model wireless copy 276
- 2.5 Model reset 279
- 2.6 Type select 282
- 2.7 Trim system 283
- 2.8 Stick position 284
- 2.9 Warning 288
- 2.10 Device select 289

2.11 Device Output 292

2.12 Wing type 297

2.13 Fixed ID 301

3.0 Function menu .....

3.1 Reverse switch 307

3.2 Travel adjust 307

3.3 Sub trim 308

3.4 Dual rate and exponential 310

3.5 Motor hold 316

3.6 Flaperon mix 318

3.7 Camber system 321

3.8 Differential 324

3.9 Balance 326

3.10 Gyro sensor 328

3.11 Rudder to spoiler mix 329

3.12 Aileron to rudder mix 330

3.13 Elevator to flap mix 333

3.14 Aileron to flap mix 335

3.15 Flap to tip-aileron mix 336

3.16 Flap rate 338

3.17 Brake system 340

3.18 Program mix 342

3.19 Monitor 349

3.20 Fail safe 350

3.21 Trainer 352

3.22 Timer 359

Welcome to THE DEVO-8 transmitter.

Note: read THE MANUAL thoroughly before using, and keep it in a safe place for the future reference.



User Manual of DEVO-8 transmitter

## Part one: General information

### 1.0 General information

## **1.1 Foreword**

DEVO-8 takes 2.4GHz Direct Sequence Spread Spectrum (DSSS) technology, features automatic ID binding, automatic ID assignment, and also features CUSTOMIZED fixed ID setup. The usage of wireless copy function keeps you away from the trouble in wire link-up. Three mode types of Helicopter, Airplane, and Glider are available to meet your requirements for different models. Touch screen with wide area is used and it offers you convenient operation. USB Online update technology ensures one transmitter in hand forever not to be out of date and makes it full of vigor.

## **1.2 Important statements**

- 1) The transmitter is suitable for experienced radio controlled aircraft modelers beyond 14 years old.
- 2) Flying the model aircraft in approved ground is a must.
- 3) We are not responsible for any safety caused by operation, usage or control as soon as the transmitter is sold out.
- 4) We consign our distributors to offer technical support and service after sale. Please contact the local distributors for problem solutions caused by usage, operation, maintenance, etc.



### 1.3 Safety needing attention

1) Far away from obstacle and people.

RC aircraft in flights is uncertain of flight speed and status, which potential risk exists in when flying. Please keep your radio controlled aircraft far away from people, high buildings, high-tension line, etc, and avoid operating in rain, storms, thunder and lightening.

2) Away from **HUMID** environment

Radio controlled aircraft should be kept away from humidity and vapor because it is composed of complicated precise electronic elements and **MECHANICAL** parts.

3) Proper operation

Use original spare parts to upgrade, modify or maintain your equipment in order to assure its safety. Please operate your equipment within the range of functions permitted. It is forbidden to use out of the safety laws or regulations.

4) Safety operation

Operate your equipment according to your body status and flight skills. Fatigue, listlessness and mis-operation will increase the possibilities of accidental hazard.

5) Away from heat sources

The inside of the transmitter is composed of precise electronic

components and mechanical parts. Keep it far away from heat sources and sunshine to avoid distortion, or even damage caused by high temperature.

6) Correct charging method

Use the assorted charger to charge the battery for your DEVO-8. The usage of the charger should be within the range of rated voltage.

#### **1.4 Attention before flight**

- 1) Ensure the battery packs of both transmitter and receiver are fully saturated.
- 2) Ensure both the throttle stick and the throttle trim of your DEVO-8 stay at the lowest positions before operation.
- 3) Strictly obey the order of TURN-ON and TURN-OFF before operation. When starting your flight, turn on your DEVO-8 first, and connect the battery to the aircraft last. When turning off the aircraft, disconnect the battery first, and turn off your DEVO-8 last. An upset in the order may cause your aircraft out of control. Cultivate a correct habit of turn-on and turn-off.
- 4) Ensure whether the directions and actions of all the servos in your RC aircraft are correct when executing commands of the transmitter. Using broken servos will result in unforeseen dangers.

## **2.0 Features**

### **2.1 Features of DEVO-8**

- 1) The DEVO-8 adopts 2.4 GHz Direct Sequence Spread Spectrum (DSSS) technology and features both automatic ID binding and ID assignment. It can also be customizedly set as fixed ID code.
- 2) USB online update makes you always enjoy the latest program.
- 3) Hi-frequency output power is adjustable.
- 4) Wireless data transmission between two DEVO-8 helps experience the training function.
- 5) Up to 60-model data can be saved.
- 6) DEVO-8 adjusting the gyro sensitivity makes hovering flight and fancy flight in an easy way.
- 7) Ultra big size TFT touch screen with graphic interface features direct and convenient setting.
- 8) Shape design accords with human engineering, and provides comfortable holding.
- 9) Both the length and tension of the sticks can be amendable.
- 10) DEVO-8 can be freely switched among Modes 1, 2, 3, and 4.
- 11) DEVO-8 is suitable for Helicopter, Airplane, and Glider. In the

Helicopter mode, there are three flight modes, each of which can be freely set and whose parameters can be personalizedly adjusted to meet the requirement for F3C or 3D aerobatic flight.

## **2.2 Features of RX1201**

- 1) Adopt 2.4GHz Direct Sequence Spread Spectrum (DSSS) that features fast reaction and strong anti-jamming protection.
- 2) Double receiving circuits effectively assure stability of receiving signal.
- 3) The single chip as CPU provides super-strong analyzing ability.
- 4) RX-12 maintains memories of both the frequency and ID code when it is changed a new battery pack with DEVO-8 powered on
- 5) It can be set as a custom fixed ID and automatic ID assignment. .

## **3.0 Specification**

### **3.1 DEVO-8 specification**

Encoder .....8-channel micro computer system  
Frequency ..... 2.4GHz DSSS  
Output power ..... ≤ 100 mW


Current drain ..... ≤ 230 mA (at 100 mW)  
 Power supply ..... 5# Dry cell 4\*1.5V, or NiMH 4\*1.2V  
 1,600 - 2,000 mAh  
 Output pulse ..... 1000 – 2000 mS (1500 Neutral)

### 3.2 Receiver specification

Type ..... 2.4GHz 8 channels  
 Sensitivity ..... - 105 dbm  
 Frequency interval ..... ≥ 4 M  
 Weight ..... 9.5 g  
 Dimension ..... 38X28.5X14.5mm  
 RX power supply ..... 4.8-6V 1,300mAh

## 4.0 Definition of DEVO-8

### 4.1 Panel definition

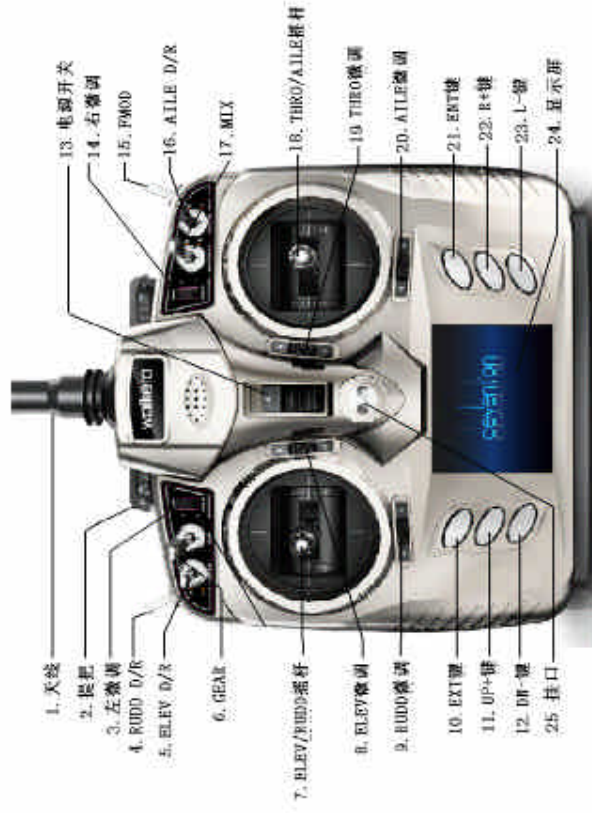


1. 天线 / Antenna
2. 提把 / Handle
3. 左微调 / Left trim
4. 方向舵大小舵量切换开关 / RUDD D/R
5. 升降舵大小舵量切换开关 / ELEV D/R
6. 起落架开关 / Gear
7. ELEV/RUDD 摇杆 / ELEV/RUDD stick
8. ELEV 微调 / ELEV trim

9. RUDD 微调 /RUDD trim
10. EXT 键 / EXT
11. UP+键 / UP+
12. DN-键 / DN
13. 电源开关 / Power switch
14. 右微调 / Right trim
15. FMOD
16. AILE D/R
17. MIX
18. THRO/AILE 摇杆 / THRO/AILE stick
19. THRO 微调 / THRO trim
20. AILE 微调 / AILE trim
21. ENT 键 /ENT
22. R+键 / R+
23. L-键 / L-
24. 显示屏 / Screen
25. 挂口 / Eyelet


## **4.2 Rear definition**



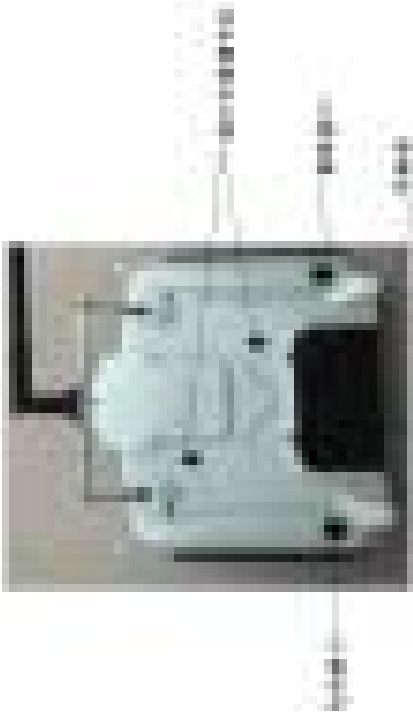

1. Regulation holes for throttle stick tension.
2. Charge socket (CHG): input DC at 8-12V, 200 mA;  
Polarity:  $\oplus$   $\rightarrow$   $\ominus$  .
3. Battery compartment cover
4. Digital Signal Converter socket (DSC): for simulator flight practice via computer (You need software and its dongle which are available in hobby shops, and for training).

### 4.3 Wiring Diagram

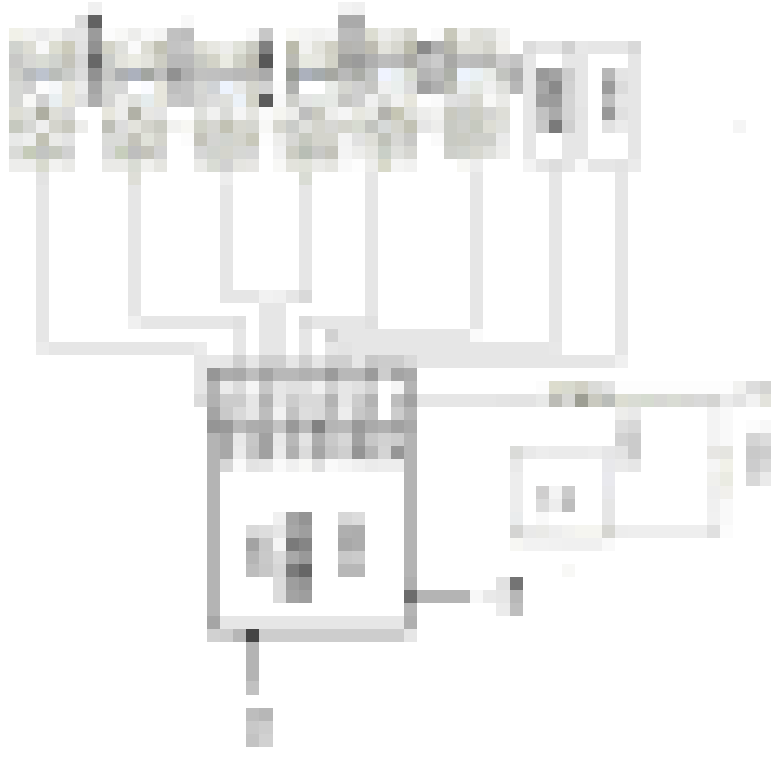

接收器 Receiver/ DEVO-RX801

天线 / Antenna

电池 / Battery

电源开关 / Power switch

充电接头 / Charge jack

升降舵舵机 / Elevator servo

副翼舵机 / Aileron servo

油门舵机 / Throttle servo

方向舵舵机 / Rudder servo

起落架舵机 / Gear servo

辅助通道 1 / AUX 1

辅助通道 2 / AUX 2

辅助通道 3 / AUX 3

#### 4.4 Function keys in panel

There are 6 functional keys in the panel of DEVO-8. Below are the details:

- 1) EXT: Resetting key. Press EXT to exit the menu.
- 2) ENT: Confirmation key. Press ENT to get access to the system or the function mode.
- 3) UP+: Function-selecting key. Move cursor up to the forward function item.
- 4) DN-: Function-selecting key. Move cursor down to the next function item.
- 5) R+: Move cursor rightwards to increase the setting value.
- 6) L-: Move cursor leftwards to decrease the setting value.

## 5.0 Control stick adjustment

The control stick adjustment includes two parts: length adjustment and tension adjustment.

### 5.1 Control stick length adjustment

- 1) Prolong the stick length: Counter clockwise rotate the stick head until the length you desire, and then counter clockwise tighten the stick sleeve.
- 2) Shorten the stick length: Clockwise rotate the stick sleeve until the length you desire, and then clockwise tighten the stick head.




手柄头 / stick head

手柄套筒 / stick sleeve

## 5.2 Control stick tension adjustment

Clockwise rotate the stick tension screw through the regulation hole in the **REAR** panel of DEVO-8 for tightening the tension of the corresponding stick by a Phillips screwdriver, and counterclockwise rotate the stick tension screw for loosening the tension.

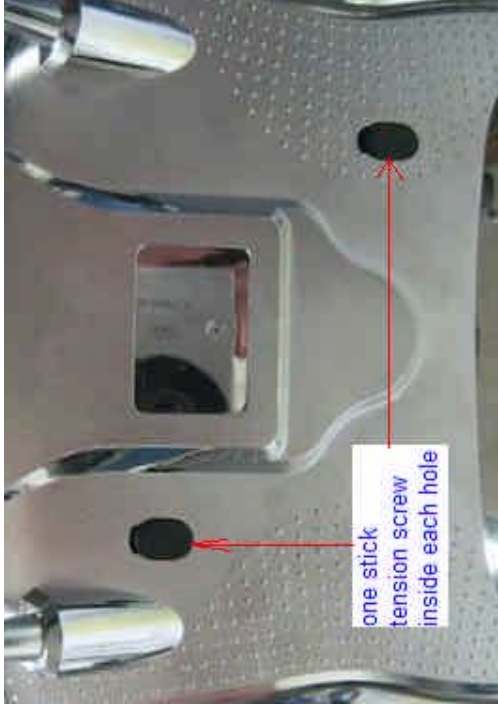

## 6.0 Neck strap usage

The neck strap can be connected to the eyelet. The eyelet located at the center helps to get the best balance of your DEVO-8.

挂扣



## 7.0 Stick mode switch

There are total four stick modes from MODE 1 through MODE 4. The left-hand throttle contains MODE 2 and MODE 4, and the right-hand throttle includes MODE 1 and MODE 3. Below are the sketch maps:

- 1) Left-hand stick includes MODE 2 and MODE 4.  
MODE 2



MODE 4



2) Right-hand stick includes MODE 1 and MODE 3.

MODE 1



MODE 3



## 8.0 Switches between left-hand and right-hand throttles



The throttle switches between the left hand and right hand will be successful if both the MECHANICAL switch and ELECTRONIC switch are finished, separately. Below are the methods for switching.

## 8.1 Right-hand throttle switched to left-hand throttle

### 1) MECHANICAL switch


Open the battery compartment cover in the rear of your DEVO-8. Push rightwards and take out the battery pack.



右侧软胶 / Right non-slipping block


左侧软胶 / Left non-slipping block

Remove the left lateral and right lateral non-slipping blocks, respectively.

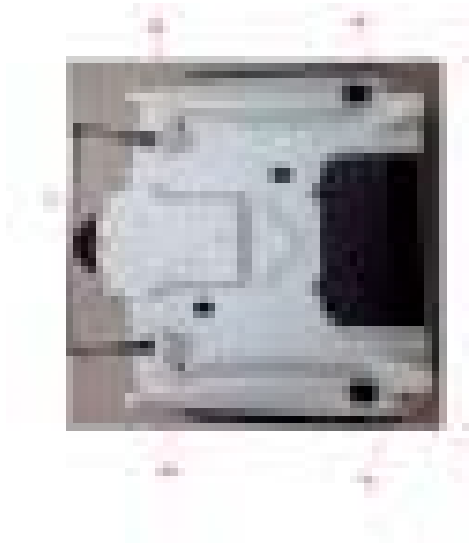

Remove the fixed screws A, B, C, D, and E, and then remove the base plate.


Below are shown the inside views of left and right throttle sets, respectively. Use cross screwdriver to loosen and remove Linkage Fixed Screw, Screw F, Screw G, and Throttle Control Spring in right throttle set, respectively, and then mount them in the corresponding positions in left throttle set. And then adjust the stick tension according to your habit.

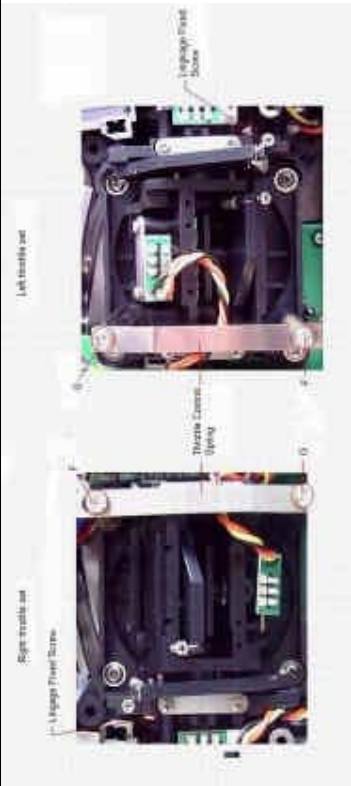

Right throttle set
Left throttle set
Linkage Fixed Screw
Throttle Control Spring

## 2) ELECTRONIC switch



Touch the shortcut icon  to enter System Menu, and then touch



the icon  to enter the **STICK MODE INTERFACE**, and then select the mode you desire.



Touch to save and exit after the selection is finished.

The switch from right-hand throttle to left-hand throttle is finished after both the MECHANICAL and ELECTRONIC switches changed, respectively. And the transmitter is ready to normally work now.


## 8.2 Left-hand throttle switched to right-hand throttle

1) MECHANICAL switch

Refer to the above "MECHANICAL switch" to open the transmitter cover.

Below are shown the inside views of left and right throttle sets, respectively. Use cross screwdriver to loosen and remove Linkage

Fixed Screw, Screw F, Screw G, and Throttle Control Spring in left throttle set, respectively, and then mount them in the corresponding positions in right throttle set. And then adjust the stick tension according to your habit.

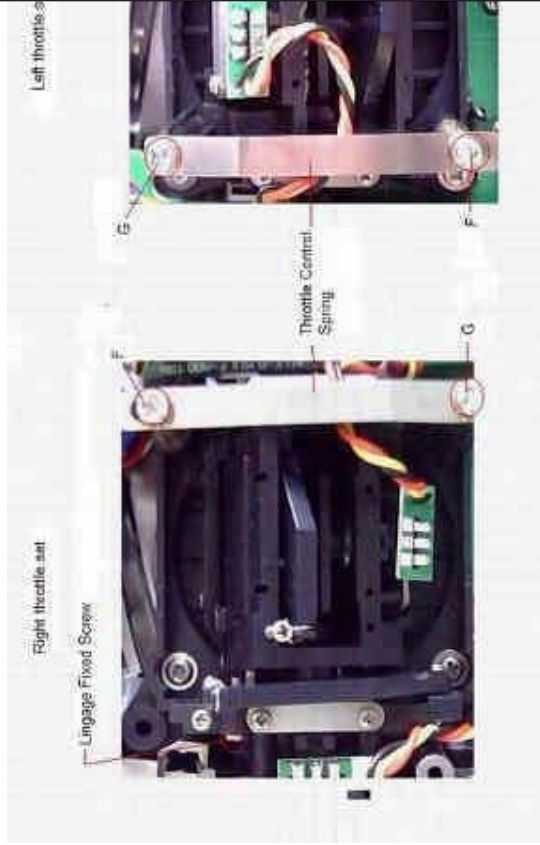

## 2) ELECTRONIC switch



Touch the shortcut icon to enter System Menu, and then touch



the icon to access to Stick Mode.

The model data will be automatically switched when touching MODE 1 or MODE 3.

 


The left- and right-stick positions are shown, respectively, in the lower right corner when MODE 1 is selected.



The left- and right-stick positions are shown, respectively when MODE 3 is selected.



Touch  to save and exit after the selection is finished.

The switch from left-hand throttle to right-hand throttle is finished after both the MECHANICAL and ELECTRONIC switches changed, respectively. And the transmitter is ready to work normally.

**Note:** pay attention to the force when rotating the screws. Excessive forces may damage them.

## 9.0 Training function

Two DEVO-8s working together can execute the training function to meet the requirements for the beginners. The setting method is shown as below:

### 1) Data copy

Using the wireless copy function of two DEVO-8 equipments, the model data saved in the trainer's one can be transmitted to the trainee's to ensure that the model parameters are exactly same. Regarding the copying method, refer to "2.4 Model Wireless Copy" at "Part Two: Helicopter". Then follow the steps below:

### 2) Linkage

### 2.1) Treatment of trainee's DEVO-8

Insert one end of the signal wire into DSC socket at the rear face of the trainee's DEVO-8, and then turn on the power. A linkage icon will be shown on the boot screen. Find out the trainee's model data at its DEVO-8.



联机图标 / linkage icon

### 2.2) Treatment of trainer's DEVO-8

Turn on the power of the trainer's DEVO-8. Find out the trainee's model data, and then let the trainer's DEVO-8 bind with the aircraft model and fly it normally. Then turn off the power.

Insert the other end of the digital signal wire into the trainer's DEVO-8, and then turn on its power. A linkage icon will be shown as below:





联机图标

教练状态显示:未开教练开关时显示X,开了教练开关时显示√

联机图标

教练状态显示:未开教练开关时显示X,开了教练开关时显示√

Linkage icon

Training status: "X" will be shown when the training switch is turned off, and "√" shown when the training switch on.



Training status display: when the trainer's icon becomes into "X", the trainee stops flying and the trainer is working; when the trainer's icon turns into "✓", the trainee is flying and the trainer is in leisure.



### 3) Usage method

The training switch can be freely switchable between Left trim and Right trim. The default setting is Right trim. Shown as below:



左微调	Left trim
右微调	Right trim

During flight, if the trainer pushes Right Trim once, the linkage icon will be shown as “√” that means the control right is moved to the trainee from Trainer. If trainer pushes Right Trim once again, the linkage icon will be shown as “X” that means the trainer takes back the control right from the trainee.

4) Setting for training function channels

Trainee is available to get full or part of flight control power to the aircraft model via setting the training function channel in the trainer's

DEVO-8. Below is the setting method:




Touch the shortcut icon to enter Function Menu, and then



click to get access to Trainer screen.

The available channels are shown below, and the current status of trainer switch TRN is also shown there.

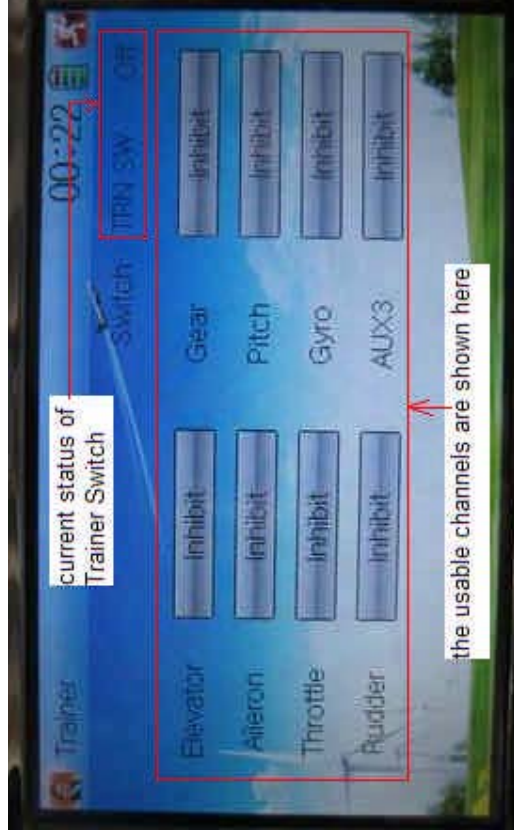

**English**

**Your language**

Current status of Trainer Switch (TRN SW)

The usable channels are shown here

Touch the channel(s) which you want to grant to trainee. The channel(s) you have touched will be activated as "Active". The channels which are not granted to trainee will be kept inhibited. The default setting is "Inhibit".



Touch  to exit.


## 10.0 Customized fixed ID

This setting will bind DEVO-8 with its receiver in a unique corresponding relationship. It will greatly speed up the time of automatic binding when DEVO-8 powered on.

### 1) Setting for fixed ID

The setting for fixed ID should be under the status that automatic ID binding is successfully finished. Below is the setting method.

Touch the icon  to enter Model Menu, and then enter Fixed ID by touching the icon  in Model Menu.

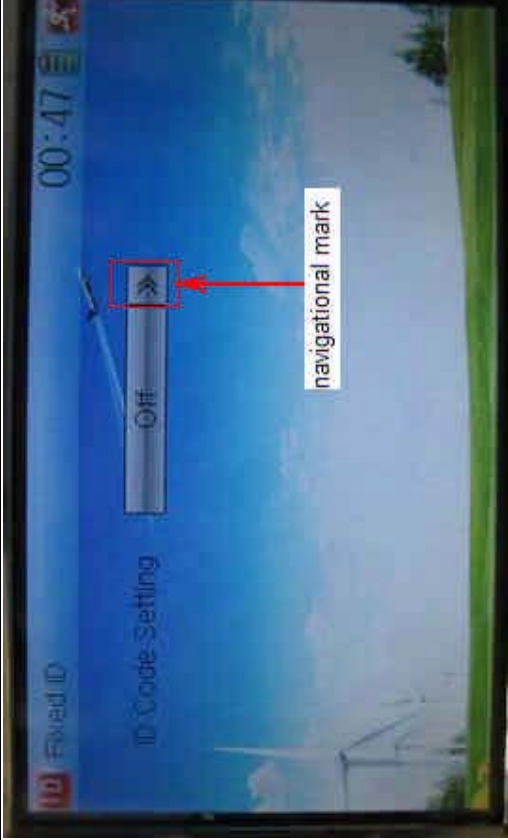

**English**

**Your language**


Navigation mark

Touch the navigation mark of the item ID Code Setting. It will expand into two statuses: Off and On. A series of random digits will be shown below after touching On.



English	Your language
Touch "On"	
A series of random digits is shown here	

A mini soft keyboard is shown in the lower part after touching the random digits of ID Code

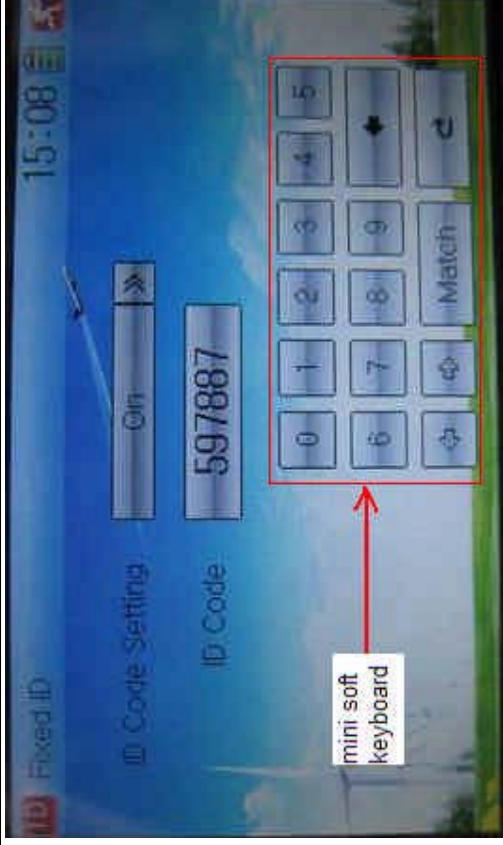

The new ID digits can be modified by touching the mini soft keyboard. Touch Match after the new ID has been set. An **INQUIRY** interface of "Are you sure?" pop up. "ID Code Match ... .." will be shown after touching OK.








<b>English</b>	<b>Your language</b>
ID Code Setting	
ID Code	
Fixed ID	
Are you sure?	
Cancelled	CANCEL
ID Code Match	

2) Fixed ID cancellation

Insert the assorted BIND PLUG into the output terminal of BATT before the receiver is powered on, and then plug 5V DC power into other output terminal. The red light of receiver will flash slowly. This means the fixed ID code has been cancelled. Pull out BIND PLUG.




DEVO-8 also needs to make relative cancellation and **REVISION** after the fixed ID in receiver is cleared out.

In the main interface touch the icon  to enter Model Menu and then touch  to enter Fixed ID. Touch ID Code Setting to expand the navigation mark into **STATUS** On and Off. Touch Off. Then touch  to exit.

## 11.0 Installation requirement for receiver

It is important to correctly mount your remote control system in your model. Below are some advices on how to install your equipments.

- 1) Wrap the receiver with 10mm thick foam and soundly fix it with a rubber or magic string on your aircraft model. It helps protect the receiver from damage.
- 2) It is necessary to use rubber grommets and copper sleeves to isolate the vibrations from the main body of aircraft model. The mounting screws cannot be over-tightened. Otherwise the rubber grommets will be distorted and decrease the vibration absorption effect.
- 3) When mounting the servos, make sure the servos' bellcranks can move freely over their whole travel range and ensure the control linkages don't touch or impede the movement of these servos.
- 4) If installing various switches, keep them far away from the engine tuned pipe and high vibration sources. Ensure all the switches move freely over their whole travel range.
- 5) Don't make the receiver antennas wrapped or parallel.

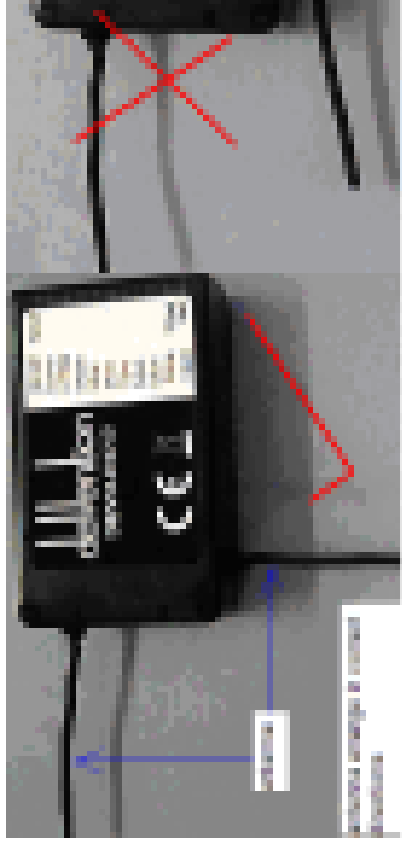

<b>English</b>	<b>Your language</b>
Antenna	
Antenna arranges in correct directions	ANTENNA IN CORF
Antenna arranges in wrong directions	ANTENNA IN WROI

## 12.0 Installation requirement for DEVO-8

### Battery pack

Put the battery pack into the battery compartment in a correct position and then push it leftwards.



English	Your language
Battery compartment	
Put the battery pack into the battery compartment and push it leftwards	PUT THE BATTERY COMPARTMENT AN

**12.1 Matters needing attention on battery pack**

- 1) **DO NOT** disassemble battery pack **UNDER ANY CIRCUMSTANCE**
- 2) **DO NOT** use or **STORE** battery pack under high temperature **SUCH** as fire, heat, strong sunshine, or car. Otherwise superheat, fire, functional decline or lifetime dumping may happen.



- 3) **DO NOT SUBMERGE** the battery pack in water.
- 4) **DO NOT** make a short circuit between anode and cathode of battery pack.
- 5) **DO NOT** use damaged battery pack. The battery pack with electrolyte leaking or smelling should be **KEPT AWAY** from fire in order to avoid firing or explosion. **IN CASE OF EXPOSURE TO SKIN, EYES, OR OTHER BODY PART WASH WITH WATER AND IMMEDIATELY SEEK MEDICAL ATTENTION.**

## 12.2 DEVO-8 battery charging

DEVO-8, which is equipped with two build-in charging circuits, is powered by 3.7V 3000mAh Lithium Polymer battery. It begins to charge when the output pin of the assorted power adapter is inserted into CHG socket, or the normal end of USB connecting line is connected to the computer USB interface, and the mini end is inserted into USB in the side face of DEVO.



Charging connection is shown as below:

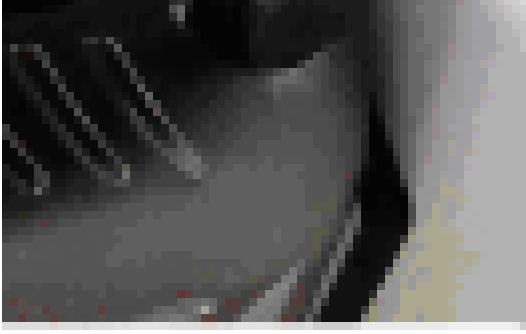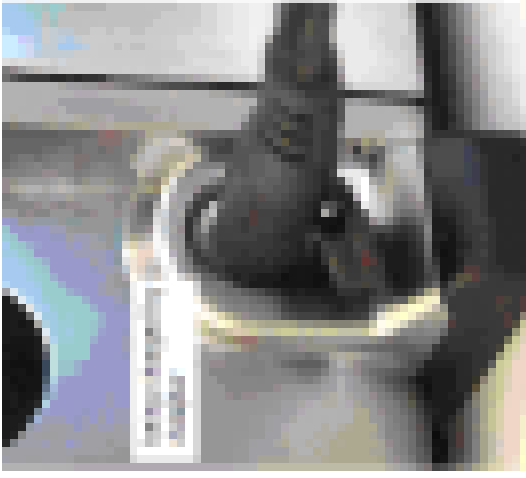

English	Your language
CHG charging socket	
USB charging socket	
Being charged by adapter	
Being charged by mini USB	

### 12.3 Voltage parameters

Output of assorted power adapter ..... 5.0V 2000mA

Maximum current of CHG socket .....700mA

Maximum current of USB interface .....350mA

## 12.4 Indication for charging status


There is a slim V-shape indicator light at the top center of DEVO-8. It indicates three different working statuses from left to right:

### 1) Basic status

1.1) Charging indicator light: blue light is **ON**

1.2) Power-on status of DEVO-8: red light is **ON**

1.3) Saturation level of charge: green light is lighting when the battery pack is unsaturated; green light is extinguished when saturated.

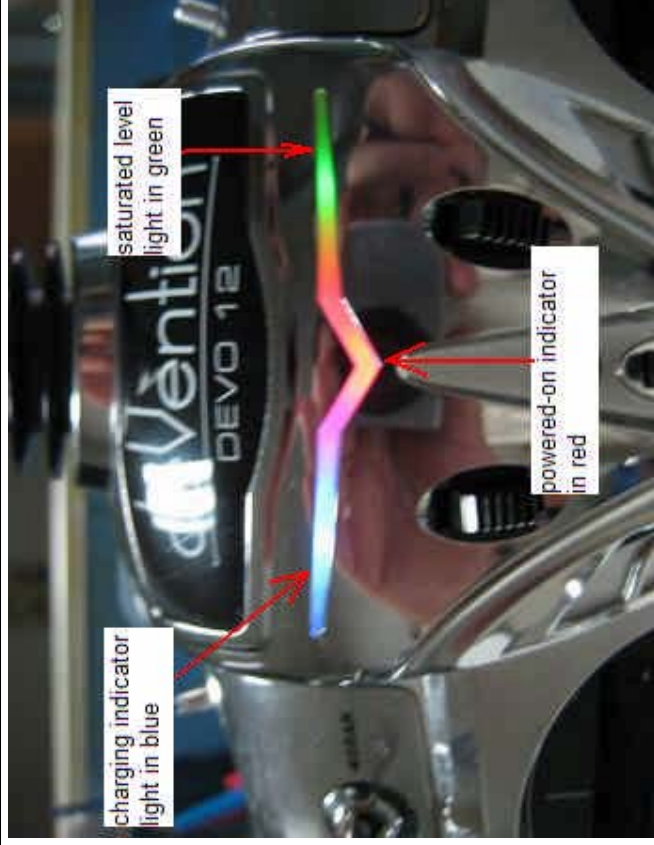

English	Your language
Charging indicator light in blue	
Power-on indicator light in red	
Saturation level light in green	

2) Charging at power-on status:

2.1) Charging indicator light: blue light is always lighting;

2.2) Power-on indicator light: red light is always lighting;

2.3) Saturation level indicator light: the green light is always lighting if



the battery pack is unsaturated; the green light is extinguished if saturated.

3) Charging at power-off status:


- 3.1) Charging indicator light: blue light is always lighting;
- 3.2) Power-on indicator light: red light is extinguished;
- 3.3) Saturation level indicator light: the green light is lighting when the battery pack is unsaturated; green light is extinguished when saturated.

## **Part two: Helicopter**

### **1.0 System menu**

All the functional settings, which are relative to the operation system of DEVO-8 itself, are **FULLY** integrated in System Menu. They include Language, Skin, Display, Buzzer, Date & Time, TFT Screen, Stick Mode, Stick & Lever, Power Amplifier, and About.

Below is the boot screen of helicopter:

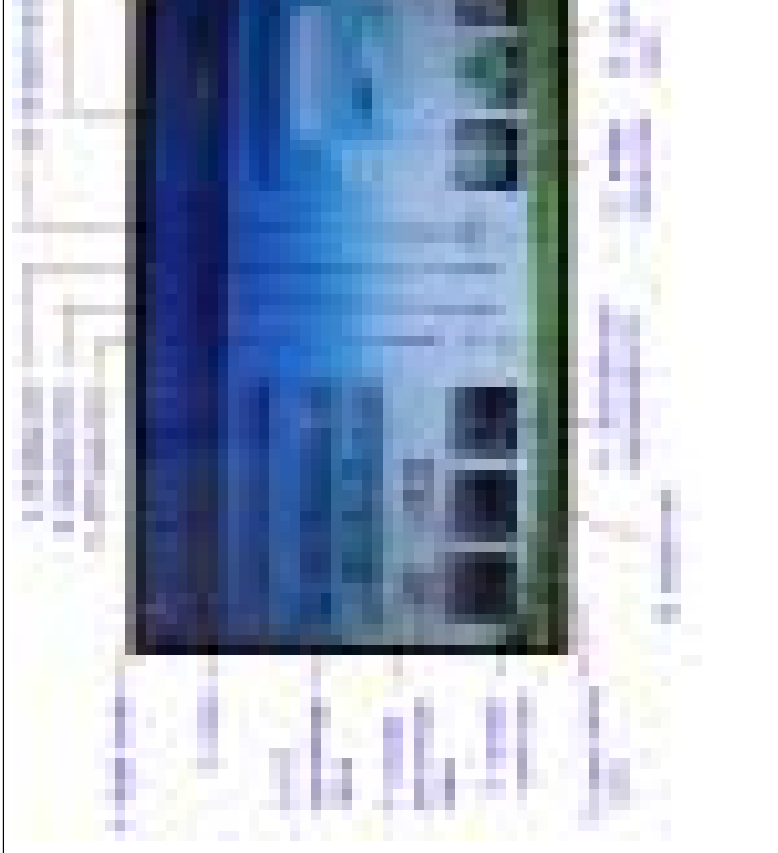


	English	Your language	English
1	Throttle trim		Dual rate exponential
2	Elevator trim		Model icon
3	PIT hover trim		Gyro sensor ic
4	Flight mode		System icon

5	Timer		15	Function icon
6	PIT percentage value		16	Model name
7	Throttle percentage value		17	Battery volume display
8	Throttle curve icon		18	Time display
9	Pitch curve icon		19	Transmission power display
10	Rudder trim		20	Throttle hold

## 1.1 Language setting



Touch the shortcut icon  to enter System Menu and then touch



to enter the **LANGUAGE INTERFACE**. Touch the language that you want to select. A “✓” will be shown on the screen after selected.

 


Then touch  to save and exit.


## 1.2 Skin selection

DEVO-8 offers three skins for your selection.




Touch  to enter System Menu and touch



 to enter Skin.



Touch the skin you desire and then touch  to exit.

### 1.3 Display

Touch the shortcut icon  to enter System Menu and then

touch the icon  to enter "Display".



Five items are available to be set. Below are the setting methods for them:

- 1) LCD brightness: it is possible to increase or decrease the LCD brightness by touching the navigation marks. The power consumption will be increased if the LCD is too bright and the battery cruise duration will also be shortened.
- 2) LCD contrast: the contrast is adjustable by touching the navigation marks. The power consumption will be increased if the contrast is too high and the battery cruise duration will be shortened.
- 3) Backlight lightness: the backlight lightness is adjustable by touching the navigation marks. The power consumption will be increased if the backlight lightness is too bright and the battery cruise duration will be shortened.
- 4) Backlight time out: it is possible to set the duration which LCD stays at highlight in the form of "Always on" or any period from 5 to 60 seconds with an interval of 5 seconds.

5) Power save time: it can adjust the backlighting duration by turning off the backlight in order to prolong the battery cruise time. The setting status contents Always On and duration in 30 grades with an interval of 1 minute.

6) Touch  to exit.

## 1.4 Buzzer warning



Touch the icon to enter System Menu and then touch



to enter the **BUZZER INTERFACE**.




1) Buzzer switch: touch the navigation mark at Buzzer Switch and pop up an alternative item: Off and On. If touching On, a drop-down menu will be shown below.

2) Throttle stick buzzer: under Buzzer Switch is at the status of On, if

Throttle Stick is set as "Active", a relative musical scale will make response when moving the throttle stick. You can judge the position of the throttle stick according to the different musical scales. Also, it can be set as Inhibit.


- 3) Levers and knobs buzzer: under the condition that this item is set as "Active", DEVO-8 will sound when rotating or moving such levers or knobs as AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7 to their neutral positions. It can also be set as "Inhibit" to silence the musical scales.
- 4) Buzzer tone: the tone is composed of 10 grades. You can choose the favorite one according to your interests. Touch Test to make a listening test.




Touch  to exit after finished.

## 1.5 Date & Time



Touch the icon  to enter System Menu and then touch




 to enter the item of "Date & Time".





The clock setting is grouped into Year, Month, Day, and Time. Touch the navigation marks, respectively, to make modifications.




Touch  to save and exit.

**Note:** if incorrect turn-on or production time appears, one possibility is that the power supply for the clock is not enough. Replacing a new button cell is a must.

The method for changing button cell:

Turn off the power of your DEVO-8 and take out its battery pack. Use a cross screwdriver to remove the two fixing screws on the fixing board.

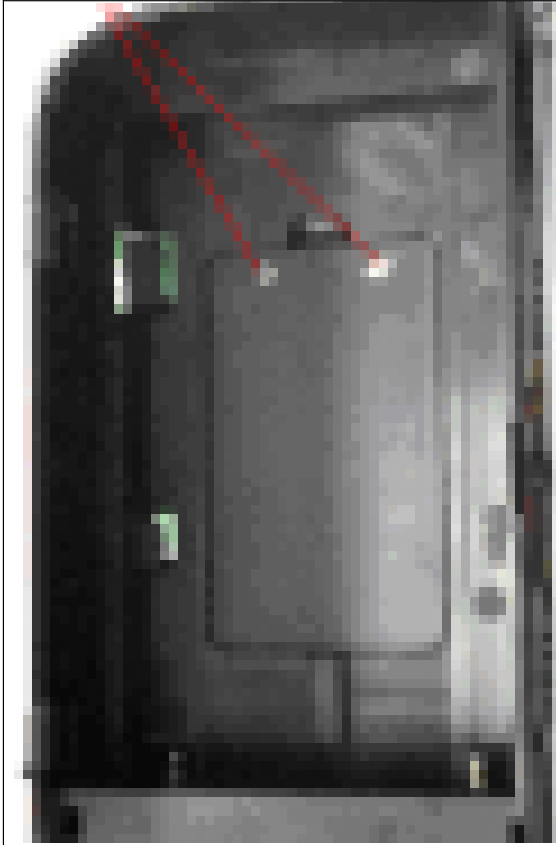


**English**

**Your language**

Fixing screws

Push outwards the button cell holder, and the button cell will automatically pop up. Replace the old cell with a new one.

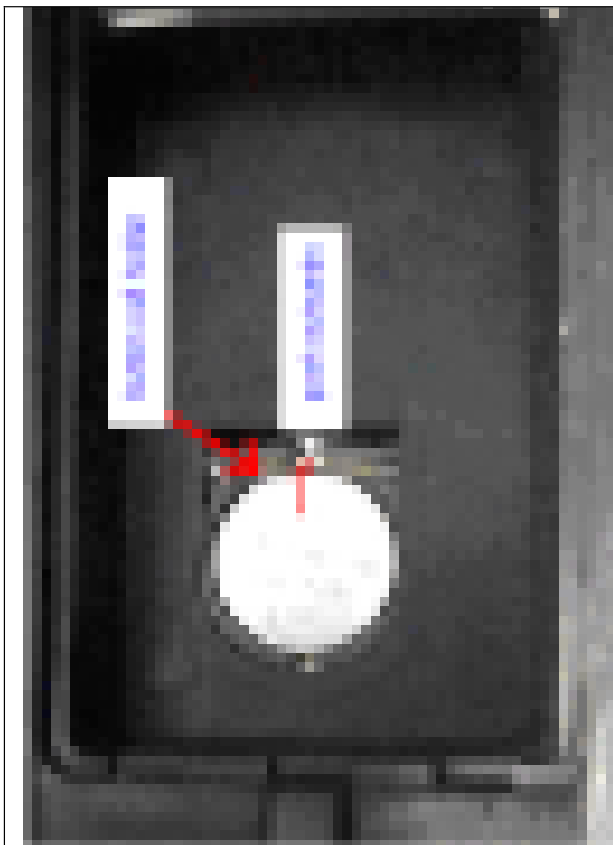


Cell size: CR 1220 3V

<b>English</b>	<b>Your language</b>
Button cell holder	
Push outwards	

### 1.6 TFT screen calibration



Touch the icon  to enter System Menu and then touch

 


to enter the **TFT SCREEN CALIBRATION INTERFACE**.



Click anywhere on the screen to start calibration with the touch pen, and then follow the indication to calibrate. It will automatically return to System Menu after the calibration is finished.

## 1.7 Stick mode



Touch the icon to enter System Menu, and then touch the





icon to enter the **STICK MODE INTERFACE**.




There are four stick modes from MODE 1 to MODE 4. Select the stick mode you desire and then touch the icon  to exit.

### 1.8 Stick and lever

 

 Touch the icon  to enter System Menu and then touch the



icon  to enter the interface of Stick and Lever. There are two items in the interface: Stick Direction and Stick & Lever Calibration.



- 1) Stick direction: there are four options: Elevator, Aileron, Throttle, and Rudder. Click the item, which you want to reverse, to change the output direction of the stick. The default setting is Normal.
- 2) Stick & lever calibration: if variance happened in sticks or levers, it would be calibrated via this option.

Method for calibration:

Click the display item of Start to enter the status of calibration, and Start will be turned into Stop.

2.1) Stick calibration: Clockwise or counter clockwise mechanically move the right stick and left stick from their minimum levels to their maximum levels several times, and then return the sticks to the neutral positions, respectively.

2.2) Lever calibration: mechanically move the levers of AUX2, AUX3, AUX4, and AUX5, respectively, from the minimum level to the maximum level several times, and then return to the neutral positions,

respectively.

2.3) Click the item of Stop. If the calibration is finished, "Calibration success!" will be shown at the lower of the screen. If the calibration is failed, "Calibration error! Please try again!" will be shown instead. It needs to be calibrated again.





English	Your language
Normal	
Reverse	
Stick direction	
Stick & lever calibration	
Start	
Stop	
Calibration success	
Calibration error! Please try again!	

2.4) Re-calibration: directly repeat the said steps 2.1 and 2.2 in the calibration failure interface.





Touch the icon to exit.

## 1.9 Power amplifier

The transmission output power of DEVO-8 is adjustable. It is divided into six grades from small to big. The lower the transmission output power transmits, the shorter the radio range is, and the longer the stand-by time will be. The higher the transmission output power, the farther the radio range, and the shorter the stand-by time. Choose the appropriate transmission output power according to the actual situation.

Setting method:




Touch the icon to enter System Menu and then click to enter the **POWER AMPLIFIER INTERFACE**.



Choose the appropriate output power level and then touch  to exit.

## 1.10 About



Touch the icon  to enter System Menu and then touch



to get access to the **ABOUT INTERFACE**. You can check the versions of hardware and software.



Click the icon  to exit.


## 2.0 Model menu

Model Menu manages all the model data saved in DEVO-8. It includes Model Select, Model Name, Model Copy, Model Transmit, Model Receive, Model Reset, Type Select, Trim System, Stick Position, Warning, Device Select, Device Output, Swash Type, and Fixed ID.

## 2.1 Model select


Touch the icon  to enter Model Menu and then click the icon  to enter the **MODEL SELECT INTERFACE**.




Click the model you desired. The selected model will be temporarily changed into orange color. Then click the icon  to exit.

## 2.2 Model name

In the menu of Model Name, you can make a desired name for your model for long term storage. Its data can be directly withdrawn in next flights.

Repeat the step “2.1 Model Select” to choose the model you want to name or save. And then touch the icon  to exit.



Click the icon  to enter System Menu and then click the icon



 to get the **MODEL NAME INTERFACE**. The following is the interface:




Click the right blank frame of Name and a gray stripe will be shown in the frame. Touch the return key  to clear up the old name.



**English**

Gray stripe

**Your language**

Touch the soft keyboard to input a new name. It is possible to switch between lowercase and uppercase by clicking the  key.

Then touch  to exit.

## 2.3 Model copy




Touch the icon  
enter Model Copy.



to enter Model Menu and click



Choose the model you want to be copied as source model. The serial No. and model name of Source Model will be shown in the left side of the interface.

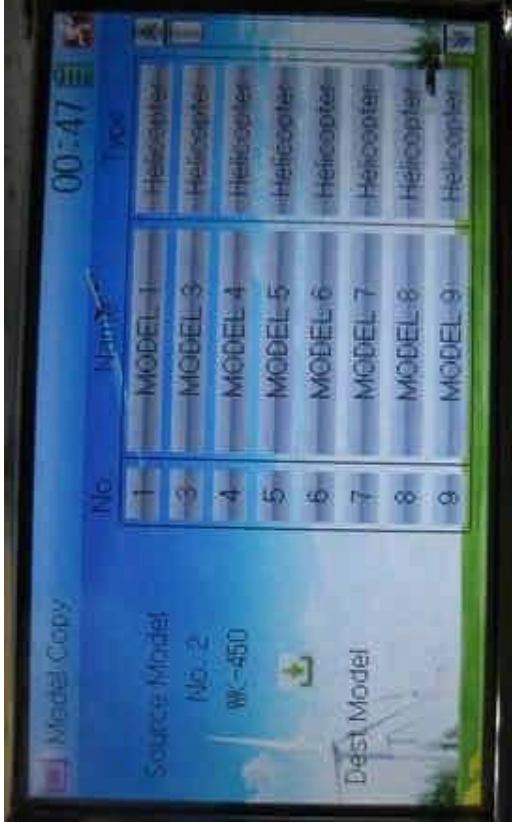

Then touch the model in the right list where you want to locate the source model. The serial No. and name of the model you chose are shown under Dest Model in the lower left of interface as well as an enquire "Are you sure?" is popped up.




Click OK to copy. Otherwise click Cancel. Then the interface will be automatically returned to Model Menu. Click  to save and exit.

## 2.4 Model wireless copy

The model data between two DEVO-8 equipments can be wirelessly copied via Model Transmit and Model Receive in Model Menu

- 1) Model transmission



Touch the icon  to enter Model Menu and then continue to click



the icon  to enter Model Transmit.







Choose the source model which will be transmitted. The serial No. and name of the source model will be shown under Select Model in left side of the interface as well as enquiry information "Are you sure?" in the right side.



Click OK for transmission or Cancel for rejection. Enquiry information

“Transmitting .....” appears after clicking OK. Touch the icon  to exit.

## 2) Model receiving

Touch the shortcut icon  to enter Model Menu and then touch the icon  to enter the **MODEL RECEIVE INTERFACE**. Enquiry information “Are you sure?” is shown in the center of the interface.



Click Ok for receiving or Cancel for rejection. “Connecting .....” and “Receiving .....” will be shown in series in the interface. The information of “Received” with the model name will be shown in left side after receiving is finished.



Choose the save position in the right name list. Enquiry information "Are you sure?" is shown after clicking the save position. Click OK for save and the current interface will automatically return to Mode Menu. Click Cancel for rejection.



Touch the icon to exit.

### 2.5 Model reset

All the model data can be restored to factory settings via Model Reset.




Touch the icon to enter Model Menu and then click




to enter Model Reset.

It is possible to store up to 60 models data in the model list of DEVO-8 equipment. There are two methods to reset the model data: batch reset and single reset.

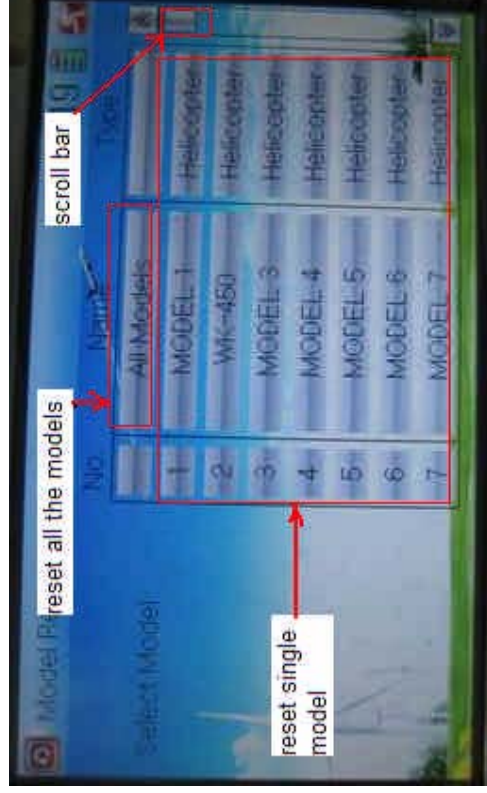

1) Method for batch reset:

Touch 'All Models' in Model Reset interface. Then "All Models" and enquiry "Are you sure?" appear in the left side. Click OK for reset, or Cancel for rejection.

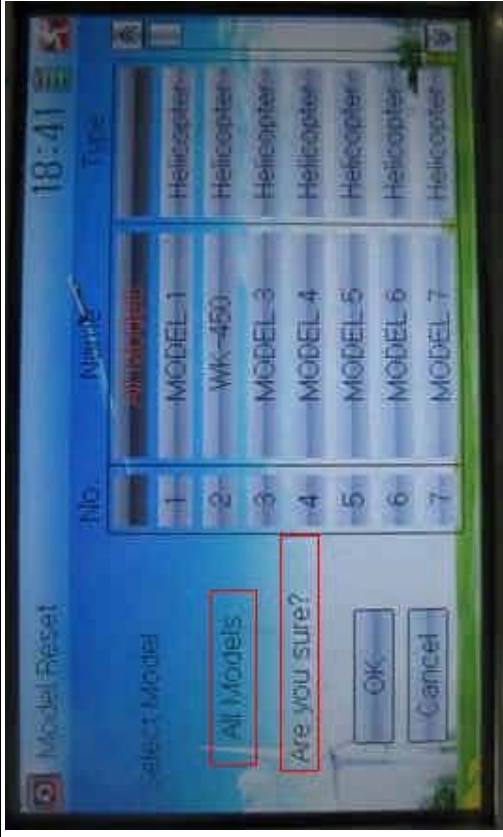

2) Method for single reset:

Touch the upper or lower navigation mark to move the scroll bar, and then choose the model you want to restore in the model name list. The selected model's name, serial No and enquiry "It is in use! Are you sure?" will appear in the left side. Click OK for resetting, or Cancel for rejection.



Click the icon  to exit.


### 2.6 Type select

This device offers three model types menu. They are helicopter, airplane, and glider, respectively.



Touch the icon  to enter Model Menu and then click  to enter Type Select.



Choose the model type and then touch the icon  to exit.

## 2.7 Trim system

Trim System is able to finely tune the following six items, respectively: Elevator, Aileron, Rudder, Throttle, Left Trim, and Right Trim. The trim range is divided into 20 grades (factory default is set at 4). It is convenient to subtly modify the pitch by adjusting the trim range.



Touch the icon  to enter Model Menu and then click



to enter Trim System.



Touch the corresponding navigation mark to change the trim value. The bigger the trim value is, the bigger the trim range will be.

For elevator, aileron, and rudder, there are two more options: Normal and Limited. "Normal" means the trim is always working although the corresponding stick stays anywhere. "Limited" means the trim is out of working when the corresponding stick is at maximum position.

## 2.8 Stick position

The stick can be used as a switch. The turn-on or turn-off position at which the stick stays can also be settable.

Method for setting:





Touch the icon to enter Model Menu and then click




to enter Stick Position Switch.



Click the navigation mark of Switch. It pops up a drop-down menu: SPS0, SPS1, SPS2, and SPS3. Choose the switch you want to define.




Then touch the navigation mark of Channel. It expands into five items: Inhibit, Elevator, Aileron, Throttle, and Rudder. The factory default setting is Inhibit. Choose the stick you want to set as "switch".

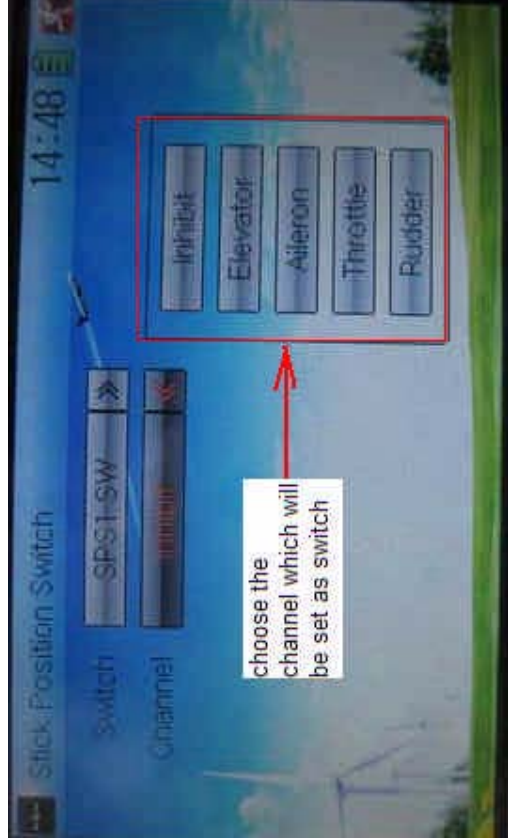

<b>English</b>	<b>Your language</b>
Stick position switch	
Choose the channel which will be set as switch.	

At the same time, "Position" and the status of turn-on or turn-off appear under the item Channel. The current status of turn-on or turn-off will be shown in the form of On or Off on the top right corner.

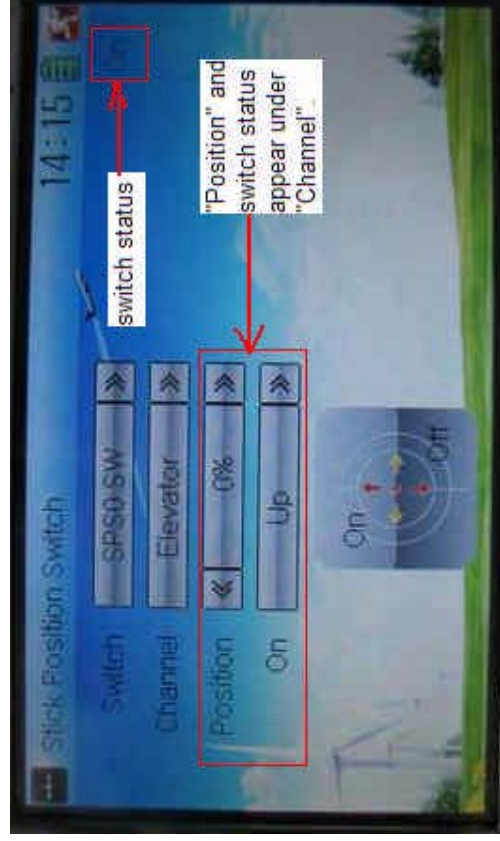

<b>English</b>	<b>Your language</b>
Switch status	
"Position" and switch status appear under "Channel"	




Click the icon to exit after the setting finished.

## 2.9 Warning


This function can set the warning for unsafety of which stick, switch status, or flight mode stays at the position while turning on the device, or is used as start-up warning in special purpose.

In factory, Throttle Stick is set as Active, High direction at 10.0% Position, flight mode as Stunt, and Throttle Hold at on position.

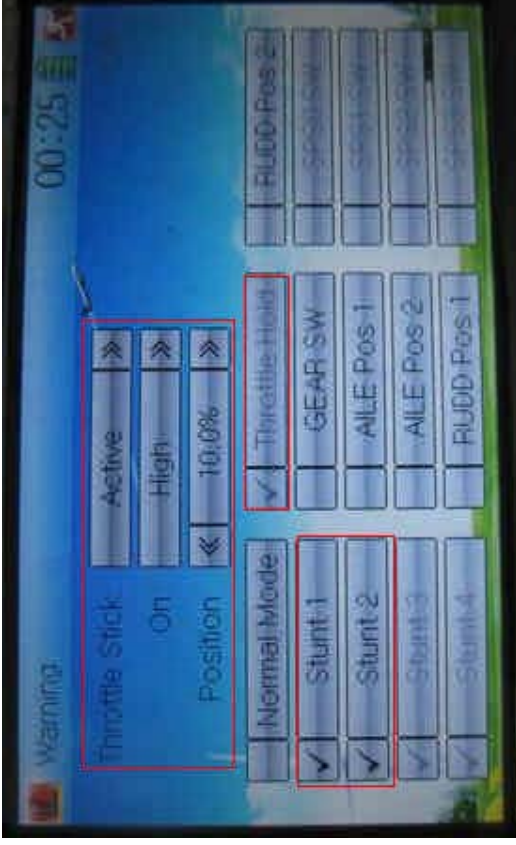

Touch the icon to enter Model Menu and then click to enter the **WARNING INTERFACE**.



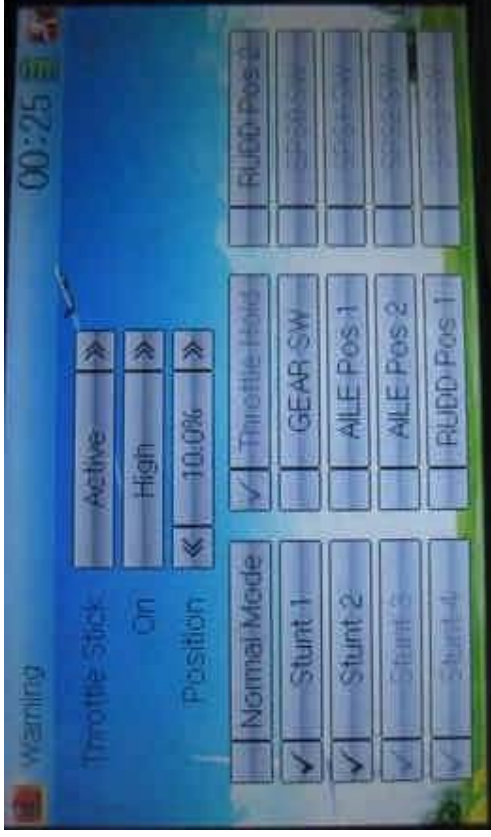

Setting method:

- 1) setting Throttle stick as warning

Click the navigation mark of Throttle Stick in the interface of Warning. It expands into Inhibit and Active. If Inhibit clicked, the dropdown menu is retracted. If Active clicked, it will expand into two sub items: On and Position.

The throttle stick can be set at either high or low position when startup is warning, via clicking the navigation mark of On. The warning level can be set by changing the percentage in Position, whose setting value is ranged from 0.0 to 100.0%.

Take the right-hand throttle as an example. Position is 0.0% when the throttle stick is at the lowest position; Position is 100.0% when the throttle stick is at the highest position. In factory, Throttle Stick is set as Active, Position in High direction at 10.0%.

- 2) setting other items

Other flight modes and switches warning is shown in the lower-middle part of the interface. Click the corresponding items you want to use. The factory default setting includes Stunt 1, Stunt 2, Stunt 3, Stunt 4, and Throttle Hold.



Click to exit.

## 2.10 Device select

This setting can help you configure various functional switches, or adjust levers. It includes Flight Mode Main Switch, Flight Mode Extra Switch, Stunt Trim Select, Throttle Hold Switch, Hovering Pitch, and Hovering Throttle.

**Friendly reminder:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.


Setting method:



Touch the icon to enter Model Menu, and then click the




icon to enter Device Select.

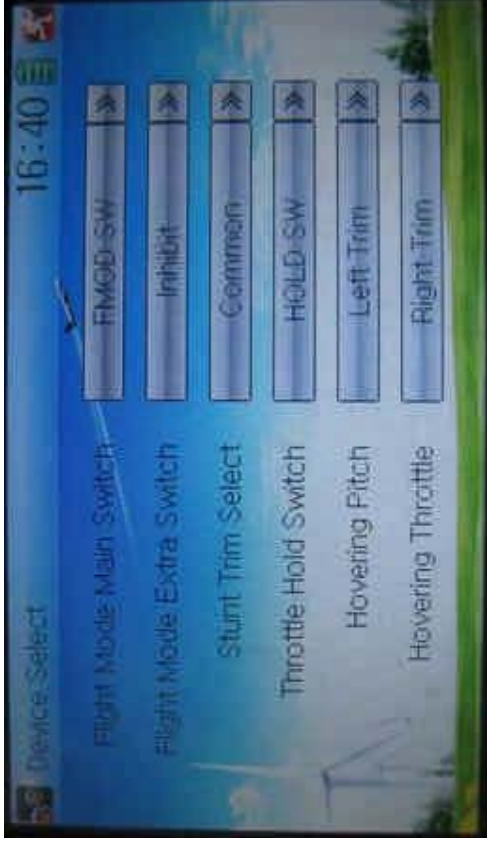

1) Flight Mode Main Switch

Touch the navigation mark of Flight Mode Main Switch and expand into a dropdown menu, where to choose the mode switch you desire. The factory default setting is FMOD SW.

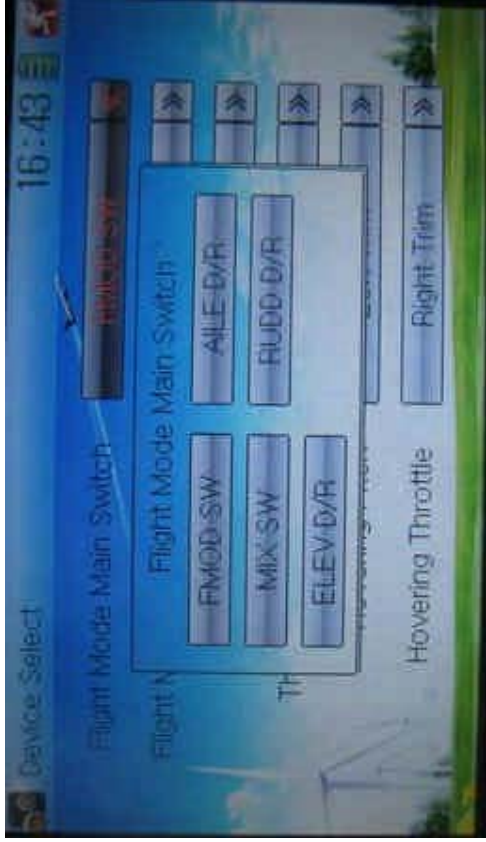

2) Flight Mode Extra Switch

Refer to "Flight Mode Main Switch".

3) Stunt Trim Select

There are two modes: Common and Flight Mode. In Common mode all the trim values, which various sticks are corresponding to, put equally effects on all the flight modes.

In Flight Mode, the trim value, which each stick is corresponding to, puts independently effect on the corresponding stick. The factory default is Common.

4) Throttle Hold Switch

Refer to "Flight Mode Main Switch".

5) Hovering Pitch

Refer to "Flight Mode Main Switch".



## 6) Hovering Throttle

Refer to "Flight Mode Main Switch".

### 2.11 Device Output

Device output is composed of eight items. It can set up the output switches and select the usage of levers, respectively. It can also activate, inhibit or use other functions.

**Friendly reminder:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.

Setting method:

Touch the icon



to enter Model Menu and then click



to enter the **DEVICE OUTPUT INTERFACE**.



There are eight adjustable items. They are Gear, Pitch, AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7, respectively. The setting methods for them are shown below:

1) Gear

Touch the left column navigation mark of Gear and pop up an expansion list including FMOD SW, MIX SW, ELEV D/R, AILE D/R, RUDD D/R, HOLD D/R, and GERA SW. Touch the desired item. The default setting is GEAR SW.



English	Your language
Touch navigation mark	
Expansion of GEAR SW	
Touch the right column navigation mark of Gear. Pop up an expansion list including Inhibit, Active, Gyro, Governor, and Pitch 2. Touch the desired item. The default setting is Active.	



<b>English</b>	<b>Your language</b>
Right column navigation mark	
Expansion list	

- 1) Pitch

The item is programmed as system default. Any setting is unavailable.

- 2) AUX 2

Touch the left column navigation mark of AUX 2. Pop up an expansion list including SPS0 SW, SPS1 SW, SPS2 SW, SPS3 SW, Left Trim, Right Trim, and AUX2 Lever. Touch the desired item. The default setting is AUX2 Lever.




Touch the right column navigation mark of AUX 2, and expands a list including Inhibit, Active, Gyro, Governor, and Pitch 2. Click the desired item. The default setting is Active.




Then continue to set other items.

3) AUX 3

Touch the left column navigation mark of AUX 3, and expands a list including AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Knob, AUX7 Knob. Touch the desired item. The factory default setting is AUX3 Lever.

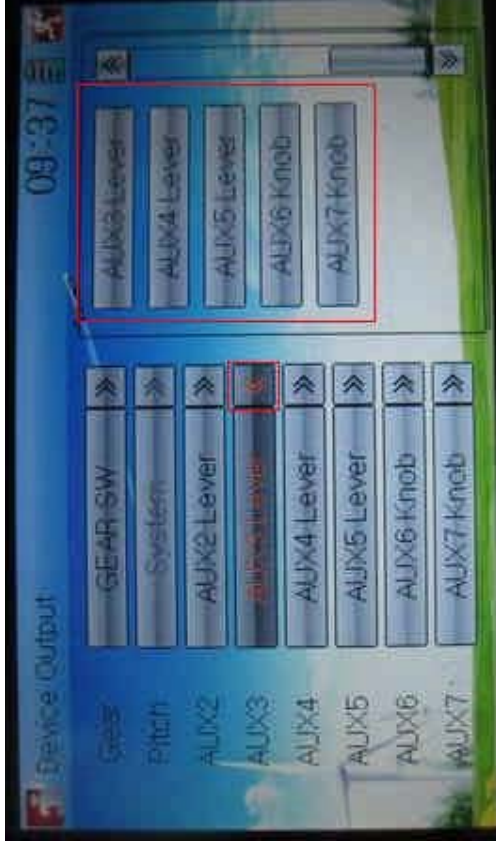

Click the right column navigation mark of AUX3, and see an expansion list including Inhibit, Active, Gyro, Governor, and Pitch 2. Choose the desired item. The factory fault setting is Active. Then continue to set up other items.

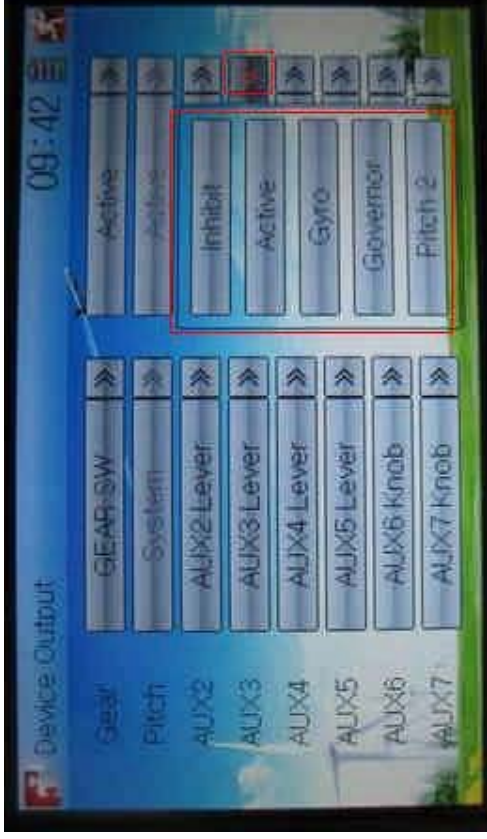

4) AUX 4

Refer to "4)AUX 4".

5) AUX 5

Refer to "4)AUX 4".

6) AXU6

Refer to "4)AUX 4".



Click the icon to exit.

## 2.12 Swash type

The swash type is grouped into six options: 1 Servo Normal, 2 Servos 180°, 3 Servos 140°, 3 Servos 90°, and 4 Servos 90°.

Setting method:



Touch the icon to enter Model Menu, and then click the



icon to enter the **SWASH TYPE INTERFACE**.



Choose the desired swashplate and then click the icon to exit.





## 2.13 Fixed ID



This setting will bind DEVO-8 and its receiver in a unique corresponding relationship. It will greatly speed up the time of automatic binding when DEVO-8 powered on.

1) Setting for fixed ID

The setting for fixed ID should be under the status that automatic ID binding is successfully finished. Below is the setting method.

Touch the icon  to enter Model Menu, and then enter the interface of Fixed ID by touching the icon .




English	Your language
Navigation mark	

Touch the navigation mark of the item ID Code Setting. It will expand

into two statuses: Off and On. A series of random digits will be shown below after touching On.



<b>English</b>	<b>Your language</b>
Touch "On"	
A series of random digits is shown here	
A mini soft keyboard is shown in the lower part after touching the random digits of ID Code	

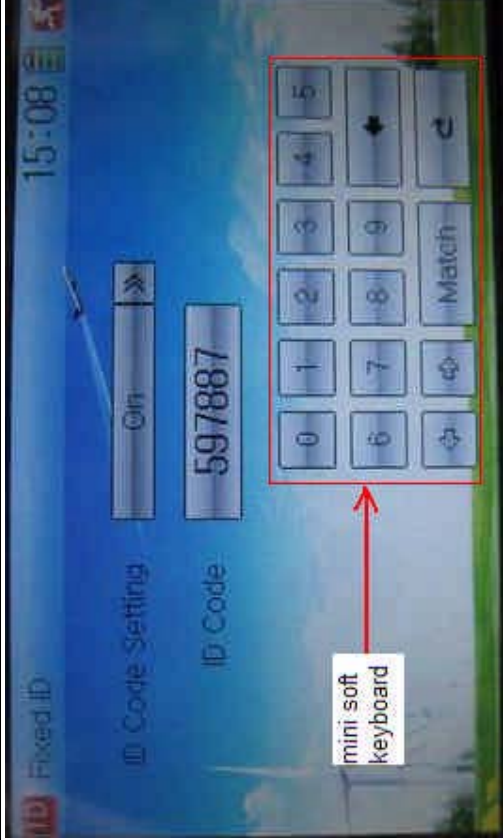

**English**

**Your language**

Mini soft keyboard

The new ID digits can be modified by touching the mini soft keyboard. Then touch Match after the new ID is already set. An **INQUIRY** interface of "Are you sure?" pops up. "ID Code Match ... .." will be shown after touching OK.



English	Your language
ID Code Setting	
ID Code	
Fixed ID	
Are you sure?	
Cancelled	
ID Code Match	

2) Fixed ID cancellation

Insert the assorted BIND PLUG into the output terminal of BATT before the receiver is powered on, and then plug 5V DC power into one of the other output terminals. The red light of receiver will flash slowly. This means the fixed ID code has been cancelled. Pull out BIND PLUG.



DEVO-8 also needs to make relative cancellation and reversion after the fixed ID in receiver is cleared out.



In the main interface touch the icon  to enter Model Menu and then touch  to enter Fixed ID. Touch ID Code Setting to expand the navigation mark into two statuses On and Off. Touch Off. Then touch  to exit.

### 3.0 Function Menu

Function Menu can help you make **CUSTOM** adjustments for the selected models. The menu includes such items as Reverse Switch, Travel Adjust, Sub Trim, Dual Rate and Exponential, Throttle Hold, Throttle Curve, Mix to Throttle, Gyro Sensor, Governor, Tail Curve, Dual Pitch, Swash Mix, Pitch Curve, Program Mix, Monitor, Fail Safe, Trainer, and Timer.


#### 3.1 Reverse Switch

Touch the shortcut icon



to enter Function Menu, and then click

to enter the **REVERSE SWITCH INTERFACE**.

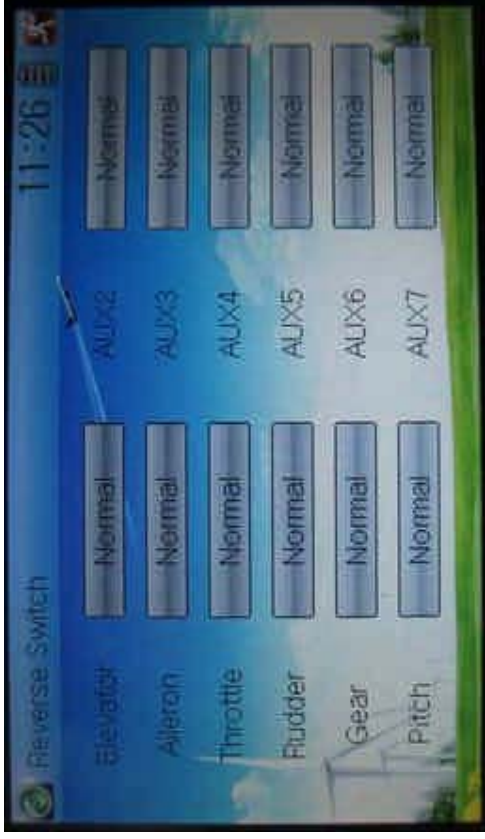

The statuses of total 8 channels are shown in the interface. Touch the relative channel for Normal or Reverse switch. The default setting is Normal.

Click the icon



to exit.

### 3.2 Travel adjust

Touch the icon



to enter Function Menu and then click



to enter the **TRAVEL ADJUST INTERFACE**.



Touch the navigation mark of the desired item to increase or decrease the servo travel range. The adjustment range is from 0.0% to 150.0%. The factory default is 100.0%.




Click the icon to exit.

### 3.3 Sub Trim

Sub Trim can parallel to move the neutral point of the servo. But we advise you to mechanically adjust the servo bell crank if offset is far away from the neutral point of servo, because excessive usage of the sub trim, out of its range, may damage the servo.

Setting method:

Touch the icon  to enter Function Menu and then click



to enter Sub Trim.



It is possible to change the servos' neutral point by touching the navigation mark of the desired item to amend the percentage. The default for each channel is 0.0%. The following chart shows you the adjustment range of each channel:

	English	Your language	English	Your
	Channel name		Adjustment range	
1	Elevator		D62.5%-U62.5%	



2	Aileron		R62.5%-L62.5%
3	Throttle		L62.5%-H62.5%
4	Rudder		R62.5%-L62.5%
5	Gear		-62.5%- +62.5%
6	Pitch		L62.5%- H62.5%
7	AUX2		-62.5%- +62.5%
8	AUX3		-62.5%- +62.5%
9	AUX4		-62.5%- +62.5%
10	AUX5		-62.5%- +62.5%
11	AUX6		-62.5%- +62.5%
12	AUX7		-62.5%- +62.5%



Touch  to exit.

### 3.4 Dual Rate and Exponential

After this function is set up, it is possible for D/R switches to control the dual rates of elevator, aileron, and rudder, respectively. The setting range is covered from 0% to 125%. Under the help with exponential curve adjustment, it is possible to make both customized settings and automatic settings.

The switch between Dual Rate and Exponential can be performed via

pushing or pulling the Flight Mode lever.


Setting method:



Touch the icon to enter Function Menu and then click




to enter the interface **DUAL RATE AND EXPONENTIAL INTERFACE.**

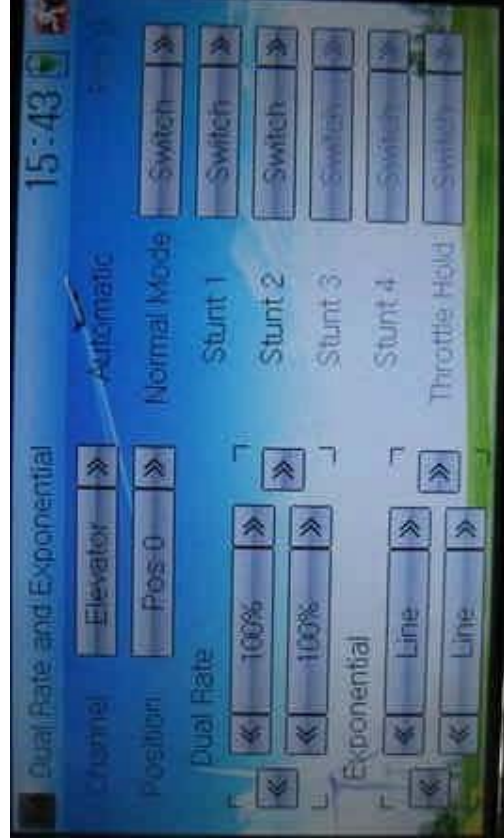

1) Channel selection

Touch the navigation mark of Channel. An expansion list pops up, which contains Elevator, Aileron, and Rudder. Choose the desired channel for setting.

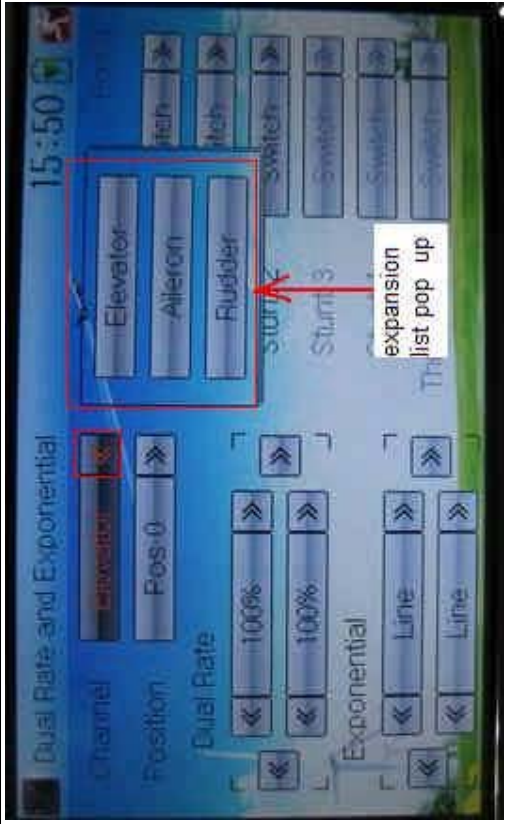


**English**

**Your language**

Expansion list pops up

2) Position selection

Touch the navigation mark of Position. An expansion list pops up, where there are six points for you choosing from Pos 0 through 5. Chose the position you want to set. The chosen point will be shown in the frame of the item Position.

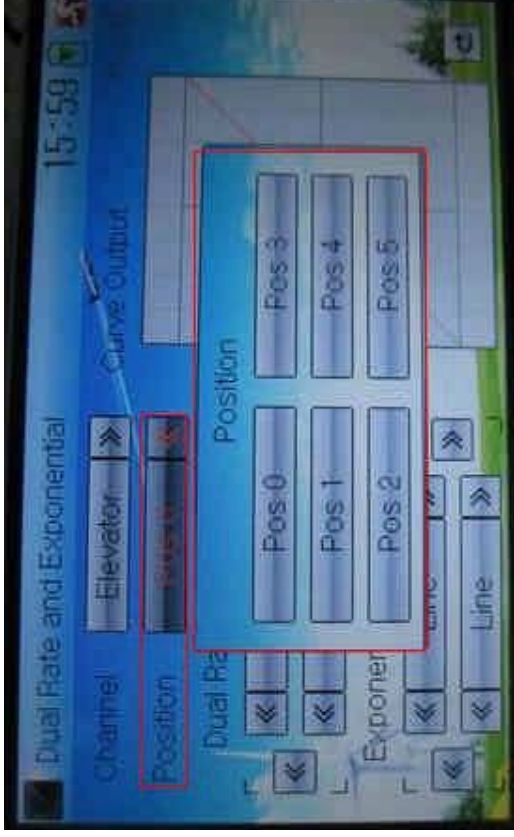


In manual mode, the function of Dual Rate and Exponential will be executed by the corresponding dual rate switch among Pos 0, Pos 1, and Pos 2.

Take the item Elevator at Channel as the example. All the flight modes, shown in the right column, are set as "Switch". Then if we move the lever of ELEV D/R, the switch will be taken place among Pos 0, Pos 1, and Pos 2.




If moving the lever ELEV D/R (shown above), switch will happen among Pos 0, Pos 1, and Pos 2 (shown below).

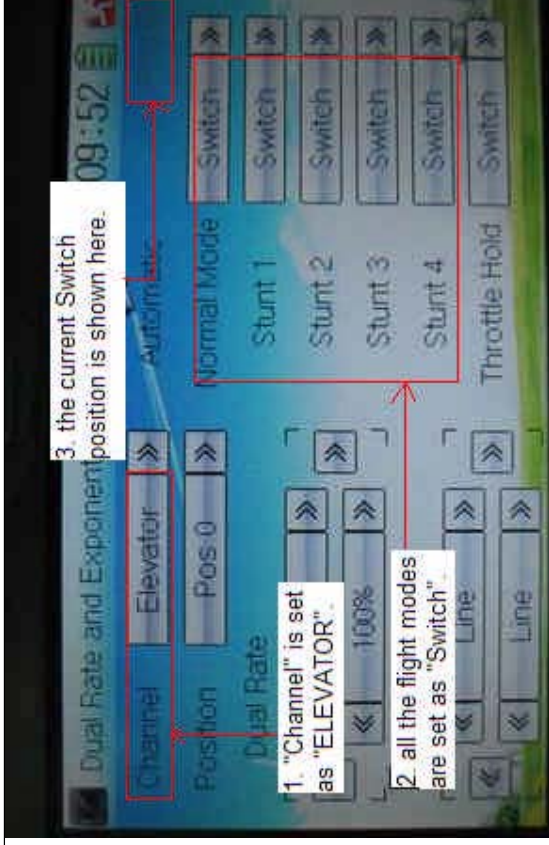

English	Your language
ELEV D/R	
"Channel" is set as "Elevator"	
All the flight modes are set as "Switch"	
The current Switch position is shown here	

3) Dual Rate adjustment  
 It is possible to modify the dual rate value by touching the navigation mark of Dual Rate.

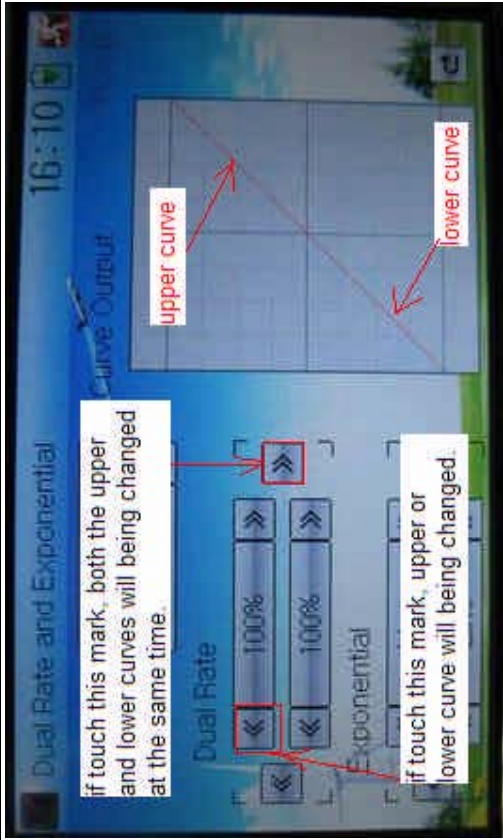


If touching the navigation mark for just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will be changed in one direction at the right graph.

If touching the navigation mark for both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while the curve will be changed at the same time, shown at the right graph. The default setting is 100%.

English	Your language
Upper curve	
Lower curve	
If touch this mark, both the upper and lower curves will be changed at the same time.	
If touch this mark, upper or lower curve will be changed.	

#### 4) Exponential adjustment

It is possible to adjust the exponential output value of the servo at that point, which is set up in step "2) Position selection", by touching the navigation mark of Exponential.

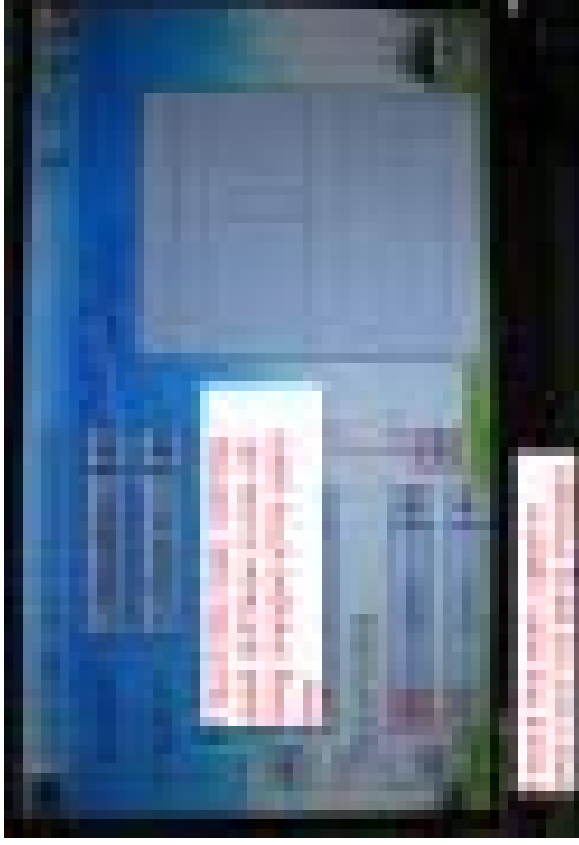

If touching the navigation mark for just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will being changed in one direction at the right graph.

If touching the navigation mark for both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while the curve will being changed at the same time, shown at the right graph. The default setting is Line.

Then touch this mark  to return to the interface of Dual Rate and



Exponential.


5) Automatic setting

Under working with Flight Mode, it is possible to switch the dual rate and exponential, which are set in above “3) Dual Rate adjustment” and “4) Exponential adjustment”, respectively.



The settings for Normal Mode, Stunt 1, Stunt 2, Stunt 3, Stunt 4, and Throttle Hold are available. But for Stunt 3 and Stunt 4, Flight Mode Extra Switch at Device Select in Mode Menu should be activated (Refer to “2.10 Device Select”), and Throttle Hold in Function Menu should be set as “Active” (Refer to “3.5 Throttle Hold” below).

Touch the flight mode that you want to set as automatic operation, and an expansion list will be shown. Click the desired position. If Switch is selected, it is only controlled by the corresponding dual rate lever.

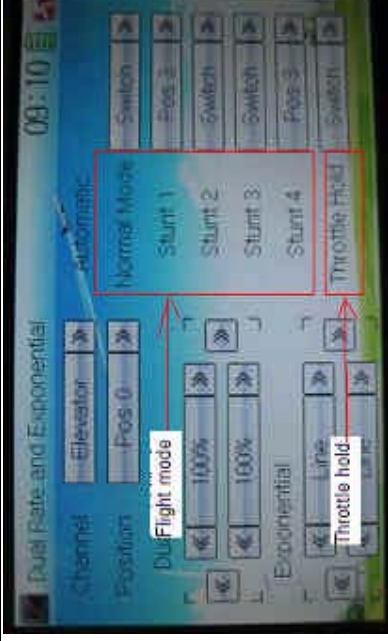


Click the icon  to exit.

### 3.5 Throttle hold

If this function is set, the switch will be executed by hold switch. The setting value of throttle hold is ranged from -20.0 to 50.0.

Setting method:



Touch the shortcut icon  to enter Function Menu, and then click



to enter the **THROTTLE HOLD INTERFACE**.



Touch the navigation mark of Hold Status, and an expansion list will be shown as Inhibit and Active. Click Active, there appeared Switch, Hold Position, and Throttle Stick in the following interface.



1) Setting for Switch

This item is impossible to be set. The default setting is HOLD SW.

2) Setting for Hold Position

Touch the left or right navigation mark of the item Hold Position to decrease or increase, respectively, the position amount, whose range is covered from -20.0% to +50.0%.


3) Setting for Throttle Stick

Given the function is used. If the throttle hold lever is turned on, it is possible to set the throttle stick as the switch that enters the status of throttle holding.



Setting method:

Touch the navigation mark of Throttle Stick and an expansion list will be shown as Inhibit and Active. Click Active and pop up a dropdown menu of Cut Position.

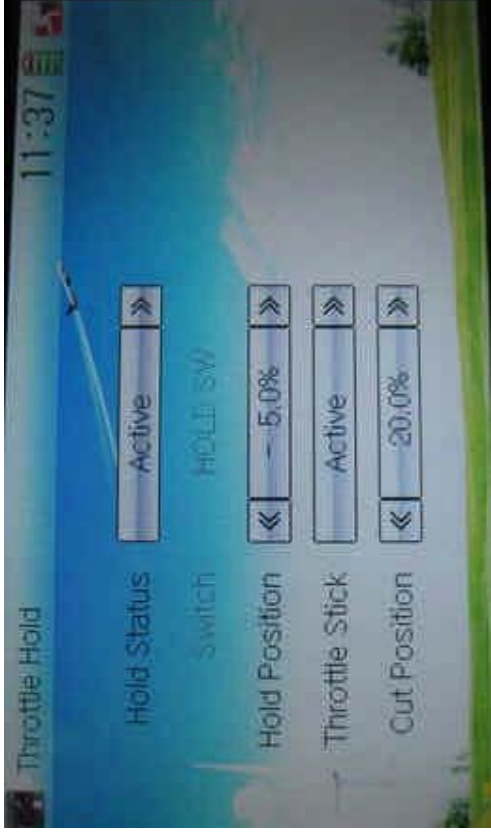

Touch the left or right navigation mark of Cut Position to decrease or increase, respectively, the amount whose range is covered from 0.0% to 100.0%.

Under Throttle Hold turned on (pull the Throttle Hold lever forward), when moving the throttle stick to the point set by Cut Position from high to low, the throttle enters the locked status. That means the throttle is locked at the point set by Hold Position.

If pushing Throttle Hold lever, the throttle locked status is released.



Click the icon to exit after all the settings are finished.

### 3.6 Throttle curve

Throttle curves are adjusted through nine points, which of all the flight modes can be respectively set. The flight mode includes Normal Flight, Stunt 1, Stunt 2, Stunt 3, and Stunt 4 while Flight Mode Extra Switch in

Device Select should be activated (Refer to “2.10 Device Select”).

Setting method:



Touch the shortcut icon to enter Function Menu, and then click



the icon to enter the interface of Throttle Curve while an enquiry dropdown is shown “All Servos Hold?” If click OK, all the servos will be locked at the current status; if click Cancel, all the servos will be unlocked at the current status. Enter the following interface after clicking OK or Cancel.



#### 1) Adjustment for Exponential

Touch the navigation mark of Exponential and expand an option dropdown: Off and On. The throttle curve will be changed smoothly if touching On, or in fold line if clicking Off.


#### 2) Curve Setting

It includes two items: Point, and Output.

#### 2.1) Adjustment for Point

Touch the navigation mark of Point and an expansion list including nine

points is shown. Click the point which you want to adjust.

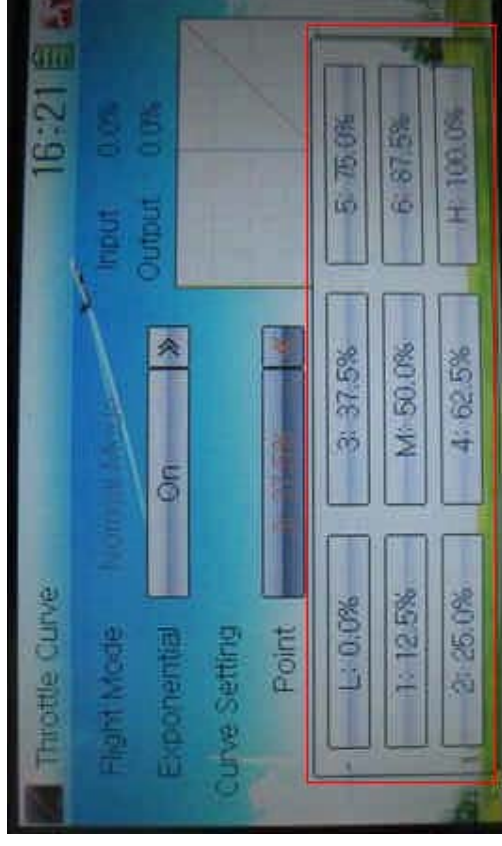

## 2.2) Status adjustment

Touch the navigation mark of Status and drop down a menu including Inhibit and Active. Click Inhibit if you don't amend the amount of the selected point which is set in "2.1 Adjustment for Point" (the factory default setting is Inhibit). Click Active if you want to amend the amount of the said point, and an expansion list including Output and Hovering is shown below.

## 2.3) Output adjustment

Touch the left or right navigation mark of Output to decrease or increase, respectively, the output amount of the selected point with a minimum of 0.0% and a maximum of 100.0%.

## 2.4) Hovering adjustment

After the setting in "2.3 Output adjustment" is finished, it is necessary to

set the item of Hovering as On and all the selected points of the throttle curve should be activated if using throttle trim in flight is a must. The seven points of 1-3, M, 4-7 in the curve will be paralleled up or down with the changing of throttle trim. So the throttle curve will be paralleled up or down with the movements of the seven points.

### 3) Flight mode

There are total five flight modes: Normal Flight, Stunt 1, Stunt 2, Stunt 3, and Stunt 4, the curve of which can be respectively set in their corresponding flight mode. The setting method is same with “2) Curve Setting” above. Regarding the setting for Flight Mode, please refer to “2.10 Device Select”.



Click the icon to exit.

## 3.7 Mix to throttle

This function can keep the main rotor blades running at the certain revolution caused by the changed load when operating the aileron servo, elevator servo, and rudder servo. Generally, it is not advised to use this function.

Setting method:



Touch the shortcut icon to enter Function Menu, and then click



the icon

to enter the **MIX TO THROTTLE INTERFACE**.





We can select the desired item except these items of SPS0 SW, SPS1 SW, SPS2, and SPS3 which should be previously set at Stick Position Switch at Model Menu (refer to “2.8 Stick Position Switch”).

1) Set time

The settable countdown time range is from 00:05 to 59:55.

2) Interval

This item offers the possibility to set the warning interval. It will warn once every interval time. The adjustable range is from 00.05 to 05:00. The default setting is Inhibit.

3) Down alarm

It is possible to set the down alarm in countdown. The setting range is from 00:01 to 03:00. The default setting is Inhibit.

4) One time

If this function is turned on, counting down cannot be stopped once the countdown works. The default setting is Off.


B. Setting for Timer 2 is same as that for timer 1.

Touch the icon  to exit after finished.

## **Part three: Airplane**



### **1.0 System menu**

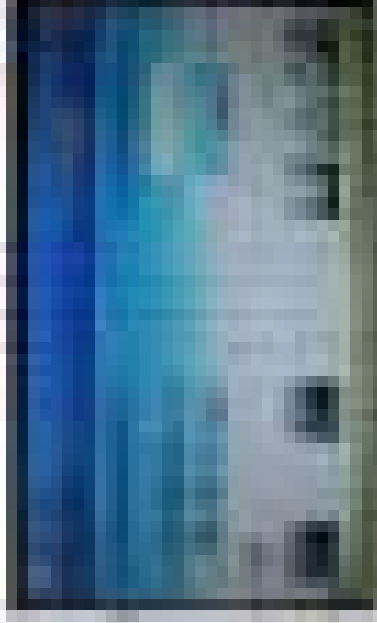The boot screen of airplane is shown as below:




N/O	English	Your language	N/O	English	Yo
1	Elevator trim		11	Aileron trim	
2	Flap trim		12	System menu icon	
3	Flight mode		13	Function menu icon	
4	Timer		14	Model name	
5	Throttle percentage value		15	Battery volume display	
6	Throttle curve icon		16	Time display	
7	Rudder trim		17	Transmission power display	
8	D/R & exponential icon		18		
9	Model menu icon		19	Throttle trim	
10	Gyro sensor icon		20		

## 1.1 Language setting

Touch the shortcut icon  to enter System Menu and then touch  to enter Language. Touch the language that you want to select. A

“√” will be shown on the screen after selected.

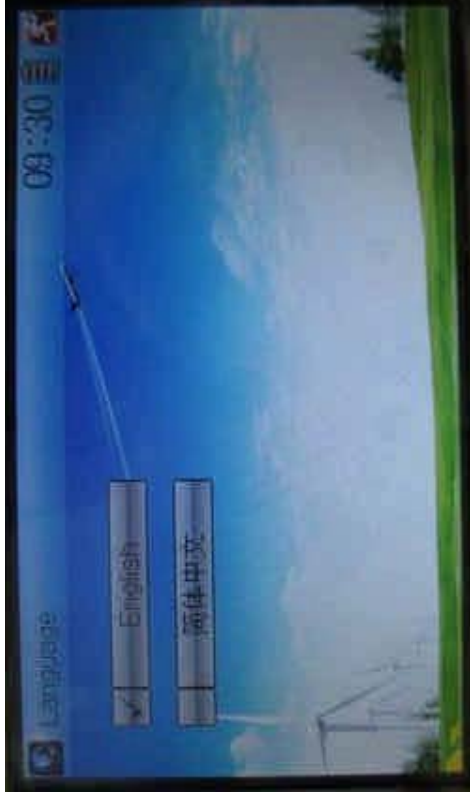

Then touch  to save and exit.

## 1.2 Skin selection


DEVO-8 offers three skins for your selection.

Touch  to enter System Menu and touch




to enter Skin.



Touch the skin you desire and then touch  to exit.

### 1.3 Display

Touch the shortcut icon  to enter System Menu and then

touch the icon  to enter "Display".




Five items are available to be set. Below are the setting methods for them:

- 1) LCD brightness: it is possible to increase or decrease the LCD brightness by touching the navigation marks. The power consumption will be increased if the LCD is too bright and will the battery cruise duration will also be shortened.
- 2) LCD contrast: the contrast can be adjustable by touching the navigation marks. The power consumption will be increased if the contrast is too high and the battery cruise duration will be shortened.
- 3) Backlight lightness: the backlight lightness can be adjustable by touching the navigation marks. The power consumption will be increased if the backlight lightness is too bright and the battery cruise duration will be shortened.
- 4) Backlight time out: it is possible to set the duration which LCD stays at highlight in the form of Always on and duration from 5 to 60

seconds with an interval of 5 seconds.

- 5) Power save time: it can adjust the backlighting duration by turning off the backlight in order to prolong the battery cruise time. The setting status contents Always On and duration in 30 grades with an interval of 1 minute.

Touch  to exit.

## 1.4 Buzzer warning



Touch the icon



to enter System Menu and then touch

to enter Buzzer interface




- 1) Buzzer switch: touch the navigation mark at Buzzer Switch and pop up an alternative item: Off and On. If touching On, a drop-down

menu will be shown below.


- 2) Throttle stick: under Buzzer Switch is at the status of On, if Throttle Stick is set as "Active", a relative musical scale will make response when moving the throttle stick. You can judge the position of the throttle stick according to the different musical scales. Also, it can be set as Inhibit.
- 3) Levers and knobs: under the condition that this item is set as "Active", DEVO-8 will sound when rotating or moving such levers or knobs as AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7 to their neutral positions. It is can be set as "Inhibit".
- 4) Buzzer tone: the tone is composed of 10 grades. You can choose the favorite tone according to your interests. Touch Test to make a listening test.



Touch  to exit after finished.

## 1.5 Date & Time

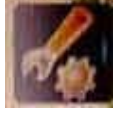

Touch the icon  to enter System Menu and then touch



 
to enter the item of "Date & Time".





The clock setting is grouped into Year, Month, Day, and Time. Touch the navigation marks, respectively, to make modifications.




Touch  to save and exit.

**Note:** if incorrect turn on time or production time appears, one possibility is that the power supply for the clock is not enough. Replacing a new button cell is a must.

The method for changing button cell:

Turn off the power of your DEVO-8 and take off its battery pack. Use a cross screwdriver to remove the two fixing screws on the fixing board.

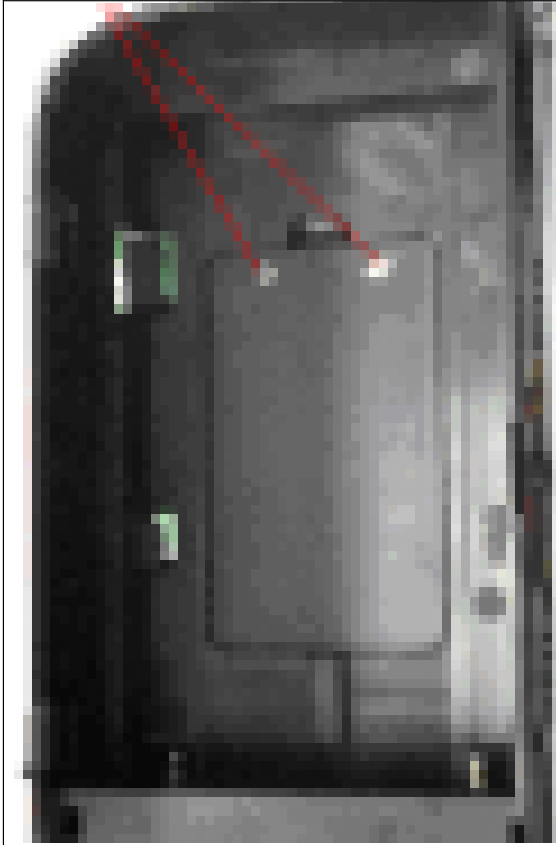


English

Your language

Fixing screws

Push outwards the button cell holder, and the button cell will automatically pop up. Replace the old cell with a new one.

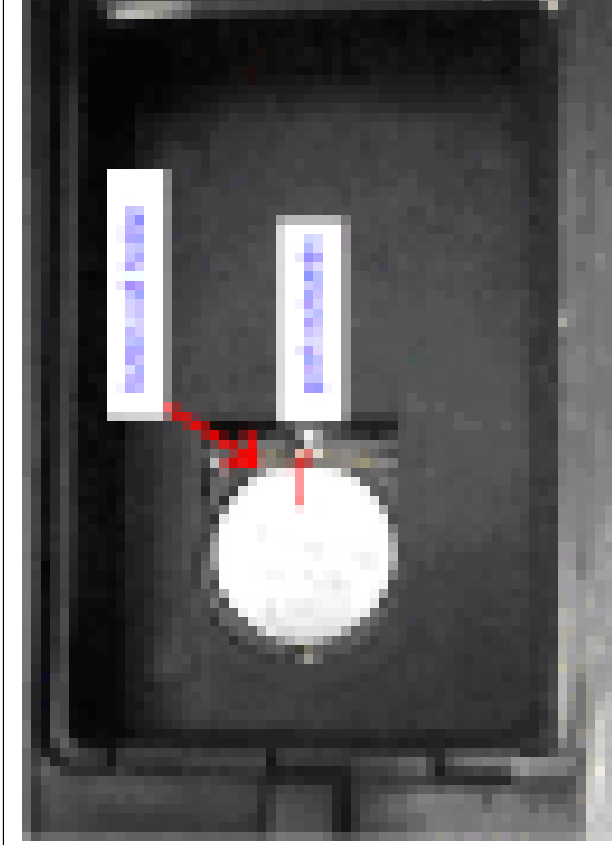

Cell size: CR 1220 3V


English	Your language
Button cell holder	
Push outwards	

## 1.6 TFT screen calibration

 Touch the icon



to enter System Menu and then touch



to enter TFT Screen Calibration.



Click anywhere on the screen to start calibration with the touch pen, and then follow the indication to calibrate. It will automatically return to System Menu after the calibration is finished.

## 1.7 Stick mode



Touch the icon

 



icon to enter Stick Mode.




There are four stick modes from MODE 1 to MODE 4. Select the stick mode you desire and then touch the icon  to exit.

### 1.8 Stick and lever



Touch the icon  to enter System Menu and then touch the



icon  to enter Stick and Lever. There are two items in the interface: Stick Direction and Stick & Lever Calibration.



- 1) Stick direction: there are four options: Elevator, Aileron, Throttle, and Rudder. Click the item, which you want to reverse, to change the output direction of the stick. The default setting is Normal.
- 2) Stick & lever calibration: if variance happened in sticks or levers, it would be calibrated via this option.

Method for calibration:

Click the display item of Start to enter the status of calibration, and Start will be turned into Stop.

2.1) Stick calibration: Clockwise or counter clockwise mechanically move the right stick and left sticks from their minimum levels to their maximum levels several times, and then return the sticks to the neutral positions, respectively.

2.2) Lever calibration: mechanically move the levers of AUX2, AUX3, AUX4, and AUX5, respectively, from the minimum level to the maximum level several times, and then return to the neutral positions,

respectively.

2.3) Click the display item of Stop. If the calibration is finished, "Calibration success!" will be shown on the lower of the screen. If the calibration is failed, "Calibration error! Please try again!" will be shown instead. It needs to be calibrated again.





English	Your language
Normal	
Reverse	
Stick direction	
Stick & lever calibration	
Start	
Stop	
Calibration success	
Calibration error! Please try again!	

2.4) Re-calibration: directly repeat the said steps 2.1 and 2.2 in the failure interface.





Touch the icon to exit.

## 1.9 Power amplifier

The transmission output power of DEVO-8 is adjustable. It is divided into six grades from small to big. The lower the transmission output power transmits, the shorter the radio range is, and the longer the stand-by time will be. The higher the transmission output power, the farther the radio range, and the shorter the stand-by time. Choose the appropriate transmission output power according to the actual situation.



Touch the icon to enter System Menu and then click to enter the **POWER AMPLIFIER INTERFACE**.



Choose the appropriate output power level and then touch to exit.

## 1.10 About



Touch the icon to enter System Menu and then touch



to get access to the **ABOUT INTERFACE**. You can check the versions of hardware and software.



Click the icon to exit.

## 2.0 Model menu

Model Menu manages all the model data saved in DEVO-8. It includes Model Select, Model Name, Model Copy, Model Transmit, Model

Receive, Model Reset, Type Select, Trim System, Stick Position, Warning, Device Select, Device Output, Wing Type and Fixed ID.


## 2.1 Model select



Touch the icon to enter Model Menu and then click the icon



to enter Model Select.

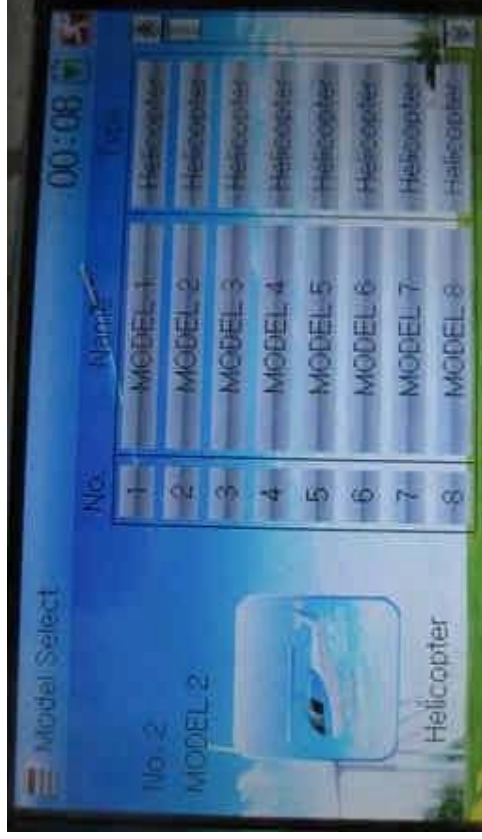

Touch the model you desire. The selected model is changed in orange




color. Then click the icon to exit.


## 2.2 Model name

In the menu of Model Name, you can make a desired name for your

model for long term storage. Its data can be directly withdrawn in the next flights.

Repeat the step "2.1 Model Select" to choose the model you want to name or save. And then touch the icon  to exit.



Click the icon  to enter System Menu and then click the icon



to get the **MODEL NAME INTERFACE**. The following is the interface:



Click the right blank frame of Name and a gray stripe will be shown in

the frame. Touch the return key



to clear up the old name.



English

Your language

Gray stripe

Touch the soft keyboard to input a new name. It is possible to switch between lowercase and uppercase by clicking the key.



Then touch



to exit.

## 2.3 Model copy




Touch the icon  
enter Model Copy.



to enter Model Menu and click



Choose the model you want to be copied as source model. The serial No. and model name of Source Model will be shown in the left side of the interface.

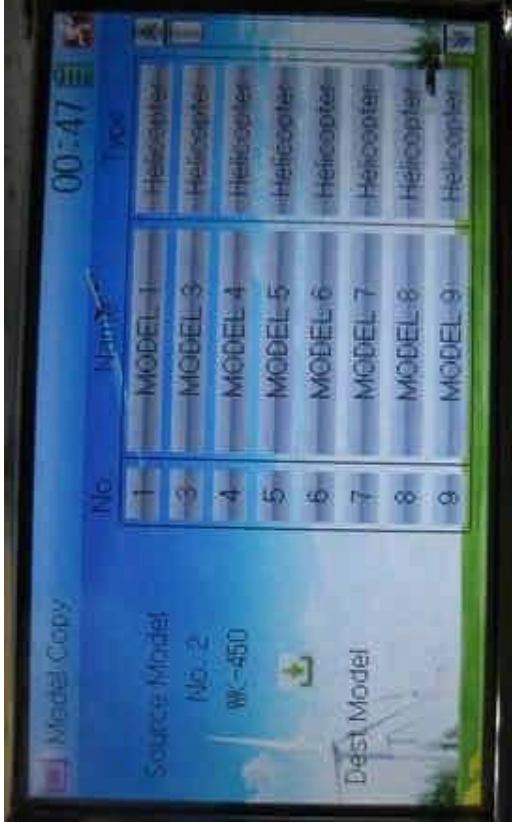

Then touch the model in the right list where you want to locate the source model. The serial No. and name of the model you chose are shown under Dest Model in the lower left of interface as well as an enquire "Are you sure?" is popped up.




Click OK to copy. Otherwise click Cancel. Then the interface will be automatically returned to Model Menu. Click  to save and exit.

## 2.4 Model copy

The model data between two DEVO-8 equipments can be wirelessly copied via Model Transmit and Model Receive in Model Menu

### A. Model transmission



Touch the icon  to enter Model Menu and then continue to click



the icon  to enter Model Transmit.







Choose the source model which will be transmitted. The serial No. and name of the source model will be shown under Select Model in left side of the interface as well as enquiry information "Are you sure?" in the right side.



Click OK for transmission or Cancel for rejection. Enquiry information


“Transmitting .....” appears after clicking OK. Touch the icon  to exit.

#### B. Model receiving

Touch the shortcut icon  to enter Model Menu and then touch the icon  to enter the **MODEL RECEIVE INTERFACE**. Enquiry information “Are you sure?” is shown in the center of the interface.



Click Ok for receiving or Cancel for rejection. “Connecting .....” and “Receiving .....” will be shown in series in the interface. The information of “Received” with the model name will be shown in left side after receiving is finished.

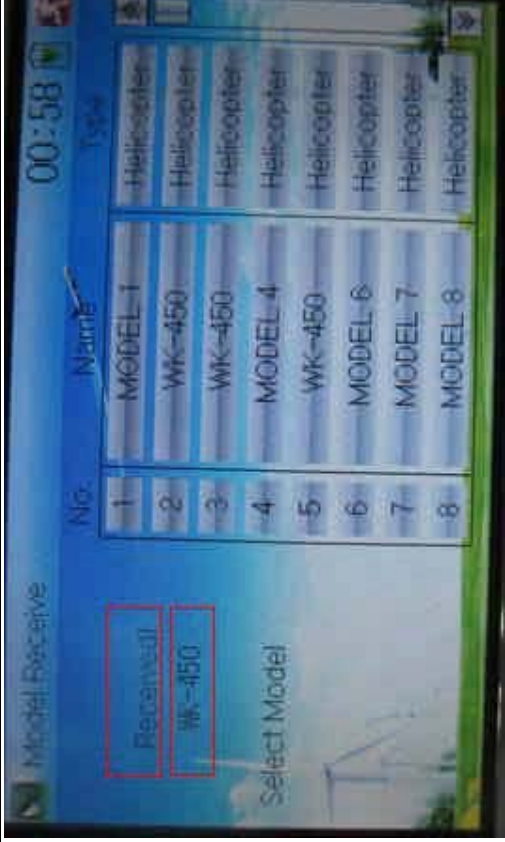

Choose the save position in the right name list by touching. Enquiry information "Are you sure?" is shown after clicking the save position. Click OK for save and the current interface will automatically return to Mode Menu. Click Cancel for rejection.



Touch the icon to exit.

### 2.5 Model reset

All the model data can be restored to factory settings via Model Reset.




Touch the icon to enter Model Menu and then click




to enter Model Reset.

It is possible to store up to 60 models data in the model list of DEVO-8 equipment. There are two methods to reset the model data: batch reset and single reset.

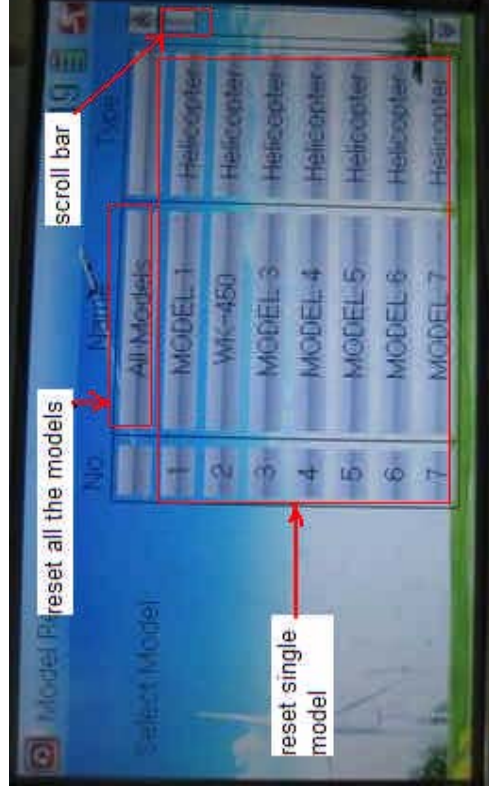


Method for batch reset:

Touch 'All Models' in Model Reset interface. Then "All Models" and enquiry "Are you sure?" appear in the left side. Click OK for reset, or Cancel for rejection.

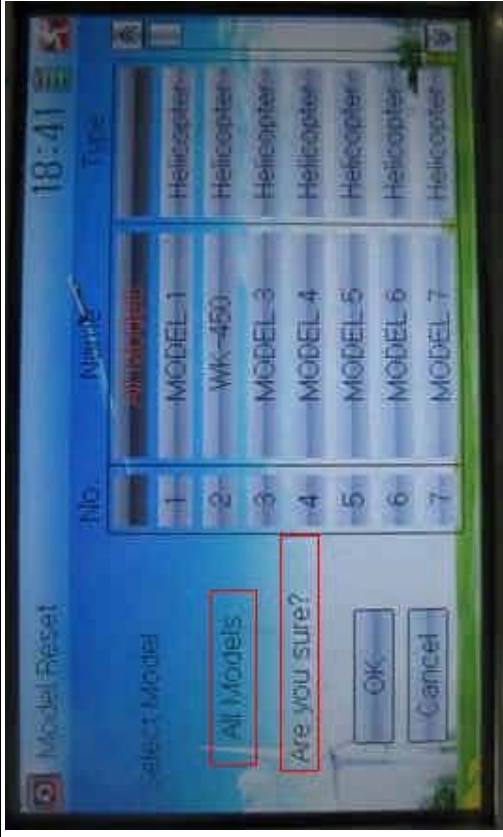

Method for single reset:

Touch the upper or lower navigation mark to move the scroll bar, and then choose the model you want to restore in the model name list. The selected model's name and serial No., and an enquiry "It is in use! Are you sure?" appear in the left side. Click OK for reset, or Cancel for rejection.

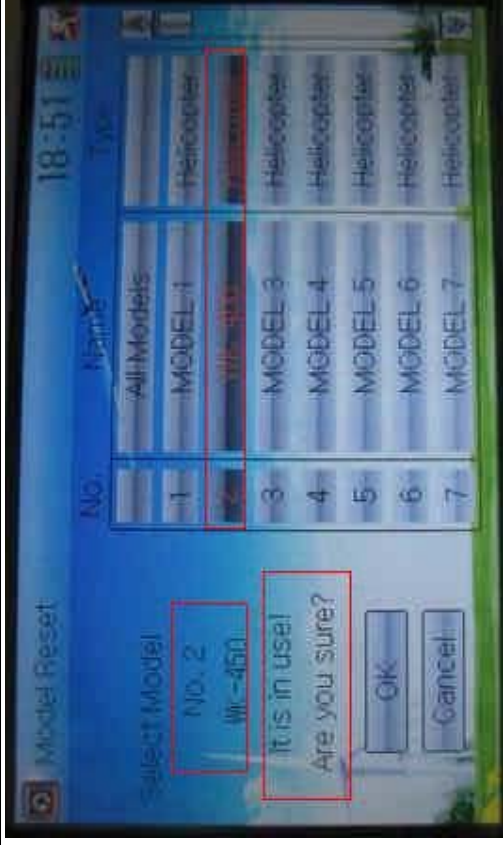

Click the icon to exit.

## 2.6 Type select

This device offers three model types menu. They are helicopter, airplane, and glider, respectively.



Touch the icon to enter Model Menu and then click to enter Type Select.





Choose the model type and then touch the icon  to exit.

## 2.7 Trim system

Trim System is able to finely tune the following six items, respectively: elevator, aileron, rudder, throttle, left trim, and right trim. The trim range is covered from 1 to 20 grades (factory default is set at 4). It is convenient to subtly modify the pitch by adjusting the trim range.



Touch the icon  to enter Model Menu and then click



to enter Trim System.



Touch the corresponding navigation mark to change the trim value. The bigger the trim value is, the bigger the trim range will be.

For elevator, aileron, and rudder, there are two more options: Normal and Limited. "Normal" means the trim is always working although the corresponding stick stays anywhere. "Limited" means the trim is out of working when the corresponding stick is at maximum position.

## 2.8 Stick position

The stick can be used as a switch. Both the turn-on or turn-off positions, at which the stick stays, can also be set up.

Method for setting:





Touch the icon to enter Model Menu and then click




to enter Stick Position Switch.




Click the navigation mark of Switch. It pops up a drop-down menu: SPS0, SPS1, SPS2, and SPS3. Choose the switch you want to define.



Then touch the navigation mark of Channel. It expands into five items: Inhibit Elevator, Aileron, Throttle, and Rudder. The factory default setting is Inhibit. Choose the stick you want to set as "switch".

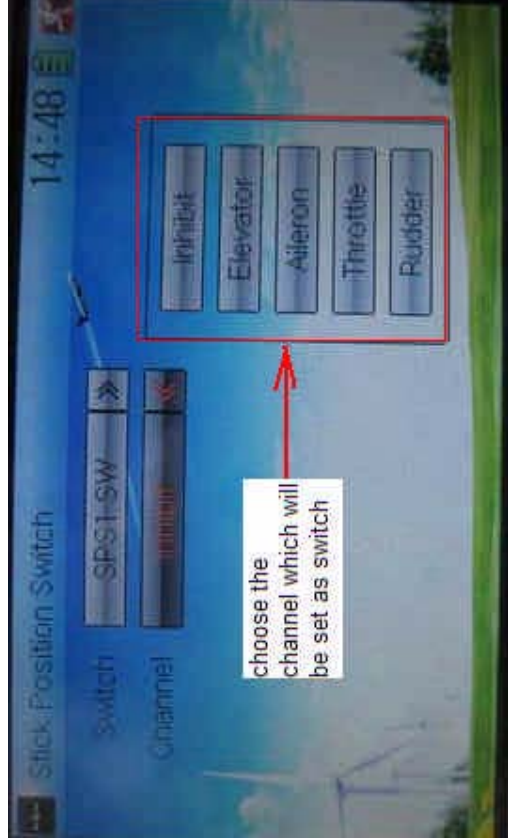

	English	Your language
	Stick position switch	
	Switch	
	Channel	
	Inhibit	
	Elevator	
	Aileron	
	Throttle	
	Rudder	
	Choose the channel which will be set as switch.	
<p>At the same time, "Position" and the status of turn-on or turn-off appear under the item Channel. The current status of turn-on or turn-off will be shown on the right top corner.</p>		

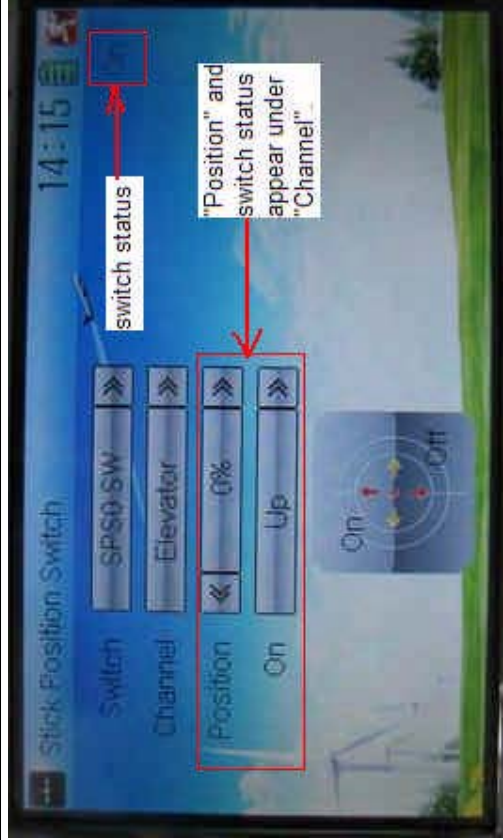

English

Your language

Switch status

“Position” and switch status appear under “Channel”



Click the icon to exit after the setting finished.

## 2.9 Warning

This function can set the warning for unsafety of which stick, switch status, or flight mode stay at the position while turning on the device, or is used as start-up warning in special purpose.


The factory default setting is Throttle Stick as Active, High direction at

10.0% Position, and warns while starting up.



Touch the icon to enter Model Menu and then click to enter the **WARNING INTERFACE**.



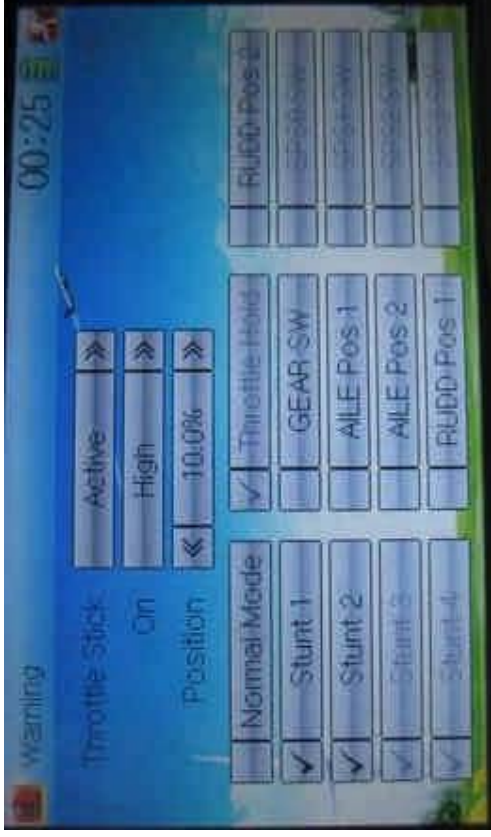

Setting method:

- 3) setting Throttle stick as warning

Click the navigation mark of Throttle Stick in the **WARNING INTERFACE**. It expands into Inhibit and Active. If clicking Inhibit, the dropdown menu is retracted. If clicking Active, it will expand into On and Position. The startup warning of throttle stick can be set at either high or low position when startup is warning. Set the warning level by changing the percentage in Position, whose setting value is ranged from 0.0 to 100.0%.

Take the right-hand throttle as an example. Warning position will be at 0.0% when the throttle stick is at the lowest position; Warning position at 100.0% when the throttle stick is at the highest position. The factory default setting is Throttle Stick is Active, Position in High direction at 10.0%.

- 4) setting other items

Other flight modes and switches warning will be shown in the lower-middle part of the interface after the setting for throttle stick is finished. Click the corresponding items you want to use.



Click to exit.

## 2.10 Device select

This setting can help you configure various functional switches, or adjust levers according to your flight habits. It includes Flight Mode Main Switch, Flight Mode Extra Switch, Flight Mode Trim Select, Throttle Hold Switch, Flap Switch Select, and Flap Trim Select.

**Friendly reminder:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.


Setting method:



Touch the icon to enter Model Menu, and then click the



icon to enter Device Select.

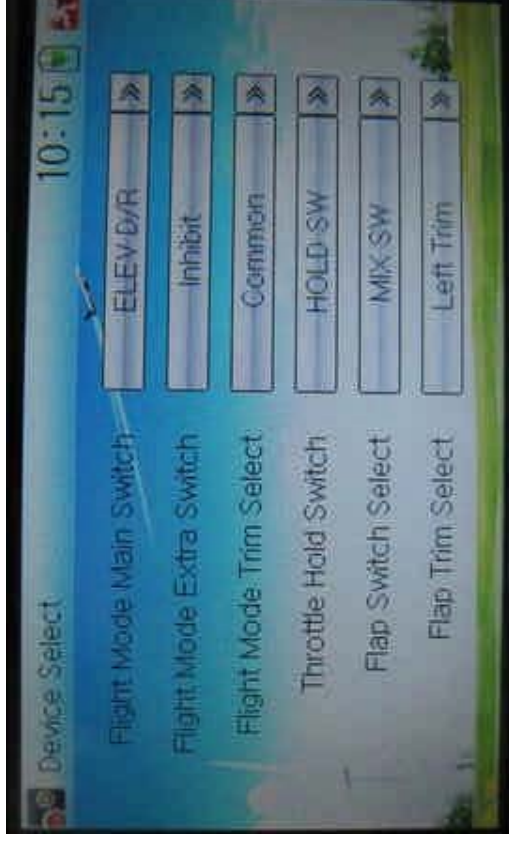

1) Flight Mode Main Switch

Touch the navigation mark of Flight Mode Main Switch to expand into a dropdown menu. Choose the mode switch you desire. The factory default setting is Inhibit.

2) Flight Mode Extra Switch

Flight Mode Main Switch should be previously activated before setting this step. The setting method is same as “1) Flight Mode Main Switch”.

3) Flight Mode Trim Select

There are two modes: Common and Flight Mode. In Common mode all the trim values, to which various sticks are relative, put equally effects on all the flight modes.

In Flight Mode, the trim values to which each stick is relative put, respectively, effect on the corresponding stick. The factory default is



Common.

4) Throttle Hold Switch

Refer to "1) Flight Mode Main Switch".

5) Flap Switch Select

Refer to "1) Flight Mode Main Switch".

6) Flap Trim Select

Refer to "1) Flight Mode Main Switch".

## 2.11 Device Output

Device output is composed of eight items. It can set up output switches and select the usage of levers, respectively. It can also activate, inhibit or use other functions.

**Friendly reminder:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.

Setting method:

Touch the icon



to enter Model Menu and then click



to enter Device Output.



There are eight items to be adjustable. They are Gear, Flap, AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7. The setting methods for them are shown below:

- 1) Gear

Touch the left column navigation mark of Gear and pop up an expansion including FMOD SW, MIX SW, ELEV D/R, AILE D/R, RUDD D/R, HOLD D/R, and GERA SW. Touch the desired item. The default setting is GEAR SW.



English	Your language
Touch navigation mark	
Expansion of GEAR SW	
Touch the right column navigation mark of Gear. Pop up an expansion including Inhibit, Active, Gyro, Governor, and Pitch. Touch the desired item. The default setting is Active.	



**English**


**Your language**

Right column navigation mark

Expansion list

2) Flap

There will show the switch option only after the right column of Flap is selected. Touch the right column of Flap and expand a dropdown menu including Inhibit, Active, and System.

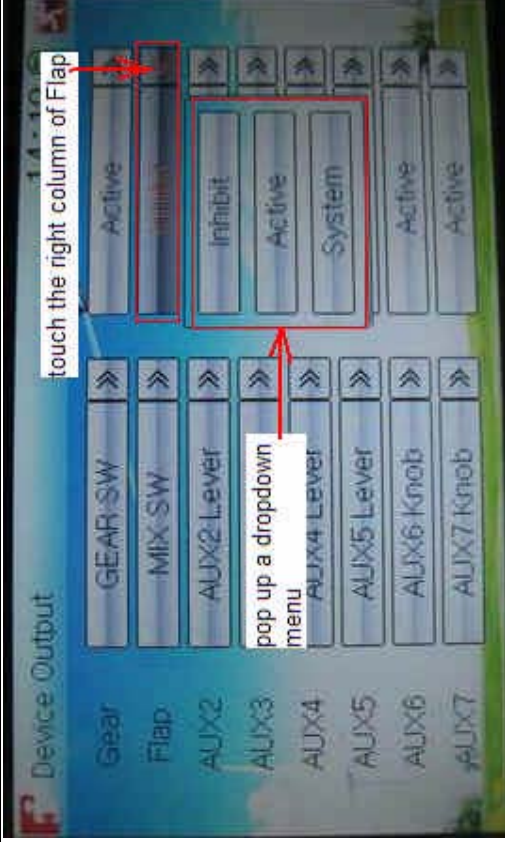

2.1) If choose Inhibit or Active, the expansion menu will include these items: FMOD SW, MIX SW, ELEV D/R, AILE D/R, RUDD D/R, Left Trim, and Right Trim. The default setting is Inhibit. Select the desired item as the flap switch.




2.2) If System is chosen, it is impossible to set in Flap.

3) AUX 2

Touch the left column navigation mark of AUX 2. Pop up an expansion list including SPS0 SW, SPS1 SW, SPS2 SW, SPS3 SW, Left Trim, Right Trim, and AUX2 Lever. Touch the desired item. The default setting is AUX2 Lever.




Touch the right column navigation mark of AUX 2, and expands a list including Inhibit, Active, Gyro, Governor, and Pitch 2. Click the desired item. The default setting is Active.

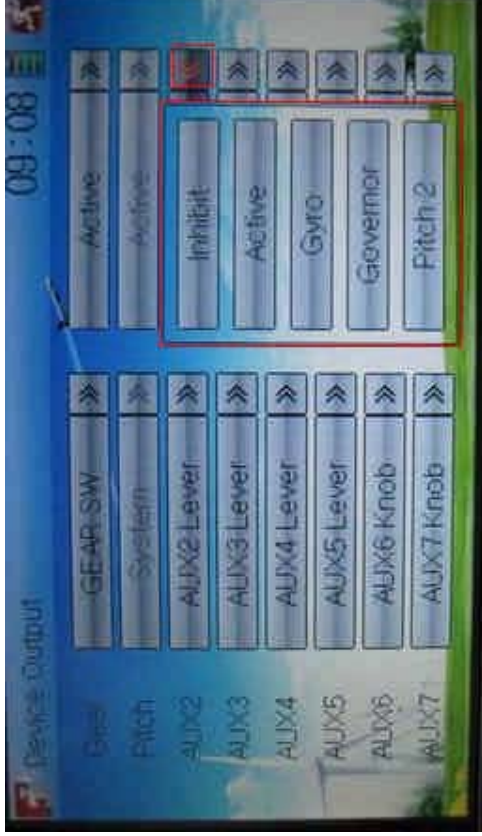

Then continue to set other items.


4) AUX 3

Touch the left column navigation mark of AUX 3, and expands a list including AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Knob, AUX7 Knob. Touch the desired item. The factory default setting is AUX3 Lever.

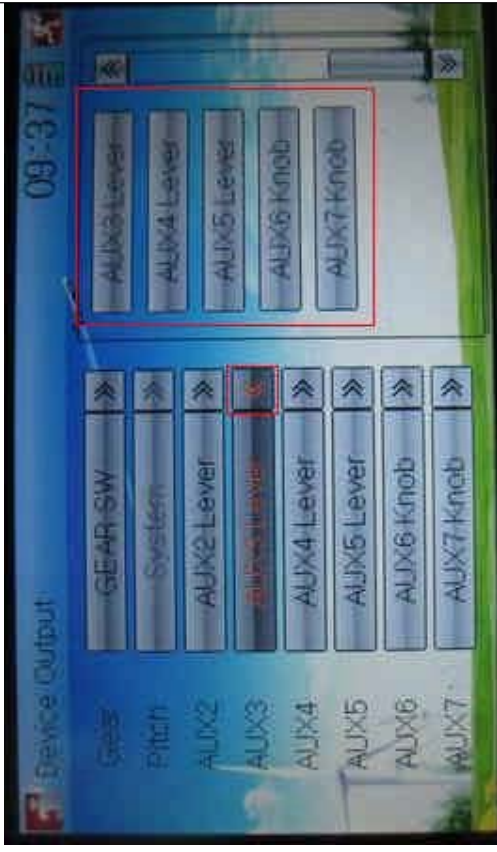

Click the right column navigation mark of AUX3, and see an expansion list including Inhibit, Active, Gyro, Governor, and Pitch 2. Choose the desired item. The factory fault setting is Active. Then continue to set up other items.



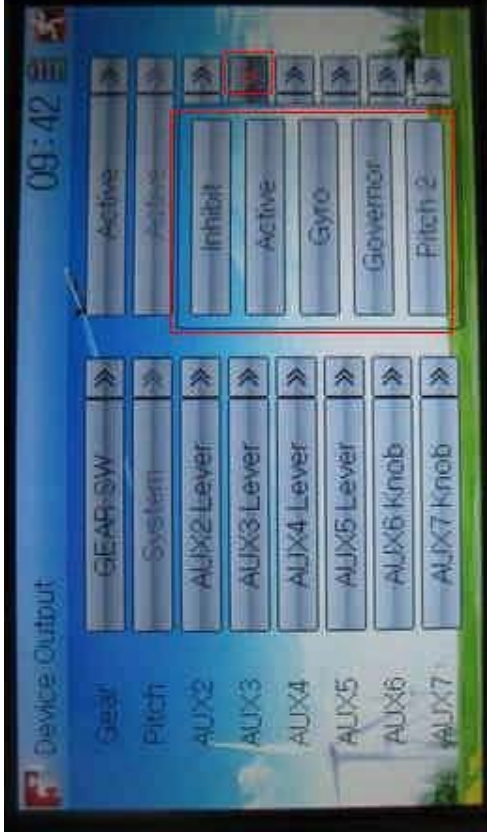

5) AUX 4

Refer to "4)AUX 4".

6) AUX 5

Refer to "4)AUX 4".

7) AXU6

Refer to "4)AUX 4".



Click the icon to exit.

## 2.12 Wing type

Wing Type is grouped into Flaperon, DLETA, 4-Aileron, and V Tail.

Wing type selection:



Touch the icon to enter Model Menu, and then touch




to enter the **WING TYPE INTERFACE**.




1) Flaperon

Touch the navigation mark of Wing Type and expand a dropdown menu with Normal, Flaperon, DELTA, and 4-Aileron. Choose the desired wing type.

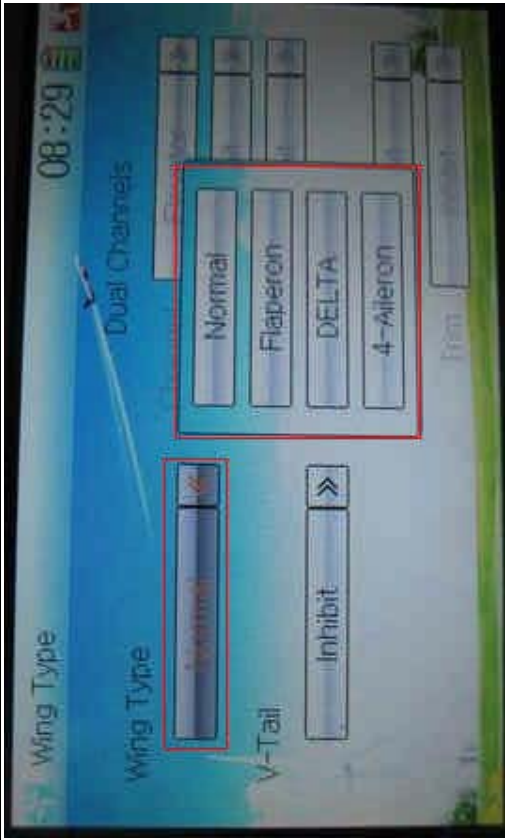


### 1.1) Flaperon

Below is the sketch map of Flaperon servos' assignment:

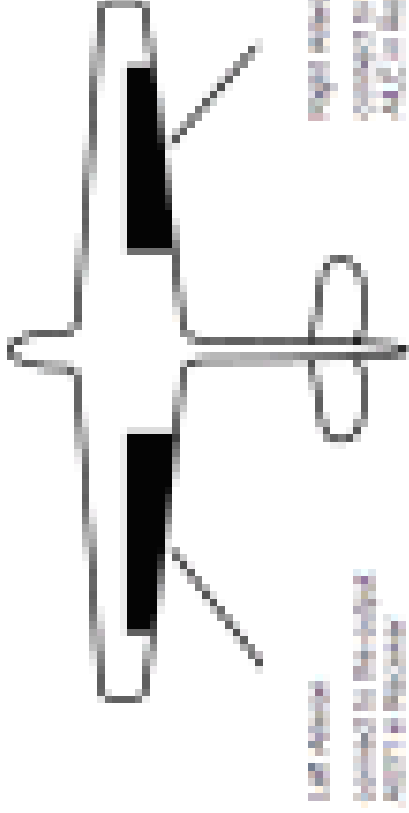

	English	Your language
	Left aileron	
	Right aileron	
	Connect to the output AUX1 in Receiver	
	Connect to the output AILE in Receiver	
<p data-bbox="565 911 591 1041">1.2) DELTA</p> <p data-bbox="623 411 649 1041">Below is the sketch map of DELTA servo's assignment:</p>		

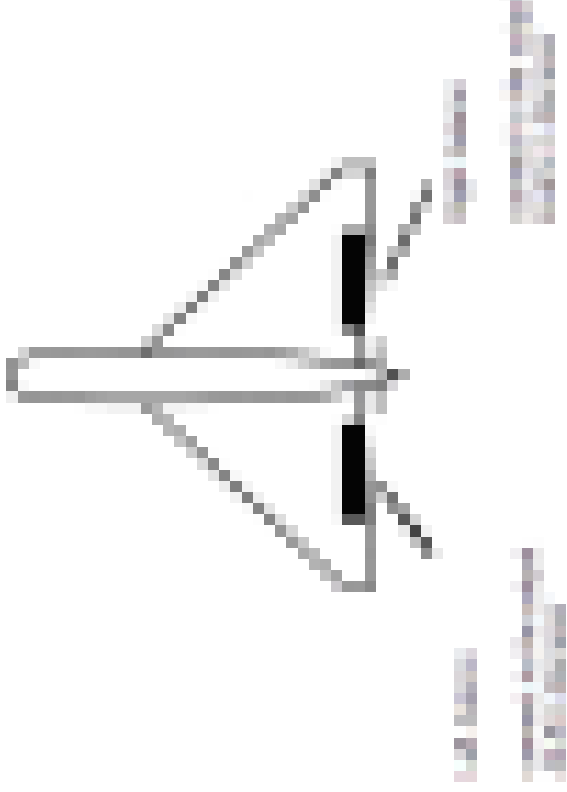	<table border="1"> <thead> <tr> <th data-bbox="857 535 917 1039">English</th> <th data-bbox="857 178 917 535">Your language</th> </tr> </thead> <tbody> <tr> <td data-bbox="917 535 977 1039">Left Aileron</td> <td data-bbox="917 178 977 535"></td> </tr> <tr> <td data-bbox="977 535 1037 1039">Right Aileron</td> <td data-bbox="977 178 1037 535"></td> </tr> <tr> <td data-bbox="1037 535 1097 1039">Connect to the output AILE in Receiver</td> <td data-bbox="1037 178 1097 535"></td> </tr> <tr> <td data-bbox="1097 535 1157 1039">Connect to the output ELEV in Receiver</td> <td data-bbox="1097 178 1157 535"></td> </tr> <tr> <td colspan="2" data-bbox="1157 178 1218 1039"> <p data-bbox="1218 882 1250 1039">1.3) 4 Aileron</p> <p data-bbox="1274 210 1352 1039">If your model airplane is equipped two left aileron servos and two right aileron servos, we recommend you to use 4-Aileron function.</p> </td> </tr> </tbody> </table>	English	Your language	Left Aileron		Right Aileron		Connect to the output AILE in Receiver		Connect to the output ELEV in Receiver		<p data-bbox="1218 882 1250 1039">1.3) 4 Aileron</p> <p data-bbox="1274 210 1352 1039">If your model airplane is equipped two left aileron servos and two right aileron servos, we recommend you to use 4-Aileron function.</p>	
English	Your language												
Left Aileron													
Right Aileron													
Connect to the output AILE in Receiver													
Connect to the output ELEV in Receiver													
<p data-bbox="1218 882 1250 1039">1.3) 4 Aileron</p> <p data-bbox="1274 210 1352 1039">If your model airplane is equipped two left aileron servos and two right aileron servos, we recommend you to use 4-Aileron function.</p>													

Touch the navigation mark of Wing Type, and expand a dropdown menu with Normal, Flaperon, DELTA, and 4-Aileron. Click 4-Aileron. Check the channel assignment by touching Monitor (Refer to "3.19 Monitor").


The left aileron servos should be connected to the outputs GERA and AUX3 in the receiver, and the right aileron servos connected to AILE and GYRO in the receiver.

All the servos' parameters can be adjusted, respectively.

## 2) V-TAIL

Touch the navigation mark of V-TAIL and expand a dropdown menu with Inhibit and Active. Choose Active.

Below is the sketch map of V-tail servos' assignment:

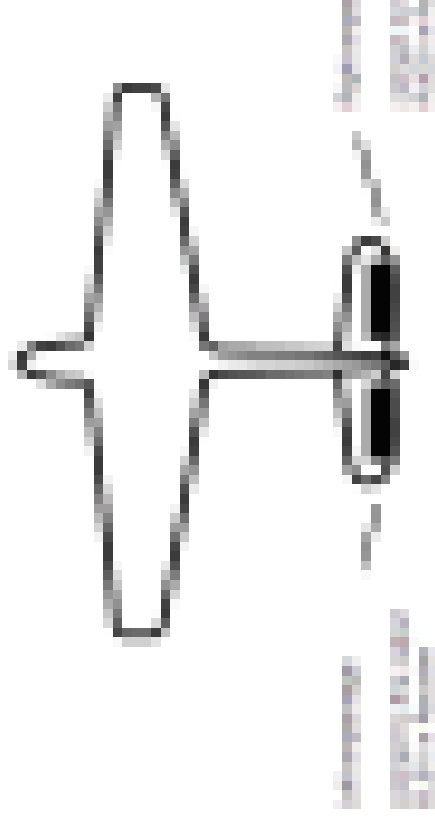

English	Your language
Left empennage	
Right empennage	
Connect to the output ELEV in Receiver	
Connect to the output RUDD in Receiver	


3) Dual channels setting

Dual Channels can be set as Elevator, Aileron, Rudder, or Flaperon. It is of dual channel output function. The channel, which will be set as dual channel at AUX in Device Output (Refer to "2.11 Device Output"), should be previously set as Inhibit when the AUX channel is being set.

Setting method:


3.1) Channel selection:

Touch the navigation mark of Channel in the interface of Wing Type, and expand into Elevator, Aileron, Rudder, and Flap. We take Elevator as an example.

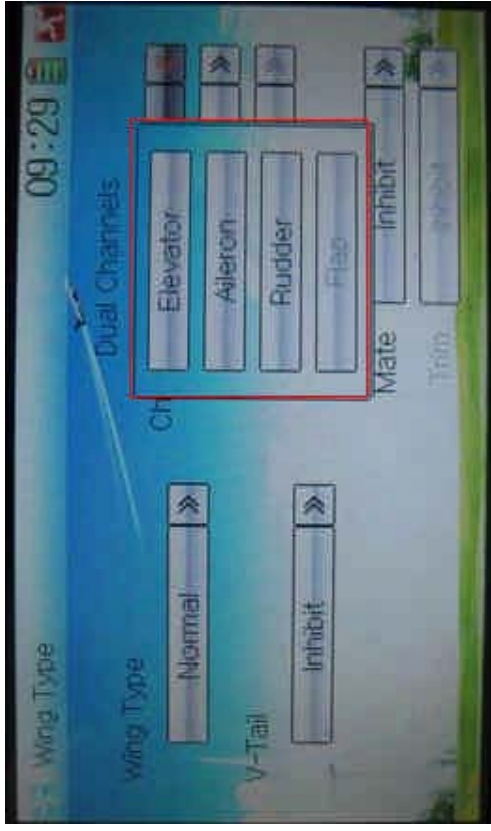

### 3.2) Mate setting

Click the navigation mark of Mate and expand a dropdown menu with Inhibit, Gear, Flap, AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7.

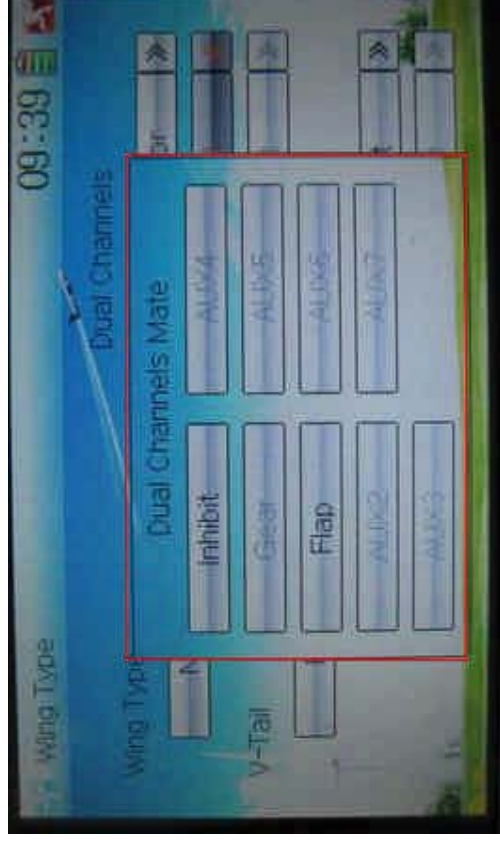



Touch the desired channel in black. The channel, whose characters are shown in gray, has been applied.

### 3.3) Trim setting

Click the navigation mark of Trim and expand a submenu with Inhibit, Left Trim, Right Trim, AUX2 Lever, AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Knob, and AUX7 Knob. Choose the item that you want to select as trim lever.


3.4) the settings for Aileron, Rudder, and Flap in the item Channel are the same as above.

### 4) Twin Engine

This function can be set as twin engine output to meet the requirements for the models, which are powered by twin engines.

### 4.1) Mate setting

Click the navigation mark of Mate and expand a dropdown menu with Inhibit and the inhibited channels previously set in "2.11 Device Output". Choose the desired channel in black. These channels in gray are not available.

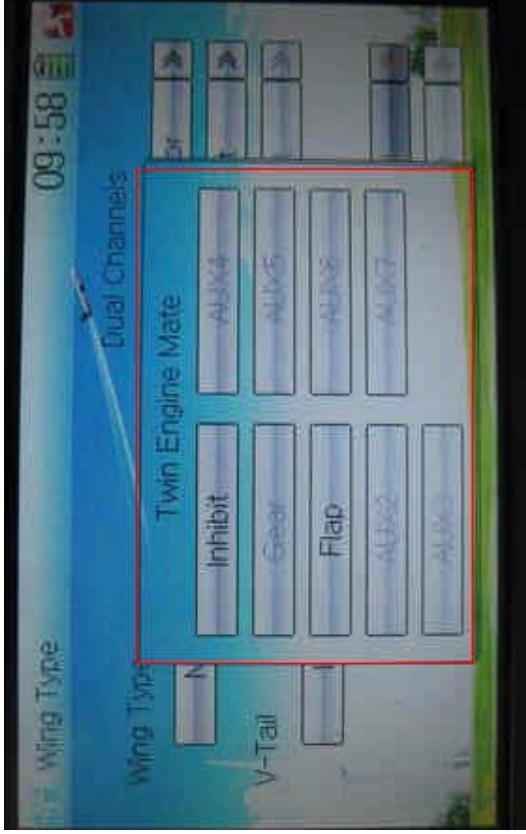

#### 4.2) Trim setting

Click the navigation mark of Trim and expand into Inhibit, Left Trim, Right Trim, AUX2 Lever, AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Knob, and AUX7 Knob.



Touch the item which you want to set as the trim lever or knob for twin engines.





Click the icon to exit after finished.


## 2.13 Fixed ID

This setting will bind DEVO-8 and its receiver in a unique corresponding relationship. It will greatly speed up the time of automatic binding when DEVO-8 powered on.

- 1) Setting for fixed ID

The setting for fixed ID should be under the status that automatic ID binding is successfully finished. Below is the setting method.

Touch the icon  to enter Model Menu in the main interface, and then enter Fixed ID by touching the icon  in Model Menu.

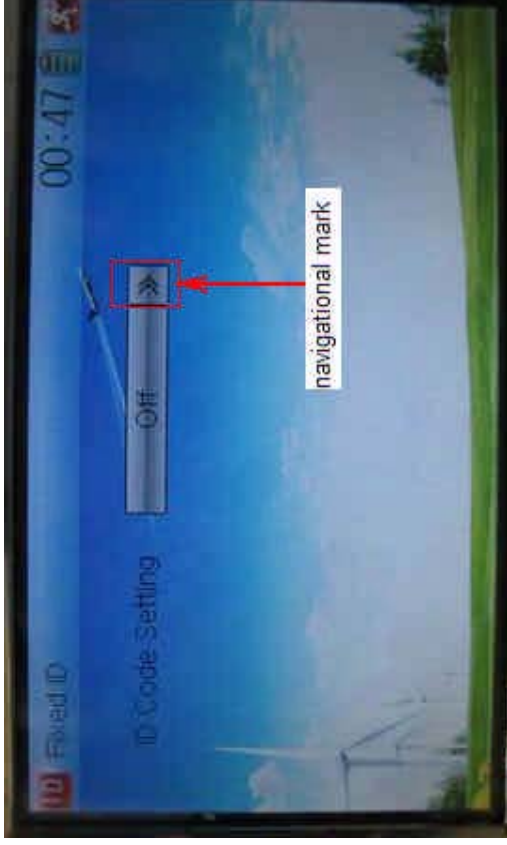


English	Your language
Navigation mark	

Touch the navigation mark of the item ID Code Setting. It will expand into two statuses: Off and On. A series of random digits will be shown below after touching On.



English	Your language
Touch "On"	
A series of random digits is shown here	

A mini soft keyboard is shown in the lower part after touching the random digits of ID Code

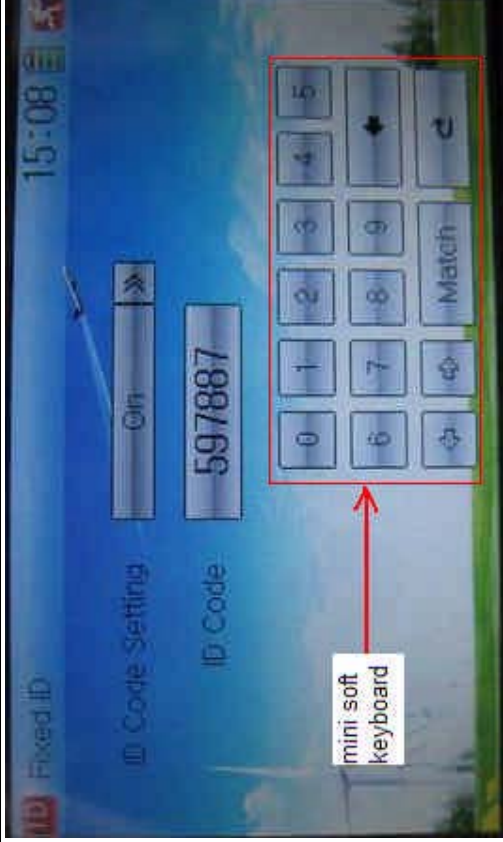

**English**

**Your language**

Mini soft keyboard

The new ID digits can be modified by touching the mini soft keyboard. Touch Match after the new ID is already set. An enquiry interface of “Are you sure?” pop up. “ID Code Match ... ..” will be shown after touching OK.





English	Your language
ID Code Setting	
ID Code	
Fixed ID	
Are you sure?	
Cancelled	
ID Code Match	

2) Fixed ID cancellation

Insert the assorted BIND PLUG into the output terminal of BATT before the receiver is powered on, and then plug 5V DC power into other output terminal. The red light of receiver will flash slowly. This means the fixed ID code has been cancelled. Pull out BIND PLUG.



DEVO-8 also needs to make relative cancellation and reversion after the fixed ID in receiver is cleared out.

In the main interface touch the icon  to enter Model Menu and then touch  to enter Fixed ID. Touch ID Code Setting to expand the navigation mark into two statues On and Off. Touch Off. Then touch  to exit.

### 3.0 Function Menu

Function Menu is used to make personalizedly fine adjustment to the selected models. It includes Reverse Switch, Travel Adjust, Sub Trim, Dual Rate and Exponential, Throttle Hold, Throttle Curve, Snap Roll, Differential setting, Balance setting, Gyro Sensor, Governor, Aileron to Rudder Mix, Elevator to Flap Mix, Rudder to Aileron/ Elevator Mix, Flap System, **Aileron to Flaperon Mix**, Pitch Curve, Program Mix, Monitor, Fail Safe, Trainer, and Timer.



### 3.1 Reverse switch



Touch the shortcut icon to enter Function Menu, and then click



the icon to enter the **REVERSE SWITCH INTERFACE**.



There show all the reverse switches' statuses of twelve channels. Touch the desired item to reverse its current status. The status includes two types: Normal and Reverse. The default setting is Normal.




Touch the icon to exit after finished.

### 3.2 Travel adjust

Touch the icon  to enter Function

Menu and then click the icon  to enter the **SERVO TRAVEL ADJUST INTERFACE.**

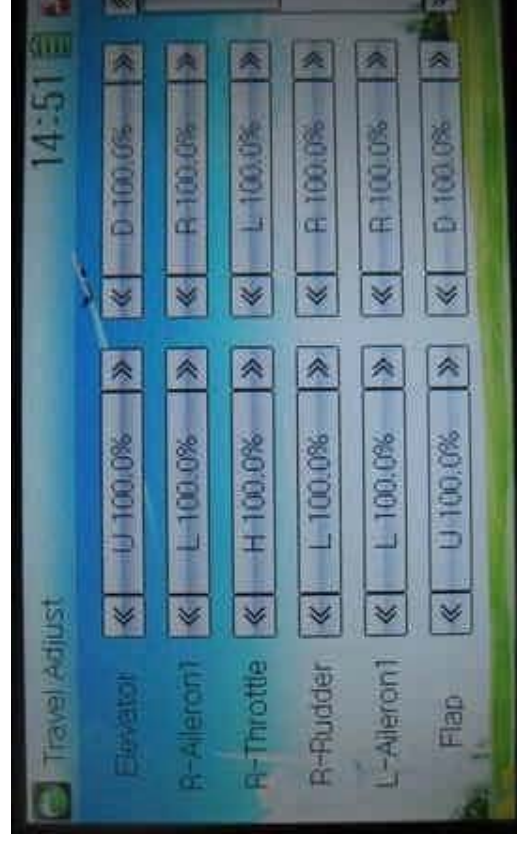


The interface contents two pages to show the current travel status of all the twelve channels. Touch the navigation mark of each item to increase or decrease corresponding travel adjustment amount. The adjustable range is 0.0-150.0%. The default setting is 100.0%.


Click the icon  to exit after finished.

### 3.3 Sub trim

Sub Trim is used to make parallel movement of servos. It is recommended to adjust the servo bell crank if the servo is far away from its neutral point. The excessive usage of sub trim may damage the servo.


Setting method:

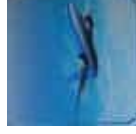

Touch the icon  to enter Function Menu and then click the



icon to enter the **SUB TRIM INTERFACE**.

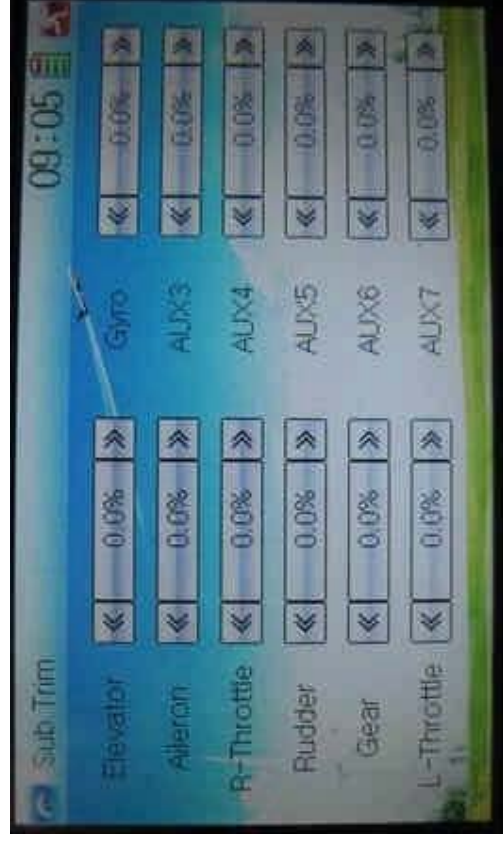

Touch the navigation mark of the desired item to adjust the amount for

rectifying the servo's neutral point. The default neutral point is set at 0.0%. The adjustment range of each channel is shown as below:

English	Your language	English	Your la
<b>Channel name</b>		<b>Adjustment range</b>	
Right elevator		D62.5%-U62.5%	
Right aileron 1		R62.5%-L62.5%	
Throttle		L62.5%-H62.5%	
Rudder		R62.5%-L62.5%	
Left aileron 1		R62.5%- L62.5%	
Flap		D62.5%- U62.5%	
Right aileron 2		R62.5%- L62.5%	
Left aileron 2		R62.5%- L62.5%	
AUX4		-62.5%- +62.5%	
AUX5		-62.5%- +62.5%	
Left elevator		D62.5%- U62.5%	
AUX7		-62.5%- +62.5%	

Note: the model names shown will be different with the selected channels different.




Click the icon to exit after finished.

### 3.4 Dual rate and exponential

It is possible to use D/R switch to control over the dual rate of elevator, aileron, and rudder after the function of Dual Rate and Exponential is set up. The setting range is 0-125%. Under the help with exponential curve adjustment, it is not only manually but also automatically able to set up various parameters which are suitable for yourself.

Setting method:

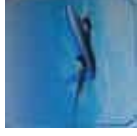

Touch the icon

to enter Function Menu and then click the



icon

to enter the **DUAL RATE AND EXPONENTIAL INTERFACE**.



1) Channel selection


Touch the navigation mark of Channel and expand a selectable list including Elevator, Aileron, and Rudder. Click the desired channel which will be shown in Channel.

## 2) Position selection

Touch the navigation mark of Position and expand a selectable list including Pos 0, Pos 1, Pos 2, Pos 3, and Pos 4. Click the desired item which will be shown in Position. But there will only show Pos 0, Pos 1, and Pos 2 in manual setting.

## 3) Dual Rate adjustment

It is possible to modify the value by touching the navigation mark of Dual Rate.

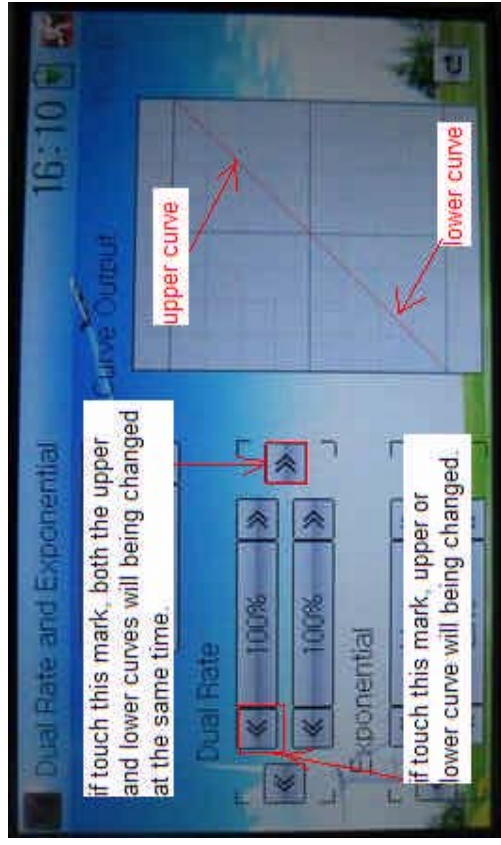


If touching the navigation mark for just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will be changed in one direction at the right graph.

If touching the navigation mark for both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while the curve will be changed at the same time, shown at the right graph. The default setting is 100%.

English	Your language
Upper curve	
Lower curve	
If touch this mark, both the upper and lower curves will be changed at the same time.	
If touch this mark, either upper or lower curve will be changed.	


4) Exponential adjustment

It is possible to adjust the exponential output value of the servo at that point, which is set up in step "2) Position selection", by touching the navigation mark of Exponential.

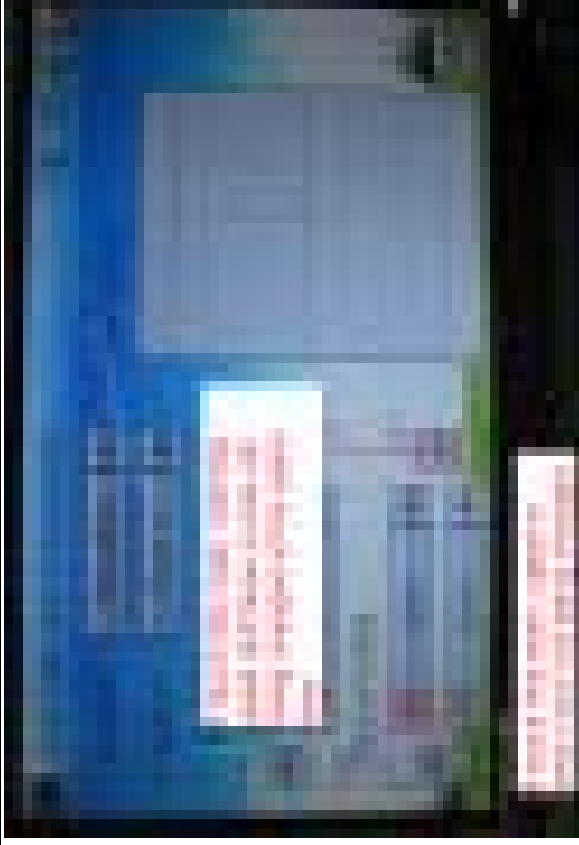

If touching the navigation mark for just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will being changed in one direction at the right graph.

If touching the navigation mark for both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while the curve will being changed at the same time, shown at the right graph. The default setting is Line.

Then touch this mark  to return to the interface of Dual Rate and Exponential.

5) Automatic setting  
Under working with Flight Mode, it is possible to switch between the dual rate and exponential, which are set in above 3) Dual Rate adjustment and 4) Exponential adjustment, respectively.





The settings for Flight Mode 0, Flight Mode 1, Flight Mode 2, Flight Mode 3, and Flight Mode 4 are available.

**Note:** Before using the function of automatic setting, both Flight Mode Main Switch and Flight Mode Extra Switch should be previously set as relative switches. Refer to "2.10 Device Select".

Touch the flight mode that you want to set as automatic operation, and an expansion list will be shown. Click the desired position. If Switch is selected, it is only controlled by the corresponding dual rate lever.




Click the icon to exit.

### 3.5 Throttle hold

If this function is set, the switch will be executed by hold switch. The setting value of throttle hold is ranged from -20.0 to 50.0.

Setting method:

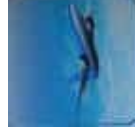


Touch the shortcut icon to enter Function Menu, and then



click to enter the **THROTTLE HOLD INTERFACE**.



Touch the navigation mark of Hold Status, and an expansion list will be shown as Inhibit and Active. Click Active, there appear Switch, and Hold Position in the following interface.

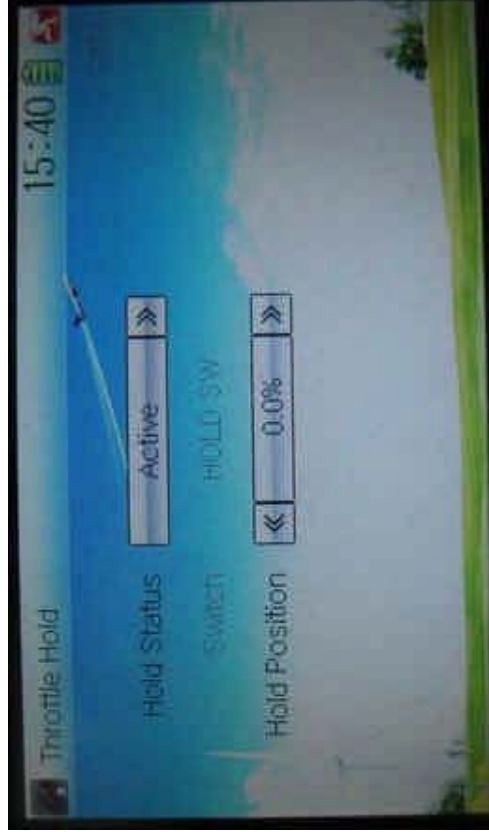

vv

### 1) Setting for Switch

This item is impossible to be set. The default setting is HOLD SW.

### 2) Setting for Hold Position

Touch the left navigation mark of the item Hold Position to decrease the position amount, whose minimum is -20.0%; touch the right to increase the position amount whose maximum is +50.0%.




Click the icon to exit after all the settings are finished.

## 3.6 Throttle curve

Throttle curves are adjusted through nine points, which of all the flight modes can be respectively set. The left and right throttles can be separately set after it is previously set as dual engines. Refer to Twin Engine at "2.12 Wing Type"

Setting method:

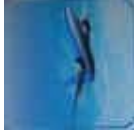

Touch the icon to enter Function Menu and then click the




icon to enter the **THROTTLE CURVE INTERFACE**. A dropdown menu with "All Servos Hold?" pops up.



Click OK for all the servos locked at the current statuses. Click Cancel for all the servos unlocked.

1) Channel setting

After previously set up Twin Engine, touch the navigation mark of Channel and expand a list including Left Throttle and Right Throttle. Select the desired throttle which will be shown in Channel. Channel will be shown in grey if Twin Engine is not previously selected.

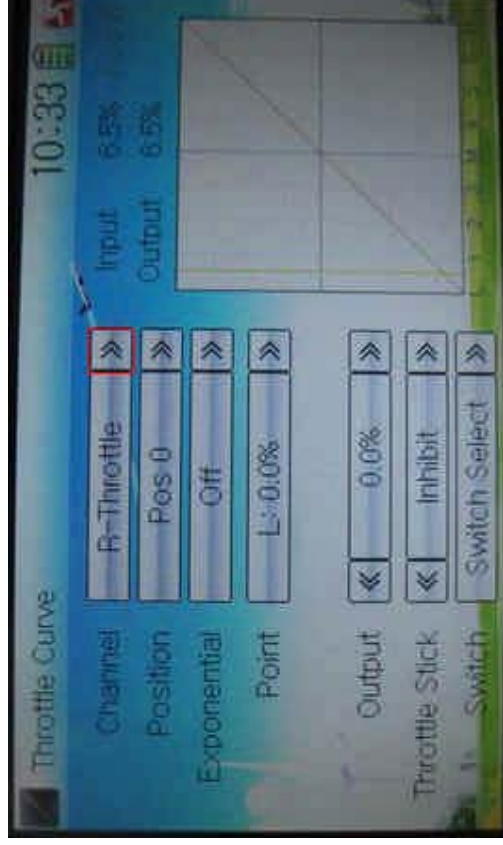

2) Position selection

Touch the navigation mark of Position and expand a list with Pos 0 and Pos 1. select the item you want to set.

3) Exponential setting

Touch the navigation mark of Exponential and expand a list with Off and On. The throttle curve will be changed smoothly if clicking On.

4) Point setting

Touch the navigation mark of Point and expand a list including nine points. Select the point you want to adjust.



5) Status setting

Touch the navigation mark of Status and expand a list with Inhibit and Active. Click Inhibit for keeping the current value (the default setting is Inhibit); click Active for changing the above point's value. Another item Output will be shown below after choosing Active.


6) Output setting

Touch the left or right navigation mark of Output to decrease or increase, respectively, the output value. The adjustable range is from 0.0% to 100.0%.

#### 7) Throttle setting

Touch the left or right navigation mark of Throttle Stick to decrease or increase, respectively, the amount with a lower limit of 0.0% and an upper limit of 100.0%. The default setting is Inhibit.

The switch between Pos 1 and Pos 0 can be freely realized through throttle stick after the above amount has been set up.

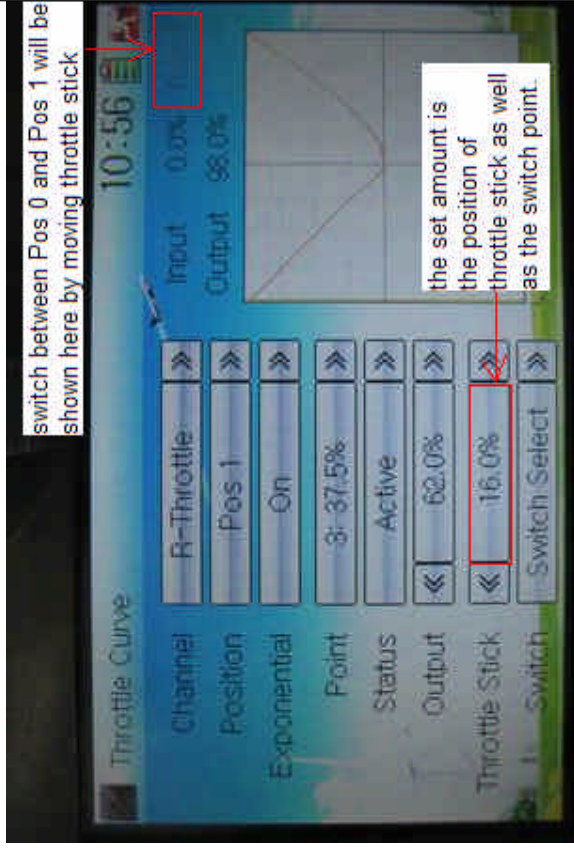

English	Your language
Switch between Pos 0 and Pos 1 will be shown here by moving throttle stick.	

The set amount is the position of throttle stick as well as the switch point.

The above set amount is the position of throttle stick as well as the switch point.

#### 8) Switch selection

When the item Throttle Stick is set in Inhibit, it is possible to switch between Pos 0 and Pos 1 by Switch.

Touch the navigation mark of Switch and expand a dropdown menu including the selectable items in black. Select the desired item whose left side will be changed into "1" from "0". If two items are selected, the item And should be chosen. Then touch the navigation mark of Switch to return back.




Click the icon  to exit after finished.




### 3.7 Snap roll


After the function of Snap Roll is set up, the switch or stick can be used to control over the snap roll flight.

Setting method:

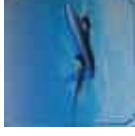


Touch the icon  to enter Function Menu, and then click the




icon  to enter the interface of Snap Roll.

Setting for snap roll: touch the navigation mark of Snap Roll and expand a dropdown menu with five Snap Rolls. Click the snap roll you want to use.

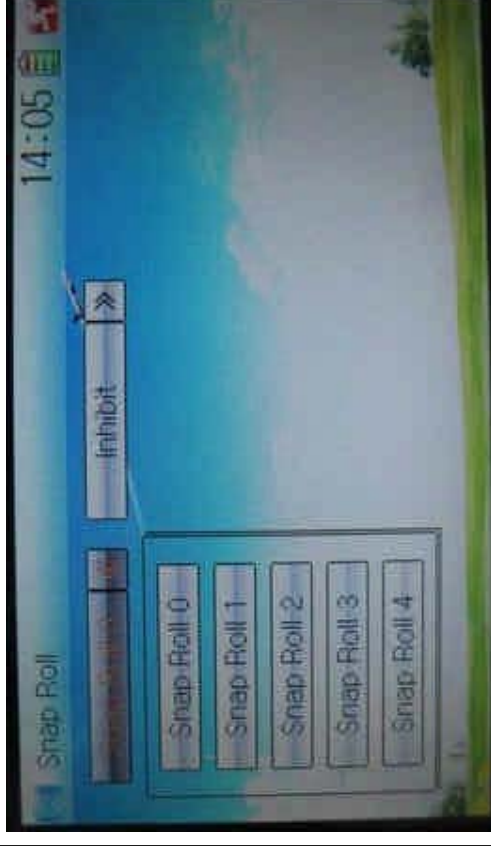

Touch the navigation mark of Inhibit and expand two options: Inhibit and Active. A dropdown menu will be expanded after Active selected.

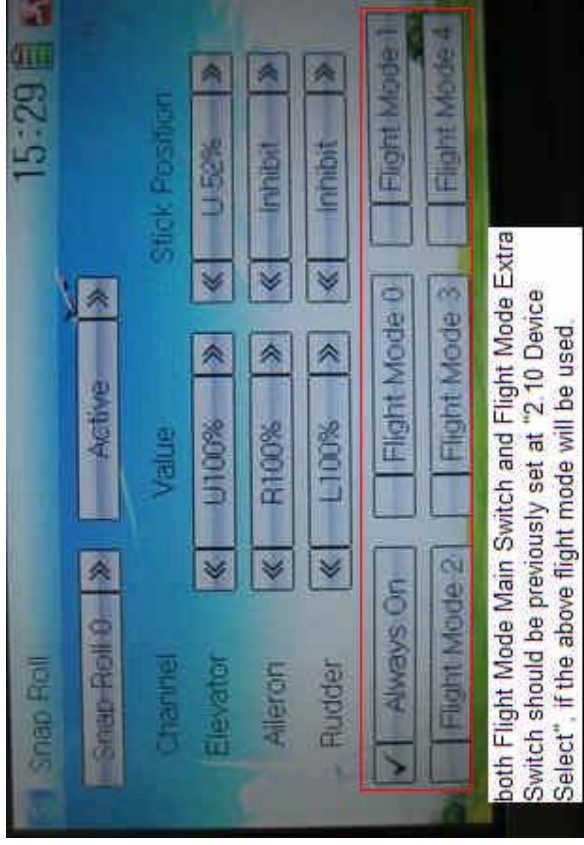

There show such items as Channel, Value, Stick Position and the flight mode (if both Flight Mode Main Switch and Flight Mode Extra Switch should be previously set at Device Select in Model Menu, if the flight mode will be used. Refer to "2.10 Device Select"). Through changing the amounts of Elevator, Aileron, and Rudder, respectively, set the snap roll flight in the actions of left or right ascending, or left or right descending. The snap roll flying can be controlled by the Training lever, or by setting the corresponding stick position.

- 1) Value setting

Change the value, by touching the left or right navigation mark of Elevator, Aileron, or Rudder, to set the corresponding servo lever's angle and the control direction. The adjustable range is 0-125%.

## 2) Stick position setting

Change the position, by touching the left or right navigation mark of Elevator, Aileron, or Rudder, to set the stick position and the control direction. If Stick Position is set as Inhibit, only Training lever can control over the snap roll flying.

## 3) Flight mode selection

It can be set in various flight modes whether or not to use the snap roll function. All the flight modes are shown at the bottom of interface. Click the flight mode you want.




Click the icon to exit after finished.

## 3.8 Differential

If want to use this function, Flaperon, DELTA, or 4-Aileron should be previously selected in Wing Type of Model Menu. Refer to “2.12 Wing Type”.

A. Aileron differential setting:

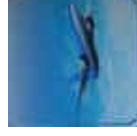


Touch the shortcut icon to enter Function Menu, and then



click the icon to enter the interface of Differential.

Mounting servos in left and right ailerons are a must if using this function. The following interface will be shown after Flaperon, DELTA,

or 4-Aileron selected in Wing Type. Refer to "2.12 Wing Type".

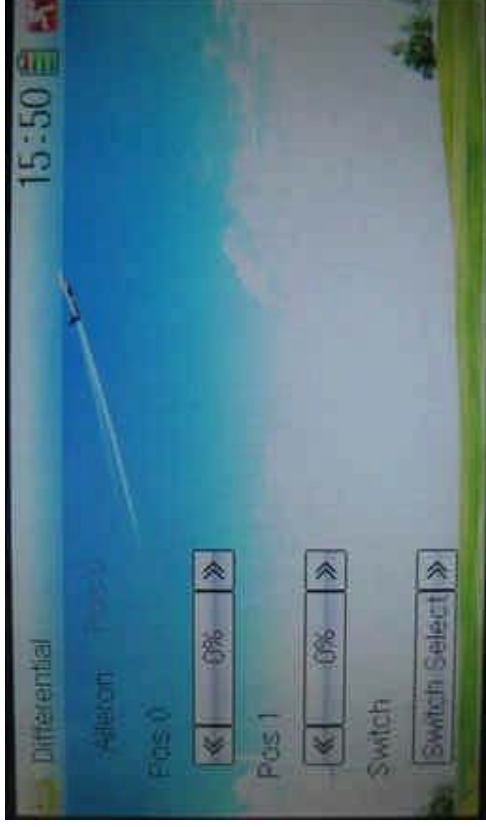

1) Setting for Pos 0

Touch the left or right navigation mark of Pos 0 to decrease or increase, respectively, differential value. The bigger the value is, the bigger the differential is. The adjustable range is  $\pm 100\%$ .

2) Setting for Pos 1

The setting is same as above.

3) Switch selection

It is possible to switch by setting switch when differential is in use.



Touch the navigation mark of Switch and expand a selectable list. Click the switch item, which you desire, to change "0" into "1". If two or more switch items are selected, the item And should be chosen. Then click the navigation mark to return.



Click the icon to exit after finished.

**B. Rudder differential setting**

V-Tail should be previously set in Wing Type of Model Menu if the rudder differential function is activated. Refer to "2.12 Wing Type". And then the following interface will be shown:



1) Setting for Pos 0

Touch the left or right navigation mark of Pos 0 to decrease or increase, respectively, differential value. The bigger the value is, the bigger the differential is. The adjustable range is  $\pm 100\%$ .

2) Setting for Pos 1

The setting is same as above.

3) Switch selection

It is possible to switch by setting switch when differential is in use.



Touch the navigation mark of Switch and expand a selectable list. Click the switch item, which you desire, to change "0" into "1". If two or more switch items are selected, And should be chosen. Then click the navigation mark to return.



Click the icon to exit after finished.

C. Flap differential setting

It should be previously set the flap dual channel function in Device Output at Model Menu (refer to "2.12 Wing Type") in order to activate the menu of Flap Differential.



#### 1) Setting for Pos 0

Touch the left or right navigation mark of Pos 0 to decrease or increase, respectively, differential value. The bigger the value is, the bigger the differential is. The adjustable range is  $\pm 100\%$ .

#### 2) Setting for Pos 1

The setting is same as above.

#### 3) Switch selection

It is possible to switch by setting switch when differential is in use.


### 3.9 Balance

This function can adjust the parameters of the two servos which are used in the dual channels. It should be previously chosen one of the these wing types of Flaperon, DELTA, 4 Aileron, and V Tail in Wing Type



at Model Menu. Refer to “2.12 Wing Type”.


Setting method:

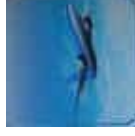

Touch the icon




to enter the **BALANCE INTERFACE**.

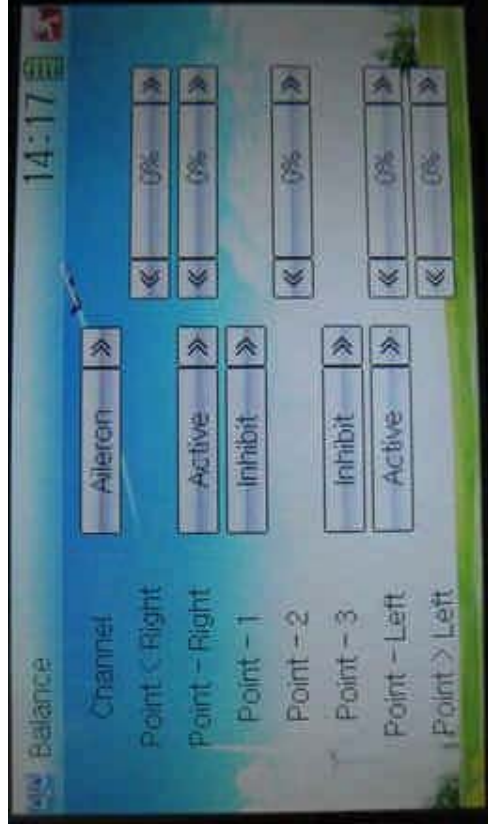


1) Channel selection

Touch the navigation mark of Channel and expand a selectable list.  
Choose the desired channel.

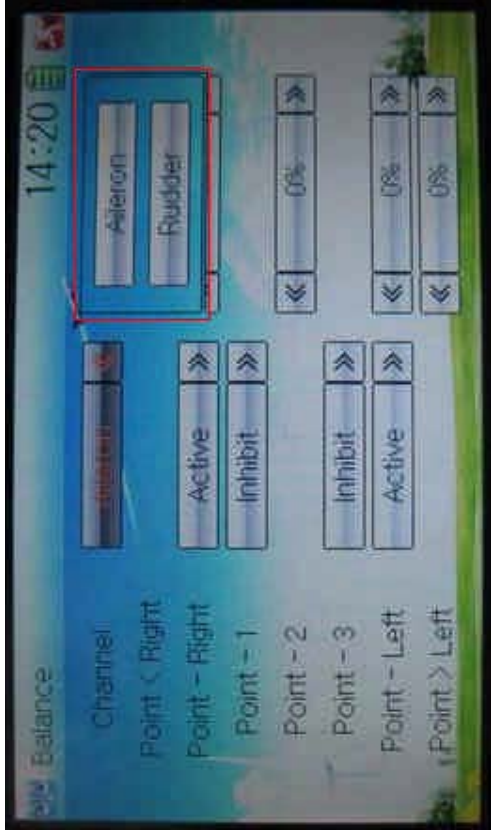

## 2) Point parameter adjustment

Touch the navigation mark of Point that you want to select, and pops up a dropdown menu including Inhibit and Active. Click Active for adjusting the value by touching the left or right navigation mark. 0% means no adjusting. A minus value means the amending direction is downward, and a plus value means the amending direction is upward.

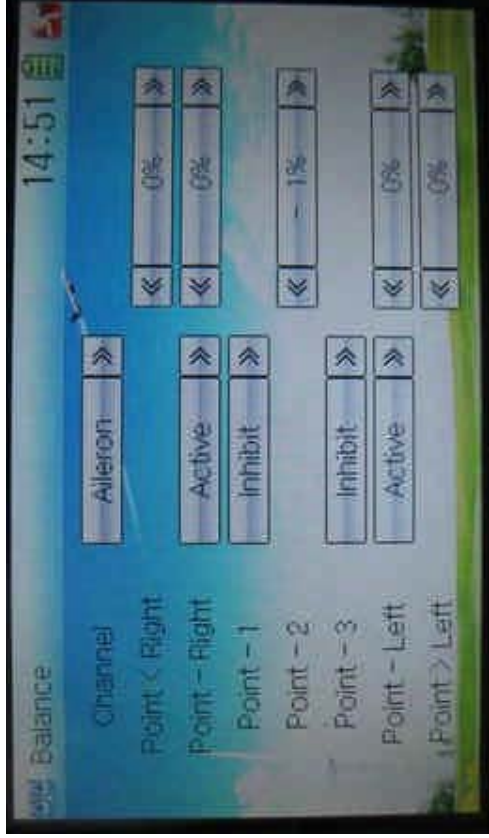


Click the icon to exit after finished.


### 3.10 Gyro sensor

 This function offers the gain adjustment for gyro sensor, which can be manually set through D/R switches or Flight mode switch, and also is possible to be automatically switched among various gains through flight mode switch. (The flight mode should be activated. Refer to “2.10 Device Select”).


Setting method:



 Touch the icon to enter Function Menu, and then touch the



icon to enter **GYRO SENSOR INTERFACE**.

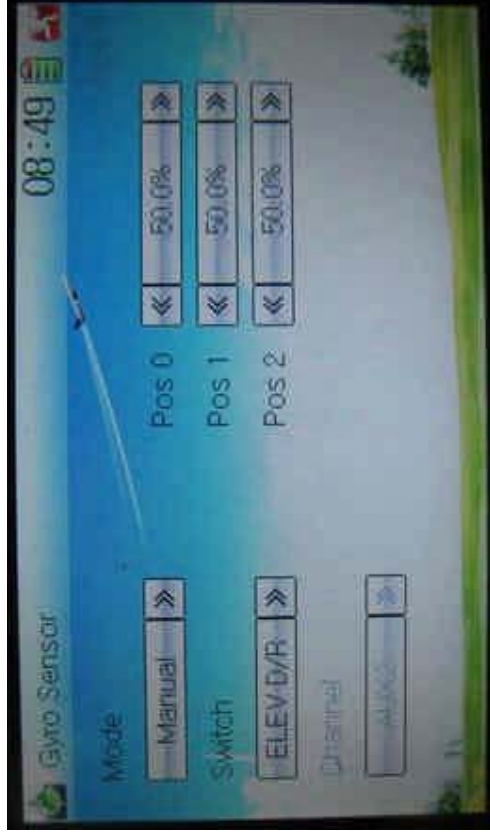

A. Manual setting

1) Mode selection

Touch the navigation mark of Mode and expand into two options: Manual and Automatic. Select Manual.

2) Switch selection

Touch the navigation mark of Switch and expand into five articles: FMOD SW, MIX SW, ELEV D/R, AILE D/R, and RUDD D/R.

3) Channel setting

The default setting is AUX 2. It is possible to alter into other channels by choosing in the item of Device Output (refer to "2.11 Device Output").

4) Gain adjustment

There are total three levels for respective setting: Pos 0, Pos 1, and Pos 2.

4.1) Pos 0

Touch the left or right navigation of the flight mode you want to adjust to decrease or increase, respectively, the value with a range of 0.0% - 100.0%.

If the gyro used has two modes of NOR and AVCS, NOR will be activated when the value is less than 50.0%, and AVCS activated when above 50.0%. In NOR mode, the smaller the value is, the bigger the sensitivity will be; in AVCS mode, the bigger the value is, the bigger the gyro sensor gain will be. The factory setting is 50.0%.


4.2) Pos 1

Refer to the step of "4.1) Pos 0".

4.3) Pos 2

Refer to the step of "4.1) Pos 0".

B. Automatic setting

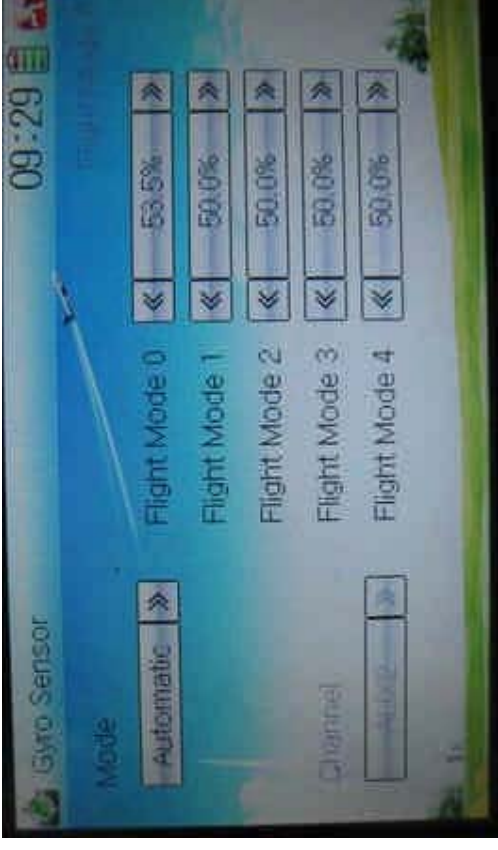

### 1) Mode selection

Touch the navigation of Mode and expand into two options: Manual and Automatic. Select Automatic.

### 2) Channel output

The default setting is AUX 2. It is possible to alter into other channels in the interface of Device Output (Refer to "2.11 Device Output").

### 3) Flight mode selection

All the flight modes are shown in the right interface which includes Flight Mode 0, Flight Mode 1, Flight Mode 2, Flight Mode 3, and Flight Mode 4. .

For Flight Mode 3 and Flight Mode 4, Flight Mode Extra Switch should be activated in Device Select (Refer to "2.10 Device Select").

Click the left or right navigation mark of the flight mode, which you want to automatically adjust, to decrease or increase the amount of gyro gains, respectively. If the gyro you use has two modes of NOR or AVCS, when the amount is less than 50.0%, NOR mode will be activated. The lesser the amount is, the bigger the gyro gain becomes. The default setting is 50.0%.



Click the icon to exit.

## 3.11 Governor

Governor should be set at Device Output (Refer to "2.11 Device Output").

The control proportion of governor can be separately set in various flight modes. For the absolute revolution amount, please set in external governor. The amount shown in DEVO-8's governor is just a percentage for reference. The actual revolution should be read in the

external governor.


Setting method:



Touch the icon to enter Function Menu, and then click the icon



to enter the **GOVERNOR INTERFACE**.

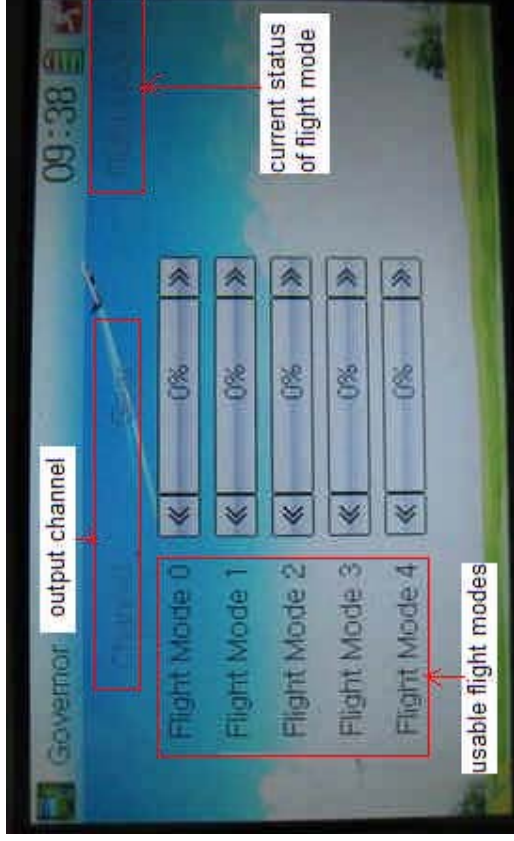

English	Your language
Output channel	
Usable flight modes	
Current status of flight mode	

The output channel, current statuses of flight modes and usable flight

modes are shown in the interface. According to the requirement, touch the corresponding flight mode to set the amount. Click the left or right navigation mark to separately decrease or increase the amount. The adjustable range is  $\pm 125\%$ .




Click the icon to exit after finished.

### 3.12 Aileron to Rudder Mix

This function is possible to execute the mix of aileron to rudder, which is controlled by switch.

Setting method:

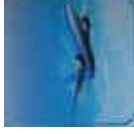

Touch the icon



to enter the **ALERON TO RUDDER MIX INTERFACE**.





1) Pos 0 Setting

Touch the left or right navigation mark of Left to change the value, and leftward mix value of aileron to rudder will be changed. The mix direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

Touch the left or right navigation mark of Right to change the value, and the rightward mix value of aileron to rudder will be changed. The mix direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

2) Pos 1 setting

The setting is same as above.

3) Throttle stick setting

The switch between Pos 0 and Pos 1 can be realized by setting the position of throttle stick. Touch the left or right navigation mark of

Throttle Stick to set the position amount of throttle stick. The default setting is Inhibit. The adjustable range is 0.0-100.0%.

#### 4) Switch setting

Touch the navigation mark of Switch and expand a dropdown menu including some selectable items. Click the desired item and "0" before the item will be changed into "1". If two or more items are selected, the item And should be selected. Then touch the navigation mark to return back.




Click the icon  to exit after finished.

### 3.13 Elevator to flap mix

This function is used to execute the mix of elevator to flap.

Setting method:

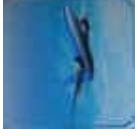

Touch the icon to enter Function Menu, and then click the



icon to enter the **ELEVATOR FLAP MIX**

**INTERFACE.**



1) Pos 0 setting

Touch the left or right navigation mark of Up to change the value, and upward mix value of elevator to flap will be changed. The mix direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

Touch the left or right navigation mark of Down to change the value, and the downward mix value of elevator to flap will be changed. The mix

direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

2) Pos 1 setting

The setting is same as above.

3) Throttle stick setting

The switch between Pos 0 and Pos 1 can be realized by setting the position of throttle stick. Touch the left or right navigation mark of Throttle Stick to set the position amount of throttle stick. The default setting is Inhibit. The adjustable range is 0.0-100.0%.

4) Switch setting

Touch the navigation mark of Switch and expand a dropdown menu including some selectable items. Click the desired item and "0" before the item will be changed into "1". If two or more items are selected, the item And should be selected. Then touch the navigation mark to return back.




Click the icon to exit.

### 3.14 Rudder to aileron/elevator mix

This function is used to execute the mix of rudder to aileron/ elevator. It will help eliminate waver or shake caused by rudder stick operation.

Setting method:

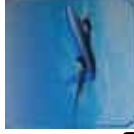

Touch the icon to enter Function Menu, and then click



to enter the **ELEVATOR TO AILERON/ELEVATOR**

## MIX INTERFACE.



### 1) Elevator setting

#### 1.1) Pos 0 setting:

Touch the left or right navigation mark of Left at Pos 0 to change the value, and the leftward mix value of rudder to elevator will be changed.

Touch the left or right navigation mark of Right at Pos 0 to change the value, and the rightward mix value of rudder to elevator will be changed.

The mix direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

#### 1.2) Pos 1 setting

Setting is same as above.

### 2) Aileron setting

Setting is same as above.

### 3) Throttle stick setting

The switch between Pos 0 and Pos 1 can be realized by setting the position of throttle stick. Touch the left or right navigation mark of Throttle Stick to set its position amount. The default setting is Inhibit. The adjustable range is 0.0-100.0%.

### 4) Switch setting

Touch the navigation mark of Switch and expand a dropdown menu including some selectable items. Click the desired item and "0" before the item will be changed into "1". If two or more items are selected, the item And should be selected. Then touch the navigation mark to return back.




Click the icon  to exit after finished.

### 3.15 Flap system

This function can modify some effects on elevator. It is possible to set three statuses of elevator and three statuses of flap, respectively, through three-way flap control switch.

Setting method:

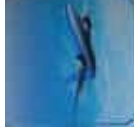

Touch the icon

to enter Function Menu, and then click the



icon

to enter Flap System.



1) Elevator setting



There three options: 0: Normal, 1: Midpoint, and 2: Land.

1.1) 0: Normal position

Touch the navigation mark of Normal to change the mix amount. It is possible to change the direction by altering D or U before the amount. The default setting is 0%, and the adjustable range is U125% to D125%.

1.2) 1: Midpoint

The setting is same as above.

1.3) 2: Land

The setting is same as above.

2) Flap setting

The setting for Flap is same as Elevator.

3) Auto land

Touch the navigation mark of Auto Land, and expand a dropdown menu including Inhibit and Active. If select Active, another sub menu Throttle will be shown under Auto Land.




3.1) Throttle stick position setting

Touch the navigation mark of Throttle to set the throttle stick position. The adjustable range is 0.0-100.0%.

### 3.2) Flight mode setting

Auto landing switch can be set in a certain flight mode. This setting should be previously set in Wing Type at Model Menu. Refer to “2.13 Wing Type”.

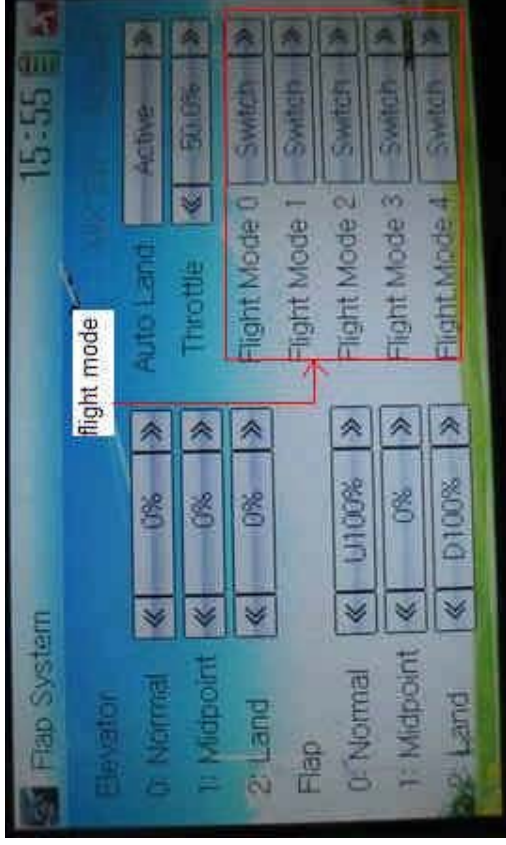

Touch the navigation mark of the selected flight mode, and pops up a menu with Switch, Normal, Midpoint, and Land.




The selected item will be shown in the corresponding flight mode.  
 Select Switch for manual control of landing.


Click the icon  to exit.

### 3.16 Aileron to flap mix

 This function can execute the mix of aileron to flap, and can also set switch. The flap dual channels should be previously set in Wing Type at Model Menu (Refer to "2.12 Wing Type").

Setting method:

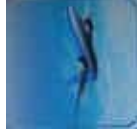

Touch the icon  to enter Function Menu, and then click the



icon to enter the **AILERON TO FLAP MIX INTERFACE.**



1) Pos 0 setting

Touch the left or right navigation mark of Left at Pos 0 to change the leftward mix value of aileron to flap.

Touch the left or right navigation mark of Right at Pos 0 to change the rightward mix value of aileron to flap.

The mix direction will be revised by changing the sign of plus or minus before the value. The adjustable range is  $\pm 125\%$ .

2) Pos 1 setting

The setting is same as the above.

3) Throttle Stick setting

The switch between Pos 0 and Pos 1 can be realized by setting the position of throttle stick. Touch the left or right navigation mark of Throttle Stick to set the position amount of throttle stick. The default setting is Inhibit. The adjustable range is 0.0-100.0%.

#### 4) Switch setting

Touch the navigation mark of Switch and expand a dropdown menu including some selectable items. Click the desired item and "0" before the item will be changed into "1". If two or more items are selected, the item And should be selected. Then touch the navigation mark to return back.




Click the icon  to exit.

### 3.17 Pitch curve

Pitch Curve can be adjusted via nine points. Pitch curves of Pos 0 and Pos 1 can be set, respectively. The item Pitch should be previously set in Device Output at Model Menu (Refer to “2.12 Device Output”).


Setting method:

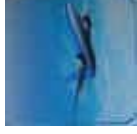

Touch the icon to enter Function Menu and then click the



icon to enter the interface of Pitch Curve. A dropdown menu with “All Servos Hold” will pop up. Click OK for locking all the current statuses of servos, and click Cancel for unlocking the current statuses. And the interface will show the current used channel and the current position statuses of switches.

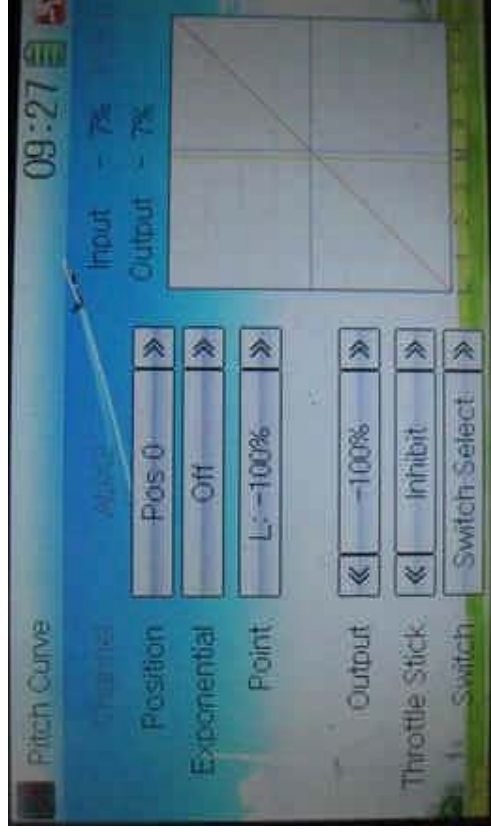

1) Position setting


Touch the navigation mark of Position and expand a sub menu with Pos 0 and Pos 1. Choose the desired position.

2) Exponential setting

Touch the navigation mark of Exponential, and expand a sub menu with Off and On. Click On for smooth changes, and Off for changes in the form of fold line in pitch curve, respectively.

3) Point setting

Touch the navigation mark of Point and expand a dropdown menu including nine points. Choose the point you want to adjust.

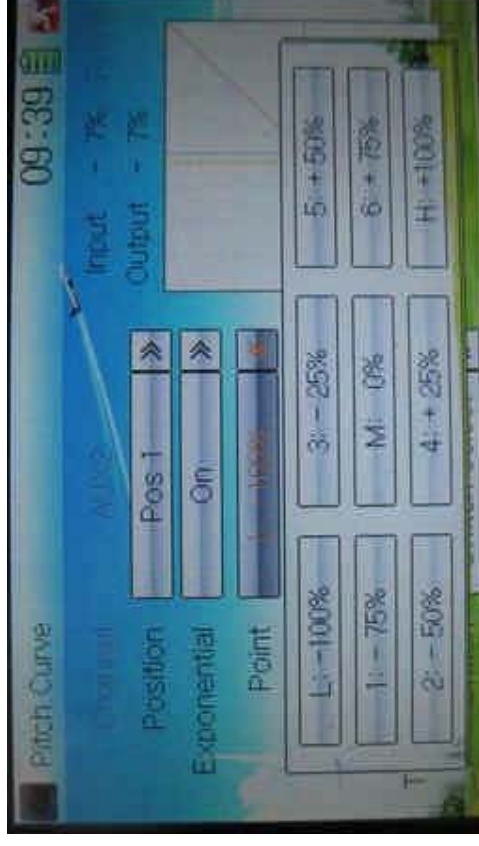

4) Status setting

Touch the navigation mark of Status and expand a list with Inhibit and Active. Click Inhibit for keeping the value of the selected point. The default setting is Inhibit. The item of Output will pop up after clicking

Active

5) Output setting

Touch the left or right navigation mark of Output to decrease or increase, respectively, the output value. The adjustable range is  $\pm 100\%$ .

6) Throttle stick setting

The throttle stick can be set as a switch by touching the navigation mark of Throttle Stick. The adjustable range is 0.0 – 100.0%. Choose Inhibit and the throttle stick will not be set as a switch.

7) Switch setting

Touch the navigation mark of Switch and expand a selectable list. Click the switch item that you want to set. If two or more switches are selected, the item And should be chosen.








Then click the icon to exit.

### 3.18 Program mix

There are total eight sets of Program Mix. It is possible to freely set the channels and amounts which you want to select and amend, respectively.

Setting method:

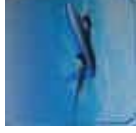

Touch the icon to enter Function Menu, and then click



to enter the **PROGRAM MIX INTERFACE**. Eight Program Mix names and their current statuses are shown (the factory default setting is Inhibit). Take Program Mix 1 as an example to show how to use.




A. Setting method for Normal in Program Mix 1

Touch the item Normal in Program Mix 1 and expands an enquiry "All Servos Hold?" Click OK for all the servos will be locked at the current statuses; click Cancel for unlocked. Enter the next interface after clicking.




1) Mater channel setting

Touch the navigation mark of Master and expands a selectable dropdown menu. After clicking the desired channel the channel name will be shown in Master.

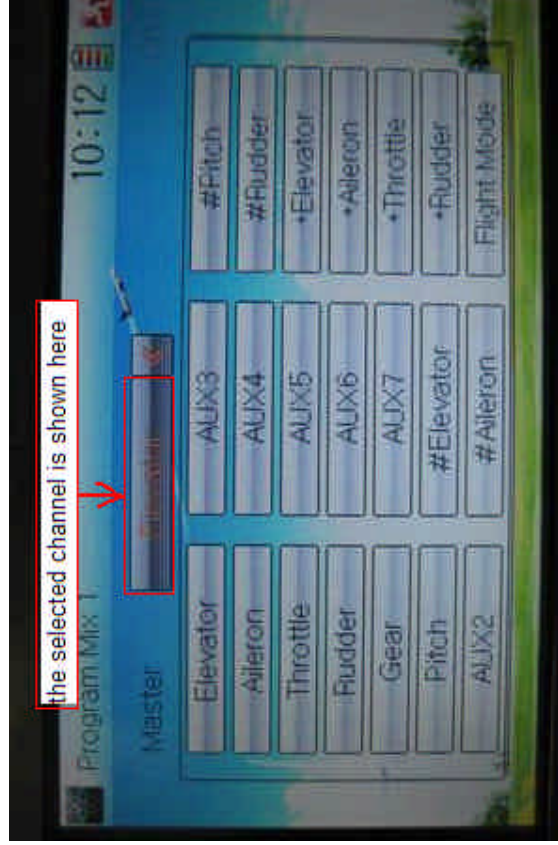

## 2) Slave channel setting

Touch the navigation mark of Slave and expands a selectable dropdown menu. Click the desired channel which will be shown in Slave.

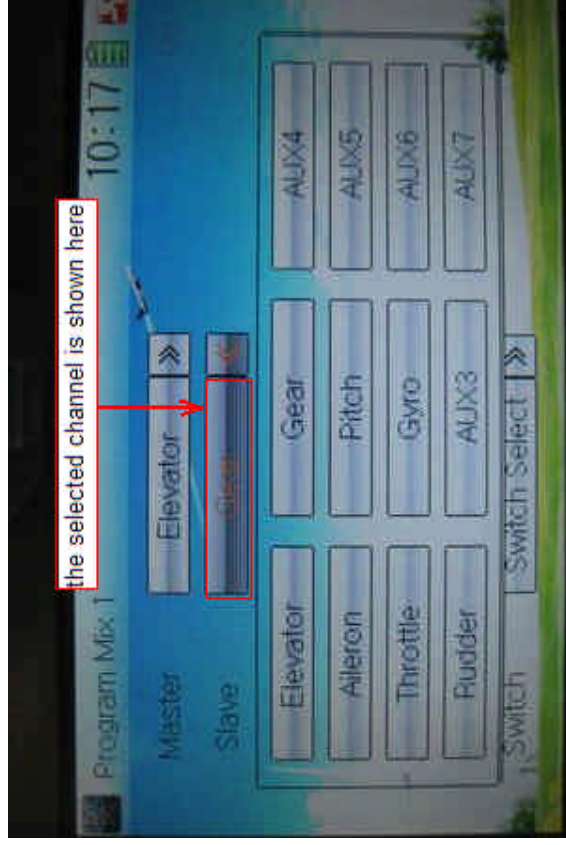

## 3) Gain setting

Take Elevator at Master as an example.

- 3.1) Mix amount setting at Pos 0 when elevator stick moved upward  
Touch left or right navigation mark of Up to decrease or increase, separately, the mix amount. It is possible to reverse mix direction through changing the plus or minus sign before amount. The adjustable range is  $\pm 125\%$ .
- 3.2) Mix amount setting at Pos 0 when elevator stick moved downward

Touch left or right navigation mark of Down to decrease or increase, separately, the mix amount. It is possible to reverse mix direction through changing the plus or minus sign before amount. The adjustable range is  $\pm 125\%$ .

3.3) The settings at Pos 1 and Offset are same as above.

4) Throttle stick setting

Touch the navigation mark of Throttle Stick to set its position as a free switch. The adjustable range is 0.0-100.0%.

5) Switch selection

Touch the right navigation mark of Switch and pop up a dropdown menu which contains the adjustable items. Click the desired switch. Then touch the right navigation mark to return the previous interface.




Click the icon to return to the interface of Program Mix for other



setting, or click the icon once again to exit.

**B. Setting method for Curve in Program Mix2**

Touch the item Curve in Program Mix 1 and expands an enquiry "All Servos Hold?" Click OK for all the servos will be locked at the current statuses; click Cancel for unlocked. Enter the next interface after clicking.

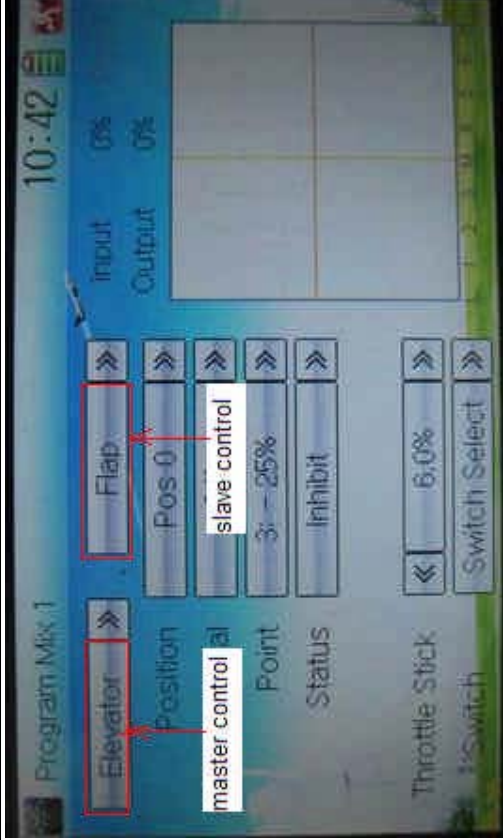

<b>English</b>	<b>Your language</b>
Master control	
Slave control	

- 1) Master channel setting  
 Touch the navigation mark at master control and expand a selectable dropdown menu. Select the desired channel and its name will be shown in Master.



2) Slave channel setting  
 Touch the navigation mark at Slave control and expand a selectable dropdown menu. Select the desired channel and its name will be shown in Slave.



3) Position selection

There are two options: Pos 0 and Pos 1. Select the desired position by touching the navigation mark.

4) Exponential

Touch the navigation mark of Exponential and expand a dropdown menu with two options of Off and On. The pitch curve will be smoothly changed if choosing On. Otherwise choosing Off.

5) Point setting

Touch the navigation mark of Point and expand a dropdown menu with nine points. Click the point you want to set, and then touch the navigation mark to return.

6) Status setting

Touch the navigation mark of Status and expand a dropdown with two options of Inhibit and Active. Touch Inhibit for unchanging the current amount (the default setting is Inhibit); click Active for changing the amount.

7) Output

Touch the left or right navigation mark of Output to decrease or increase, respectively, the output amount. It is possible to reverse the mix direction by changing the plus or minus sign before the amount. The adjustable range is  $\pm 125\%$ .

8) Throttle

Touch the navigation mark of Throttle to set the position, which the throttle stick is set as switch to freely automatically switch.

9) Switch

Touch the navigation mark of Switch and expand a usable dropdown menu. Select the desired switch, and then click the navigation mark to return.




Click the icon  to return to the interface of Program Mix for other

setting, or click the icon  once again to exit.

### 3.19 Monitor

 This function can display the current statuses and positions of all the channels' outputs, and check the current working status of each channel.



Touch the icon



to enter the **MONITOR INTERFACE** for checking the current working status of each channel.




Click to the icon  exit after finished.

### 3.20 Fail safe


There are two possibilities for use if the transmission signal is under abnormal condition. The first one is to lock the last action data received; the second one is to execute the pre-set data which is pre-set. The default setting is Servo Hold.

Setting method:



Touch the icon  to enter Function Menu, and then click




 to enter the interface of Fail Safe.



Take the item Elevator as an example to explain.

Elevator setting:

Touch the item Elevator and expand a sub-item in its right. Click the left or right navigation mark to decrease or increase, respectively, the position amount which centers on the neutral point of servo.

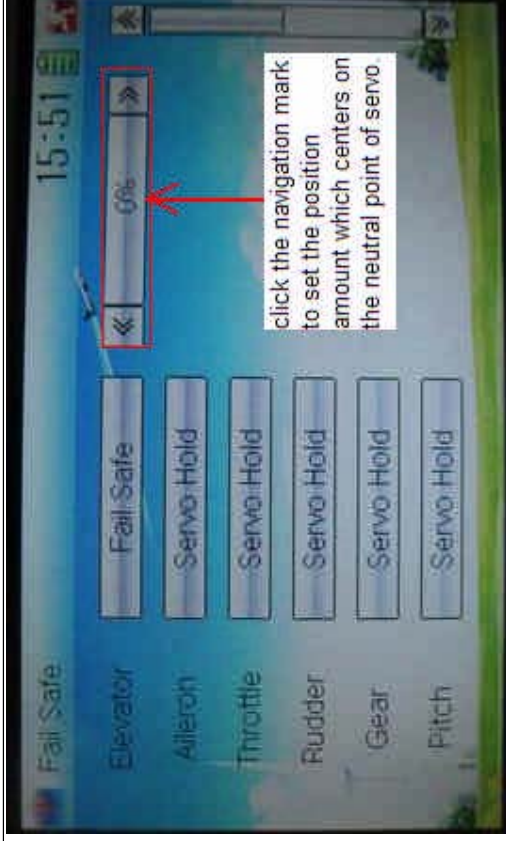

The setting methods for other channels are same as above.



Click the icon to exit after finished.

**Note:** checking whether all the actions when fail safe happened are correct is a must after the setting is finished. It is dangerous to use full throttle, especially after fail safe taken place.

### 3.21 Trainer

The training function can be practiced via two DEVO-8 equipments.

Setting method:

A. Data copy

Using the wireless copy function of the two DEVO-8 transmitters, the model data saved in the trainer's transmitter can be transmitted to the trainee's to ensure the model parameters are exactly same. Regarding the copying method, refer to "2.4 Model Wireless Copy"

### B. Linkage

Insert one end of the signal wire into DSC socket at the rear face of the trainee's DEVO-8, and then turn on the power. A linkage icon will be shown on the boot screen. Find out the trainee's model data.



### English

Linkage icon at trainee's icon

### Your language

Turn on the power of the trainer's DEVO-8. Find out the trainee's model data, and let the trainer's DEVO-8 fly the aircraft model normally. Then turn off the power.

Insert the other end of the digital signal wire into the trainer's DEVO-8, and then turn on its power. A linkage icon will be shown as below:



English


Your language

Linkage icon at trainer's DEVO-8



<b>English</b>	<b>Your language</b>
DSC socket	
Two ends of digital signal wire	

Training status display: when the trainer's icon becomes into "X", the trainee stops flying and the trainer is working; when the trainer's icon turns into "✓", the trainee is flying and the trainer is in leisure.

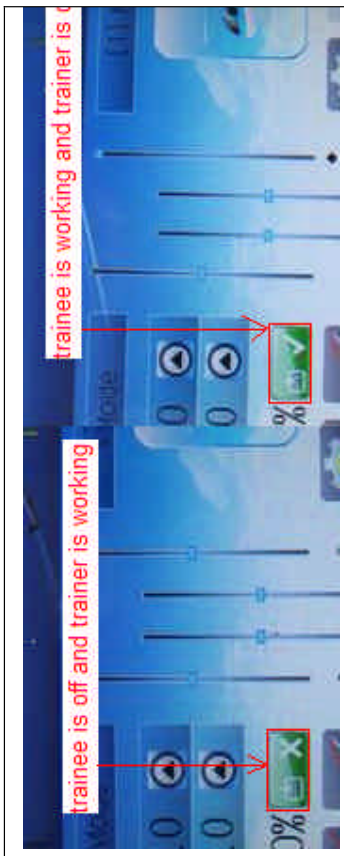

English	Your language
Trainee is off and trainer is working	
Trainee is working and trainer is off	

C) Usage method

The training switch should be worked with the TRN training lever at the right top of DEVO-8.






English	Your language
TRN: training lever	

If the trainer's finger pulls the training lever TRN, a "√" is shown in the linkage icon; if the trainer releases his finger from the trainer lever, an "X" will be shown there.

Setting for training function channels

 
Trainee is available to get full or part of flight control power to the aircraft model via setting the training function channel in the trainer's DEVO-8. Below is the setting method:



Touch the shortcut icon



to enter Function Menu, and then touch in Function Menu access to Trainer screen. The available channels are shown below, and the current status of trainer switch TRN is also shown.

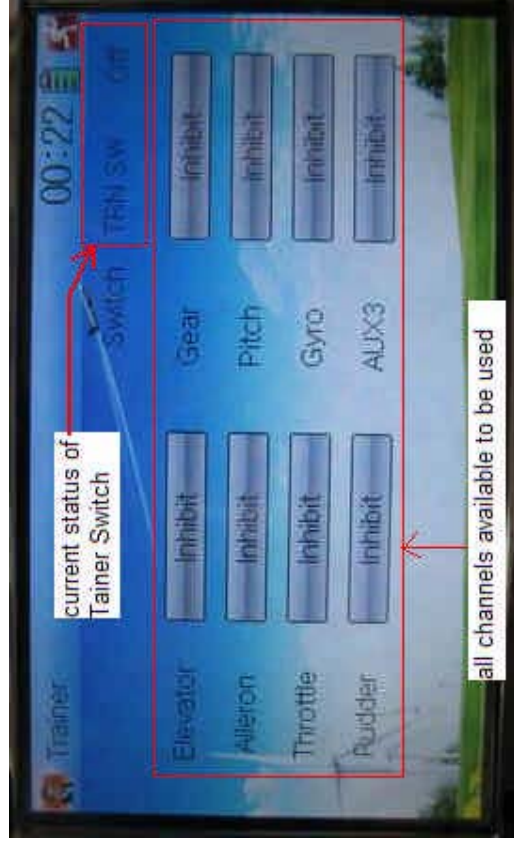


English

Your language

Current status of Trainer Switch (TRN SW)	
All channels available to be used	

Touch the channel(s) which you desire to grant to trainee. The channel(s) you have touched will be activated as "Active". The channels which are not granted to trainee keep inhibited. The default setting is "Inhibit".


Touch  to save and exit after finished.

### 3.22 Timer

There are two timers which can be set as stopwatch and countdown, respectively. Each timer can be operated by switch or by shortcut.



Setting method:

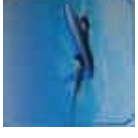

Touch the icon to enter Function Menu, and then click the




icon to enter the interface of Timer.

A. Setting for Timer 1

1) Timer 1 setting

Touch the navigation mark of Timer 1 and expand a dropdown of Stopwatch and Countdown. Select the desired timing method. The timing range of stopwatch is from 0 to 59:59 (59 minutes 59 seconds).  
Stopwatch view:

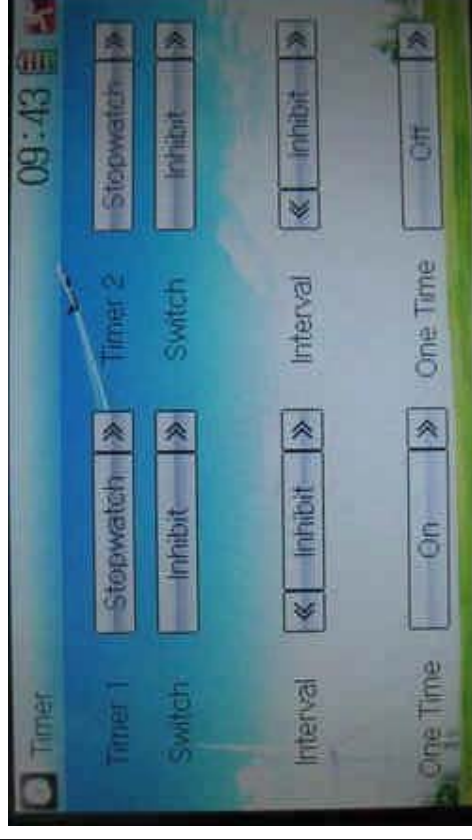


Countdown view:



Take countdown manner as an example to explain.

2) Switch selection

Touch the navigation mark of Switch and get a selectable dropdown

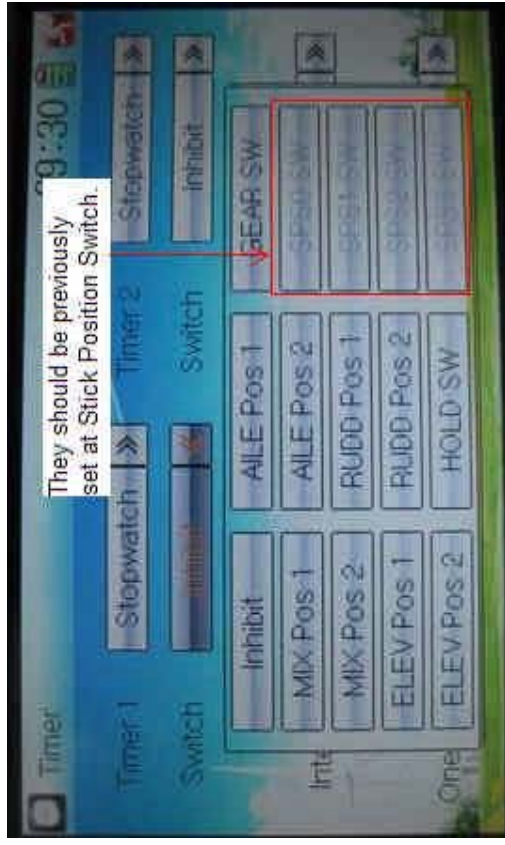

We can select the desired item but these items of SPS0 SW, SPS1 SW, SPS2, and SPS3 which should be previously set at Stick Position Switch at Model Menu (refer to “2.8 Stick Position Switch”).

3) Set time

The settable countdown time range is from 00:05 to 59:55.

4) Interval

This item offers the possibility to set the warning interval. It will warn once every interval time. The adjustable range is from 00:05 to 05:00. The default setting is Inhibit.

5) Down alarm

It is possible to set the down alarm in countdown. The setting range is from 00:01 to 03:00. The default setting is Inhibit.

6) One time

If this function is turned on, counting down cannot be stopped once the countdown works. The default setting is Off.

B. Setting for Timer 2 is same as that for timer 1.



Touch the icon to exit after finished.

## Part four: Glider



### 1.0 System menu




N/O	English name	Your language	N/O	English name	Your
1	Elevator trim		10		
2	Flap trim		11		
3	Flight mode		12		
4	Timer		13		
5	Flaperon mix icon		14		
6	Rudder trim		15		
7	Brake system icon		16		

8	D/R exponential icon	17	
9	Model	18	

## 1.1 Language setting

Touch the shortcut icon  to enter System Menu and then touch  to enter Language. Touch the language that you want to select. A “√” will be shown on the screen after selected.



Then touch  to save and exit.

## 1.2 Skin selection



DEVO-8 offers three skins for your selection.



to enter System Menu and touch



to enter Skin.

 


Touch the skin you desire and then touch



to exit.

### 1.3 Display



Touch the shortcut icon to enter System Menu and then



touch the icon to enter the **DISPLAY INTERFACE**.




Five items are available to be set. Below are the setting methods for them:

- 1) LCD brightness: it is possible to increase or decrease the LCD brightness by touching the navigation marks. The power consumption will be increased if the LCD is too bright and the battery cruise duration will also be shortened.
- 2) LCD contrast: the contrast can be adjustable by touching the navigation marks. The power consumption will be increased if the contrast is too high and the battery cruise duration will be shortened.
- 3) Backlight lightness: the backlight lightness can be adjustable by touching the navigation marks. The power consumption will be increased if the backlight lightness is too bright and the battery cruise duration will be shortened.
- 4) Backlight time out: it is possible to set the duration which LCD stays at highlight in the form of Always On and duration from 5 to 60

seconds with an interval of 5 seconds.

- 5) Power save time: it can adjust the backlighting duration by turning off the backlight in order to prolong the battery cruise time. The setting status contents Always On and duration in 30 grades with an interval of 1 minute.

Touch  to exit.

## 1.4 Buzzer warning



Touch the icon to enter System Menu and then touch




 
to enter Buzzer interface



- 1) Buzzer switch: touch the navigation mark at Buzzer Switch and pop up an alternative item: Off and On. If touching On, a drop-down

menu will be shown below.

- 2) Spoiler stick: under Buzzer Switch is at the status of On, if Throttle Stick is set as "Active", a relative musical scale will make response when moving the throttle stick. You can judge the position of the throttle stick according to the different musical scales. Also, it can be set as Inhibit.
- 3) Levers and knobs: under the condition that this item is set as "Active", DEVO-8 will sound when rotating or moving such levers or knobs as AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7 to their neutral positions. It is can be set as "Inhibit".
- 4) Buzzer tone: the tone is composed of 10 grades. You can choose the favorite tone according to your interests. Touch Test to make a listening test.

 Touch  to exit.

## 1.5 Date & Time

Touch the icon  to enter System Menu and then touch




to enter the **DATE & TIME INTERFACE**.



The clock setting is grouped into Year, Month, Day, and Time. Touch the navigation marks, respectively, to make modifications.




Touch  to save and exit.

**Note:** if incorrect turn-on time or production time appears, one possibility is that the power supply for the clock is not enough. Replacing a new button cell is a must.

The method for changing button cell:

Turn off the power of your DEVO-8 and take off its battery pack. Use a cross screwdriver to remove the two fixing screws on the fixing board.

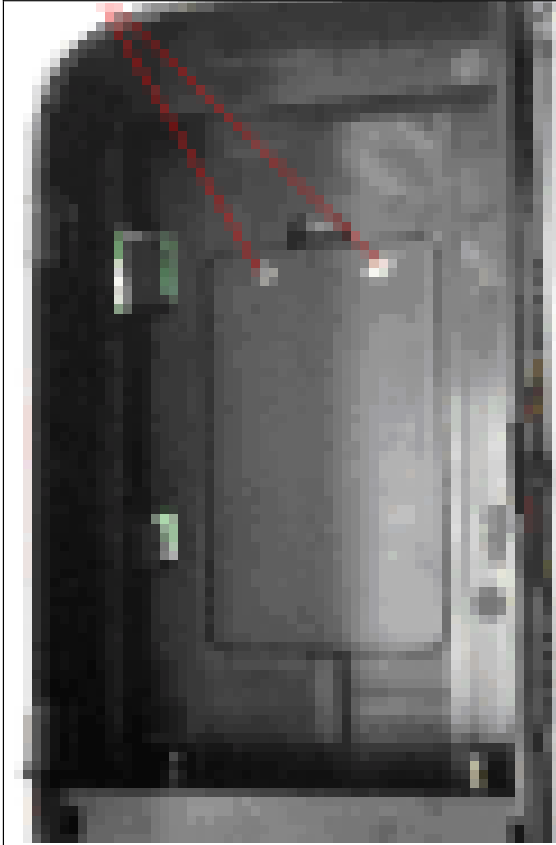


**English**

**Your language**

Fixing screws

Push outwards the button cell holder, and the button cell will automatically pop up. Replace the old cell with a new one.

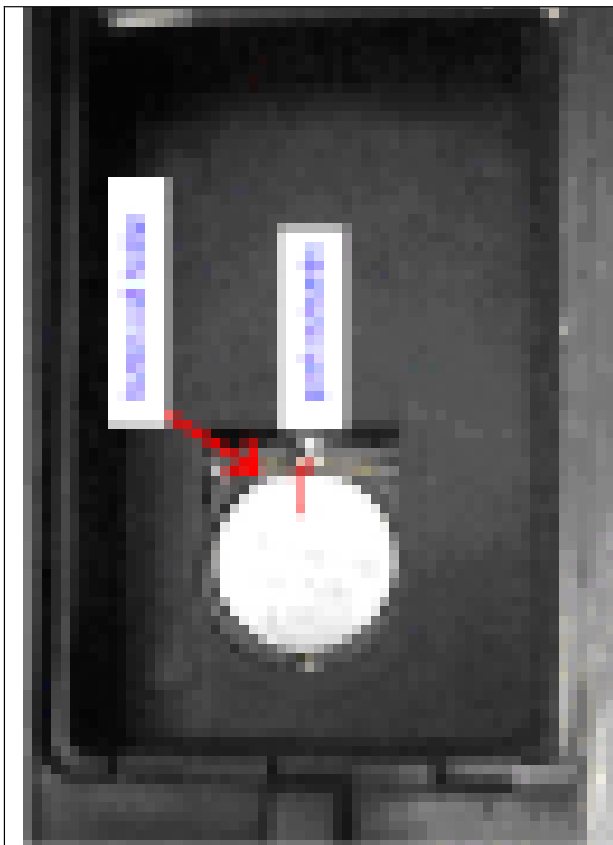


Cell size: CR 1220 3V

<b>English</b>	<b>Your language</b>
Button cell holder	
Push outwards	

### 1.6 TFT screen calibration



Touch the icon  to enter System Menu and then touch

 to enter the **TFT SCREEN CALIBRATION**

## INTERFACE.



Click anywhere on the screen to start calibration with the touch pen, and then follow the indication to calibrate. It will automatically return to System Menu after the calibration is finished.

### 1.7 Stick mode



Touch the icon to enter System Menu, and then touch the



 
icon to enter Stick Mode.






 
There are four stick modes from MODE 1 to MODE 4. Select the stick mode you desire and then touch the icon  to exit.

### 1.8 Stick and lever



Touch the icon  to enter System Menu and then touch the



icon  to enter Stick and Lever. There are two items in the interface: Stick Direction and Stick & Lever Calibration.



- 1) Stick direction: there are four options: Elevator, Aileron, Throttle, and Rudder. Click the item, which you want to reverse, to change the output direction of the stick. The default setting is Normal.
- 2) Stick & lever calibration: if variance happened in sticks or levers, it would be calibrated via this option.

Method for calibration:

Click the display item of Start to enter the status of calibration, and Start will be turned into Stop.

2.1) Stick calibration: Clockwise or counter clockwise mechanically move the right stick and left stick from their minimum levels to their maximum levels several times, and then return the sticks to the neutral positions, respectively.

2.2) Lever calibration: mechanically move the levers of AUX2, AUX3, AUX4, and AUX5, respectively, from the minimum levels to the maximum levels several times, and then return to the neutral positions,

respectively.

2.3) Click the display item of Stop. If the calibration is finished, “Calibration success!” will be shown on the lower of the screen. If the calibration is failed, “Calibration error! Please try again!” will be shown instead. It needs to be calibrated again.





English	Your language
Normal	
Reverse	
Stick direction	
Stick & lever calibration	
Start	
Stop	
Calibration success	
Calibration error! Please try again!	

2.4) Re-calibration: directly repeat the said steps 2.1 and 2.2 in the calibration failure interface.



Touch the icon to exit.

## 1.9 Power amplifier

The transmission output power of DEVO-8 is adjustable. It is divided into six grades from small to big. The lower the transmission output power transmits, the nearer the radio range is, and the longer the stand-by time will be. The higher the transmission output power, the farther the radio range, and the shorter the stand-by time. Choose the appropriate transmission output power according to the actual situation.



Touch the icon to enter System Menu and then click to enter the **POWER AMPLIFIER INTERFACE**.



Choose the appropriate output power level and then touch to exit.

## 1.10 About



Touch the icon to enter System Menu and then touch



to get access to the interface of About. You can check the versions of hardware and software.



Click the icon to exit.

## 2.0 Model menu

Model Menu manages all the model data saved in DEVO-8. It includes Model Select, Model Name, Model Copy, Model Transmit, Model

Receive, Model Reset, Type Select, Trim System, Stick Position, Warning, Device Select, Device Output, Wing Type, and Fixed ID.

## 2.1 Model select

Touch the icon  to enter Model Menu and then click the icon  to enter Model Select.



Touch the model you desire. The selected model is changed into orange color. Then click the icon  to exit.

## 2.2 Model name

In the menu of Model Name, you can make a desired name for your

model for long term storage. Its data can be directly withdrawn in the next flight.

Repeat the step "2.1 Model Select" to choose the model you want to name or save.



Click the icon to enter System Menu and then click the icon



to get the **MODEL NAME INTERFACE**. The following is the interface:



Click the right blank frame of Name and a gray stripe will be shown in the frame. Touch the return key to clear up the old name.







**English**

**Your language**

Gray stripe

Touch the soft keyboard to input a new name. It is possible to switch between lowercase and uppercase by clicking the



key.




Then touch to exit.


### 2.3 Model copy




Touch the icon to enter Model Menu and click to enter the **MODEL COPY INTERFACE.**

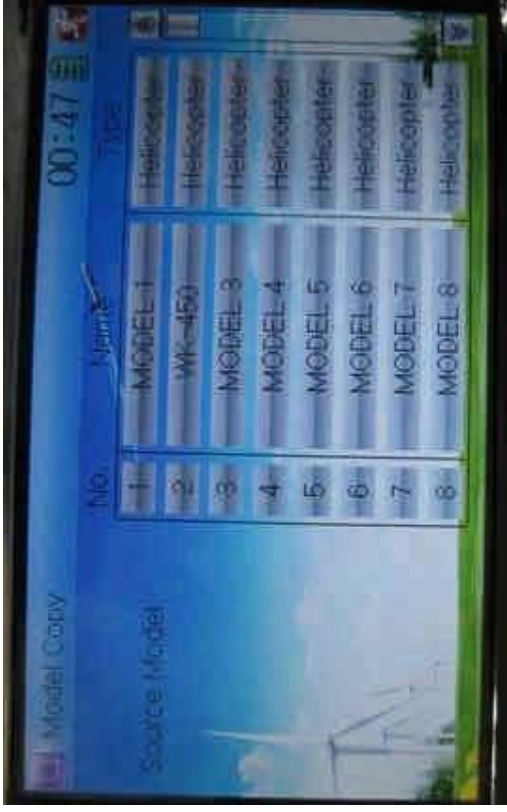

Choose the model you want to be copied as source model. The serial No. and model name of source model will be shown in the left side of the interface.

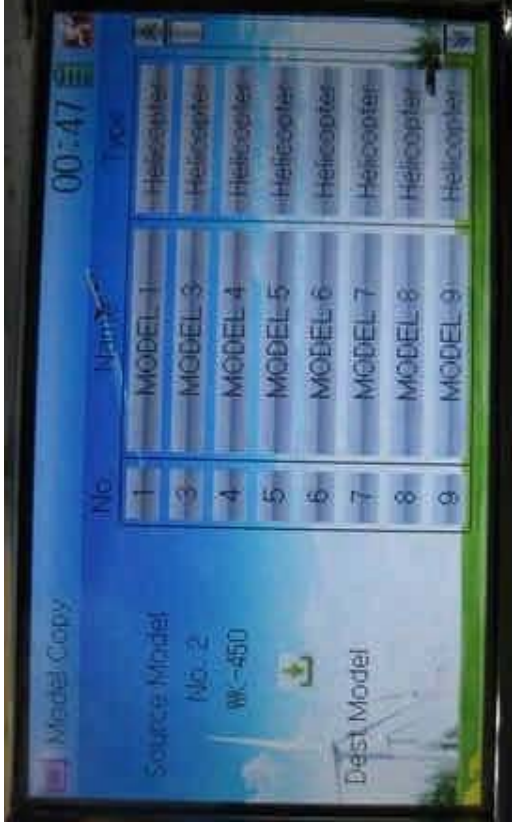

Then touch the model in the right list where you want to locate the source model. The serial No. and name of the model you chose will be shown under Dest Model in the lower left of interface as well as an enquire "Are you sure?" is popped up.

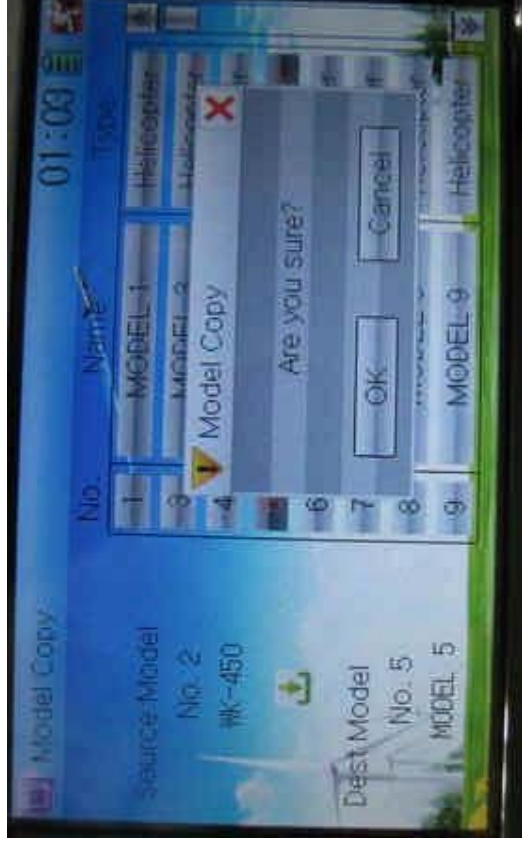

Click OK to copy. Otherwise click Cancel. Then the interface will be automatically returned to Model Menu. Click  to exit.

## 2.4 Model wireless copy

The model data between two DEVO-8 equipments can be wirelessly copied via Model Transmit and Model Receive in Model Menu

- 1) Model transmission



Touch the icon to enter Model Menu and then continue to click



the icon to enter Model Transmit.



Choose the source model which will be transmitted. The serial No. and name of the source model will be shown under Select Model in left side of the interface as well as enquiry information "Are you sure?" in the right side.



Click OK for transmission or Cancel for rejection. Enquiry information



“Transmitting .....” appears after clicking OK. Touch the icon to exit.

2) Model receiving




Touch the shortcut icon to enter Model Menu and then touch the



icon to enter the **MODEL RECEIVE INTERFACE**. Enquiry information “Are you sure?” is shown in the center of the interface.



Click Ok for receiving or Cancel for rejection. “Connecting .....” and “Receiving .....” will be shown in series in the interface. The information of “Received” with the model name will be shown in left side after receiving is finished.

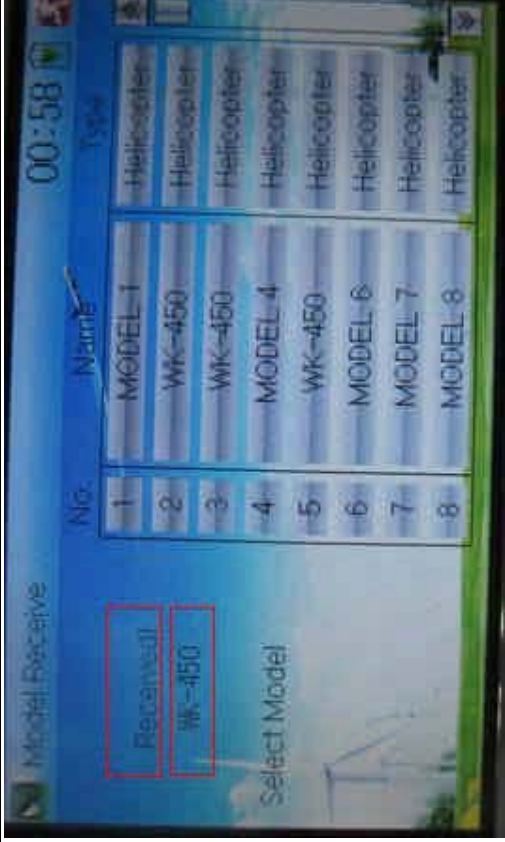

Choose the save position in the right name list by touching. Enquiry information "Are you sure?" is shown after clicking the save position. Click OK for save and the current interface will automatically return to Mode Menu. Click Cancel for rejection.



Touch the icon to exit.

### 2.5 Model reset

All the model data can be restored to factory settings via Model Reset.




Touch the icon to enter Model Menu and then click



to enter Model Reset.


It is possible to store 60 models data in the model list of DEVO-8 equipment. There are two methods to reset the model data: batch reset and single reset.

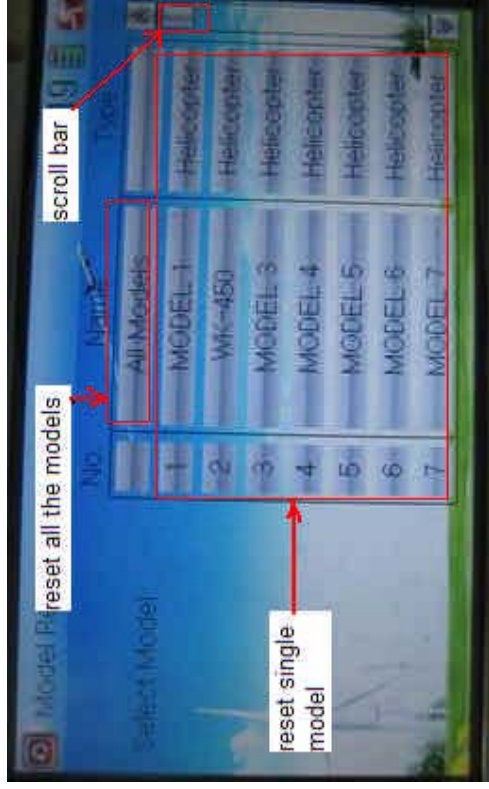

1) Method for batch reset:

Touch 'All Models' in Model Reset interface. Then "All Models" and enquiry "Are you sure?" appear in the left side. Click OK for reset, or Cancel for rejection.



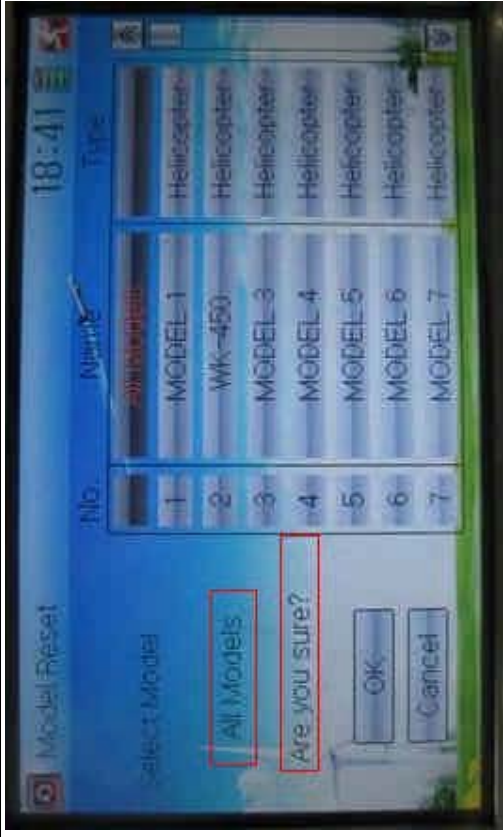

## 2) Method for single reset:

Touch the upper or lower navigation mark to move the scroll bar, and then choose the model you want to restore in the model name list. The selected model's name and serial No., and enquiry "It is in use! Are you sure?" appear in the left side. Click OK for reset, or Cancel for rejection.



Click the icon to exit.

## 2.6 Type select


This device offers three model types menu. They are helicopter, airplane, and glider, respectively.



Touch the icon to enter Model Menu and then click to enter Type Select.





Choose the model type and then touch the icon  to exit.

## 2.7 Trim system

Trim System is able to finely tune the following six items, respectively: elevator, aileron, rudder, spoiler, left trim, and right trim. The trim range is covered from 1 to 20 grades (factory default is set at 4). It is convenient to subtly modify the pitch by adjusting the trim range.



Touch the icon  to enter Model Menu and then click



to enter Trim System.



Touch the corresponding navigation mark to change the trim value. The bigger the trim value is, the bigger the trim range will be.

For elevator, aileron, and rudder, there are two more options: Normal and Limited. "Normal" means the trim is always working although the corresponding stick stays anywhere. "Limited" means the trim is out of working when the corresponding stick is at maximum position.

## 2.8 Stick position

The stick can be used as a switch. The turn-on or turn-off position at which the stick stays can also be set up.

Method for setting:



Touch the icon to enter Model Menu and then click




to enter Stick Position Switch.





Click the navigation mark of Switch. It pops up a drop-down menu: SPS0, SPS1, SPS2, and SPS3. Choose the switch you want to define.



Then touch the navigation mark of Channel. It expands into five items: Inhibit Elevator, Aileron, Spoiler, and Rudder. The factory default setting is Inhibit. Choose the stick you want to set as switch.

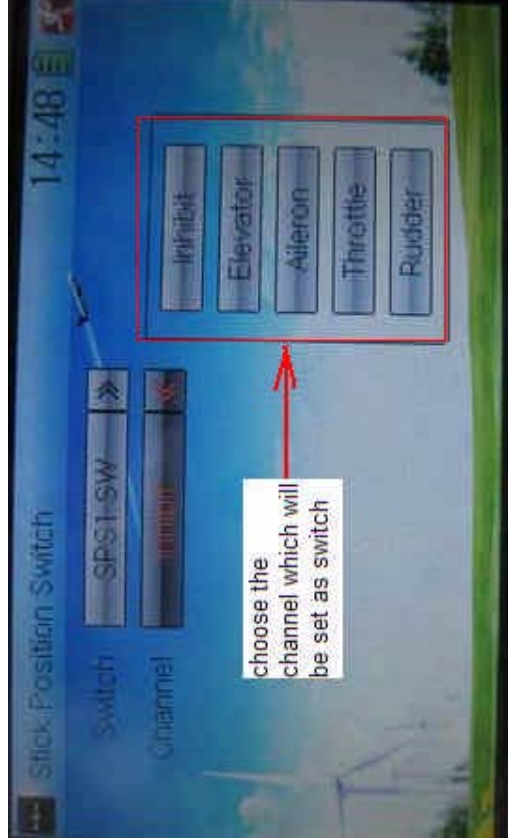

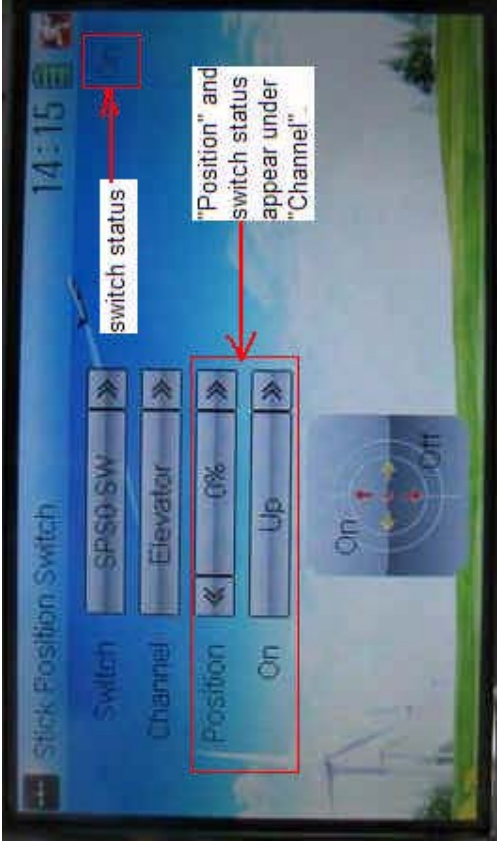	<p><b>English</b></p>	<p><b>Your language</b></p>
	<p>Choose the channel which will be set as switch.</p>	
	<p>At the same time, "Position" and the status of turn-on or turn-off appear under the item Channel. The current status of turn-on or turn-off will be shown on the right top corner.</p>	
		
	<p><b>English</b></p>	<p><b>Your language</b></p>
	<p>Switch status</p>	
	<p>"Position" and switch status appear under "Channel"</p>	
	<p>Click the icon  to exit after the setting finished.</p>	

## 2.9 Warning

This function can set the warning for unsafety of which stick, switch status, or flight mode stay at the position while turning on the device, or is used as start-up warning on special purpose.

The factory default sets Spoiler Stick as Active, High direction at 10.0% Position, set flight mode as Stunt, and set Throttle Hold at on position.



Touch the icon to enter Model Menu and then click

to enter the **WARNING INTERFACE**.



Setting method:

- 1) setting Spoiler stick as warning

Click the navigation mark of Spoiler Stick in the interface Warning. It



expands into Inhibit and Active. If clicking Inhibit, the dropdown menu is retracted. If clicking Active, it will expand into On and Position. It can set the spoiler stick is at either high or low position when startup is warning. Set the warning level by changing the percentage in Position, whose setting value is ranged from 0.0 to 100.0%.

2) setting other items

Other flight modes and switches warning will be shown in the lower-middle part of the interface after the setting for spoiler stick is finished. Click the corresponding items you want to use.



Click to exit.

## 2.10 Device select

This setting can help you configure various functional switches, or adjust levers. It includes Flight Mode Speed Switch, Flight Mode Launch Switch, Launch Reverse, Aileron and Rudder Trims, Flap Trim Select, and Flaperon Trim Select.

**Friendly reminder:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.

Setting method:



Touch the icon

to enter Model Menu, and then click the




icon to enter Device Select.



1) Flight mode speed switch

Touch the navigation mark of Flight Mode Speed Switch to expand into a dropdown menu. Choose the mode switch you desire. The factory default setting is Inhibit.

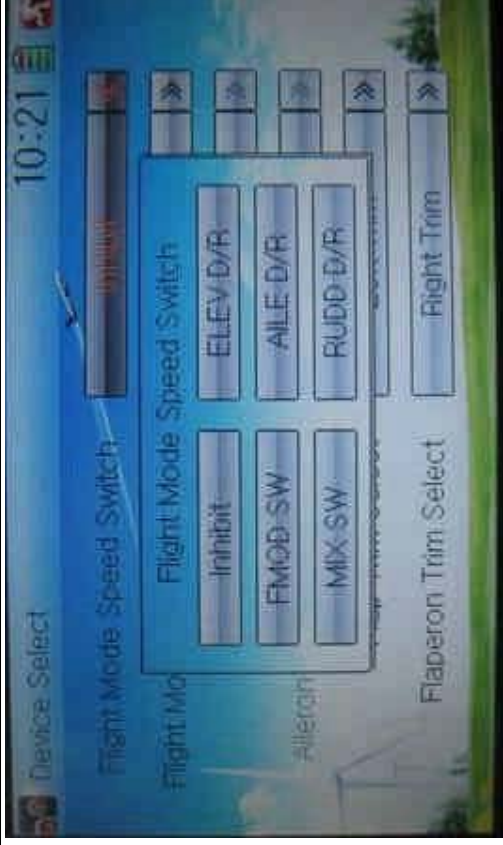

2) Flight mode launch switch

Refer to "1) Flight Mode Speed Switch".

3) Launch reverse setting

Touch the navigation mark and pop up a list with two options: Normal, and Reverse. Click Reverse for changing the current status. Flight Mode Launch Switch should be previously activated before using this function.

4) Aileron and rudder trims selection

There are two options: Common and Flight Mode. In Common option, the adjustment parameter, of which the stick is corresponding to trim, puts an equal effect on all the flight modes.

In Flight Mode, the adjustment parameter, of which the stick is corresponding to trim, puts an respective effect on the corresponding flight mode.

5) Flap trim select

Refer to "1) Flight Mode Speed Switch".

6) Flap Trim Select

Refer to "1) Flight Mode Speed Switch".

## 2.11 Device Output

Device output is composed of eight items. It can set up output switches and select the usage of levers, respectively. It can also activate, inhibit or use other functions.

**Note:** This function is frequently utilized in flights. Modelers will be greatly favored if expertly mastering its usage.

Setting method:




Touch the icon

to enter Model Menu and then click



to enter Device Output.

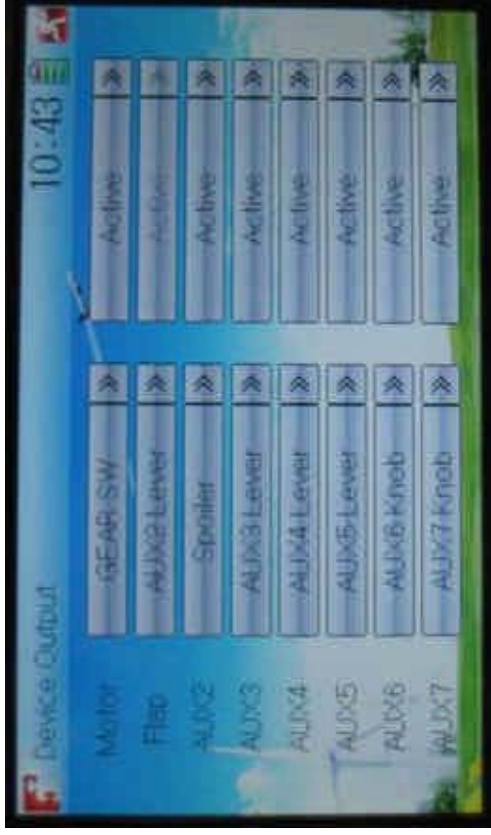

There are eight items to be adjustable. They are Motor, Flap, AUX2, AUX3, AUX4, AUX5, AUX6, and AUX7. The setting methods for them are shown below:

1) Motor

Touch the left column navigation mark of Motor and pop up an expansion including FMOD SW, MIX SW, ELEV D/R, AILE D/R, RUDD D/R, HOLD D/R, and GERA SW. Touch the desired item. The default setting is GEAR SW.




English	Your language
Touch navigation mark	
Expansion of GEAR SW	

Touch the right column navigation mark of Motor. Pop up an expansion list including Inhibit, Active, and Gyro. Touch the desired item. The default setting is Active.



2) Flap

Touch the navigation mark of Flap at left column and expands a list including AUX2 Lever, AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Lever, and AUX7 Lever. Select the desired item. The factory setting is AUX2.

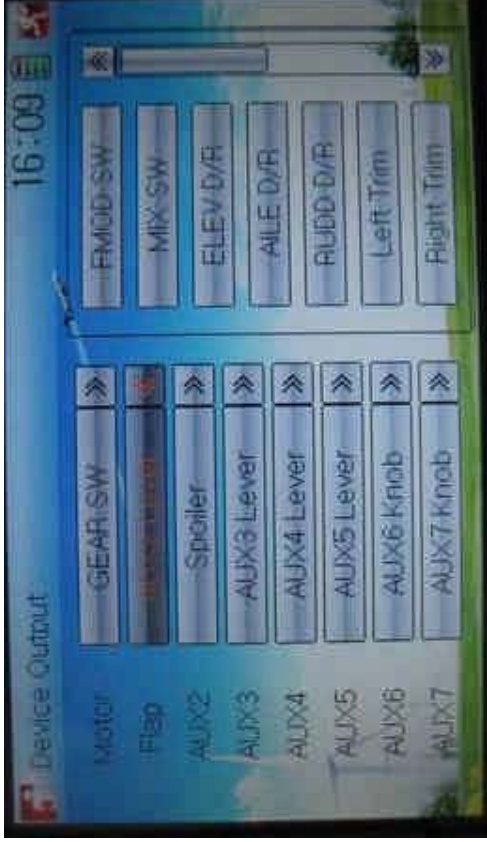

3) AUX 2

Refer to "2) Flap".

4) AUX 3

Refer to "2) Flap".

5) AUX 4

Refer to "2) Flap".

6) AUX 5

Refer to "2) Flap".

7) AXU6

Refer to "2) Flap".



Click the icon to exit.



## 2.12 Wing type

The Wing Type includes V-Tail, Tip Ailerons, and Dual Spoilers.

Wing type selection:



Touch the icon to enter Model Menu, and then click the




icon to enter the **WING TYPE INTERFACE**.



1) V-Tail setting

Touch the navigation mark of V-Tail, and expand a sub menu including two options of Inhibit and Active. Select the desired wing type. The

default setting is Inhibit.

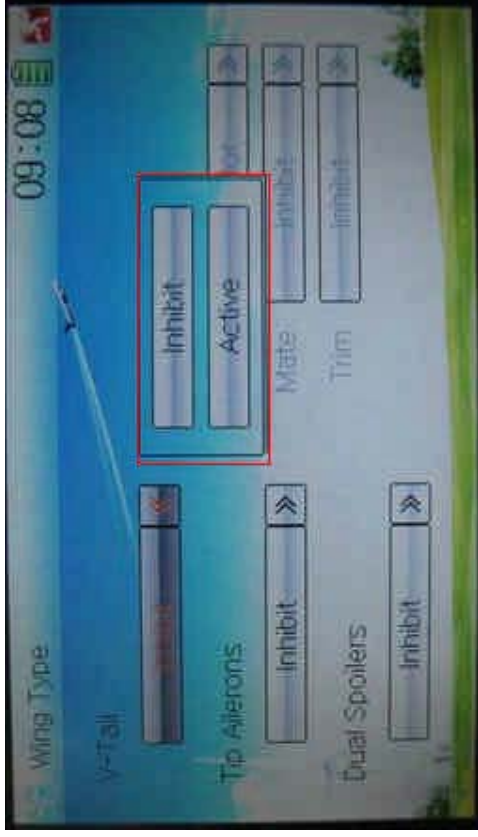

2) Tip Ailerons setting

The setting is same as the above.

3) Dual Spoilers setting

The setting is same as the above.

4) Dual channels setting


It is possible to set elevator, rudder, and flap in dual channels, and is of two-channel output function. The AUX channel, which will be used as dual channels setting at Device Output in Model Menu, should be previously set as Inhibit (Refer to "2.11 Device Output").



Setting method:


4.1) channel setting:

Touch navigation mark of Channel and expand a popup including Elevator, Rudder, and Flap.

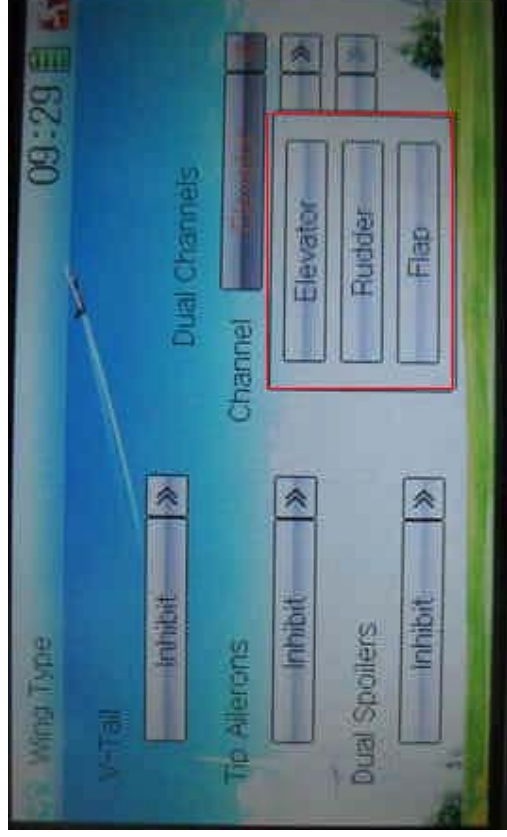


#### 4.2) Mate setting

Touch the navigation mark of Mate and expand a popup with Inhibit and the items shown at Device Output. Select the desired item. Note: the selected channels are shown in grey and are not selectable.

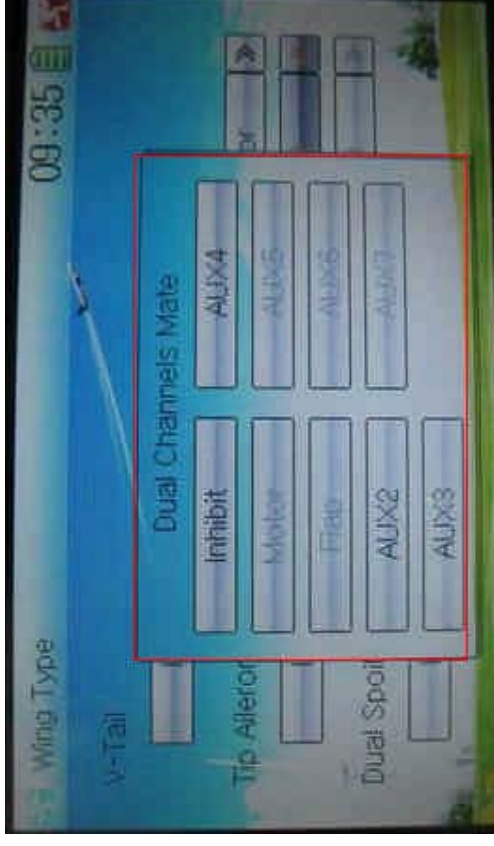

#### 4.3) Trim setting

Touch the navigation mark of Trim and expand a popup including Inhibit, Left Trim, Right Trim, AUX2 Lever, AUX3 Lever, AUX4 Lever, AUX5 Lever, AUX6 Knob, and AUX7 Knob. Select the item you want to use.

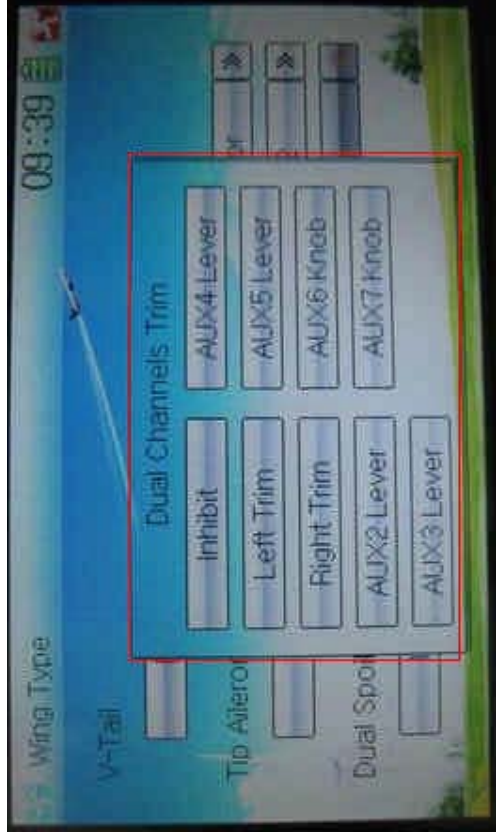

Click the icon to exit.

## 2.13 Fixed ID

This setting will bind DEVO-8 and its receiver in a unique corresponding relationship. It will greatly speed up the time of automatic binding when DEVO-8 powered on.

### 3) Setting for fixed ID

The setting for fixed ID should be under the status that automatic ID binding is successfully finished. Below is the setting method.



Touch the icon to enter Model Menu in the main interface, and then enter Fixed ID by touching the icon  in Model Menu.




English	Your language
Navigation mark	

Touch the navigation mark of the item ID Code Setting. It will expand into two **OPTIONS**: Off and On. A series of random digits will be shown below after touching On.



English	Your language
Touch "On"	
A series of random digits is shown here	

A mini soft keyboard is shown in the lower part after touching the random digits of ID Code

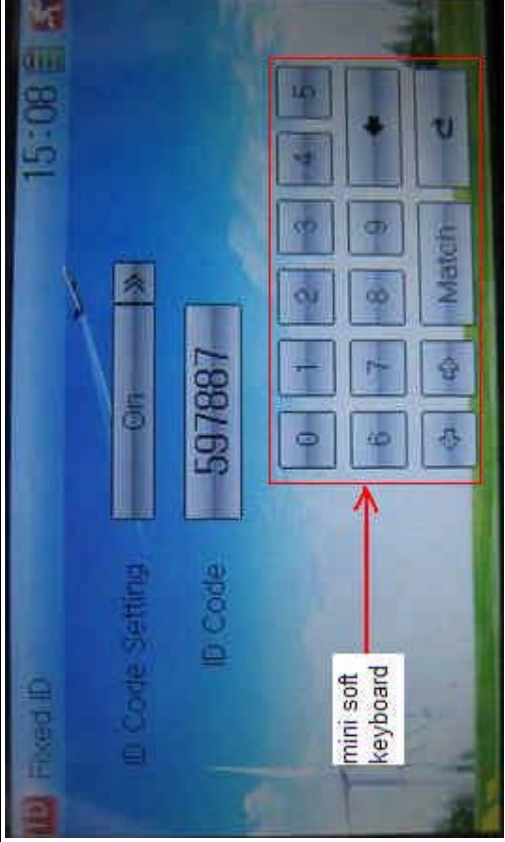

**English**

**Your language**

Mini soft keyboard

The new ID digits can be modified by touching the mini soft keyboard. Touch Match after the new ID is already set. An enquiry interface of “Are you sure?” pop up. “ID Code Match ... ..” will be shown after touching OK.






English	Your language
ID Code Setting	
ID Code	
Fixed ID	
Are you sure?	
Cancelled	
ID Code Match	

4) Fixed ID cancellation

Insert the assorted BIND PLUG into the output terminal of BATT before the receiver is powered on, and then plug 5V DC power into other output terminal. The red light of receiver will flash slowly. This means the fixed ID code has been cancelled. Pull out BIND PLUG.



DEVO-8 also needs to make relative cancellation and reversion after the fixed ID in receiver is cleared out.

In the main interface touch the icon  to enter Model Menu and then touch  to enter Fixed ID. Touch ID Code Setting to expand the navigation mark into two statuses On and Off. Touch Off. Then touch  to exit.

### 3.0 Function menu

Function Menu is used to make a personalized fine adjustment to the selected models. It includes Reverse Switch, Travel Adjust, Sub Trim, Dual Rate and Exponential, Motor Hold, Flaperon Mix, Camber System, Differential, Balance, Gyro Sensor, Rudder to Spoiler Mix, Aileron to Rudder Mix, Elevator to Flap Mix, Aileron to Flap/ **Wingtip** Mix, Flap Rate, Brake System, Program Mix, Monitor, Fail Safe, Trainer, and Timer.


### 3.1 Reverse switch



Touch the shortcut icon to enter Function Menu, and then



click the icon to enter the interface of Reverse Switch.

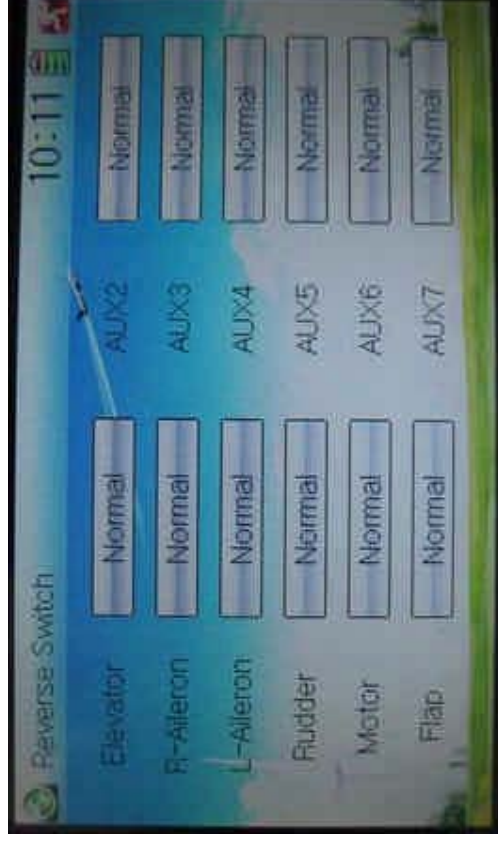

There show all the reverse switches' statuses of twelve channels. Touch the desired item to reverse its current status. The status includes two types: Normal and Reverse. The default setting is Normal.



Touch the icon to exit after finished.

### 3.2 Travel adjust



Touch the icon to enter Function Menu and then click the icon



to enter the **SERVO ADJUST INTERFACE**.



The interface contents two pages to show the current travel status of all the twelve channels. Touch the navigation mark of each item to increase or decrease corresponding travel adjustment amount. The adjustable range is 0.0-150.0%. The default setting is 100.0%.



Click the icon to exit after finished.

### 3.3 Sub trim

Sub Trim is used to make parallel movement of servos. It is

recommended to adjust the servo bell crank if the servo is far away from its neutral point. The excessive usage of sub trim may damage the servo.

Setting method:



Touch the icon to enter Function Menu and then click the icon



to enter the **SUB TRIM INTERFACE.**



Touch the navigation mark of the desired item to adjust the amount for rectifying the servo's neutral point. The default neutral point is set at 0.0%. The adjustment range of each channel is shown as below:

English	Your language	English	Your la
<b>Channel name</b>		<b>Adjustment range</b>	
R-elevator		D62.5%-U62.5%	
R-aileron		R62.5%-L62.5%	
L-Aileron		RL62.5%-LH62.5%	
Rudder		R62.5%-L62.5%	
Motor		-62.5%- +L62.5%	
Flap		DL62.5%- UH62.5%	
L-elevator		D62.5%- U62.5%	
AUX3		-62.5%- +62.5%	
AUX4		-62.5%- +62.5%	
AUX5		-62.5%- +62.5%	
AUX6		-62.5%- +62.5%	
AUX7		-62.5%- +62.5%	

Note: the model names shown will be different with the selected channels different.



Click the icon to exit after finished.

### 3.4 Dual rate and exponential

It is possible to use D/R switch to control over the dual rate of elevator,

aileron, and rudder after the function of Dual Rate and Exponential is set up. The setting range is 0-125%. Under the help with exponential curve adjustment, it is not only manually but also automatically to set up various parameters which are suitable for yourself.


Setting method:



Touch the icon to enter Function Menu and then click the icon



to enter the **DUAL RATE AND EXPONENTIAL INTERFACE.**

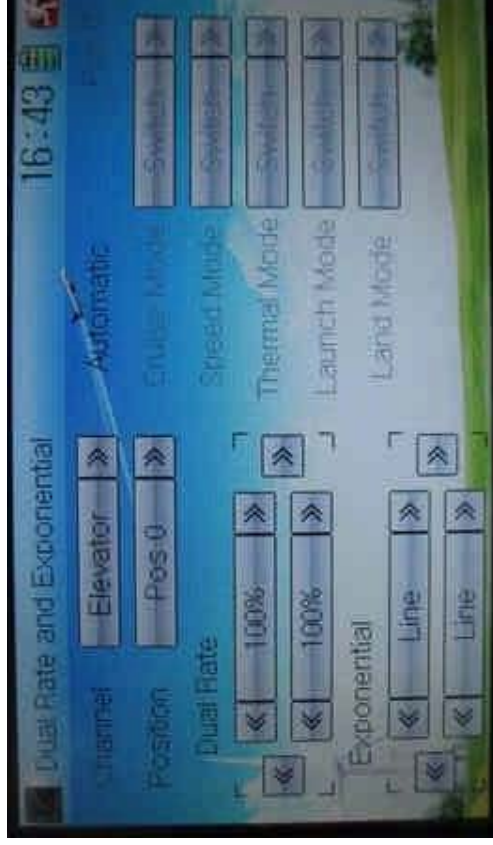

1) Channel selection

Touch the navigation mark of Channel and expand a selectable list including Elevator, Aileron, and Rudder. Click the desired channel which


will be shown in Channel.

## 2) Position selection

Touch the navigation mark of Position and expand a selectable list including Pos 0, Pos 1, Pos 2, Pos 3, and Pos 4. Click the desired item which will be shown in Position. There will only show Pos 0, Pos 1, and Pos 2 in manual setting.

## 3) Dual Rate adjustment

It is possible to modify the value by touching the navigation mark of Dual Rate.

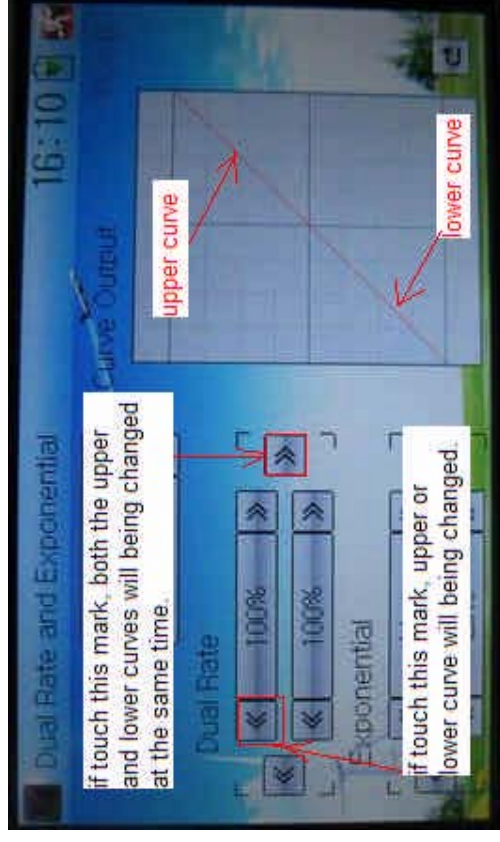

If touching the navigation mark for just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will be changed in one direction at the right graph.

If touching the navigation mark for both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while




the curve will be changed at the same time, shown at the right graph.  
The default setting is 100%.

English	Your language
Upper curve	
Lower curve	
If touch these marks, both the upper and lower curves will be changed at the same time.	<b>IF YOU USE THIS MARK BC AND LOWER CURVES CHANGED.</b>
If touch these marks, either upper or lower curve will be changed.	
Upper curve	
Lower curve	


#### 4) Exponential adjustment

It is possible to adjust the exponential output value of the servo at that point, which is set up in step "2) Position selection", by touching the navigation mark of Exponential.

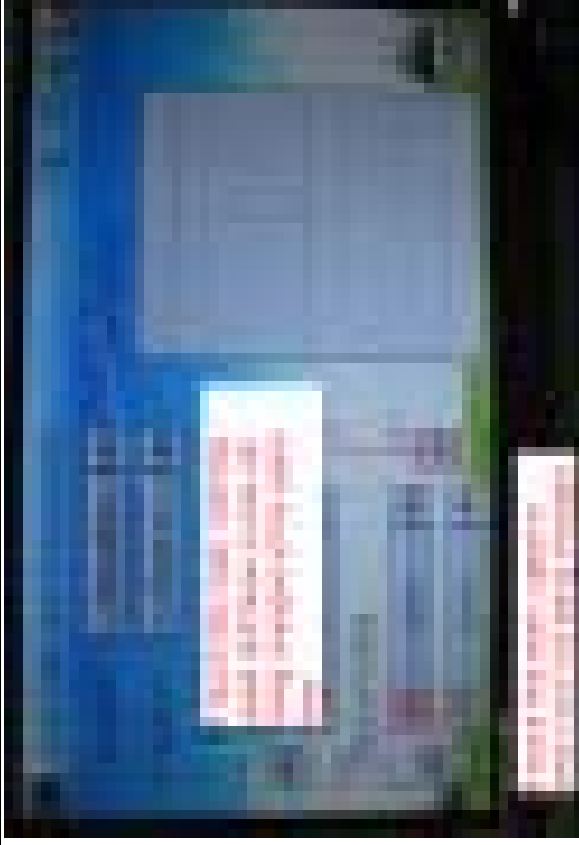

If touching the navigation mark of just one item to amend the dual rate value, the dual rate of the corresponding servo will be changed in one direction, while the curve will be changed in one direction at the right graph.

If touching the navigation mark of both items to amend the dual rate value, the dual rate of the corresponding servo will be changed while the curve will be changed synchronously. The default setting is Line.

Then touch this mark  to return to the interface of Dual Rate and Exponential.

5) Automatic setting  
Under working with Flight Mode, it is possible to switch between the dual rate and exponential, which are set in above "3) Dual Rate adjustment" and "4) Exponential adjustment", respectively. It includes

Cruise Mode, Speed Mode, Thermal Mode, Launch Mode, and Land Mode.

**Note:** if want to use this function, it is necessary to previously set both Flight Mode Speed Switch and Flight Mode Launch Switch at Device Select in Model Menu as the corresponding switches. Refer to “2.10 Device Select”.





Touch the navigation mark of the desired item and expand a popup with the selectable positions. Select the position you desire. And then this switch is only controlled by the corresponding D/R lever.



Click the icon to exit.

### 3.5 Motor hold

The motor hold can be switched after the function is used. The setting range of motor hold is from -10% to 100%. The item Motor should be previously set at Device Output in Model Menu, which is used as Spoiler Stick and is activated. Refer to "2.11 Device Output".



Setting method:



Touch the icon

to enter Function Menu, and then click the icon



to enter the interface of Motor Hold.



1) Hold Position setting

Touch the left or right navigation mark of Hold Position to decrease or increase, respectively, the amount. The adjustable range is from -10.0% to 100.0% and the default setting is 0.0%.

2) Switch select

Touch the switch you want and a “√” will be shown in its left. If two or more switches are chosen, the item And should be selected.



Touch the icon to exit.

### 3.6 Flaperon mix

This function is used to mix Aileron to Flaperon, or mix Elevator to Flaperon. The mix amount can be independently set in each flight mode.

The flap rate in each flight mode should be previously set before using this function. Refer to the following "3.16 Flap rate".


Setting method:



Touch the icon to enter Function Menu, and then click the icon



to enter the **FLAPERON MIX INTERFACE**.

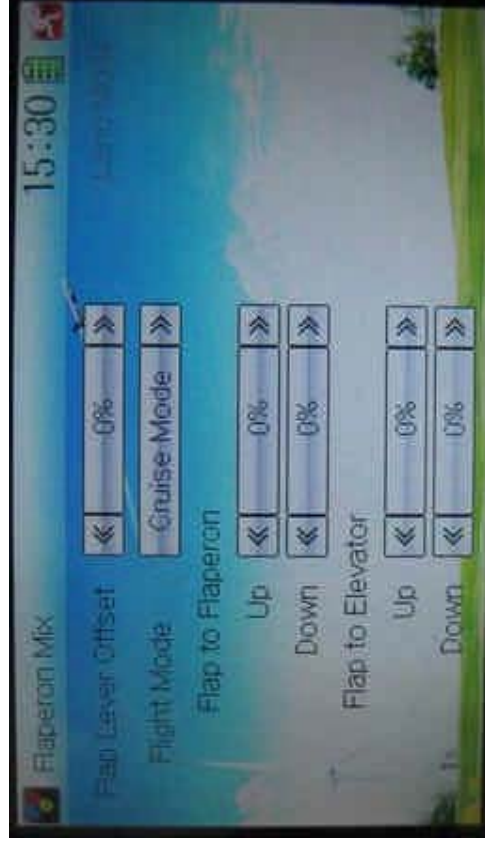

#### 1) Flap Lever Offset setting

This function can be used to set the neutral points of Flaperon servos.

Touch the left or right navigation mark of Flap Lever Offset to decrease or increase amount, respectively. The adjustable range is  $\pm 100\%$ . It is possible to change the offset direction by changing the sign before the amount.

## 2) Flight Mode setting

Flight Mode at Device Select should be previously chosen before using this function (Refer to "2.10 Device Select").

Touch the navigation mark of Flight Mode to select the desired item in the following popup list.



### 2.1) Flap to Flaperon

Touch the navigation mark of Up or Down to change the Flaperon mix value when moving the Flaperon stick. The bigger the value is, the bigger mix will be. The adjustable mix is ranged from -125% to + 125%. It is possible to alter the Flaperon mix direction by altering the sign before the value.

### 2.2) Flap to Elevator

Touch the navigation mark of UP or Down to change the elevator mix value when moving the Flaperon stick. The bigger the value is, the



bigger the mix will be. The adjustable mix is ranged from -125% to +125%. It is possible to alter the elevator mix direction by changing the sign before the value.



Touch the icon to exit.

### 3.7 Camber system

This function can change both the flap angle and aileron angle, which goes through the central line of the main wings' transect, and then change the features of main wings. It can be independently set in each flight mode.

Setting method:



Touch the icon to enter Function Menu, and then click the icon



to enter the **CAMBER SYSTEM INTERFACE**.



1) Flight Mode setting

The flight mode should be previously activated in "Device Select" before using this function (refer to "2.10 Device Select").

Touch the navigation mark of Flight Mode and expand a popup, where you can select the desired flight mode.



2) L- or R-Aileron setting

Touch the navigation mark of L- or R-Aileron to change the position of L-aileron or R-aileron with a range of  $\pm 100\%$ . It is possible to alter the direction of L- or R-aileron via changing the letter of "R" or "L" before the amount.

3) L- or R-Flap setting

The flap dual channels should be previously set in Wing Type (refer to "2.12 Wing Type").

Touch the navigation mark of L- or R-Flap to change the position of L- or R- Flap with a range of  $\pm 100\%$ . It is possible to alter the direction of L- or R-aileron via changing the letter of "R" or "L" before the amount.

4) L- or R-Tip Aileron setting

The tip aileron should be previously set at Wing Type (refer to "2.12

Wing Type”).

Touch the navigation mark of L- or R-Aileron to change the position of L- or R-aileron with a range of  $\pm 100\%$ . It is possible to alter the direction of L- or R-aileron via changing the letter of “R” or “L” before the amount.



Click the icon to exit.

### 3.8 Differential

- 1) Flight mode setting

The flight mode should be previously set in Device Select (refer to “2.10 Device Select”).



Touch the icon to enter Function Menu, and then click



the icon to enter the **DIFFERENTIAL INTERFACE**.



1.1) Aileron differential setting

It is possible to decrease the vibration to the head from reverse direction in operating aileron.

Touch the left or right navigation mark of Aileron to decrease or increase, respectively, the value with a range of  $\pm 100\%$ . The bigger the value is, the bigger the differential will be

1.2) Rudder differential setting

In this function, the left or right rudder in V Tail will produce differential gearshift. V-Tail should be previously set in Wing Type at Model Menu (refer to "2.12 Wing Type").

Touch the left or right navigation mark of Rudder to decrease or increase, respectively, the value with a range of  $\pm 100\%$ . The bigger the value is, the bigger the differential will be.

1.3) Flap differential setting

Flap Dual channels should be previously set at Wing Type in Model Menu (refer to “2.12 Wing Type”).

Touch the left or right navigation mark of Flap to decrease or increase, respectively, the value with a range of  $\pm 100\%$ . The bigger the value is, the bigger the differential will be.

#### 1.4) Tip Aileron setting

Tip Aileron should be previously set at Tip Aileron in Model Menu (refer to “2.12 Wing Type”).

Touch the left or right navigation mark of Tip Aileron to decrease or increase, respectively, the value with a range of  $\pm 100\%$ . The bigger the value is, the bigger the differential is.

#### 2) Brake differential

If co-working with the spoiler stick, the brake differential function can counteract the differential.

Touch the left or right navigation mark of Brake Differential to decrease or increase, respectively, the value with a range from 0% to 100%. The bigger the value is, the bigger the differential will be.




Click the icon to exit.

### 3.9 Balance

This function can adjust the two-servo parameters, which are simultaneously used in dual output channels, but “Dual Channels” should be previously activated at Wing Type in Model Menu (refer to “2.12 Wing Type”).

Touch the icon to enter Function Menu, and then click the icon to enter the interface of Balance.

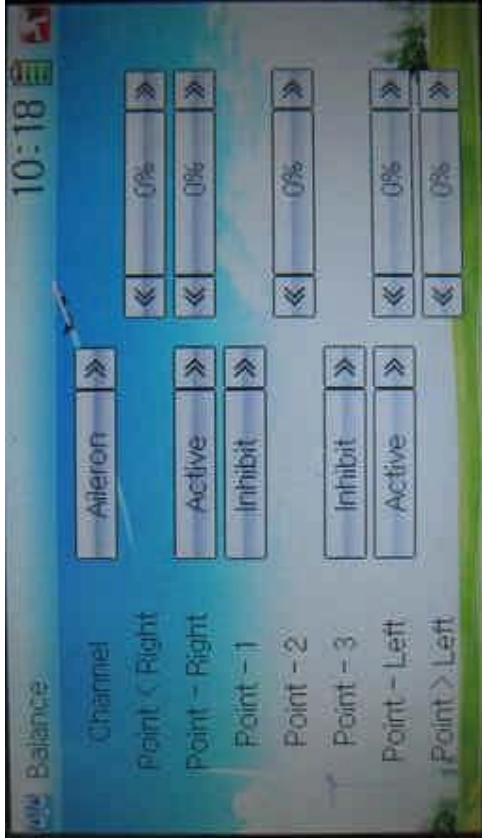

1) Channel selection

Touch the navigation mark of Channel and expand a sub menu and select the desired item.

2) Point setting


Touch the navigation mark of the point which you want to adjust, and expand a sub menu with Inhibit and Active. Click Active for adjusting, and then touch its navigation mark to change the value with a range of  $\pm$  100%. The default setting is 0%. The minus value means the amending direction is downward, and the plus value means upward.

Click the icon  to exit.


### 3.10 Gyro sensor

 This function offers the gain adjustment for gyro sensor. It is possible to be automatically switched among various gains via flight mode, which should be previously set at Device Select in Model Menu (refer to “2.10 Device Select”), and the gyro output should also be simultaneously set at Device Output (refer to “2.11 Device Output”).


Setting method:



 Touch the icon to enter Function Menu, and then touch the




icon to enter the **GYRO SENSOR INTERFACE**. There show Automatic setting mode, output channel, and five flight modes.

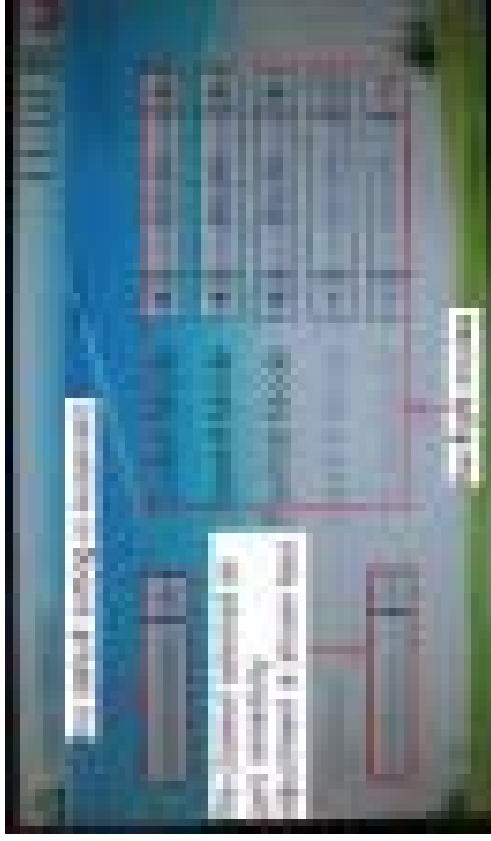

English

Your language



<p>The default setting is Automatic</p>	
<p>The channel selected as gyro gain adjustment is shown here</p>	
<p>Five flight modes</p>	
<p>Setting method for flight mode:</p> <p>Touch the left or right navigation of the flight mode, which you want to adjust, to decrease or increase, respectively, the value with a range of 0.0% - 100.0%.</p> <p>If the gyro used has two modes of NOR and AVCS, NOR will be activated when the value is less than 50.0%, and AVCS activated when above 50.0%. In NOR mode, the smaller the value is, the bigger the gain will be; in AVCS mode, the bigger the value is, the bigger the gyro sensor gain will be. The factory setting is 50.0%.</p> <p>Touch the icon  to exit.</p> <p><b>3.11 Rudder to spoiler mix</b></p> <p>When this function is activated, the spoiler can be used as rudder in the models without rudder and can also be mixed. The mix gain can be independently set in each flight mode, which should be previously set at Device Select in Model Menu (refer to "2.11 Device Select"), and "Dual Spoilers" should also be activated at Wing Type (refer to "2.12 Wing Type").</p> <p>Setting method:</p>	




Touch the icon

to enter Function Menu, and then click the



icon to enter the **RUDDER TO SPOILER MIX INTERFACE**.

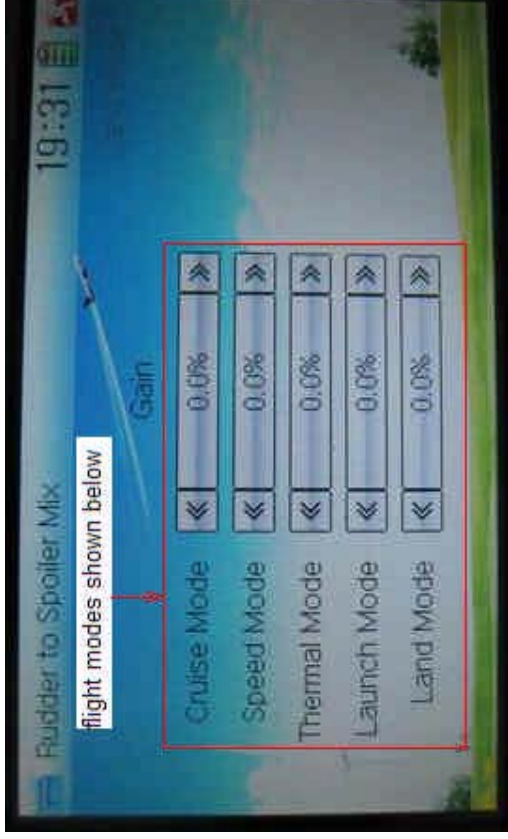

Touch the left or right navigation mark of the flight mode you desired to decrease or increase, respectively, the gain with a range of 0.0 – 100.0%. The default setting is 0.0%.



Touch the icon to exit.

### 3.12 Aileron to rudder mix

This function aims at mixing the rudder when operating the aileron. The mix value can be respectively set in each flight mode. But the flight mode should be previously set at Device Select in Model Menu (refer to "2.10 Device Select").

Setting method:



Touch the icon to enter Function Menu, and then click the



icon to enter the **ALERON TO RUDDER MIX INTERFACE.**



1) Elevator stick setting

This function is that: if the elevator stick position is set at one point, this point will become the cut-off point whether to mix. When the elevator stick is moved down from this point, the mix will be cancelled; while the elevator stick is moved up from this point, the mix will be activated.


Touch the left or right navigation mark of Elevator Stick to decrease or increase, respectively, the value with a range of D1 – 100%. When the elevator stick is moved down from the set value, the mix will be cancelled; while the elevator stick up from this value, the mix will be activated. The default setting is Inhibit.

2) Rudder stick setting

The setting is same as above. The adjustable range is L/R 1 – L/R 100%, and the factory setting is Inhibit.

3) Mix value setting for each flight mode

There are total five flight modes. The flight mode should be previously set at Device Select in Mode Menu (refer to “2.10 Device Select”).

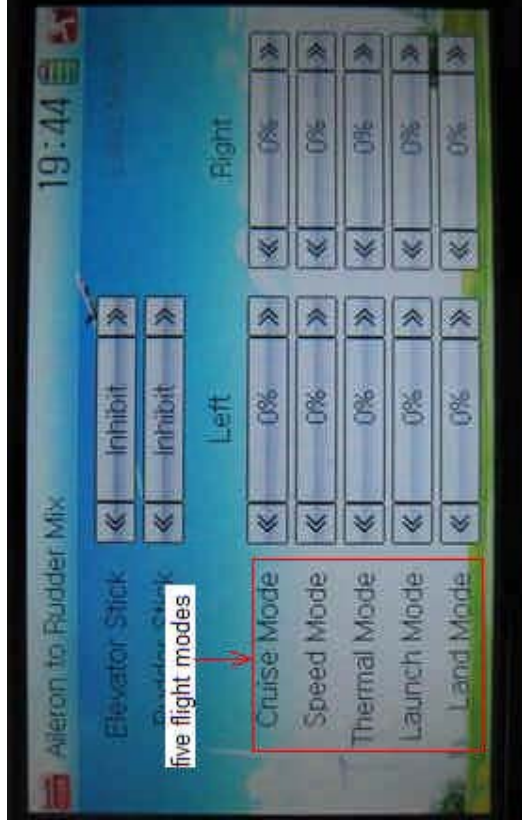

Touch the navigation mark of Left to change the leftward mix value of aileron to rudder when moving the aileron stick leftward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix is  $\pm 125\%$ .

Touch the navigation mark of Right to change the rightward mix value of aileron to rudder when moving the aileron stick rightward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix is  $\pm 125\%$ .



Click the icon to exit.

### 3.13 Elevator to flap mix

This function aims at mixing flap when operating elevator stick. It can be respectively set in each flight mode, which should be previously set at

Device Select in Mode Menu (refer to "2.10 Device Select").

Setting method:



Touch the icon to enter Function Menu, and then click the icon



to enter the **ELEVATOR TO FLAP MIX INTERFACE.**



Touch the navigation mark of Up in the flight mode you desire to change the mix value of elevator to flap when moving the elevator stick upwards. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ .

Touch the navigation mark of Down in the flight mode you desire to change the mix value of elevator to flap when moving the elevator stick downwards. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ .

Touch the navigation mark of Offset, which is corresponding to the flight

mode, to amend the central point of flap servo. The bigger the value is, the bigger the offset will be. It is possible to alter the offset direction via changing the sign before the value. the adjustable offset range is  $\pm$  100%.



Click the icon to exit.

### 3.14 Aileron to flap mix

This function aims at mixing flap when operating aileron stick. It can be respectively set in each flight mode. But the flight mode should be previously set at Device Select in Mode Menu (refer to "2.10 Device Select"), and the flap dual channels should also be previously activated at Wing Type in Mode Menu (refer to "2.12 Wing Type").

Setting method:




Touch the icon

to enter Function Menu, and then click the



icon

to enter the **AILERON TO FLAP MIX INTERFACE**.

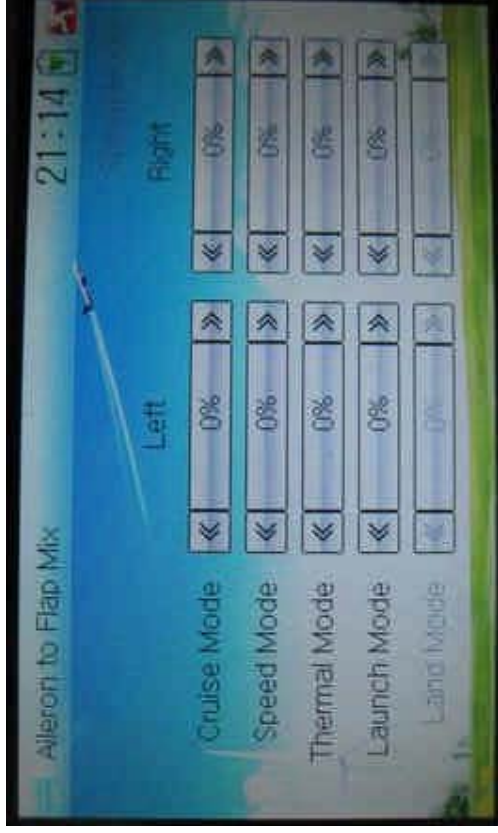

There are total five flight modes. The corresponding flight mode should be previously set at Device Select in Mode Menu (refer to "2.10 Device Select").

Touch the navigation mark of Left in the flight mode you desire to change the flap mix value when moving the aileron stick leftward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ .

Touch the navigation mark of Right in the flight mode you desire to change the flap mix value when moving the aileron stick rightward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ .



Click the icon to exit.

### 3.15 Flap to tip-aileron mix



The function aims at mixing tip aileron when operating flap. It can be respectively set in each flight mode. But the flight mode should be previously set at Device Select in Mode Menu (refer to "2.10 Device Select"), and the tip aileron should also be activated at Wing Type (refer to "2.12 Wing Type").

Setting method:



Touch the icon

to enter Function Menu, and then click the



icon

to enter the **FLAP TO TIP AILERON MIX**

**INTERFACE.**



There are total five flight modes. The corresponding flight mode should be previously set at Device Select in Mode Menu (refer to “2.10 Device Select”).

Touch the navigation mark of Left in the flight mode you desire to change the tip flaperon mix value when moving the aileron stick leftward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ . The default setting is 100%.

Touch the navigation mark of Right in the flight mode you desire to change the tip flaperon mix value when moving the aileron stick rightward. It is possible to alter the mix direction via changing the sign before the value. The adjustable mix value is  $\pm 125\%$ . The default setting is 100%.



Click the icon to exit.

### 3.16 Flap rate

This function can set the flap rate in all the flight modes. 0% is set as the neutral center of flap angle. It is possible to set the flap rate of either upward or downward direction. There are total five flight modes, each one of which should be previously set at Device Select in Model Menu (refer to “2.10 Device Select”).

Setting method:




Touch the icon

to enter Function Menu, and then click the



icon

to enter the **FLAP RATE INTERFACE**.

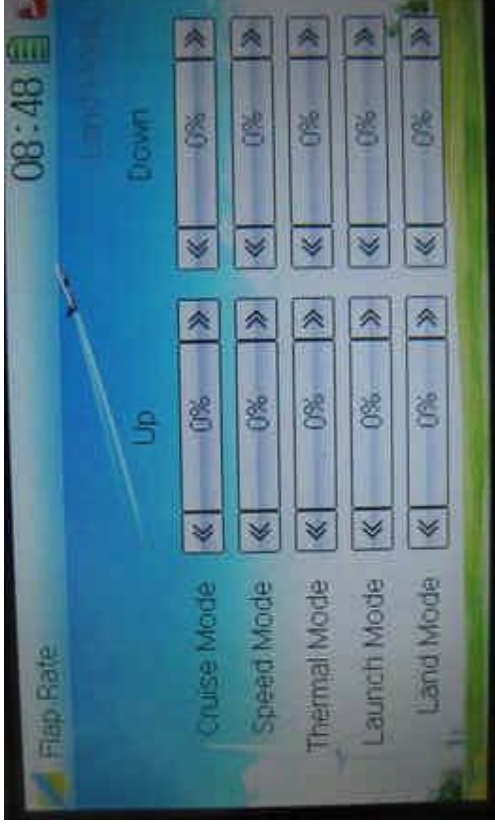

Touch the navigation mark of Up to change the flap rate when flap moving upward. It is possible to alter the direction by changing the sign before the value. The adjustable range is 125%, and the default setting is 0%.

Touch the navigation mark of Down to change the flap rate when flap moving downward. It is possible to alter the direction by changing the sign before the value. The adjustable range is 125%, and the default setting is 0%.



Click the icon to exit.

### 3.17 Brake system

Through the spoiler stick operation, all the actions caused by mobile wings in main wings will be turned into the mix which aims at brake. It can be switched between Pos 0 and Pos 1 via setting the item Switch.


Setting method:



Touch the icon to enter Function Menu, and then click the



icon to enter the **BRAKE SYSTEM INTERFACE.**

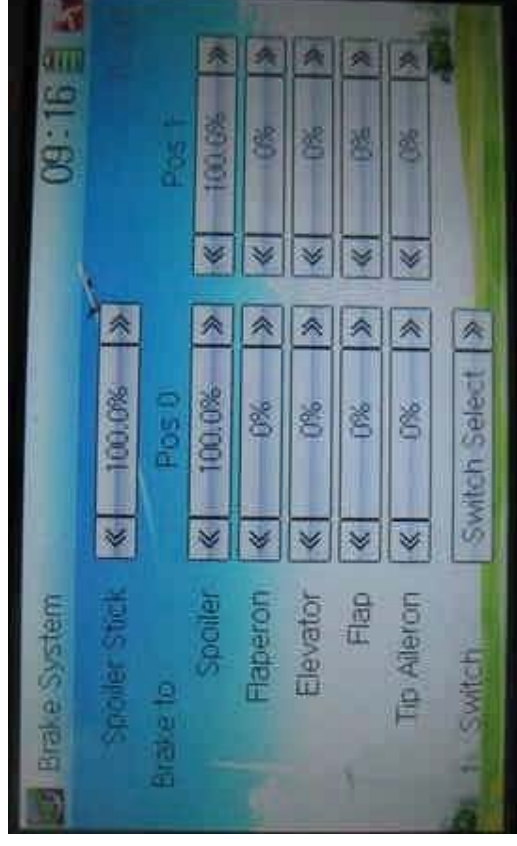

1) Spoiler stick setting

When the spoiler stick is set at one certain point, this point will become the cut-off point whether to brake. The mixing will be working when the spoiler stick is being moved to this point from down to up.

The spoiler stick position will be set through touching the navigation mark of Spoiler to change the value. The adjustable range is 0.0-100.0% and the default value is 100.0%.

#### 2) Mix value setting

Mix value setting for brake to the corresponding item is shown as below:

##### 2.1) Brake to Spoiler

The brake mix at Pos 0 will be altered through touching the navigation mark of Pos 0 at Spoiler to change the value. The adjustable value is 0.0-100%, and the default setting is 100.0%.

The brake mix at Pos 1 will be altered through touching the navigation mark of Pos 0 at Spoiler to change the value. The adjustable value is 0.0-100%, and the default setting is 100.0%.

##### 2.2) Brake to Flaperon

The setting is same as above. It is possible to change the mix direction via altering the sign before the value. The adjustable value is  $\pm 125\%$ , and the default setting is 0%.

##### 2.3) Brake to Elevator

The setting is same as above.

##### 2.4) Brake to Flap

The setting is as above.

## 2.5) Brake to Tip aileron

The setting is same as above.

### 3) Switch setting

Touch the navigation mark of Switch and expand a selectable list shown as below. Touch the desired switch item to make "0". If two or more switches are chosen, the item And should be selected.



Touch the icon to exit.

## 3.18 Program mix

There are total eight sets of Program Mix. It is possible to freely set the channels and values which you want to mix.

Setting method:

Touch the icon



to enter Function Menu, and then click



to enter the **PROGRAM MIX INTERFACE**. Eight

Program Mix names and their current statuses are shown (the factory default setting is Inhibit). Take Program Mix 1 as an example to show how to use.




A. Setting method for Normal in Program Mix 1

Touch the item Normal in Program Mix 1 and expands an **INQUIRY** "All Servos Hold?" Click OK for all the servos will be locked at the current statuses; click Cancel for unlocked. Enter the next interface after clicking.



1) Mater channel setting


Touch the navigation mark of Master and expands a selectable dropdown menu. After clicking the desired channel, its name will be shown in Master.

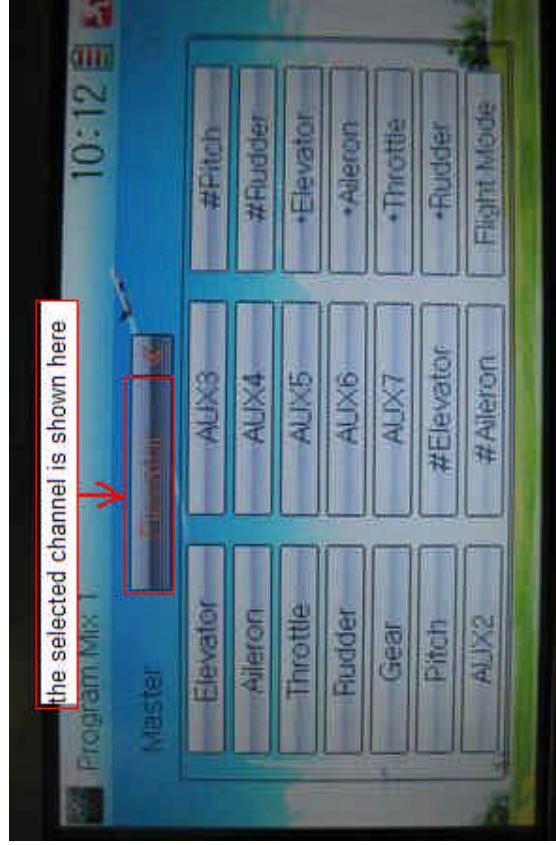



## 2) Slave channel setting

Touch the navigation mark of Slave and expands a selectable dropdown menu. Click the desired channel which will be shown in Slave.

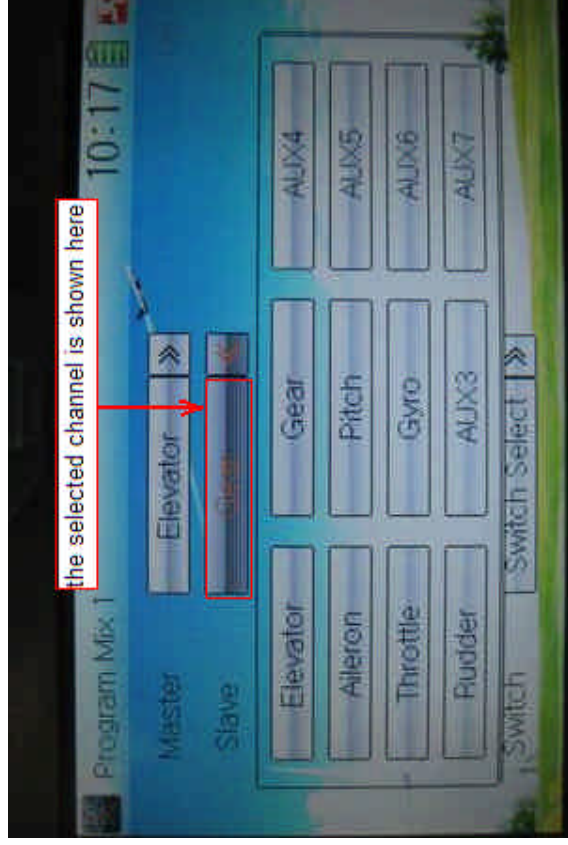

## 3) Gain setting

The item Gain includes Pos 0, Pos 1, and Offset. Take Elevator at Master channel as an example.

### 3.1) Pos 0:

Mix amount setting when elevator stick moved upward: touch left or right navigation mark of Up to decrease or increase, separately, the mix amount. It is possible to reverse mix direction through changing the plus or minus sign before amount. The adjustable range is  $\pm 125\%$ .

Mix amount setting when elevator stick moved downward: touch left or right navigation mark of Down to decrease or increase, separately, the mix amount. It is possible to reverse mix direction through changing the plus or minus sign before amount. The adjustable range is  $\pm 125\%$ .

### 3.2) Pos 1

The setting is same as above.

### 3.3) Offset setting

If the elevator stick position is set at one certain point, this point will become the cut-off point whether to offset. The offset will be cancelled when the elevator stick is moved downward from this point, and activated when the elevator stick moved upward from this point.

Touch the left or right navigation mark of Offset to adjust the value, which is the cut-off point whether to offset. The offset to Slave channel will be cancelled if the elevator stick is moved down from this point, and activated if the elevator stick moved up from this point. It is possible to reverse the offset direction by changing the sign of plus or minus before the value. the adjustable range is  $\pm 100\%$ , and the factory setting is 0%.

### 4) Switch selection

Touch the right navigation mark of Switch and pop up a dropdown menu which contains the adjustable items. Click the desired switch. Then touch the right navigation mark to return the previous interface. If more than two items are selected, the time And should be chosen.



Click the icon



to return to the interface of Program Mix for other setting, or click the icon once again to exit.

B. Setting method for Curve in Program Mix2

Touch the item Curve in Program Mix 1 and expand an enquiry "All Servos Hold?" Click OK for all the servos will be locked at the current statuses; click Cancel for unlocked. Enter the next interface after clicking.



1) Master channel setting

Touch the navigation mark of Master and expand a selectable dropdown menu. Select the desired channel and its name will be shown in Master. Click the navigation mark of Master to return to the **PROGRAM MIX 1 INTERFACE.**

2) Slave channel setting

Touch the navigation mark of Slave and expand a selectable dropdown menu. Select the desired channel and its name will be shown in Slave. Click the navigation mark of Slave again to return to the **PROGRAM MIX 1 INTERFACE.**

3) Position

Touch the navigation mark of Position and expand a list with Pos 0 and Pos 1. select the desired position.

4) Exponential

Touch the navigation mark of Exponential and expand a dropdown menu with two options of Off and On. The pitch curve will be smoothly changed if On chosen, and changed in the form of fold line if Off chosen.

5) Point

Touch the navigation mark of Point and expand a dropdown menu with nine points. Click the point you want to set, and then touch the navigation mark to return.

6) Status

Touch the navigation mark of Status and expand a dropdown with two options of Inhibit and Active. Touch Inhibit for unchanging the current amount (the default setting is Inhibit); click Active for changing the amount, and a popup of Output will be followed below.

7) Output

Touch the left or right navigation mark of Output to decrease or increase, respectively, the output amount with a range of  $\pm 100.0\%$ . It is possible to reverse the mix direction by changing the plus or minus sign before the amount.

8) Switch

Touch the navigation mark of Switch and expand a usable dropdown menu. Select the desired switch, and then click the navigation mark to return. If more than two items are selected, the item And should be chosen.



Click the icon to return to the **PROGRAM MIX**



**INTERFACE** for other setting, or click the icon once again to exit.

### 3.19 Monitor

This function can display the current statuses and positions of all the channels' outputs, and check the current working status of each channel.



Touch the icon to enter Function Menu, and then click the



icon to enter the **MONITOR INTERFACE** for checking the current working status of each channel.




Click to the icon  exit after finished.

### 3.20 Fail safe

There are two possibilities for use if the transmission signal is under abnormal condition. The first one is to lock the last action data received; the second one is to execute the pre-set data which is pre-set. The default setting is Servo Hold.

Setting method:



Touch the icon 

to enter Function Menu, and then click



失控保护

to enter the **FAIL SAFE INTERFACE**.



Take the item Elevator as an example to explain.

1) Elevator setting:

Touch the item Elevator (it is unnecessary to set if Elevator is at Servo Hold) and expand a sub-item in its right. Click the left or right navigation mark to decrease or increase, respectively, the position amount which centers on the neutral point of servo. The settable range is 125%, and 0% is the servo's neutral position.



2) The setting methods for other channels are same as above.



Click the icon to exit after finished.

**Note:** checking whether all the actions when fail safe happened are correct is a must after the setting is finished. It is dangerous to use full throttle, especially after fail safe taken place.

### 3.21 Trainer

The training function can be practiced via two DEVO-8 equipments.

Setting method:

A. Data copy

Using the wireless copy function of the two DEVO-8 transmitters, the model data saved in the trainer's transmitter can be transmitted to the trainee's to ensure the model parameters are exactly same. Regarding the copying method, refer to "2.4 Model Wireless Copy"



**B. Linkage**

Insert one end of the signal wire into DSC socket at the rear face of the trainee's DEVO-8, and then turn on the power. A linkage icon will be shown on the boot screen. Find out the trainee's model data.



**English**

Linkage icon shown at trainee's icon

**Your language**

Turn on the power of the trainer's DEVO-8. Find out the trainee's model data, and let the trainer's DEVO-8 fly the aircraft model normally. Then turn off the power.

Insert the other end of the digital signal wire into the trainer's DEVO-8, and then turn on its power. A linkage icon will be shown as below:




English	Your language
Linkage icon shown at trainer's DEVO-8	



<b>English</b>	<b>Your language</b>
DSC socket	
Two ends of digital signal wire	

Training status display: when the trainer's icon becomes into "X", the trainee stops flying and the trainer is working; when the trainer's icon turns into "✓", the trainee is flying and the trainer is in leisure.

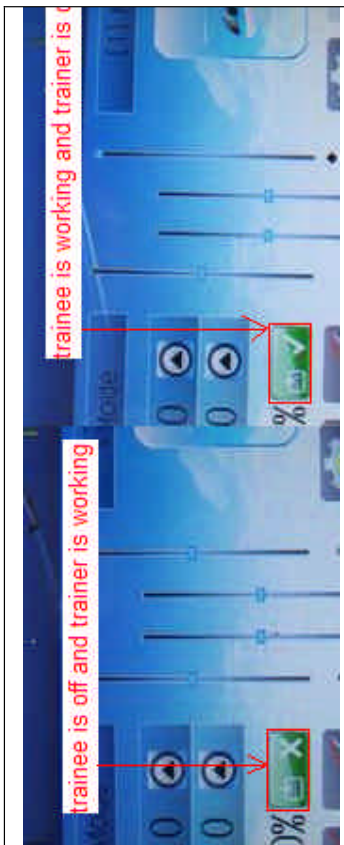

English	Your language
Trainee is off and trainer is working	
Trainee is working and trainer is off	

C) Usage method

The training switch should be worked with the TRN training lever at the right top of DEVO-8.



English	Your language
TRN: training lever	

If the **TRAINER** (fingerREMOVE) pulls the training lever TRN, a “√” is shown in the linkage icon; if the trainer releases his finger from the trainer lever, an “X” will be shown there.

Setting for training function channels


Trainee is available to get full or part of flight control power to the aircraft model via setting the training function channel in the trainer's DEVO-8. Below is the setting method:



Touch the shortcut icon



to enter Function Menu, and then touch in Function Menu access to Trainer screen. The available channels are shown below, and the current status of trainer switch TRN is also shown.

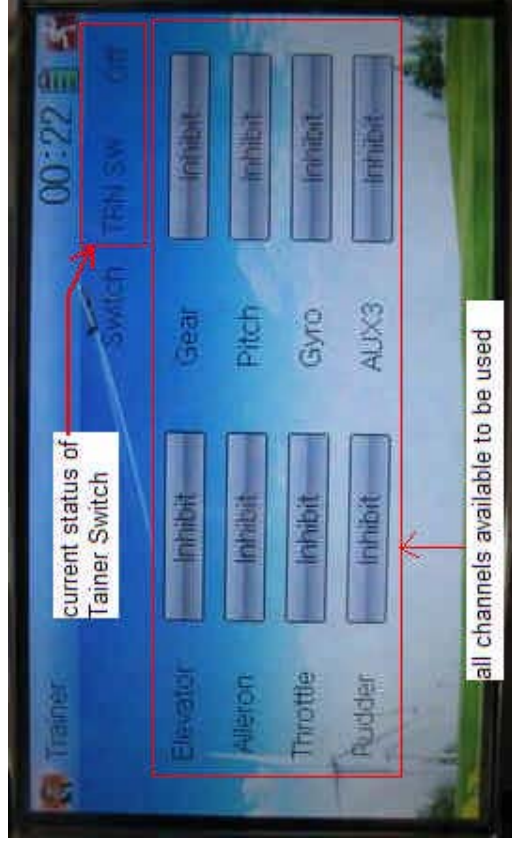

English	Your language
Current status of Trainer Switch (TRN SW)	
All channels available to be used	

Touch the channel(s) which you desire to grant to trainee. The channel(s) you have touched will be activated as "Active". The channels which are not granted to trainee keep inhibited. The default setting is "Inhibit".



Touch to save and exit after finished.

### 3.22 Timer

There are two timers which can be set as stopwatch and countdown, respectively. Each timer can be operated by switch or by shortcut.



Setting method:



Touch the icon to enter Function Menu, and then click the icon




to enter the **TIMER INTERFACE**.

A. Setting for Timer 1

7) Timer 1 setting

Touch the navigation mark of Timer 1 and expand a dropdown of Stopwatch and Countdown. Select the desired timing method. The timing range of stopwatch is from 0 to 59:59 (59 minutes 59 seconds).

Stopwatch view:

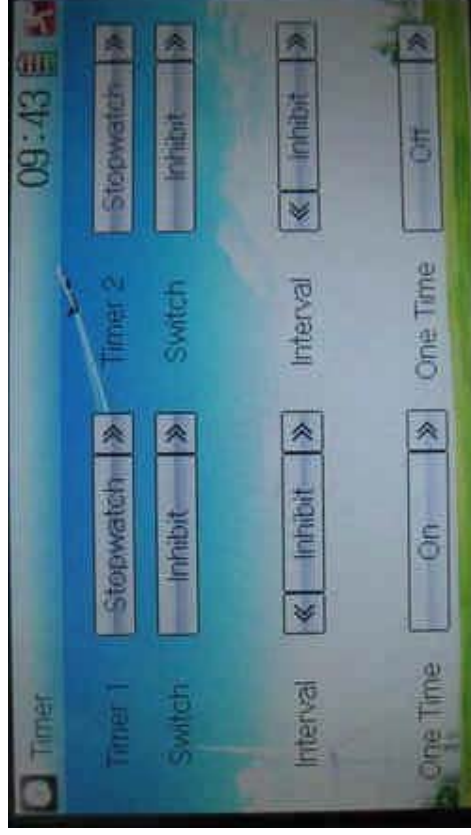

Countdown view:






Take countdown manner as an example to explain.

8) Switch selection

Touch the navigation mark of Switch and get a selectable dropdown

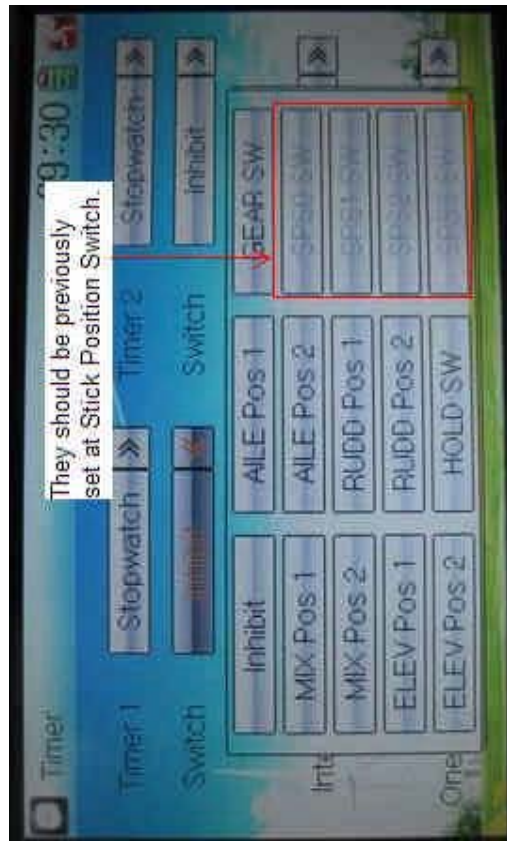

We can select the desired item but these items of SPS0 SW, SPS1 SW, SPS2, and SPS3 which should be previously set at Stick Position Switch at Model Menu (refer to “2.8 Stick Position Switch”).

9) Set time

The settable countdown time range is from 00:05 to 59:55.

10) Interval

This item offers the possibility to set the warning interval. It will warn once every interval time. The adjustable range is from 00.05 to 05:00. The default setting is Inhibit.

11) Down alarm

It is possible to set the down alarm in countdown. The setting range is from 00:01 to 03:00. The default setting is Inhibit.

12) One time

If this function is turned on, counting down cannot be stopped once the countdown works. The default setting is Off.

B. Setting for Timer 2 is same as that for timer 1.

Touch the icon



to exit after finished.

校阅者:

Proofread by Mr. Manuel Campos

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This Device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures:

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

## WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This module meets the requirements for a mobile device that may be used at separation distances of more than 20cm from the human body. It may be used in handheld controllers that provide a separation distance of at least 5cm between the antenna and the body (excluding hands/wrists). The instructions to the user for the host device must include information requiring the product be used in a manner to ensure the appropriate separation (20cm or 5cm) between antenna and body and requiring that the transmitter not be collocated with another transmitting device.