

WLAN-11b Wireless/Internet Mini SDIO WLAN card

SPECTEC

 WLAN-11b

 ₩ Fe c €

 FC D32/4/INMLANTIB

 001226000506

Mini SDIO WLAN Card User's Manual ver. 1.23



Content

Inside Package	P.1
System Requirement & Installation Description	P.1
Installation Steps	P.2~5
How to put a Mini SDIO WLAN card in of a PDA	P.6
How to get a Mini SDIO WLAN card out of a PDA	P.6
How to Connect	P.7~8
How to Connect Ad-hoc	P.9
How to Remove Settings	P.9
Wireless/Internet Speed Dial	P.10~11
How to Connect AP Manually	P.12
Inside CD	P.13
Contact Us	P.14
How to Upgrade Software	P.15
How to Install Software	P.15
AP Compatibility List	P.16
Frequently Ask Question	P.17





Thank you for purchase SPECTEC Mini SDIO WLAN card, it is the most smallest SDIO Wireless/Internet WLAN card on the market, easy to install and use, unlimited online use and connect wherever you are.

Inside Package



Mini SDIO Wi-Fi Card



System Requirements & Installation Description

- This type of Mini SDIO Wi-Fi Card can only be used in Pocket PC. Windows Mobile 2003 or above Operation System.
- 2. Please make certain your PDA has SDIO drive, so it can be used.



Installation Steps

< First, please use USB wire to connect between PDA and your computer.



< Main menu window will pop up when you insert the WLAN-11b Installation CD by autorun:











< Type Customer Information Spectec SDIO Wi-Fi Card - InstallShield Wizard then click Next Customer Information Please enter your information.





< Chose **Setup type**, then click **Next**











How to put a SDIO WLAN card in of a PDA

- < Check the direction of angularity of the card before put a Mini SDIO WLAN card in of a PDA. The angularity of the card needs to be same direction as PDA.
- # Different PDA has different drive. Make sure the direction is correct or your will damage the PDA SD drive.



How to take a Mini SDIO WLAN card out of a PDA

- < When take out a Mini SDIO WLAN card from a PDA, just need to press down the card to the PDA, the card will jump out automatically, Do Not Pull Out, or will damage the slot.
- < The card design to be locked by slot, force to pull card out, it will damage auto jump out function, even damage slot and the Wireless LAN Card.







How to Connect

- < After install the software, start path as **Start\Programs**.
- < After put the card into a PDA, click **Start**, menu comes out, then click

Programs, select the 🚺







In "Radio" page of WLAN Utility, you may check **S/W Radio Off/on** for **Enable/ Disable** Wi-Fi card, or you can also find a shortcut icon at the lower right hand corner of the screen.

🎢 WLAN Utility 💦 🦞 5:58 🐽
4
SSID Spectec
Status Connected: 00-0D-54-A3-F6-
Type Infrastructure Station
Channel Channel
IP IIP IIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
MAC S/W Radio: Off O on 5
Ad Hoc Channel: 11 (2462 MHz) 👻
Power Saving; Disable -
Status Ra
Status Radio About
• On Radio
Off Open
New



How to Connect Ad-hoc



- 1. In Programs, select Ad-hoc channel (1-11)
- 2. Click OK, then leave Program
- 3. Please draws back the take card out from PDA, and put the card back in again
- 4. Go to PDA system Setting \Connect \ Wireless Card
- 5. Click Add
- 6. Type name (ex: aa)
- 7. Please **check** "This is a device-to-device (ad-hoc) connection
- 8. Click **OK**, then the "aa" will show up on the name of the Network address

*Ad-hoc channel: it's a "point-to-point" the network segment, it provides you the temporary LAN environment.

How to Remove Settings

In the **Setting**, select the network name that you want to remove, after **2** seconds, you will see the **"Remove Settings"** in the pop up window.

5ettings		Yı -(€ 9:0	13 🙁			
•0	8					
eam Blu	uetooth	Connect	ions			
twork ards						
t	🏀 Setti	ngs		Y i 4 € 9:	03 🐟	
E	Configur	e Wireles	s Netw	orks	0	
onal Syster	Add I Spec A EASY	New tec Y-UP	5	Connect Unavailat	ed ble	
	Networks	to access:				
	All Avail	Setti	ngs		Y i 4 € 9	:06 🚯
	Auto	Configu	e Wire	less N		0
	netw	Network	name:	aa	<u>ه</u> و	
	Wireless	Connects	to:	The Inte	rnet	•
		his is connered to the second seco	a devi ection	ce-to-devid	ce (ad-hoc)	
🎥 Set	tings		7 i 4 €	9:07 💽	•	
Config	ure Wirel	ess Netw	orks	0)	
Add	d New					
💡 Spe	ectec SY-UP		Conne Unava	ilable	×	
a a			Unava	ilable		₩ ^
	8					
Network	ks to acces	is:				
All Ava	ilable			•		
Auti netv	omatically works	connect to	non-pre	eferred		
Wireless	Network	Adapters				
					•	

Pers

11-9-4 D

