



Remote Controlled Snake with Obstacle Course

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE - DO NOT DISCARD

PROBLEMS? PLEASE DO NOT TAKE YOUR R/C SNAKE" BACK TO THE STORE. PLEASE CALL OUR CUSTOMER SERVICE LINE AT 1-888-742-2484 OR GO TO WWW.UNCLEMILTON.COM

Note: tool required - Small Phillips screwdriver

Install Batteries Into Controller

1. Using a Phillips head screwdriver remove the battery door from the back of the controller.
2. Insert 2 AA batteries and replace cover.

Install Batteries Into R/C Snake™

1. Using a Phillips head screwdriver remove the battery door from the bottom of the snake.
2. Insert 2 "AAA" batteries and replace cover.

Using Your R/C Snake™

1. Turn the power switches to the "ON" position on both the controller and R/C Snake™
2. Move the snake forward and backwards, left and right using the buttons on the controller

IMPORTANT: KEEP THESE INSTRUCTIONS. DO NOT DISCARD.

- Requires 2 AAA & 2 AA batteries (not included).
- Only adults should install and replace batteries
- Alkaline batteries are recommended for longer life.
- Nonrechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.
- Batteries should be inserted with the correct polarity.
- Do not short-circuit the battery supply terminals.
- Only batteries of the same or equivalent type as recommended are to be used.
- Exhausted batteries should be removed from the toy.

Note: For best performance use your R/C Snake™ on a smooth flat surface like a hard floor or tabletop.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected,
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: S362035UMI2005

MADE IN CHINA

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions.

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**Uncle
Milton**

UMI, Westlake Village, CA 91362
818.707.0224 Fax: 818.707.0878 www.unclemilton.com
© UMI. All rights reserved. R/C Snake is a trademark of UMI. Printed in China.

"Modifications not authorized by the manufacturer may void users authority to operate this device"