

Model No. WP-800



8" Tablet PC

User Manual

Company AMR WIRELESS LIMITED

Table of Contents

Table of Contents	0
1 Outlook Description	3
2 Power Button Usage	4
3 Touch-Screen Navigation	4
4 Transfer Box	4
5 Using microSD Card	5
6 Getting Started	5
Charge the device	5
Turn the device on	6
Wi-Fi Network Setup	6
7 DESKTOP	6
8 Screen Lock	7
9 Pre-loaded Applications	7
10 Desktop Function Menu	9
11 Application Management	11
Install Android Applications	11
Download Android Applications direct from a Website	11
Uninstalling Android Applications	12
12 WmtWeather	12
13 CLOCK	12
Alarm	12
14 APP MARKET	13
Download Applications	13
App Market Function Menu	14
15 BROWSER	14
16 CALENDAR	14
Add Event	15
17 CAMERA	15
Menu Function	15
Take Pictures	15
Take Videos	15
18 CALCULATOR	16
19 EMAIL	16
Add Email accounts	16
Email Inbox	17
Edit Email Account	17
Delete Email Accounts	17
20 FILE BROWSER	18
Copy Media between Computer and Tablet	18
Delete files	19
21 MY MUSIC	19
Play Music	19
The Operation with Music and Playlist	20


22 MY VIDEO	20
Play Video	21
The Operation with Video and Playlist	21
23 MY PHOTO	21
Doodle.....	22
24 CONTACTS	22
Add New Contacts.....	22
Add Contact to Favorites.....	22
Edit Contacts	22
Delete Contacts.....	23
25 PICTURE CAPTURE	23
26 PK MANAGER	23
Stopping Applications	23
Uninstall Applications.....	23
27 YouTube	24
28 TUDOU	24
29 Wi-Fi Settings	24
30 3G Settings	25
31 ADSL Settings	25
32 Ethernet	26
33 SETTINGS	26
Frequently Asked Questions	28
Battery Management	29
Important Safety Precautions	29
Appendix: The Optional parts and models	30
FCC STATEMENT	31
RF warning statement	31

1 Outlook Description

Front:



Right:

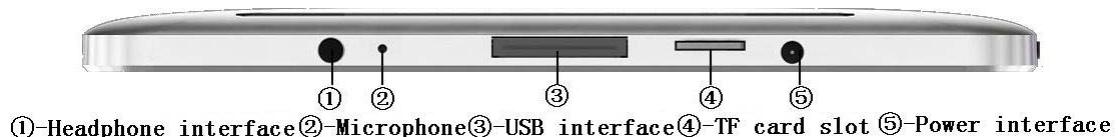

Back:



Top:



2 Power Button Usage

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds, → tap **OK**.

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

Force Off: If device does not respond, press and hold the power button for 5 seconds.

Note: If it is necessary, we don't suggest use **Force Off**. You should follow the steps to perform the shutdown.

Reset Button: Press the reset button to reset the device. Reset will erase all data on the device, please caution this feature. (**Note:** Current the reset function can not be restart, so after reset you need to press the power button to re-boot.)

3 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

★ *The smaller the point that comes in contact with the screen, the more precise object selection can be. If you do not have long enough fingers/nails to be used for precise tapping, we recommend using the stylus or non-sharp pointed instrument to increase the precision of navigation.*



Throughout the User Guide, you are instructed to use the following tap or touch navigation methods:

Tap: quick tap & release on an item on the screen.


Finger slide: touch & slide your finger across the screen and then release.

Touch & hold: touch and hold in place approx 2 seconds, and then release to display an options window.

★ *To avoid scratching or crushing, do not place objects on the touch screen surface.*

4 Transfer Box

You must use the transfer box if you want to use a USB storage device (U-disk) for accessing/storing your photos, music or video files.

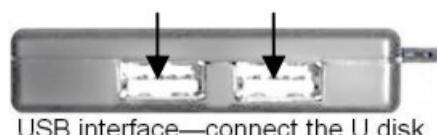

Insert U-Disk

Insert your U-disk to the transfer box, → insert the transfer box into the Tablet. When ready for use, it will directly into the File Browser to open U disk folder.


Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap 

→ **Settings** → **SD card, U-disk & device storage** → **Unmount U-disk**. And then you can unplug the U-disk.

★ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

The transfer box is also used for Ethernet network connections.

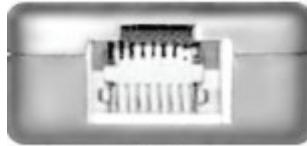

Ethernet interface

5 Using microSD Card

★ *The device supports a maximum 32GB microSD card.*

Insert your card into the microSD slot until it clicks into place. When ready for use, it's OK.

Remove microSD Card

Close all applications or documents which have been opened on the card. Tap 

→ **Settings** → **SD card, U-disk & device storage** → **Unmount SD**

card. Press the card lightly; it is partially ejected allowing you to pull the card out.

★ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

★ *We recommend using major brands of memory cards to avoid incompatibility.*

6 Getting Started

Charge the device

★ *You cannot charge the battery using the USB cable.*

★ *You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

While charging, the battery indicator light is red. When fully charged, the battery indicator light is green.

Turn the device on

Press the power button and hold for 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  → **Settings**, → **Wireless & network**.
2. Select **Wi-Fi** to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A  indicates secure networks that require login name/password to connect.

3. Tap the desired network to which you want to connect, → enter the **Network Password** if applicable, → tap **Connect**.

4. Tap  to return to the Desktop screen.

★ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.

7 DESKTOP



① Return to Desktop from other apps

② Battery charge status

③ Current Time

④ Picture capture icon

- ⑤ **Volume reduction icon**
- ⑥ **Volume increase icon**
- ⑦ **Function Menu icon**
- ⑧ **Back icon**
- ⑨ **Tap to view the applications screen**
 - ☆ Tap on any application icon to launch it.
 - ☆ Touch, hold and then slide icons to reposition them on the screen.
 - ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

8 Screen Lock

Can be set to automatically lock screen or quickly press the power button to manually lock screen. Lock screen displays the following:



Tap the icon  to enter My Photo to do slide show. And slide the track like the picture to unlock.

9 Pre-loaded Applications



Wmtweather

Display the weather.

	Clock	Use as alarm clock with scheduled alarms.
	App Market	Downloaded applications quickly & easily.
	Browser	Access the Internet and “surf the web” whenever desired.
	Calendar	Calendar with ability to set events.
	Camera	Take photos and save to internal memory or your memory device.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.
	My Photo	View and manage photo files.
	Contacts	Create a list of personal contacts, which can also be linked with your email.
	Picture Capture	Capture image of the screen.
	PK Manager	Application manager for managing processes.

	YouTube	Quick launch to YouTube.com videos.
	Tudou	Quick launch to Tudou.com videos.
	Settings	Multiple settings for personalizing and enhancing your Device.
	Wi-Fi Settings	Set Wi-Fi network.
	3G Settings	Set 3G network.
	ADSL Settings	Set ADSL network.
	Ethernet	Configure Ethernet.
	Desktop	Icon for the desktop screen.
	Trash	Icon for the trash bin.

★ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.

★ Touch, hold and then slide icons to reposition them on the screen.

★ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

10 Desktop Function Menu

On the **Desktop** screen, you can tap  to display the **Function Menu**.



 Add	<p>The viewable portion of the Desktop screen allows only 16 icons. In order to add more items, finger slide the screen horizontally to expose available space, and then tap the Add icon again. If the screen is full, the Add icon won't respond.</p>	
	Shortcuts	<p>Add quick launch shortcuts on the Desktop to applications, bookmarks or settings.</p> <p>★ <i>If you select items that are shortcuts already on the Desktop screen, they will be duplicated, resulting in multiple icons for the same item.</i></p>
	Widgets	<p>Analog clock: Add a round analog clock.</p> <p>Calendar: Add a calendar widget to display current date & events.</p> <p>Music Player: Add a music widget to quickly begin playing music without launching the music application.</p>
	Folders	<p>New Folder: Add a folder into which you can add applications as desired. To move applications on the Desktop screen into the folder, touch, hold & drag the icons directly on top of the folder icon.</p> <p>To add applications from the All Application screen, first tap on the folder to open it, open the All Application screen, and then touch & hold on an application icon. It is copied into the folder.</p>
 Wallpaper	<p>Select wallpaper from Picture and Wallpapers.</p>	

 Search	<p>Perform a quick Google search. Tap in the entry field, → enter the desired search text, → tap .</p>
 Notifications	<p>List any pending notifications (i.e., new email, calendar events, etc).</p>
 Settings	<p>See “Settings” on page 26.</p>

11 Application Management

Install Android Applications

★ *There are many interesting and free Android applications that can be found on the web. Just launch your web browser and do a search for “Android applications”.*

Purchased or free Android applications that you have downloaded to your computer can



be installed quickly & easily on your Tablet using the **File Browser** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device, → insert or connect to your Device.



2. Tap the  **File Browser** application icon.



3. Tap  or  and locate the folder in which the .apk application files were saved.

4. Tap on a **.apk** file → **Install**.

The application is installed and the application icon is added to the **Applications** screen.

5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.



1. Tap the  **Web** application icon to launch the internet browser.

2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.

3. After the download is complete, touch & hold on the download file (in the

Download history screen), → tap **Open** → **Install**.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap  → **Settings** → **Applications** → **Manage applications**.
2. Tap the application you want to uninstall, → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



12 WmtWeather

Tap the  **WmtWeather** application icon.

General setting

You can set Temperature Unit(°C), Update frequency and Auto Wallpaper.

My cities

You can add city and set it to be my city.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap

 → **Add** → **Widgets** → **WmtWeather**.



13 CLOCK

Tap the  **Clock** application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

★ *This clock icon  displayed at the top of screens indicates that one or more alarms have been set and are active.*

Add Alarm

1. Tap the  **Clock** application icon.

2. Tap  → **Add alarm**.

3. Set up your alarm as desired.

★ *If you don't select a repeat, the alarm is automatically*

deleted after it is activated.

4. Tap **Turn on alarm**.
5. Tap **Done**.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap Snooze if you want to be reminded again in 10 minutes.

Tap Dismiss to cancel the alert.

Turn Alarm on

On alarms that you have set to repeat, you may want to temporarily turn on alarms rather than delete them.

1. In the Alarm screen, tap  on the alarm(s) you want to turn on.
2. Tap  to turn on again.

Edit Alarm



1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to edit, → make desired edits.

Delete Alarm



1. Tap the  **Clock** application icon.
2. Tap on the alarm you want to delete.
3. Tap  → **Delete alarm**.



Tap  to return to the **Desktop** screen.



14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

Download Applications



1. Tap the  **App Market** application icon.

☆ *The first time, you are prompted for your App Market login information. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*
2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.
3. Tap on an application, → **Download**.

4. After the app is downloaded, tap **Install**.
5. Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

App Market Function Menu

Tap  to display the App Market **Function Menu**.

Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

About


Displays App store version and support information.



15 BROWSER

Users can connect to the Internet through a browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

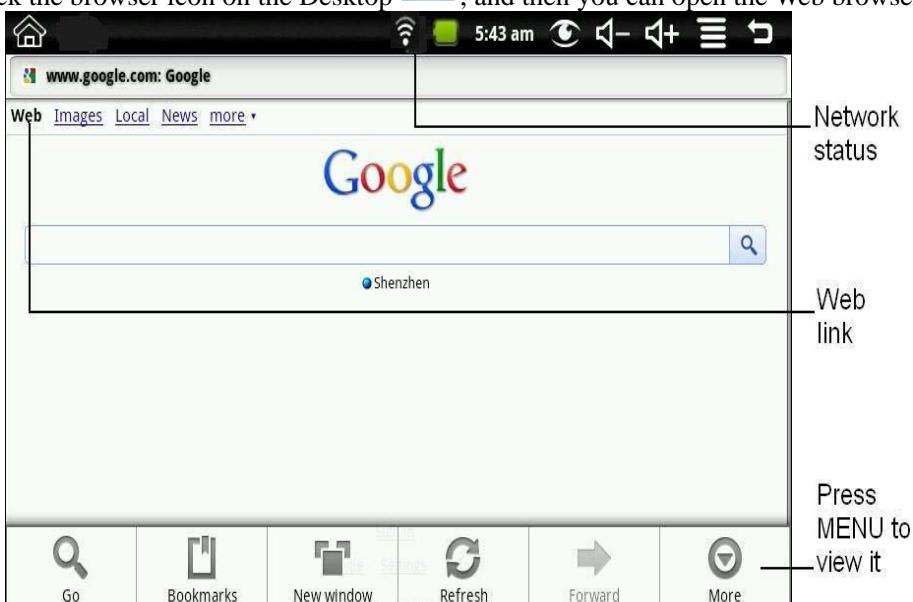

16 CALENDAR



Tap the **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.

Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.
2. Tap on the event time, → tap in each entry field to enter the desired event information.
3. Tap **Done**.
4. Tap  to select desired **Calendar** screen.

★ *Dates with green bars indicate scheduled events.*



17 CAMERA



Tap the **Camera** application icon.

Menu Function

1. Long press **Back** button to pop-up the menu list, including: Switch to video/Switch to camera and My Photo/My Video.
2. In **Camera**, tap **My Photo** can enter it to scan the picture.
3. In Camcorder, tap **My Video** can enter the list of the video.

Take Pictures



1. In **Camera** → tap  to take the picture.
2. The picture will be saved.



3. Tap the picture thumbnail  to enter **My Photo** to scan the picture.
4. Press **Back** to the **Camera**.



5. Tap  to exit the **Camera** and back to the **Desktop**.

Take Videos



1. Tap  switch to video, and you can take videos.



2. Tap  to begin and tap  to stop.
3. The video will be saved.

- 4. Tap the video thumbnail  to play the video.
- 5. Press **Back** to the **Camera**.
- 6. Tap  switch back to camera.
- 7. Tap  to exit the **Camera** and back to the **Desktop**.

Note: You can tap  to choose to save the files in the Localdisk or the SD card.



18 CALCULATOR

- 1. Tap the  Calculator application icon.
- 2. Tap the numbers and sign of operation to do the calculation.
- 3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



19 EMAIL

★ *POP3 and SMTP accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

- 1. Tap the  **Email** application icon.
- 2. On the **Your Accounts** screen, tap **Next**.
- 3. Tap in the **Email** address entry field, → enter your email address.
- 4. Tap in the **Password** entry field, → enter your email password.
- 5. Tap **Done**.
- 6. **Manual Setup (optional):** The server settings are automatically populated based on your email account provider (*i.e.*, *gmail.com*, *etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
- 7. Tap **Next**.
- 8. Optional: Enter a name for the account.
- 9. Enter name for outgoing message, → tap **Done**.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox



1. Tap the Email application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap **Send** to send immediately, **Save as draft** to save without send or **Discard** to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

Compose New Email Message



1. On the **Inbox** screen, tap → **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, tap → **Add Cc/Bcc**, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, tap → **Add Attachment** to attach a file.
7. When ready to send the email, tap → **Send**.

Edit Email Account



1. Tap the Email application icon.
2. On the **Inbox** screen, tap → **Account settings**.
3. Set your desired preferences to customize your email account.
4. Tap to return to the **Inbox** screen.

Delete Email Accounts

★ If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.



1. Tap the Email application icon.
2. On the **Inbox** screen, tap → **Accounts**.

3. Touch & hold on the account you want to delete.
4. In the pop-up **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
2. On the Inbox screen, tap  → **Account Settings**.
3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



20 FILE BROWSER



Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Local disk (Internal memory)



Your SD card



U-disk/USB flash drive (using the included transfer box)



Transfer Box



USB interface—connect the U disk



Display precious folder



Create a new folder



Allows you to multi-select items

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device or directly

use an USB cable to connect the device and the computer and then copy files.

- ★ *The internal device storage is titled "LocalDisk", a memory card "sdcard", and a USB storage device is titled "udisk".*
- ★ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*



1. Tap the or to display the contents of your storage device.
2. Tap and hold in the folder/file you want to copy, → tap **Copy**.
3. Tap on the Internal Memory, → tap on the folder into which you want to copy the file, → tap **Paste**.

Delete files

Tap and hold on the folder/file you want to delete, → tap **Delete** → **OK** to confirm the deletion.



21 MY MUSIC

★ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music



1. Tap the **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favourites/User Defined Playlists to play it.
3. To stop the music, tap the **Pause** icon.
4. To leave the music playing and return to previous screens, tap or tap to return to the **Desktop** screen.

Tap the photo on the left corner can enter the Music Player interface. It shows like:



At this interface, you can do: view the lyrics, play / pause, switch to the previous / next, added to favorites, loop and random operation etc.

The Operation with Music and Playlist

Add playlist

1. Tap the User Defined Playlists **Add New Playlist**.
2. Input the playlist name.
3. Tap **Add**.

Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename** or **Delete**.

Add music

1. Tap and hold in the music you want to add, → tap .
2. Click the following item to add music in it (if you don't want to add, tap Cancel).

Delete music

Tap and hold in the music you want to delete, → tap .

MultiSelect

Tap and hold in one music can do multiselect, tap to select all or clear all.



22 MY VIDEO

★ *Video file formats supported: MPEG1/2/4, MJPG, H263, H264. In addition to H264 which is supported by (720x 480) resolution,*

the other video formats are supported (1280x720) resolution.

Play Video



1. Tap the **My Video** application icon.
2. Select a video file from All/ Directories/My Favourites/User Defined Playlists to play it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** or

The Operation with Video and Playlist

Add playlist

1. Tap the User Defined Playlists
2. Input the playlist name.
3. Tap Add.

Rename or Delete playlist

Tap and hold in the playlist, → tap **Rename or Delete**.

Add video

1. Tap and hold in the video you want to add, → tap **Add**.
2. Click the following item to add video in it (if you don't want to add, tap Cancel).

Delete video

Tap and hold in the video you want to delete, → tap **Delete**.



23 MY PHOTO

★ *Photo file formats support: JPG, JPEG, BMP, and PNG.*



1. Tap the **My Photo** application icon, → tap on a photo group.
2. To view individual photo, tap on the desired photo.
3. Tap Back button to return to the photo gallery screen.
4. Tap
 to make slideshow. There is Normal play, Reminiscently, Activity, Romantic, Tranquil and Fresh.5. Tap
 to make the picture sort by color.6. Tap
 to make the picture sort by time.7. Tap
 to make the picture sort by name.

After entering a group of photos, tap and hold on a picture to enter multiple selections state. In the multiple selection state you can delete photos, and do dynamical switching wallpaper setting.

1.  — Multiselect.
2.  — Delete.
3.  — Dynamical switching wallpaper setting.

Doodle

In **My Photo** you can do doodle.



Click the icon  to enter doodle interface. You can select different doodle operations, including: word balloons, titles, stickers and brush.



24 CONTACTS

You can create an address book of your personal contacts, including personal notes as desired.

Add New Contacts

1. Tap the  **Contacts** application icon.
2. Tap  → **New Contact**.
3. Tap in the name fields to enter the contact's first & last name.
4. Tap  at the right of options to reveal additional choices.
5. Tap on the option name to reveal choices.
6. Tap in the option entry fields to enter the contact's information.
7. Tap **Done**.

Add Contact to Favorites

1. In the **Contacts** screen, tap on the desired contact name.
2. Tap  in the upper right corner.
3. Tap  to return to the **Contacts** screen.
4. Tap **Favorites** to view list of favorite contacts.

Edit Contacts

1. In the **Contacts** screen, tap on the desired contact name you want to edit.
2. Tap  → **Edit Contact**.

3. Make desired changes, → tap **Done**.

Delete Contacts

1. In the **Contacts** screen, touch & hold on the contact, → tap **Delete contact**.
OR

In the **Contacts** screen, tap on the contact you want to delete, tap  → **Delete Contact**.

2. Tap **OK** to confirm the deletion.



25 PICTURE CAPTURE

You can capture a screen image by tapping  at any time.



Tap the  **Picture Capture** application icon to set options for a screen capture.

- Select a delay timer to automatically capture the screen in desired number of seconds.
- Select the default storage device for saving your images.



After the images are saved, they can be viewed through  **My Photo** application.



26 PK MANAGER

Use PK Manager to manager applications and widgets.

Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.



1. Tap the  **PK Manager** application icon. The list of applications that are running is displayed.
2. Tap on an application you want to stop, → tap **Force stop**.

Uninstall Applications



1. Tap the  **PK Manager** application icon. The list of applications that are running is displayed.
2. Tap  , → tap **Third Party** or **All** to list more applications.
3. Tap on an application you want to uninstall, → tap **Uninstall**.

4. Tap **OK** to confirm uninstall.



27 YouTube



1. Tap the **YouTube** application icon to view *YouTube.com* videos.
2. Tap on a video to launch it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** to return to the **YouTube** screen.



28 TUDOU



1. Tap the **Tudou** application icon to view *Tudou.com* videos.
2. Tap on a video to launch it.
3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
4. Tap **Back button** to return to the **Tudou** screen.



29 Wi-Fi Settings



Tap **Wi-Fi Settings** application icon.

1. Select the box behind to open Wi-Fi;
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the status bar appears.



30 3G Settings

First of all you need to buy 3G wireless network card according to China Telecom, China Mobile or China Unicom. The currently supported on the 3G card type please refer to Appendix.

We strongly recommend on buy the 3G Network Cards, in order to ensure normal 3G Internet access. Please come to the prepaid card into the purchase of 3G Network Cards, and then insert the adapter cards 3G on the box. At this time it will be bright lights on the 3G network card, which indicated that it could begin to connect the 3G network.



Tap **3G Settings** application icon.

Tap “**Add 3G network**”:

Name: In the popup dialog box, name field enter the name you want free you can.

Device: If you use this manual in the format described in China Unicom's 3G network cards and device column to the default settings, you do not need to select other items; When you use the manual as described in the 3G standard of China Telecom on the card, the device should be chosen CDMA2000(Bora9380/AWIT-U8); When you use the manual as described in the 3G standard of China Mobile on the card, the device should be chosen TD-CDMA(TD368) Modem.

Device number and APN: Please fill in the information provided by carriers. (As in China: If you use China Unicom and China Mobile's 3G network card, device number field need to fill in “*99#”, APN need to fill in the “cmnet”; if China Telecom formats 3G on the card, device number need to fill in the column “T#777”, APN do not need to fill in the name of column.)

User and Password: If you use the standard of China Unicom and China Mobile's 3G network card, user and password fields are free to fill or not fill; if you use the standard of China Telecom's 3G network card, user and password fields, please request to China Telecom.



Fill then click the link, and you will see the screen above the status bar 3G symbol appears, indicating the completion of 3G is connected, and then you can get online.



31 ADSL Settings



Tap **ADSL Settings** application icon.

Input name and password then click connect to access the broadband network.



32 Ethernet

Make the transfer box connected to the USB switch interface of the devices, and then plug the network cable into the Ethernet port of the transfer box, in the upper right corner of the screen appears "ETH".

 


Tap **Ethernet** application icon.

The device can automatically access network IP address connection. And you can choose manual setup IP address to get a connection.



33 SETTINGS

Wireless & networks	Wi-Fi	Turn on Wi-Fi.
	Wi-Fi Settings	Set up & manage wireless access points.
	Airplane mode	Disable all wireless connections.
	3G network settings	Set up 3G network.
Ethernet		Configure Ethernet.
Pppoe settings		Do ADSL settings. Input user name and password to connect.
USB	Mass storage	Configure USB to mass storage.
	ADB	Configure USB to ADB.
Sound	Silent mode	Silence all sounds except media & alarms.
	volume	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap OK .
	Notification ringtone	Select desired ringtone sound.
	Audible selection	Select to enable a sound when making a screen selection.
	Screen lock sounds	Play sounds when locking and unlocking the screen.
Display	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Auto-rotate screen	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	Screen timeout	Adjust the delay before the screen automatically turns off.
	Suspend timeout	Adjust the delay before the device automatically suspend after the screen turn off.
Security	Set up screen lock	Lock screen with a pattern, PIN, or password.

	Visible passwords	Show password as you type.
	Select device administrators	Add or remove device administrators.
	Use secure credential	Allow applications to access secure certificates and other credentials.
	Install from SD card	Install encrypted certificates from SD card.
	Set password	Set or change the credential storage password.
	Clear storage	Clear credential storage of all contents and rest its password.
Applications	Unknown sources	Allow installation of non-Market applications.
	Manage applications	Manage and remove installed applications.
	Running services	View and control currently running services.
	Development	Set options for application development.
Privacy	Factory data reset	<p>Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap Reset Device to proceed with reset, or tap  to cancel and return to previous screen.</p> <p>WARNING! The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> ~ Google account ~ System and application data and settings ~ Downloaded applications <p>The factory reset will NOT erased:</p> <ul style="list-style-type: none"> ~ Current system software and bundled applications ~ SD card files, such as music or photos
SD card , U-disk & device storage	Total space, Available space	It values appears when a SD card/U-disk is inserted in device.
	Unmount SD card/U-disk	When the SD card/U-disk is inserted, tap it to safely remove the SD card/U-disk.
	Format SD card/U-disk	N/A for this device.
Language & keyboard	Select language	Select the language and region according to your location.
	Android keyboard	Onscreen keyboard settings.
	User dictionary	You can add words to a personal dictionary, words that may not be included in the default dictionary.
Date & time	Set date	Set the date.
	Select time zone	Select the time zone.
	Set time	Set the time.
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About device		View Status (Battery, Wi-Fi, etc), Battery use, Legal

		information, Model number, Android version, Kernel version and Build number.
Touchpanel calibration		Calibrate the touch screen.

Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: 2.2

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device does not charge via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: MPEG1/2/4、MJPEG、H263、H264. In addition to H264 which is supported by (720 × 480) resolution, the other video formats are supported (1280 × 720) resolution.

Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Battery Management

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

 *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as:



A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.

- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Clean your Device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

Appendix: The Optional parts and models

Parts name	Parts type	
3G Wireless Network Card	TD-CDMA	TD368
	WCDMA	HUAWEI E220
		HUAWEI E230
		HUAWEI E160X
		HUAWEI E169G
		HUAWEI E1750
		Alcatel X060S
	CDMA2000	Alcatel X200
		Bora 9380
		AWIT-U8

FCC STATEMENT**1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.