



KeyZone KZV-290 Vault Installation Guide

Document number RSI290-09-00567



KeyZone KZV-290 Vault Installation Guide

Document Number: RSI290-09-00567

KeyZone is a trademark of TeraHop Networks, Inc.

TeraHop Networks is a trademark of TeraHop Networks, Inc.

Revision History**Revision Number Date**

Copyright © August 21, 2006
TeraHop Networks™, Inc.
All rights reserved.
1225 Old Alpharetta Rd., Suite 210
Alpharetta GA 30005 www.TeraHop.com

1.0 Introduction

The purpose of this guide is to provide installation instructions for the KeyZone Vault.

2.0 FCC Rules Compliance

This equipment complies with Part 15 of the FCC rules. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

3.0 Warnings and Cautions



WARNINGS

If the vehicle is going to be driven, remove the Vault from the vehicle window. Failure to do so may result in damages to the Vault or the vehicle.

When using the remote to open a vault, stand so that your body is at least 20 centimeters (8 inches) away from the vault and the remote. Failure to use this device as described will result in a failure to comply with FCC rules for radio frequency (RF) exposure and is discouraged.

4.0 Installation Procedures

Follow the process presented below to install the Vault on a vehicle. It is recommended that you install the Vault on the driver's side window.

1. Lower the window on which the Vault will be mounted. See Figure 1.

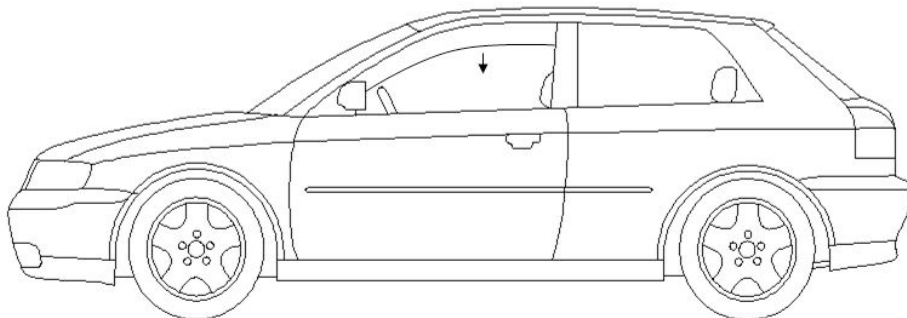


Figure 1

2. Hang the Vault outside of the window from its hanging clip. See Figure 2.

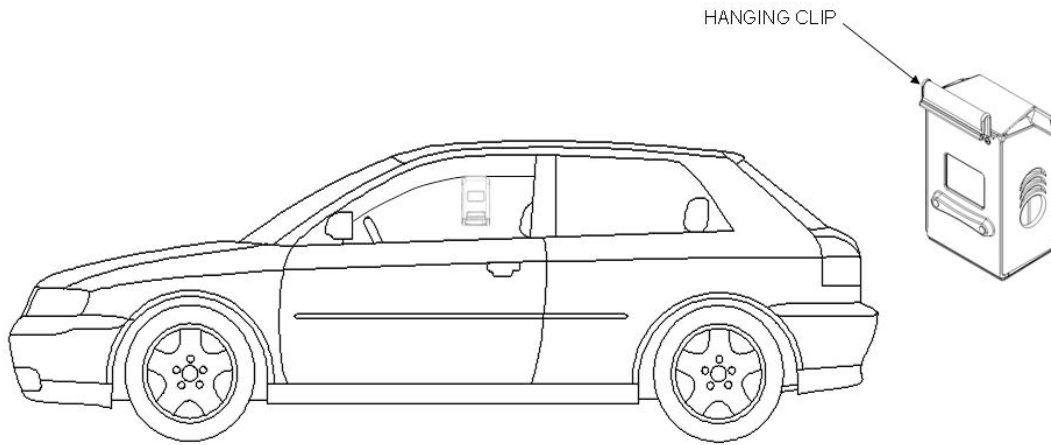


Figure 2

3. Raise the window so that it is fully closed. See Figure 3.

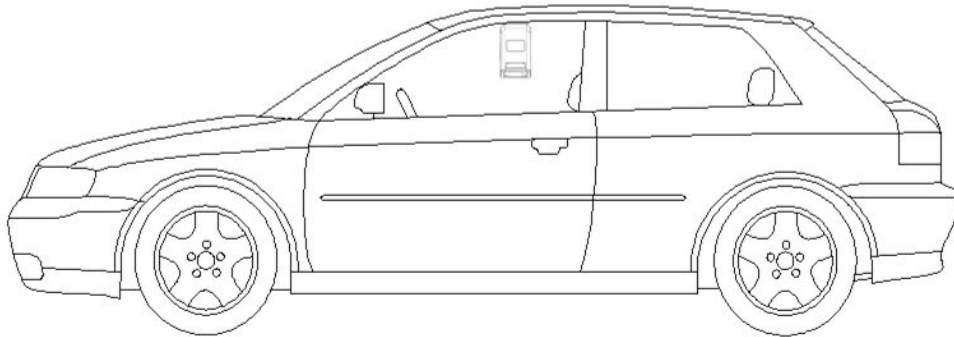


Figure 3