

ML-21 TX FUNCTION

- 1 Insert the 12V battery into the box door.
- 2 Press the “red” button at the top of TX ,the RX will act accordingly after receipt of commands from TX..

ML-21 SPEC

POWER SUPPLY	DC12V
FREQUENCY	315MHZ+ - 75KHZ
STANDBY CURRENT	0 MA
OPERATING CURRENT	12MA
TRANSMITTING POWER	LESS –3DBM