

# RF-4B TX

## FUNCTION

- 1 Insert the 12V battery into the box door.
- 2 Press the button "L" at the top left of TX ,the RX will act accordingly after receipt of commands from TX.And suchlike for other buttons.

## RF-4B SPEC

POWER SUPPLY	DC12V
FREQUENCY	433.92MHZ+-75KHZ
STANDBY CURRENT	0 MA
OPERATING CURRENT	10.8MA
TRANSMITTING POWER	LESS -3DBM

李作全 2005/3/3  
胡瑞章 3.05