

Push left lever to move right
Push right lever to move left
Press top left button to raise/lower excavator arm

Do not leave vehicle or controller outside overnight. Dampness is harmful

