

FROSTBITE THE ICE GRIFFIN

 
REMOTE CONTROL MYTHICAL CREATURE

Thank you for your purchase of the Discovery Ice Griffin Remote Control Creature! Have fun with a Griffin you control. Be sure to use this product in a safe, traffic free environment. Please read all instructions and warnings on this sheet prior to use. Keep this instruction sheet as it contains important information for future reference.

CONTENTS

- 1 Ice Griffin
- 1 Remote Control
- 2 Wings
- 1 Dispensing Kettle

FEATURES

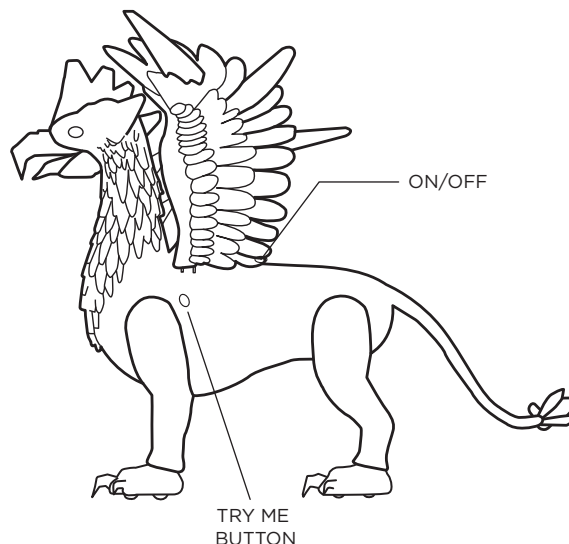


BATTERY INSTALLATION

The Ice Griffin uses 4 AAA 1.5V (included) alkaline batteries and the Remote Control uses 2 AAA 1.5V (not included) alkaline batteries. You will need to use a Phillips or Cross screwdriver to open the battery compartments.



ICE GRIFFIN

 - Remove demo batteries and install new alkaline batteries.
- Remove the battery cover on the Griffin's belly.
- Insert batteries according to the diagram inside the battery compartment.
- Replace the battery cover.



REMOTE CONTROL

  - Remove the battery cover on the back of the remote control.
- Insert batteries according to the diagram inside the battery compartment.
- Replace the battery cover.

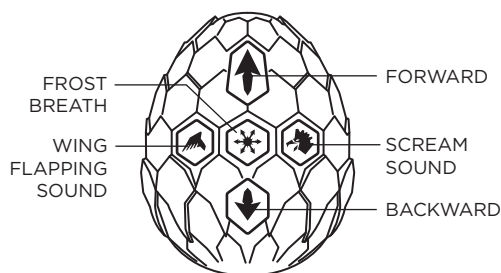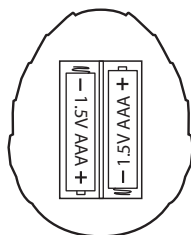


DISPENSING KETTLE

SPRAY INSTRUCTIONS

Before spraying, use a dispensing kettle to add water to the water inlet.

ADD WATER METHOD:

 
1. The water added to the kettle must be clear water.
2. When filling the water, squeeze the body by hand, align the mouth of the pot with the water source, and slowly reduce the pressing force until the water tank is full of kettle.

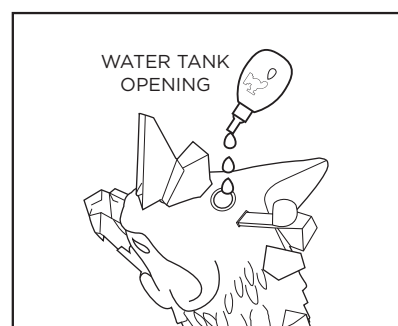

WARNING: When the griffin does not spray, the water level is insufficient.

TO PLAY

 - Power griffin on first before powering on remote.
- LED eyes will be fading in and out. Once paired successfully, the eyes will be on.
- Press the forward arrow for griffin to walk forward.
- Press the back arrow for griffin to walk backward.
- Press the scream sound button to make the griffin “smoke”.

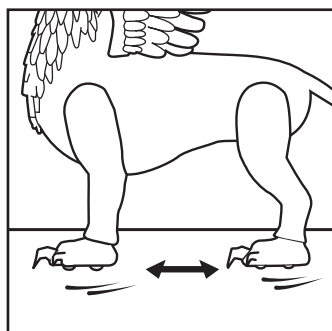


Forward/Backward




Wings Flap

 WING INSTALLATION

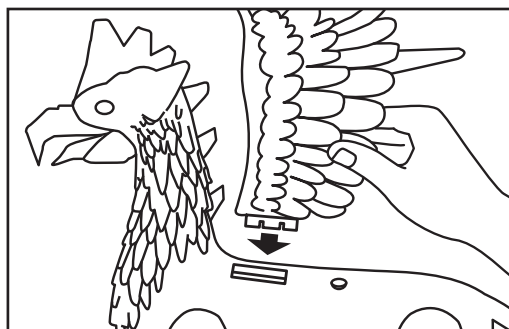

Sound Effects

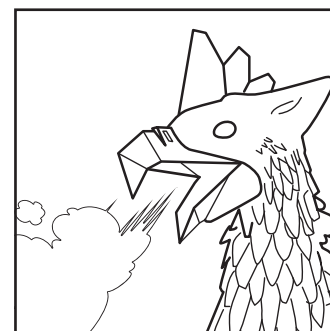 

Vapor Spray

SAFETY WARNINGS: PLEASE READ BEFORE USE

- Never aim or shoot the remote at other people.
- Adult supervision required.

WARNING:

- Inspect the product before every use. If the product appears damaged in any manner, discontinue use and discard immediately.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep this package for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

