
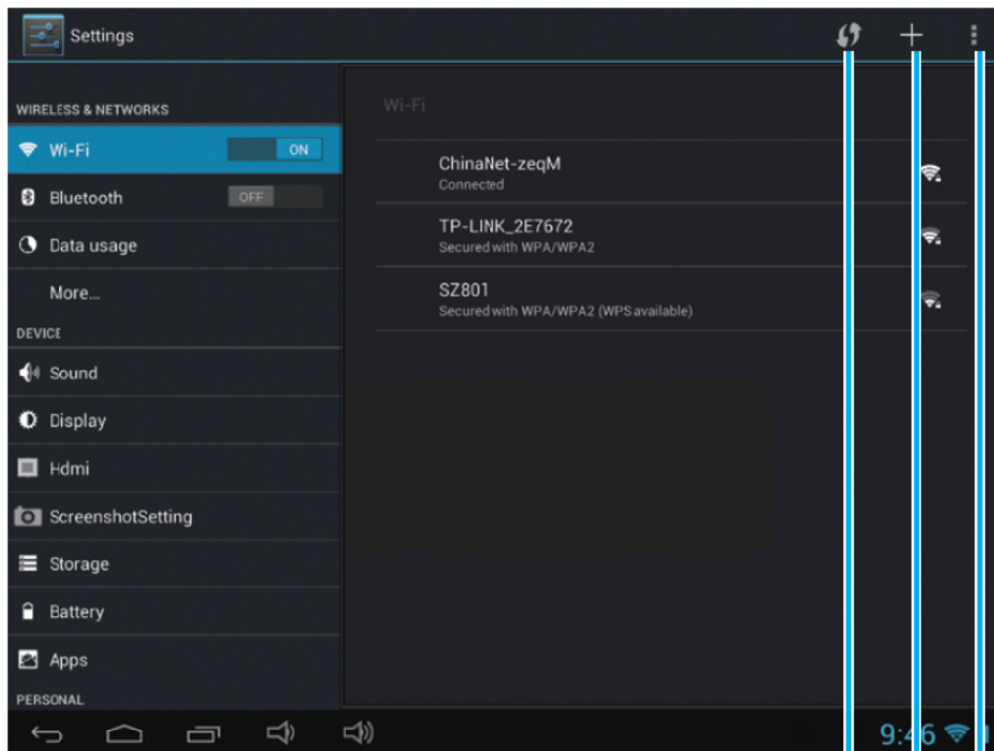 


# Wi-Fi CONNECTION

Before creating the Wi-Fi connection, please ensure that your WLAN network has been configured correctly.

- 1 Tap the  on the main screen or in the Apps menu to enter the settings menu.
- 2 Tap to select Wi-Fi item and switch it to **ON**. The unit will scan the available networks automatically.
- 3 Tap the desired network, and input the password if necessary. Then tap **Connect**.



 
- Tap to activate WLAN protected setup
- Tap to add a network with Network SSID
- Tap to view more information about Wi-Fi

# ANDROID MARKET

You can use your Google account to download various Apps from the Android Market. Set up your own account first to access the Android Market.

**1** Tap the  in the Apps menu.


**2** Add a Google account to the unit.

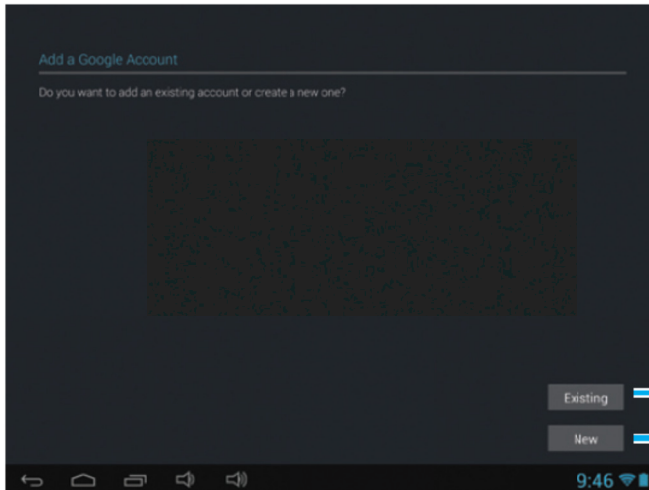

Tap to sign in if you have an account before

Tap to create a new account

 
**3** After signing in, you can download your desired Apps from the Android Market.

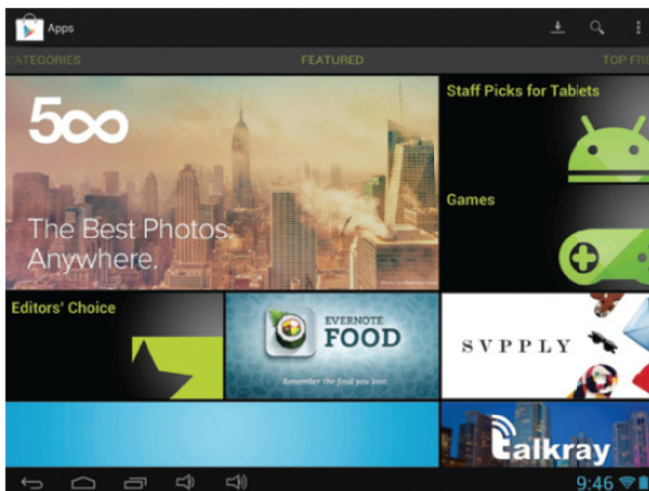


**Tip:**  
Because some Apps are not free, you need to pay for them via your credit card for downloading.

# SETTINGS

 In the Settings menu, you can configure the unit, set app options, add accounts, and set other preferences.

- 1 Tap the  on the main screen or in the Apps menu to enter the settings menu.

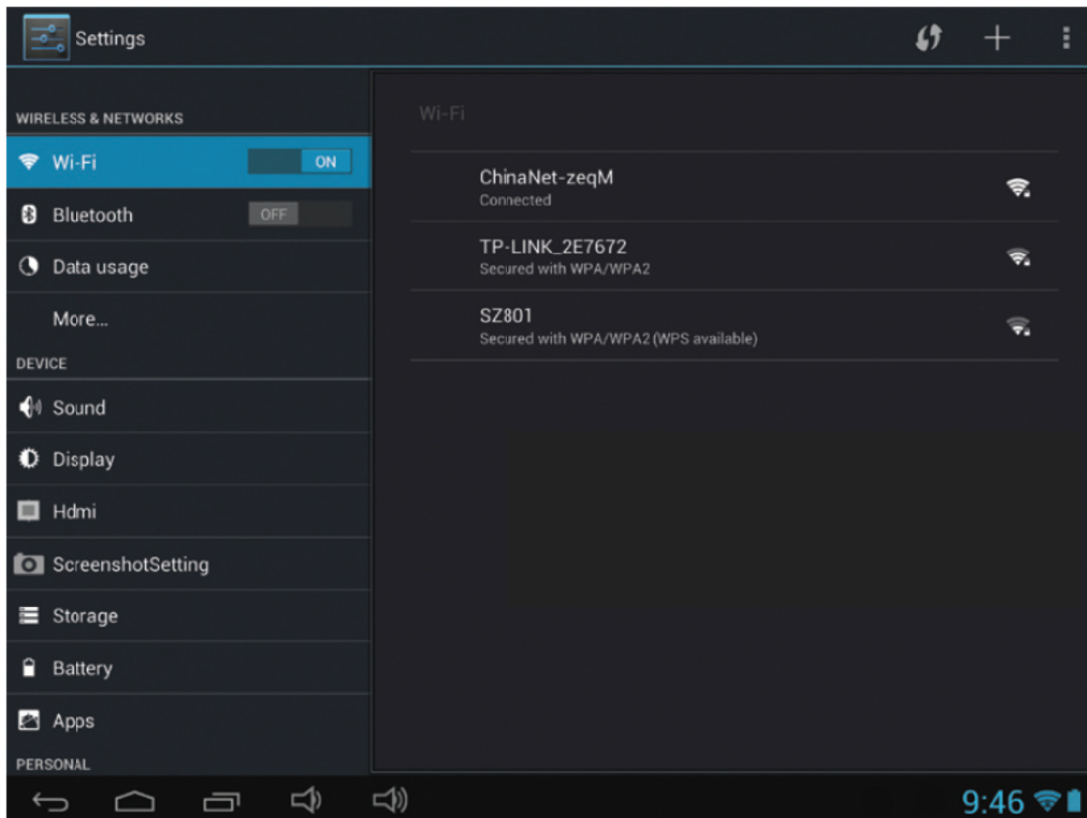

- 2 Tap and select an option and configure it according to the screen prompts.

# TROUBLESHOOTING

Check this list for a possible troubleshooting solution.

---

## Cannot power on

- Check the battery power if it is too low.
- Connect the adaptor and power on again.

---

## After powering on, the screen starts blinking and power off suddenly

- Battery power is low, please charge in time.

---

## No sound output

- Check the volume setting, and adjust the volume level by tapping Volume+/- buttons.
- Check if the audio file is damaged; try to choose another audio to play.


---

## Cannot copy files or play audio files

- Check if the connection is available.
- Check if the unit has enough storage memory.

---

## System has errors

- Power off the unit and then power on again by holding and pressing the  (Power) button.
  - Restore the system to factory default.
-

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

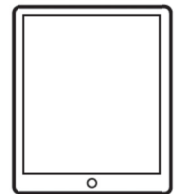



For more products please visit: [www.tabletexpress.com](http://www.tabletexpress.com)

Customer Service: [cs@tabletexpress.com](mailto:cs@tabletexpress.com)