


2166 UHF RFID READER LABELS

LABEL CONTENT

The ID label contains the reader serial number, the reader part number, the date of manufacture, the country of manufacture and the relevant regulatory information and symbols. The Laser Warning Label contains the warning symbol and the warning text in English, German and French Languages. A preview of the label set content is shown below:

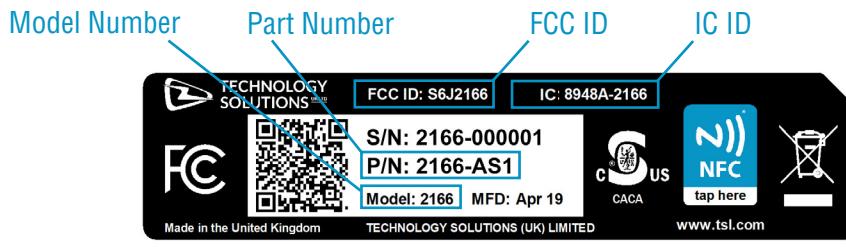

ID Label



Laser Warning Label

LOCATION OF THE ID LABEL

The ID label is located on the underside of the 2166 UHF Reader.



ID Label can be found
on the base of the
2166 UHF Reader



ID Label location