
EUT Position



EUT Position: X-axis




EUT Position: Y-axis




EUT Position: Z-axis

Test Setup Photo of Radiated Measurement (Below 30MHz)

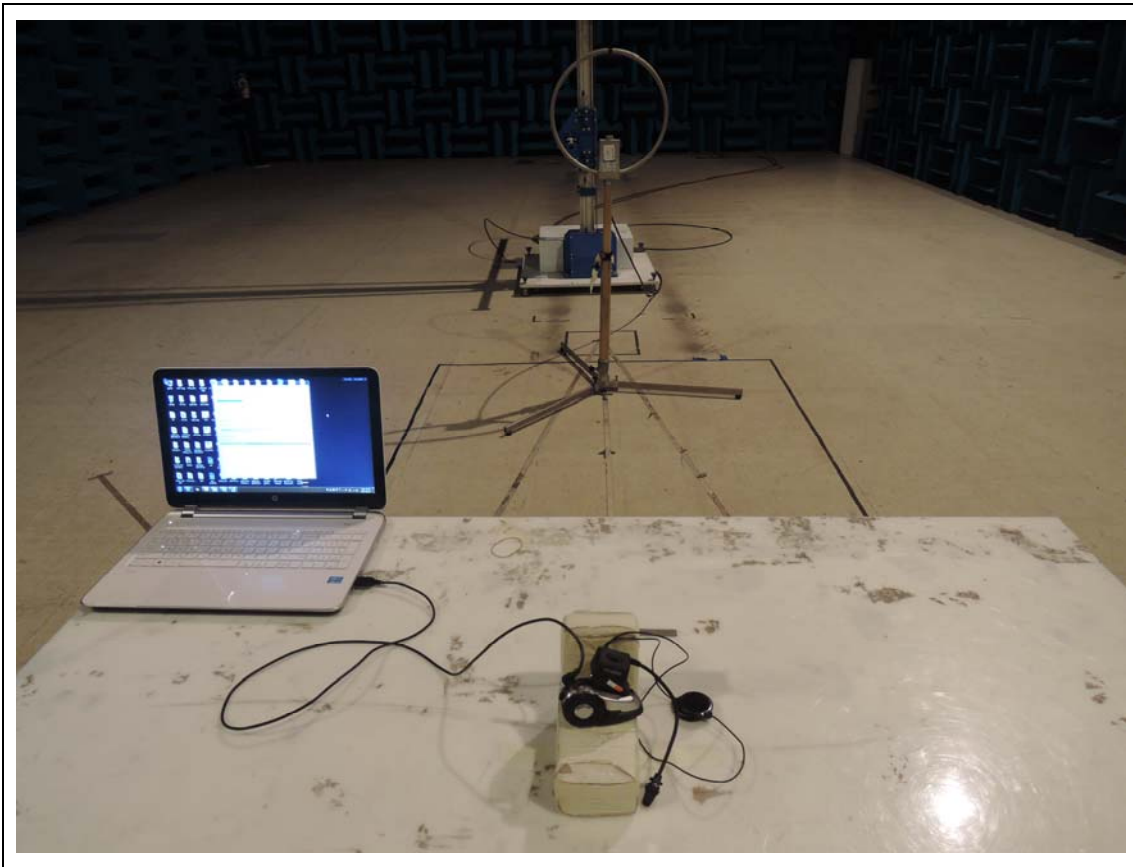

Test Setup Photo of Radiated Measurement (Below 1GHz)

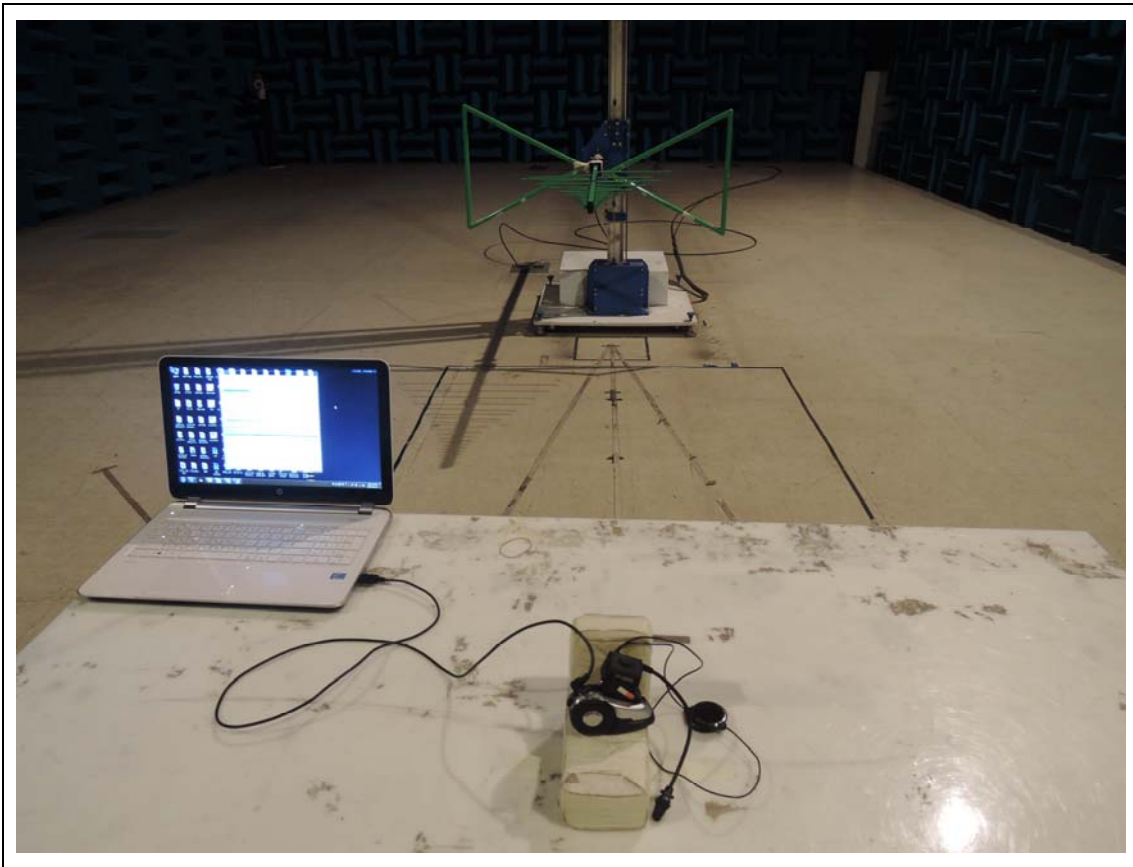

Test Setup Photo of Radiated Measurement (Above 1GHz)

