

## R1 EVO CAM

### R1 EVO CAM



### **Charging**

Red LED: Charging

Blue LED: Fully charged

### **Power On/Off**


(+) Button + Center Button for 1 sec

### **Volume Adjustment**

(+) Button - Increase the volume

(-) Button - Decrease the volume

## **Battery Check**

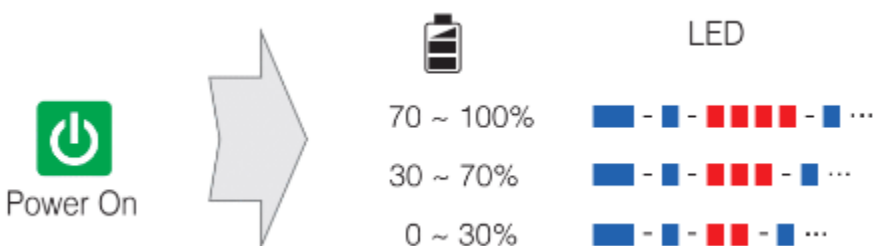

## **Camera**

### **1. Power On**

Press and Hold the Camera Button for 1 second

### **2. Power Off**

Press and Hold the Camera Button for 3 seconds

### **3. Start/Stop Recording**

Press and Hold the Camera Button for 1 second

## **Phone, Music Pairing**

1. Press the Center Button for 10 seconds.
2. Press the (+) Button to enter into Phone Pairing
3. Search for Bluetooth devices on your mobile phone. Select the SF4 in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.

## **Music Operation**

Play or pause music: Press the Center Button for 1 second.

Track back: Press the (-) Button for 1 second.

Track forward: Press the (+) Button for 1 second.

## **Mobile Phone Call Making and Answering**

Answering a call: Tap the Center Button

Ending a call: Press the Center Button for 2 seconds.

Voice dial: Press the Center Button for 3 seconds.

Speed dial: Press the (+) Button for 3 seconds.

Rejecting a call: Press the Center Button for 2 seconds.

## **Intercom Pairing**

1. Press and hold the Center Button of two headsets for 5 seconds until red LEDs of both units start to flash rapidly.
2. Simply tap the Center Button of any one of the two headsets.

## **Intercom Start/End**

1st Friend: Tap the Center Button once.

2nd Friend: Tap the Center Button twice.

3rd Friend: Tap the Center Button triple times

## **Radio On/Off**

Turn on the FM radio: Press the (-) Button for 1 second.

Turn off the FM radio: Press the (-) Button for 1 second.

## **Radio Scan Up FM Band**

Start scanning: Press (+) Button for 1 second.

Stop scanning: Press (+) Button for 1 second.

### **Save presets while scanning**

Save presets: Tap the Center Button

## **Radio Move to Preset Station**

Move to next preset: Press the Center Button for 1 second (1 → 2 → ... → 10)

## **Radio Seek Stations**

Seek up stations: Double tap the (+) Button.

Seek down stations: Double tap the (-) Button.

## **Setting**

**Configuration Menu:** Press the Center Button for 10 seconds.


## **Troubleshooting**

### **Factory Reset**

If you want to restore the R1 Pro to factory default settings, use the Factory Reset in the configuration menu. The headset automatically restores the default settings and turns off.

### **Fault Reset**

If the R1 Pro is not working properly for any reason, reset by gently pushing the pin-hole reset button on the back of the main unit.

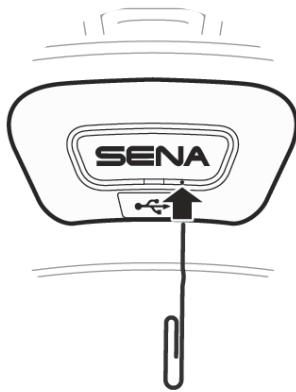

mode	Frequency Range (MHz)	Max. Output Power(dBm)
WiFi	2412~2462	1.13
	5745~5825	0.94

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Caution:

English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

French:

L' émetteur/r écepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes :

1. L' appareil ne doit pas produire de brouillage;
2. L' appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.