

MODEL NO.: W-GL702

**PORTABLE CASSETTE RADIO
PLAYER**

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE
OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR
FUTURE REFERENCE.**

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The Caution Marking is located at the bottom enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Cleaning-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care-quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the



provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Unplug this apparatus during lightening storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. The product may be mounted to a wall only if recommended by the manufacturer.
19. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
20. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
21. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
22. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.

SAVE THESE INSTRUCTIONS

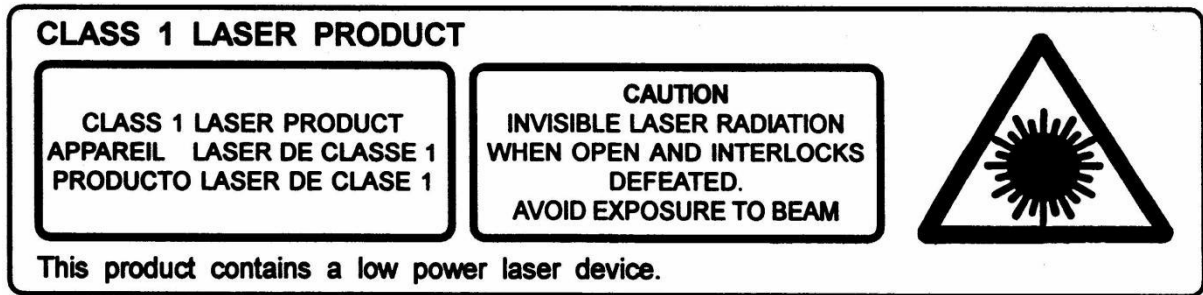

Follow the advice below for safe operations.


ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation.

Should any trouble occur, remove the power source and refer servicing to qualified personnel.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. WARNING: The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
2. WARNING: The mains plug or appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
3.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
4. No naked flame sources, such as lighted candles, should be placed on the apparatus.---
5. Attention should be drawn to environmental aspects of battery disposal.
6. The product is designed to use in moderate climates.
7. minimum distances around the apparatus for sufficient ventilation;
8. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

“FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC’s RF exposure guidelines, place the product at least 20cm from nearby persons.”

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Basic function: TAPE / FM / AM / BT / AUX IN/ USB / SD / CLOCK / HEADPHONE

- 1) The Function Button at the top of the fuselage on the right side, we can switch the TAPE-RADIO-BT-USB/SD function.
- 2) The Band Button at the top of the fuselage on the right side, we can switch the AM-FM-FM.ST function.

Button function description

Button	Standby /Power on mode	TAPE	FM/AM	BT	AUX IN	USB/SD
ADJ	Time setting					
HOUR	Clock- Hour setting					
MIN	Clock- Minute setting					
STANDY	Short press the switch on/off	Short press the switch on/off	Short press the switch on/off	Short press the switch on/off	Short press the switch on/off	Short press the switch on/off
USB/SD	/	/	/	/	/	Short press to switch the USB/SD function/
SKIP-	/	/	/	PREV	/	PREV
SKIP+	/	/	/	NEXT	/	NEXT
PLAY/PAUSE	/	/	/	Play/Pause	/	Play/Pause

STOP/PAIR/AUX	/	/	/	Short press to switch AUX and BT function/Long press as the pair button	/	Stop
---------------	---	---	---	---	---	------

TIME SETTING

1. Hold on the ADJ button, then press HOUR BUTTON to adjust the hour.
2. Hold on the ADJ button, then press MIN button to adjust the minute.

Rotary knob

1. Tuning knob to manually adjust the radio
2. Volume knob to manually adjust the volume

TAPE

Plug in the power supply, Short press the STANDBY to power on, The function switch is in the TAPE position, the function as below:

1. LED showing the "TAPE"
2. Have playback/Recording/Fast Forward/Fast Reverse /Pause/Stop/Eject Function
3. There is an external record (MIC recording) function

RADIO

The function switch is in the RADIO position, the function as below:

1. The BAND at the AM mode , Turn the TUNING knob to select the radio station.

2. The BAND at the FM mode , Turn the TUNING knob to select the radio station.
3. The BAND at the FM-ST mode, after turn the TUNING knob to select the radio station, FM-ST light will lit up.

BLUETOOTH

The function switch is in the BT position, LED showing the BT, the function as below:

1. The BT light Slow flash is the pair state, the paired connection successful ,the “BT” will long bright;
2. The connection success or disconnect will both have warning tone;
3. After connection success, long press PAIR button to disconnect, the “BT” light will slow flash;
4. Play/Pause :Short press the PLAY/PAUSE button;
5. Select music: Short press SKIP± button.

AUX IN

The function switch is in the AUX position, short press STOP/PAIR/AUX button, LED showing AUX, the function as below:

Insert the external audio signal AUX IN jack

USB/SD

The function switch is in the USB/SD position, LED showing “– – –” , the function as below:

1. STOP button: Press the STOP button will stopping the USB/SD playing.
2. PLAY/PAUSE: In the stopping, press this button will play USB/SD, showing the “001” and playback symbol.
3. SKIP+ Button: Short press the SKIP+ button will skip to next song.

4. **SKIP- Button:** Short press the Skip- button will skip the previous song.
5. **The USB/SD both support MP3/WMA format, the maximum support 32GB.**

Other functions

1. **3.5mm earphone jack**
2. **12V(1.5V*8)UM-1 batteries**
3. **3V(1.5V*2) clock backup battery**
4. **Power light**
5. **The frequency spectrum indicator light.**
6. **Speaker output power:5W*2**