


# USER MANUAL

## Button Description

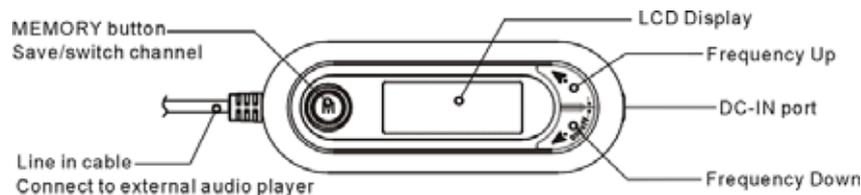

## Basic Operations

1. Open the battery cover on the unit. Install one AAA battery and return the battery cover.
2. Plug the LINE-IN audio cable into your MP3 player or other portable music device.
3. The unit will automatically power on when it detects an input signal. For best results, keep your player set at a medium volume level.

NOTE: Setting your device volume very low may cause the FM Transmitter to turn off, even if the audio player is on. You can press and hold both ▲ and ▼ buttons simultaneously for two seconds to turn on the unit. To turn off the unit, press and hold both buttons simultaneously again for two seconds.

NOTE: To conserve power, the FM Transmitter will automatically turn off when there is no input audio signal for 50 seconds +/- 10 seconds.

4. Tune your car or home stereo radio to a channel with a weak or no broadcast signal.
5. Press the ▲ or ▼ button on the FM Transmitter to select the transmission frequency chosen in step 4 on your car or home stereo. Press and hold either button for fast-forward or backward tuning.
6. To memorize a specific frequency (four stations maximum) for easy selection:
  - a. Select the desired frequency using the ▲ or ▼ buttons.
  - b. Press and hold "M" (memory) button for two seconds, and then release it until the icon "M1" blinks on the display.
  - c. Press the ▲ or ▼ button to select one of the memory slots M1, M2, M3 or M4 for storage. The active memory slot icon will blink.
  - d. Press the "M" button again to store the frequency and return to normal operation mode.
  - e. In operation mode, pressing the "M" button will toggle among the four memory slots to retrieve the memorized frequency.

NOTE: When there is no key press for a duration of a few seconds, the FM Transmitter will automatically memory the selected frequency and return from memory mode to operation mode.

7. Adjust the volume on your MP3 player or other audio source to a medium level.
8. Adjust the volume of your FM radio to the desired listening level.

## Mobile Power Cord Connection for Extra DC Power

To save battery charge, you can optionally use the DC adapter to power the unit. Connect one end of the cable into the DC port located on the right of the FM Transmitter. Plug the other end of the cable into the cigarette lighter port in your car. Once the cable is plugged into the FM Transmitter, the unit will shut off. You will need to manually turn on the unit.

NOTE: This cable will NOT charge the FM Transmitter.

**Tips:**

*For best results, please:*

*Try to keep the FM Transmitter close to the antenna of your FM radio. A distance of 10 feet or less will minimize interference and provide the strongest signal.*

*Keep fresh batteries in the FM Transmitter. When the batteries become very Low, the transmission strength will weaken.*

**FCC WARNING STATEMENT**

**FCC NOTE:**

**THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

*This device complies with Part 15 of the FCC Rules.*

*Operation is subject to the following two conditions:*

- 1. This device may not cause harmful interference, and*
- 2. This device must accept any interference received, including interference that may cause undesired operation.*