
Button Description

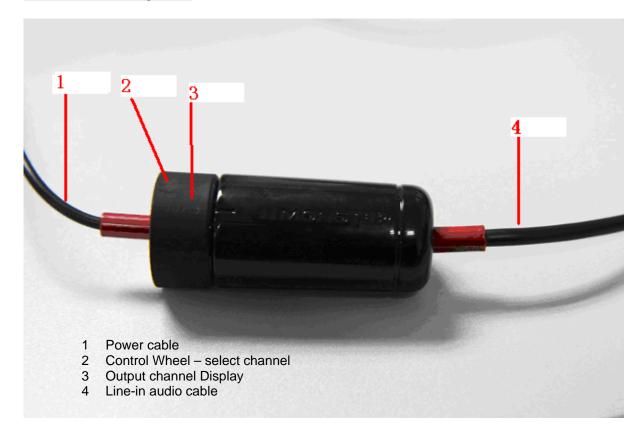

Basic Operations

- 1. Plug the LINE-IN audio cable (4) into the iPod music player.
- 2. Plug the power cable (1) into the cigarette lighter port in your car.
- 3. Turn on the iPod music player and play music files.
- 4. Turn on the FM radio in your card and tune to a channel with a weak or no broadcast signal, and the channel correspond to item 6.
- 5. Turn the Control Wheel(2) of the transmitter to select the preset channel which is the same as the channel you set in step 4. The output channel will display on Out channel Display(3). Music stored in the player will then come out from the FM station.
- 6. The transmitter's output FM channel is below: 88.1M, 88.3M, 88.5M, 88.7M, 107.3M, 107.5M, 107.7M, 107.9M.

FCC WARNING STATEMENT

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.