
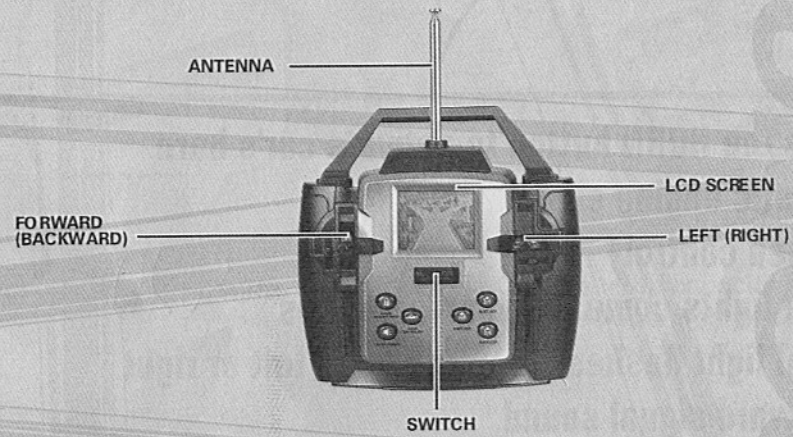
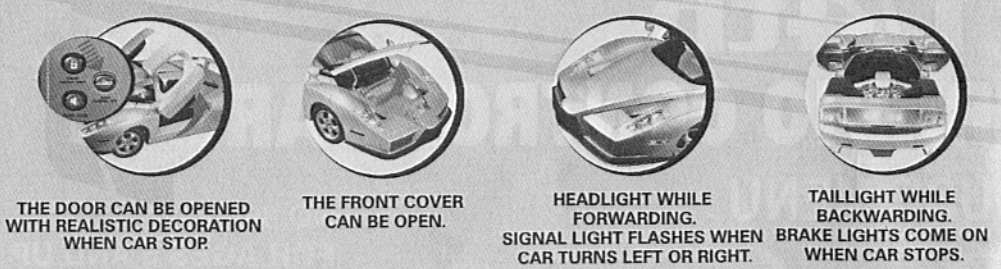



1 FUNCTION SKETCH MAP OF PRODUCT FUNCTION

2 FUNCTION SKETCH MAP OF RADIO CONTROL

- 1.Lock and unlock the car from the remote with one button.
- 2.Signal light flashes when car turns left or right.
- 3.Brake lights come on when car stops.

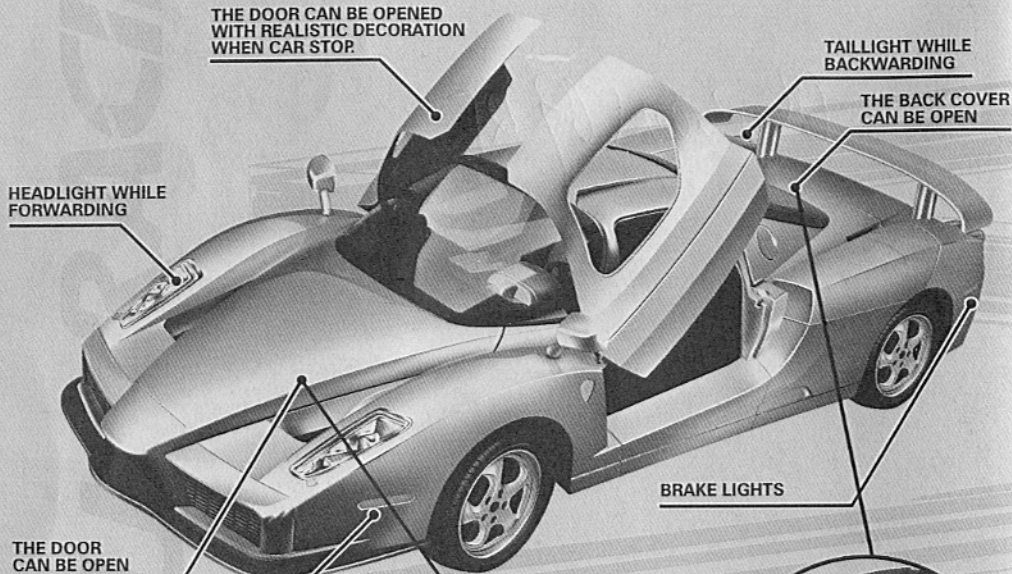

CAR BOTTOM ILLUSTRATION

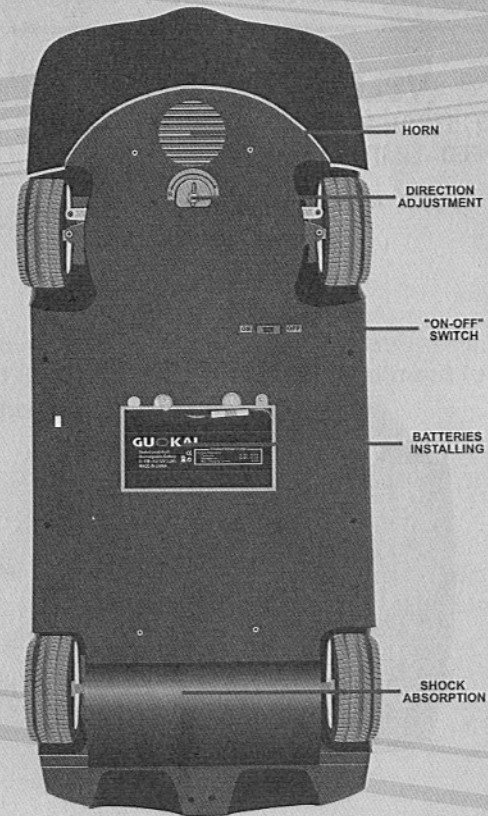

TRY ME

 
- Press the HORN button to activate car's horn
- Realistic engine sound
- 3 speed control
- Brake lights come on when car stops
- Signal light flashes when car turns left or right
- Backward signal sound
- Brake signal sound
- Lock and unlock the car from the remote with one button

STILLNESS & VELOCITY


RUN ON HIGH-SPEED STRAIGHTAWAY WITH
NO SPEED LIMIT!




INSTALL THE RADIO CONTROL BATTERY



Do not use battery with broken wrap.

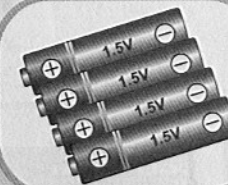

Choose large capacity AA alkaline batteries and high-performance Ni-MH rechargeable batteries.

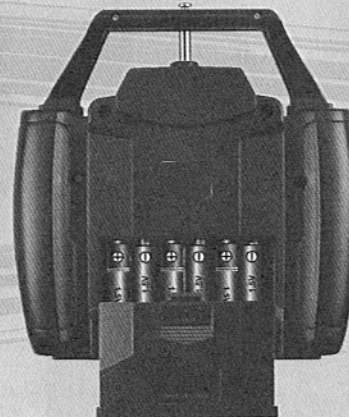

Open the battery cover of the radio control, put in the 1.5V battery 6 pcs according the polarity, then cover it.



Pay attention to the battery installment for the polarity.





Dial the radio control power switch to 'OFF' to close.

INSTALL THE RADIO CONTROL CAR BATTERY




Insert the plug of the charger into the socket according to the diagram, do pay attention the polarity of the battery.

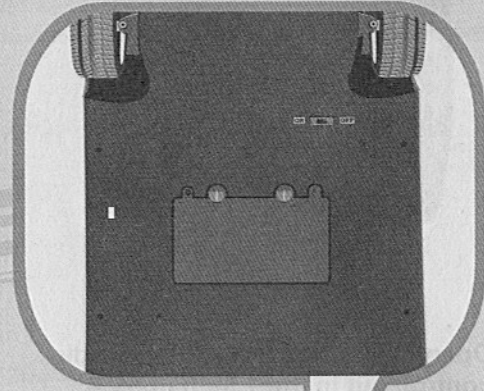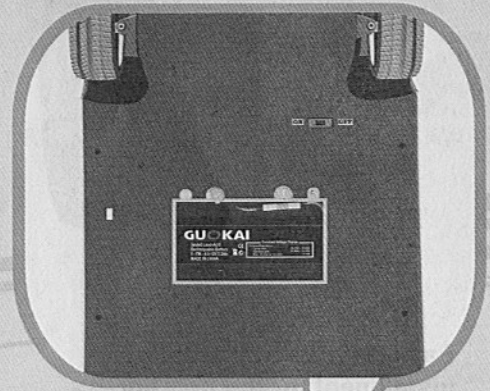

can't continuous open and close the car bottom power switch (only open or close the power and not play), if not, will be appear surd sound, long stridulation etc issue, and must closedown the power switch for 30 second to resume the normal functions.


The battery installment of the car body. Insert the full battery to the correct position of the socket according to the dia gram. And pay attention to the battery's polarity.

Dial the two fixed set on the base to the battery cover when close when close the battery cover, to avoid the batteries falling down & damage when the radio control car playing.

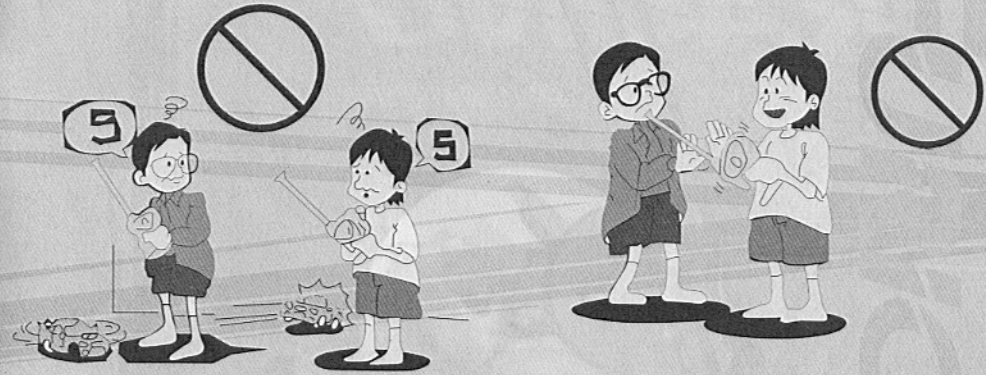

Do not play radio control cars of same frequency in the same area in case of interference and out of control.

Do not fold the antenna at random or point at others in case of injury.

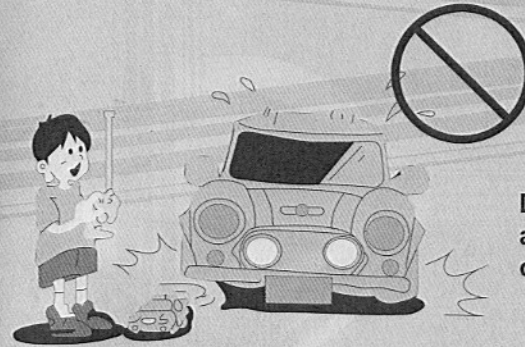

Don't play it on the street or at dangerous piaces in case of accident.



Do not run it where there is sump, ground with fur or string, or dirt ground such as sandlot or mud.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.