

LABEL LOCATION



Labels are located on the underside of the main alarm body and on the power supply