



CDMA 1X Mobile Telephone

HS-C306

User's Manual

CONTENTS

 
Safety information.....	5
Welcome To Your C306	4
Part name and functions.....	4
Performing basic functions	7
Menu Map.....	8
Understanding screen icons	10
1 GETTING STARTED.....	12
Installing your Battery	12
Caring for the battery	13
2 MAKING AND RECEIVING CALLS.....	15
Making a call.....	15
Answering a call	16
Dealing with missed calls	17
Erase All Recent Call List.....	19
Setting up speed dial	19
Supp. Services.....	20
Silencing an incoming call.....	21
Adjusting the volume during a call	21
Locking the keypad.....	22
Emergency numbers.....	23
3 ENTERING LETTERS, NUMBERS, AND SYMBOLS.....	24
Text entry modes.....	24
4 STORING CONTACTS.....	29
Saving a phone number.....	29
Saving email address.....	30
Editing or erasing a contact.....	31

 
Editing a phone number	31
Finding contact information.....	32
Viewing Memory Status.....	33
5 SENDING AND RECEIVING TEXT MESSAGES	
.....	34
Sending text messages	34
Receiving text messages	36
Erasing messages	37
Setting message alerts	38
Sending and editing preformatted messages ..	38
Multisending a message	39
Viewing multisend reports	40
6 CUSTOMIZING YOUR PHONE.....	41
Setting vibration mode	41
Keypad Lock	42
Adjusting volume	42
Alert Type	43
Setting the Ringer Type.....	43
Personalizing the screen.....	44
Setting Alerts.....	46
Creating a secure environment.....	46
7 USING EXTRAS	50
Stopwatch.....	50
Alarm	50
Scheduler.....	51
Calculator	52
8 PLAYING GAMES	54
9 GETTING HELP	56

Customer support	56
10 SAR INFORMATION	57

Welcome To Your C306

Part name and functions

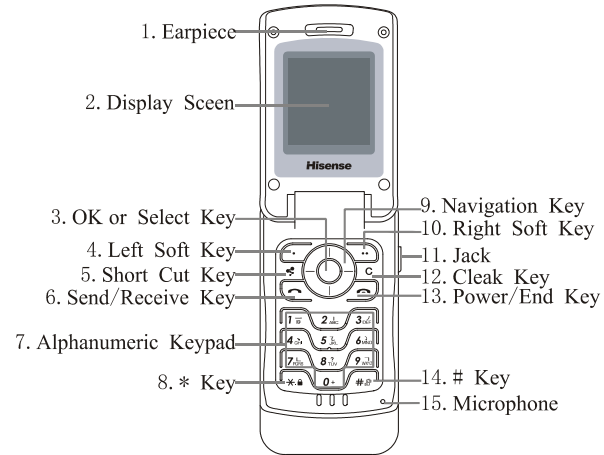

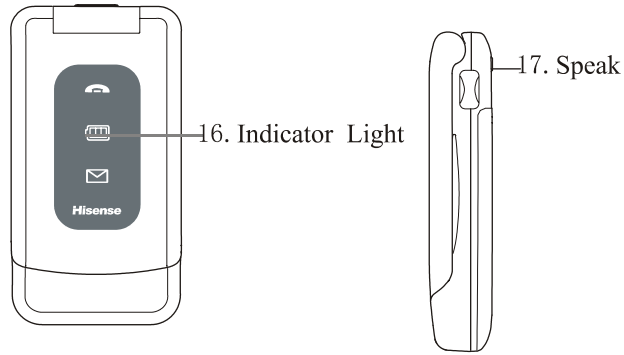

Name	Functions
1.Earpiece	Hear voices here during a talk
2. Display Screen	Display information
3.OK or Select key	From the Home Screen, press to enter Main Menu. Within a menu or a function, press to choose a menu or accept an operation.
4.Left soft keys	From the Home Screen, press to enter Contacts. Within a menu, press to return to previous display.
5.Shortcut Key	Enter some menu directly

6.Send/Receive key	Dials a number or answers a call. Press to view “ Dialed Numbers ” from idle screen.
7.Alphanumeric Keypad	Enter numbers, letters, or symbols. Press 0 key to enter ‘+’ from idle screen
8.* key	From idle screen, press and hold to lock your phone. You need to press 1,2,3,key to lock down.
9. Navigation Key	4-way navigation for scrolling through lists and positioning the cursor. Also accesses Shortcuts from the home screen.
10.Right soft keys	From the Home Screen, press to enter Uni.
11.Jack	for AC adapter (included).
12.Clear key	Erases the last character in text entry, or returns to the previous menu.
13.End/Power key	Press to end a call or return to Home Screen. Press and hold to power phone on/off.
14.# key	Press to enter courtesy

	model from idle screen.
15. Microphone	Transmit your voice.
16. Indicator Light	Indicate calling, charging, message
17. Speaker	Let you hear phone tones and ringtones.

Warning: Inserting an accessory into the incorrect jack will damage the phone.

Performing basic functions

To...	From the Home Screen...
Switch on the phone	Press and hold the End/Power key for approximately 3 seconds.
Switch off the phone	Press and hold the End/Power key for approximately 3 seconds.
Make a call	Enter the number using the alphanumeric keypad then press the Call/Send key.
End a call	Press the End/Power key.
Answer a call or Access Outgoing Calls list	Press the Call/Send key.

Verify Own Number	Press the OK key to enter the Menu and scroll to Contacts-->Own Phone Number.
Lock the keypad	Press and hold the * key.
Unlock the keypad	Press 123 .
Access SMS	Press the UP Navigation Key.
Mute all sounds	Press and hold the # Key.
Access Incoming Calls list	Press the LEFT Navigation Key.
Access Missed Calls list	Press the RIGHT Navigation Key.

Menu Map

Main Menu

Settings	Contacts	Recent Calls
Auto Key Guard	Find	Missed Calls
Supp. Services	View All	Incoming Calls
Rapid App.Setting	Business	Outgoing calls
Sound	Personal	
Display	Add New	
Alert	Add to R-UIM	
Call Timers	Memory Status	
Security	Speed Dial List	
Input Mode	Own Phone Number	

Accessories	R-UIM	
Sys/Network		
Messages	Extra	Explorer
InBox	Stop Watch	Picture
Create Message	Alarm	Music
Preformatted Messages	Scheduler	Space Info
OutBox	Calculator	
R-UIM	Game	
Erase Messages		
Message Settings		
Multisend Report		

Navigating Menus:





 


- From the home screen, press the **OK** key to enter the Menu.
- Use the **UP, DOWN, LEFT** and **RIGHT** Navigation Keys to browse through the menus.
- To access soft keys located at the bottom of the display screen, press the **DOWN** Navigation key and use the **LEFT** and **RIGHT** Navigation Keys to select a soft key function. The display texts relating to soft key functions are indicated with a reverse blue text in yellow background.
- Press the **OK** key to select a menu or menu item.
- Press the **C** key or **Left soft** keys to return to the previous screen.
- Press the **End/Power** key to return to the idle





screen.

Note: This guide shows you how to select a menu feature as follows: **Menu --> Settings --> Auto Key Guard**. This example shows that you must select **Menu**, scroll to then select **Settings**, then scroll to then select **Auto Key Guard**.

Understanding screen icons

These icons may appear on the screen of your phone.


Icon	Function	Description
	Signal Strength	The more bars, the stronger the signal.
	Network Unavailable	No available service network.
	Speech box	Transmit speech letter
	Roaming	Indicates roaming when home network is not available.
	Keypad Lock	Indicates the keypad is locked
	In Use	Indicates the phone is using the network's service.
	In Use Encrypt	Indicates the phone is using the network's service and encrypt.

	MESSAGES	You have received one or more text messages
	Vibrator	Indicates that the ringing tone is muted and vibrating alert is active.
	Alarm	Alarm or Scheduler has been set.
	Battery	Battery power indicator. More bars indicate a higher power level.

1 GETTING STARTED

Installing your Battery

You must install and charge the battery to use your phone. Insert the ridge at the bottom of the battery into the base of the phone, then push the battery down and snap it into place.

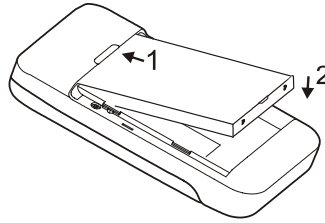

Charging the battery

The battery is not fully charged when you purchase your phone. Fully charge the new battery for approximately 12 hours before using the phone for the first time.

To charge the battery, connect the AC adapter to the jack located at the side of the phone, then connect the adapter's plug to an AC wall outlet.

The battery icon at the top-right corner of the screen tells you whether the phone is:

- Charging (animated icon)
- Partially charged

- Fully charged

Recharging the battery

You can safely recharge the battery at any time, even if it has a partial charge.

Caring for the battery

This section describes important safety information and tips for improving battery performance.

General safety guidelines

This phone contains an integrated Li-Ion battery.

- Do not attempt to open the battery compartment and dismantle, puncture, or short-circuit the battery.
- If you have not used the battery for more than a month, recharge it before using your phone.
- Avoid exposing the phone to extreme temperatures, direct sunlight, or high humidity.
- Never dispose of used batteries in or near a fire. It could lead to explosion. Check with your local regulations for proper disposal instructions.

Common causes of battery drain

The following operations drain the battery more quickly and thereby adversely affect talk and standby

times:

- Playing games frequently.
- Frequent use of the backlights.
- Using data cables or accessories, such as the Hands-free headset.
- Operating when no service is available, or service is available intermittently.
- High earpiece and ringer volume settings.
- Unacknowledged text message alerts.

Battery performance

	900mAh(standard battery)
Standby time*	70~85hours
Talking time*	100~130minutes

2 MAKING AND RECEIVING CALLS

Making a call

1. Make sure you are in an area where the signal can be received. Look for the symbol on the home screen.

Note: The more bars you see in this symbol, the stronger the reception. If there are no bars, try to move to where the reception is better. In some cases, this can be as simple as changing the direction you are facing.

2. Enter the phone number.
3. To dial the number, press the **Send/Receive** key.
4. To end the call, press the **End/Power** key .

Redialing a number

To redial the last number called, press the **Send/Receive** key twice.

Calling a saved number

If you have already saved a phone number, you can use the **All Contacts** list to find it quickly.

1. Select **Menu -->Contacts --> View All**.
2. Scroll down the list, find the contact you want,

then press the **Send/Receive** key to dial the number.

3. If the number has been added to the Speed Dial list, you can dial it directly by pressing its Speed Number then the **Send/Receive** key.

Answering a call

When you receive a call, the phone rings, vibrates, and/or lights up, and an animated phone icon appears. The number of the caller also appears if it is not restricted. If the number is stored in your Contacts directory, the contact name appears.

To answer the call, press the **Send/Receive** key.

Note: To mute the ringer or stop the vibration when there is an incoming call, select **Silence**.

Note: If you have Call Waiting as part of your service, you can answer incoming calls when you are already on a call. When on a call, you will hear a beep tone. Select Answer to put the current call on hold and answer the new call.

Setting Any Key Answer

1. Select **Menu -->Settings -->Accessories -->Any Key Answer**.
2. Select **On** or **Off** then press **OK** to confirm.

All incoming calls can now be answered by pressing any key except **END** key, or **OK** key .

Answering calls hands-free

If your phone is attached to an accessory such as a hands-free headset (sold separately), you can set your phone to answer your calls automatically in 2, 5 or 10 seconds.

1. Select **Menu-->Settings -->Accessorie -->Headset Autoanswer.**
2. Select **Off, 2 seconds, 5 seconds** or **10 seconds** then press **OK** to confirm.

Dealing with missed calls

When you have missed a call, “Missed 1 call” appears on your screen.

- To clear the screen, press **OK** key or **End/Power** key .
- To view the caller’s number or name, press the **Right** navigation key to access the **Missed Calls.**

Setting missed call alerts

To set an alert to beep when you have missed a call:

1. Select **Menu -->Settings -->Alert -->Missed Call.**
2. Select **Enable** or **Disable** then press **OK** to confirm your selection.

Viewing recent call details

Details on the last 10 calls you have missed, made or received are stored in the **Recent Calls** list. You can get details on the caller's name and phone number, along with the time and length of the call.

Viewing recent calls:

1. Select **Menu -->Recent Calls**.
2. Select an option from the list: **Missed Calls**, **Incoming Calls** or **Outgoing Calls**.
3. To confirm, press **OK**.
4. Select a phone entry, Press **OK** to confirm.
5. Select an option from the list.
 - **Call Number** dials the phone number
 - **Time displays** the time and duration of call
 - **View Number** to view the phone number
 - **Edit Number** to edit the phone number(Except Outgoing call List)
 - **Delete Entry** to delete the phone number
 - **Send SMS Message** to send SMS messages to the phone Number
 - **Save New** to add the phone number to the Contacts
 - **Save To Existing** to add the phone number to an existing Contact.
 - **Save To R-UIM** to add the phone

number to **R-UIM** card.

Erase All Recent Call List

To erase all recent call list from the Recent Calls menu:

1. Select **Menu -->Settings -->Security**.
2. Enter your PIN code.
3. Select **Erase All Recent Call List** then press **OK** to confirm.
4. A message appears: "Erase All Recent Call List"
5. Select **Yes** to erase all.

Setting up speed dial

Speed dialing allows you to quickly dial a stored phone number by entering a one- or two-digit speed dialing location. To save a number to speed dial:

1. Locate a saved contact from the **Contacts** list.
2. Scroll to the phone number then press **OK** to select.
3. Select **Add to Speed Dial**.
4. Scroll down to select the speed dial number to which you wish to assign the phone number to then press **OK** to confirm. (Available speed dial numbers for assignment are marked as -empty-)

Using 1-Touch Dialing

To dial a phone number, simply press and hold the assigned speed dial number for the phone number. For example, if the Speed dialing number is 5, press and hold 5.

Supp. Services

Let you enable/disable some supplement services provided by your network operator. Consult your local network service provider for more information about these services.

Call Waiting

When Call Waiting is activated, if you are in a call and another call is incoming, there will be an alert and the new calling number will be displayed on the screen. You can choose to answer it or reject it. If the new call is answered, the former one will be hold and you can toggle between the two calls by Send key.

1. Select **Menu -->Settings -->Supp. Services -->Call Waiting.**
2. Select an option from the list.

Activate	Open the Call Waiting
Deactivate	Close the Call Waiting
Back	Back to the previous display

3. To confirm, press **OK** .

Call Forwarding

To forward your calls to another phone number:

1. Select **Menu -->Settings -->Supp. Services -->Call Forwarding**.
2. Enter the number you wish to forward all your calls to.
3. To confirm, press **OK** twice.

Silencing an incoming call

To mute the ringer or stop the vibration when there is an incoming call, select **Silence**. This action silences the current call only. The next call will ring as normal.

Adjusting the volume during a call

To adjust the earpiece volume during a call, press the **UP** or **DOWN** Navigation Key.

Call Timer

Your phone includes three timers that count the duration of the calls you have made and received. To view call timers:

1. Select **Menu -->Settings -->Call Timers**.
2. Select an option from the list:
 - **Outgoing Calls** — The duration of outgoing calls made by the phone since the timer was last

reset.

- **Incoming Calls** — The duration of incoming calls received by the phone since the timer was last reset.
- **All Calls**— The duration of all outgoing and incoming calls since the phone was manufactured.

Resetting the timer

To reset the call timer:

1. Select **Menu -->Settings -->Calls Timer**.
2. Select **Incoming Calls, Outgoing Calls** or **All Calls**.
3. Select **Reset** using the **Navigation Key** then press **OK** to reset the call timer.

Locking the keypad

The Keyguard locks your keypad to prevent accidental key presses when the phone is turned on and a call is not in progress. When activated, you can still answer or silence an incoming call.

- To lock the keypad from the home screen, press and hold the * key.
- To unlock the keypad, from the home screen press **123**.

Emergency numbers

Calling emergency numbers

You can call 111, 112, 113 and other three-digit emergency numbers even if your phone is locked or your account is restricted. However, when you call, your phone enters **Emergency mode**.

Call Roaming

To enable or disable call roaming:

1. Select **Menu -->Settings -->Sys/Network -->Roaming Opt.**
2. Select either **No Roaming** or **Automatic** then press **OK** to confirm.

3 ENTERING LETTERS, NUMBERS, AND SYMBOLS

You may enter letters, numbers, and symbols in the Contacts, SMS and other menu functions.

Text entry modes

There are four text entry modes:

- Multitap
- Numbers
- eZiText
- Symbols

Note: The mode you start in depends on the task you are performing. For example, when entering a phone number in the Contacts menu, the default text mode is Numbers. When entering a name for a contact, the default text mode is the Input Mode.

Entering numbers

To enter a number while in Numbers mode, press a number key once.

To enter a number while in Multitap mode, press a number key more times until the number appears on the screen.

Entering words letter by letter

Multitap mode:

1. Press the appropriate alphanumeric key once to display the first letter that appears on the keypad, twice for the second letter, and so on.
2. Wait for the cursor to move to the right before you enter the next letter.

Entering words quickly

eZiText mode:

When you press a series of keys using eZiText, it checks the built-in dictionary for common words and predicts the word you are trying to spell.

1. For each letter of the word you wish to spell, press the appropriate alphanumeric key once. For example, to enter the word “any” press the alphanumeric keys **2 -->6 -->9**.
2. If the word suggested by eZiText does not match what you want, press the **UP** or **DOWN Navigation Key** to view other word matches.
3. When you see the word you want, to confirm your choice press **OK**.

Entering symbols

Use Symbols mode:

1. Press the **DOWN Navigation Key** to access

the soft key located at the bottom of the display screen.

2. Scroll with the **LEFT** and **RIGHT** Navigation Keys to locate the current input mode.
3. To access the text input options press **OK**.
4. Scroll down to Symbols then press **OK** to enter the menu. You will be presented with a list of symbols, such as :

- . @ ' () _ ! ? * # % " : + < > = /
\ & , ~ { } \$ [] ^ ; : \ ... ' ' " ¥ 《 》

5. Press the number corresponding to the symbol of your choice.

Changing input modes

To change input modes, while in any text editor do the following:

1. Press the **DOWN** Navigation Key to access the soft key located at the bottom of the display screen.
2. Scroll with the **LEFT** and **RIGHT** Navigation Keys to locate the input mode.
3. Press **OK** to access the text input options.
4. Scroll to select your desired input mode then press **OK** to confirm.

Quick reference to text entry

This table gives general instructions for entering letters, numbers, and symbols.

To...	Do this...
Enter a letter	Press the appropriate alphanumeric key repeatedly until the letter you want appears on the display.
Enter a number	Press and hold the appropriate number key until it appears on the display. If you are in Numbers mode, then press the number key once.
Enter a symbol	Enter the Symbol mode then enter the number corresponding to the symbol you want.
Enter a space	Press the # key.
Erase a character	Press C .
Erase all characters	Press and hold C .
Move the cursor right or left	Use the RIGHT or LEFT Navigation Keys.
Change text entry modes	Press DOWN to highlight the current input mode then press

	OK to access Text Mode. Scroll to the desired input mode then press OK .
Enter letters in upper case	In ABC mode, press * and then enter a letter in upper case. In ENG mode, after entering a word, press * to cycle the highlighted word in three states: all in lower case --> first in upper case --> all in upper case.
Highlight an option at the bottom of the screen	Press DOWN to highlight an option then press LEFT or RIGHT to scroll through the other options available. To confirm your selection, press OK .

4 STORING CONTACTS

The **Contacts** menu of your phone is like a set of phone index cards for you to store information about a person or a company. Your phone can hold, on average, about 200 phone numbers.

Saving a phone number

To save a phone number, do the following:

1. From the home screen, enter the phone number you wish to save.
2. Press the **OK** key to select **New**.
3. Enter the name of the contact then press **OK**.
4. Press **OK** to choose **Next**. Select **Options** or the number.

Select options for the following:

- **Add New** to add a new contact.
- **Edit name** to edit the name of this contact.
- **Assign group** to classify the new contact as Personal, Business, or Neither.
- **Erase Contact** to erase the new contact.

-or-

Choose the number for the following:

- **Edit** to edit the new contact.
- **Erase** to erase the new contact.
- **Save on R-UIM** to add the number to **R-UIM**

card.

- **Add to Speed Dial** to add the number to your **Speed Dial** list.
- **Send SMS Message** to send the SMS Message to the number.

Adding a pause

When you save the phone number of an automated service, you may include a pause where you need to select an option or enter a Password. You can enter multiple pauses in a phone number. A Pause will cause the phone to stop dialing until you select the Release key. To enter a phone number with a pause:

1. Enter the first portion of the phone number.
2. Press **Left** Navigation Key to **Pause** then press **OK**. A letter **P** will appear at the end.
3. Enter the remaining part.
4. Save the number. (See “Saving a phone number page 20 if needed”).

Saving email address

To save an email address follow these steps. To add the item to a saved contact, see “Editing or erasing a contact”.

1. Select **Menu -->Contacts -->Add New**.
2. Scroll to **Email** then press **OK** to select.
3. Enter the information. (See “Quick reference to

text entry” on page 19.)

4. To go to the next screen, press **OK** twice.
5. Enter a contact name.
6. To **Save** press **OK** twice .

Editing or erasing a contact

1. Select **Menu -->Contacts**.
2. Select **View All** or **Find** to locate the contact you wish to edit.
3. Highlight the contact you wish to edit then press **OK**.
4. Select **Options**.
5. Highlight an option then press **OK** to select it:
 - **Add New** to add a phone number1,phone number2, home number,work number,email .
 - **Edit Name** of the contact.
 - **Assign group** as personal, business or neither.
 - **Erase Contact** to erase the entire contact.
6. Follow the screen prompts to enter new information or delete the Contact.
7. Press **OK** to confirm your choice or **Save** where necessary.

Editing a phone number

1. Select **Menu -->Contacts**.
2. Select **View All** or **Find** to locate the contact you want to edit.

3. Highlight the contact you wish to edit then press **OK**.
4. Press **DOWN** to highlight the phone number you wish to edit and press **OK**.
5. Highlight an option for the phone number then press **OK**:
 - **Edit** phone number
 - **Erase** phone number
 - **Save on R-UIM** to add the number to **R-UIM** card.
 - **Add to Speed Dial** to add the number to your Speed Dial list.
 - **Send SMS Message** to send the SMS Message to the number.
6. Follow the screen prompts to enter new information or erase the phone number.
7. Press **OK** to confirm your choice or to **Save** .

Finding contact information

Quick Dial using **All** Contacts list

1. Select **Menu -->Contacts**.
2. Select **View All** to locate the contact you want to dial.
3. Highlight the contact you wish to call then press the Call key to dial the number.

Otherwise, press **OK** to edit the contact's information.

Viewing Memory Status

1. Select **Menu -->Contacts -->Memory Status.**
2. Press **OK** to view the memory status of Phone or UIM card.

5 SENDING AND RECEIVING TEXT MESSAGES

This chapter describes how to send, receive, and erase text messages from your phone.

Important: The features and menus described in this chapter may vary depending on services available in your area. In addition, usage charges may apply to each message. For clarification on these issues, check with your service provider.

Sending text messages

Check with your service provider to find out if you are able to send text messages from your phone. You can only send text messages to phones that are capable of receiving them.

Sending a simple message

To send a plain text message to a single recipient:

1. Select **Menu -->Messages -->Create Message.**
2. Select a saved number from the **All Contacts** List or enter the number manually.
3. To enter your message, select **continue.**
4. When you have completed the message, select

Continue, press **ok** to send, save or multisend the message.

Forwarding a saved message

You can reuse a message you have stored in your OutBox. The OutBox contains all sent messages, messages for which send attempts have been made as well as messages with failed send attempts.

To view OutBox messages:

1. Select **Menu -->Messages -->OutBox**.
2. Scroll through the list of messages then press **OK** to select.
3. Select an option from the list:
 - **Done** to go back to previous screen
 - **Erase** the message
 - **Send** the message
 - **Forward** the message to another recipient
 - **Edit** the message.
4. Enter the phone number manually or select from the **All Contacts** List.
5. To continue press **OK**.
6. To send the message as it is, press **OK** again.

-or-

To **edit** the message, enter your text accordingly.

When you have finished editing, press **OK** to send the message.

If you cannot send messages

You may not be able to send or receive messages if your phone's memory is nearly full, or if digital service is not available at the time. To free up memory, erase old messages. See "Erasing messages" on [page](#)

Receiving incoming calls while creating messages

If you don't wish to answer the call, press **End/Power** key.

To answer the call, press **Call/Send** key. The message you were working on will be saved in the **OutBox** folder. To return to the message, select **Menu -->Messages -->OutBox** and select it.

Viewing the OutBox

You can check the status of messages you have sent as long as they have been saved to the **OutBox**.

1. Select **Menu -->Messages -->OutBox**.
2. Scroll through the list of messages then press **OK** to read the message.

Receiving text messages

When a text message is received, your screen will display text similar to: "MESSAGE!". Look for the

symbol at the top of your screen. The symbol flashes if the message is full.

Reading the message

You may read the message on the display and call back the number in the message. The screen will auto scroll page by page unless the **UP** or **DOWN** Navigation Key is pressed.

Erasing messages

Your phone is designed to store up to 50 text messages . It is a good idea to erase old messages, as messages take up memory in your phone.

You have the option of erasing text messages as you send or read them, erasing them one-at-a-time from the list in the **OutBox** or **InBox**, or erasing them all at once.

Erasing single messages

1. Select **Menu -->Messages**.
2. Scroll down to select the type of text message you want to erase (**InBox**, or **OutBox**).
3. To select the message to erase, press **OK** .
4. Select **Erase** to erase the message. A notification appears: "Erase this message?"
5. To erase the message, select **Yes** .

Auto Erase Inbox

1. Select **Menu -->Messages -->Message**

Settings -->Auto Erase Inbox.

2. Scroll to **Enable** then press **OK** to confirm.

Setting message alerts

To choose how you want be alerted of text messages:

1. Select **Menu -->Messages -->Message Settings -> Message Alert**
2. Select an option from the list:
 - **None** - no alert
 - **Vibrate Once** - phone will vibrate once when you receive a message
 - **Vibrate & Remind** - phone will vibrate every minute until you read the message
 - **Alert Once** - phone will beep once when you receive a message
 - **Alert & Remind** - phone will beep every minute until you read the message
3. Scroll to type of alert you want then press **OK** to select.

Sending and editing preformatted messages

Your phone comes with preformatted messages, such as “Call me”, “Emergency”, “I’ll be there in 15 minutes”, etc. which you can insert into the body of a text message. You can edit these messages and create new ones. Your phone can store up to 20 preformatted

messages, with up to 100 characters per message.

1. Select **Menu** -->**Messages** -->**Preformatted Messages**.
2. Scroll through the list of preformatted messages then press **OK** to select.
3. Enter the phone number manually or select from the All Contacts list then press **OK** to continue.
4. Enter or edit the text then press **OK** to continue. For help entering text, see page 16.
5. Select **Send** then press **OK** to send the message or **Save** to save the message to the **OutBox** or **Multisend** to enter more phone numbers to send the message.

Multisending a message

Select **Multisend** to send the message to multiple receivers at one time.

1. Firstly enter the No.1 receiver's number, then press **OK** key twice to continue with No.2 receiver.
2. Enter the No.2 receiver's number, and so on.
3. After finishing all the receiver's numbers, press **Down** and then **Right** navigation key to highlight **OK** and press **OK** key.
4. From **Multisend** list screen, press **Right** navigation key to highlight **Send** and press **OK** to send the message.

Viewing multisend reports

1. Select **Menu -->Messages -->Multisend Report.**
2. Press **OK** to view the last multisend report.

6 CUSTOMIZING YOUR PHONE

The contents of the Settings menu are as follows.

Auto Key Guard	Cancel/30 sec/2 mins/5 mins
Supp. Services	Call Waiting/Call Forwarding
Rapid App.Setting	Ringer Type/Display/Stopwatch/ Clock/ Scheduler/ Calculator/ Game
Sound	Volume/Alert Type/Ringer Type/ Key Tone Length
Display	Wallpaper/Backlighting/Language /Contrast/Time Format
Alert	Missed Call/Roaming/Minute Alert
Call Timers	Outgoing Calls/Incoming Calls/All Calls
Security	Enter PIN: Erase All Handset contacts/Erase All Recent call list/ Phone Reset/PIN lock/PIN change
Input Mode	Multitap/eZiText/Numbers
Accessories	Ext Power Backlight/Headset Autoanswer/ Answer Method
Sys / Network	Roaming Opt

Setting vibration mode

You can set your phone to vibrate or to vibrate and then ring when you receive an incoming call.

1. Select **Menu -->Settings -->Sound -->Alert Type.**
2. Select **Vibration** or **Vibe + Ringer (vibration for 10 seconds then followed by ringer)** then press **OK** to confirm your choice.

Note: When phone is charging, vibration is disabled.

Keypad Lock

To lock the keypad to protect the phone from accidental key presses:

1. Select Menu -->Settings -->Auto Key Guard.
2. Select an option from the list:
 - **Cancel:** Disables the KeyGuard.
 - **30 Sec.:** Locks the keypad after 30 seconds of inactivity.
 - **2 mins:** Locks the keypad after 2 minutes of inactivity.
 - **5 mins:** Locks the keypad after 5 minutes of inactivity. Pressing and holding the * key shall also lock the keypad, which then can be unlocked by pressing **123**.

Adjusting volume

To adjust the volume of the ringer, earpiece and the key beeps:

1. Select **Menu -->Settings -->Sound -->Volume.**

2. You can adjust the volume of the **Ringer**, **Earpiece** or **Key Beep**.
3. Press the **UP** Navigation Key to increase the volume or press the **DOWN** Navigation Key to reduce the volume.
4. Press **OK** to confirm your choice.

Alert Type

To choose the alert type as Off, Ringer, Vibration or Vibe+Ringer:

1. Select **Menu -->Settings -->Sound -->Alert Type**.
2. Select an option from the list:
 - **Off**— The phone will not ring.
 - **Ringer** — The phone will ring during the entire alert.
 - **Vibration** — The phone will vibrate during the entire alert.
 - **Vibe + Ringer** — The phone will vibrate during the first half of the alert, and ring afterwards, during the second half of the alert.

Setting the Ringer Type

There are 15 different programmed ringer types including the default ringer.

1. Select **Menu -->Settings -->Sound -->Ringer Type**.

2. Scroll through the list to hear the different rings tones.
3. To select a ringer from the list press **OK**.

Changing Key Tone Length

To change the duration of the key tone length:

1. Select **Menu -->Settings -->Sound -->Key Tone Length**.
2. Select an option from the list:
 - **Normal** — A short fixed length DTMF burst will sound.
 - **Long** — A longer DTMF burst will sound. The DTMF burst will be determined by the key press.

Personalizing the screen

Setting the wallpaper

You can choose from four pre-loaded pictures and set it as the wallpaper.

1. Select **Menu→Settings→Display→Wallpaper**.
2. Select one wallpaper with **Up/Down** navigation key.
3. Press **OK** to confirm your choice.

Adjusting the backlighting

Your screen lights up while you are on a call or when you press a key on the keypad. To change when and

how backlighting lights up:

1. Select **Menu -->Settings -->Display -->Backlighting.**
2. Select an option from the list:
 - 10s
 - 30s
 - 10s and after call
 - 30s and after call
3. Press **OK** to confirm your choice.

Note: Keeping backlighting on during a call consumes more energy and thereby drains the battery more quickly, reducing talk as well as standby times.

Choosing a different language

Your phone may support Russian in addition to English. To view language options:

1. Select **Menu -->Settings -->Display -->Language.**
2. Select a language, then press **OK** to confirm.

Changing the display contrast

1. Select **Menu -->Settings -->Display -->Contrast.**
2. Use the **LEFT** or **RIGHT** Navigation Keys to increase or reduce the Contrast.

Choosing a different time format

1. Select **Menu -->Settings -->Display -->Time Format.**
2. Select an option from the list:
 - **AM/PM**
 - **24 HR**
3. Press **OK** to confirm your choice.

Setting Alerts

To choose to Enable or Disable alert tones during various circumstances.

1. Select **Menu -->Settings -->Alert.**
2. Select an option from the list:
 - **Missed Call:** If set to Enable, the phone will sound an alert tone when there is a missed call.
 - **Roaming:** If set to Enable, the phone will sound an alert when it is roaming
 - **Minute Alert:** If set to Enable, the phone will sound an alert tone every 10 seconds before the end of a minute during a call.

Creating a secure environment

This section describes all the features involved in securing your phone and preventing access to personal information. All security features are shielded by a lock code.

Changing your PIN code

1. Select **Menu -->Settings -->Security.**
2. Enter your PIN code then press **OK** to confirm.
3. Scroll to **PIN Change** then enter your new PIN code then press **OK** to confirm.

Erasing all Handset contacts

To erase all Handset contacts from the Contacts directory:

1. Select **Menu -->Settings -->Security.**
2. Enter your lock code.
3. Select **Erase All Handset Contacts.**
4. A message appears: "Erase All Handset contacts"
5. Select **Yes** to erase all Handset contacts.

Restoring Factory Default

1. Select **Menu -->Settings -->Security.**
2. Enter your PIN code.
3. Select **Phone Reset.**
4. A message appears: "Restore Factory Default"
5. Select **Yes** to restore factory default.

Setting power backlighting

To set backlighting to remain on when an external

power source, such as the AC adapter, is used with the phone:

1. Select **Menu →Settings→Accessories →Ext Power Backlight.**
2. Select **On** to keep backlighting on. (The battery charges more slowly when power backlighting is on.)

Setting headset

Setting headset Autoanswer

When a headset (sold separately) is attached to the phone, you can set the headset to autoanswer when there is an incoming call.

1. Select **Menu -->Settings -->Accessories -->Headset Autoanswer.**
2. You can choose switch off autoanswer, 2 seconds, 5 seconds or 10 seconds.
3. Scroll to your desired option then press **OK** to select.

Shortcut Setting

You can customize the right soft key's function as a shortcut.

1. Select **Menu -->Settings -->Rapid App.setting.**
2. Select an option from the list:
 - **Display**
 - **Stopwatch**

- Clocka
- Scheduler
- Calculator
- Game

3. Press **OK** to confirm your choice.

7 USING EXTRAS

Stopwatch

Stopwatch allows you to use your phone as a stopwatch.

1. Select **Menu -->Extra -->Stop watch.**
2. Select **Start** to have the stopwatch begin counting.
3. Select **Stop** to stop counting.
4. Select **Reset** to set the counter back to zero and begin counting again.

Alarm

You can set the phone to sound an alarm at a specified time. The alarm clock will only trigger an alert if the phone is switched on.

To access this menu, digital service is required.

To set an alarm:

1. Select **Menu -->Extras -->Alarm -->Set.**
2. Use the **UP** and **DOWN** Navigation Keys to set the time for the alarm.
3. Select **Once, Daily, or Weekdays.**

When the alarm triggers, select **Off** to turn off the alarm or **Snooze** to silence the alarm for 10 minutes.

Scheduler

The Scheduler allows you to schedule events, such as meetings or appointments, and keep track of special occasions, such as birthdays or wedding anniversaries.

To access this menu, digital service is required.

Adding an event

1. To find the day of the event.
2. Select **Menu -->Extra -->Scheduler**
 - For a day in the current month, select **View Day**. Press the **LEFT** or **RIGHT** Navigation Keys to scroll through days.
 - For a day in a different month, select **View Month**. Press the **UP** or **DOWN** Navigation Keys to scroll through months, and **LEFT** or **RIGHT** to scroll through days.
3. Press the **OK** key to confirm the day and month then add new event information for it.
4. Enter event name. For help on entering text, see page 16.
5. When you are done entering the letters press the **OK** key twice.
6. Select **Next** to set the event Start time, Duration, and Alarm frequency.

- Press the **UP** or **DOWN** Navigation Keys to set alarm fields.
 - Press **LEFT** or **RIGHT** Navigation Keys to move between fields.
7. When you are done press the **OK** key twice.
 8. To add a Note select **Next**.
 9. When you are done Press the **OK** key twice.

Options

You can view settings about **Set Work Hours**, **Auto Delete**, and **Default Alarm** here.

Calculator

Use the calculator for basic math calculations.

1. Select **Menu -->Extra -->Calculator**.
2. Use the keypad to enter numbers.
3. Select the arithmetical or memory operators using the **LEFT/RIGHT** Navigation Keys.

= equal	+ add	x multiply
÷ divide	- subtract	. decimal point

 - **C** Clear all numbers entered and display a zero.
 - **MR** Display the value currently stored in memory.

- **M+** Add the displayed digit to the value stored in memory.
 - **MC** Clear the value currently stored in memory.
 - **±** Change the sign of the displayed number.
4. Continue to enter the second number.
 5. To display the result, select = then press **OK**.

8 PLAYING GAMES

Your phone offers you 2 enjoyable games.

BlackJack

Black Jack is a card game. Your goal is to beat the dealer by getting more points than him but not more than 21.

1. Select **Menu -->Game -->Black Jack.**
2. Press **OK** to enter. The game rules are displayed, which can be scrolled with **Up** and **Down** navigational keys. Press **OK** to skip.
3. To continue press **OK.**
4. Select **Continue** to continue last game, or **New** to star a new game.
 - a) Select Start to start a new game.
 - b) Select Bet to change your bet number.
 - c) Select Hit to get a new card. The sums of the cards are displayed in the screen right side, with the dealer's on the above and yours below.
 - d) Select Double to double the bet.
 - e) Select Stand if you don't want another card.

The game will judge who wins by the sums of each side and change your cash accordingly.

- Note:**
1. You can get up to five cards.
 2. Your default cash is \$5,000, and default bet \$20.

Video Poker

This is also a card game.

1. Select **Menu -->Game -->VIDEO POKER.**

A temporary greeting screen will be displayed followed by the rules of the game when the game is selected.

2. To start the game select **OK.**

9 GETTING HELP

Customer support

Your service provider's customer support department may be accessible directly from your phone when you dial a number (check with your service provider). They can answer questions about your phone, phone bill, call coverage area, and specific features available to you, such as call forwarding.

Before requesting support, please try to reproduce and isolate the problem. When you contact the Customer Care Center, be ready to provide the following information:

- The name of your service provider.
- The actual error message or problem you are experiencing.
- The steps you took to reproduce the problem.
- The phone's electronic serial number (ESN).
- To find the ESN:
 - a) Remove the battery.
 - b) Locate the white label on the back of the phone.Your phone's ESN is located on the label.

10 SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types C306 (FCC ID: SARHISENSEC306) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.03W/kg and when properly worn on the body is 0.373W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.