

Hisense EVDO

Smartphone

E860



I

Content

Getting ready for use	1
Part name and function.....	1
Inserting the UIM card.....	2
Inserting SD card	3
Installing the battery	3
Removing the battery	4
Charging the battery	4
Battery performance.....	5
Turning your phone on and off	7
Desktop manager.....	7
Making a call	8
Main Function	10
Browser.....	10
Calculator	10
Calendar	10

Camcorder	11
Camera.....	11
Clock	11
Email.....	12
FM Radio	13
Gallery.....	13
Gmail	13
Latitude	13
Messaging.....	13
Music.....	14
People	15
Phone.....	15
Search.....	16
Settings	16
Sound Recorder	19
Voice Dialer	20
Videos	20
Safety information.....	21

Getting ready for use

Part name and function



	Name	Function
1	Power key	When powered on press to darken or lighten the screen or hold to pop up option menu. When powered off hold to turn on the phone.

2	Menu key	Press to present a main menu.
3	Home key	Press to return to home screen.
4	Return key	Return to previous menu.
5	Fast search key	Enter Google search interface.
6	Camera	Take pictures.
7	Volume keys	Press to accommodate the volume and start up silence mode when there is an incoming call.
8	Headset jack	Insert headset.
9	Charge/USB Port	Connect USB line.

Inserting the UIM card

Your phone must work with a card provided by your service provider. Your card contains all your subscription information.

Insert UIM card with the metal contacts facing down and the cut corner aligned with that of the slot;

Notes:

1. If no card is installed, or there are errors in the insertion, or your card is damaged, the string of "No service" will display on the screen after your phone is powered on.
2. If your card is PIN-locked your phone will display "unlock PIN". You must enter PIN before the phone can start working. Please contact your network service provider if you need.
3. When inserting card, please keep it away from possible damage caused by static, scratch and bend, and put it where is not available for children.

Inserting SD card

Insert SD card with the metal contacts facing down and the cut corner aligned with that of the slot;

Installing the battery

You must install and charge the battery to use your phone. Insert the ridge at the top of the battery into the base of the phone, make sure to touch the

metal contact on the phone, then push the battery down and snap it into place.

Note:

Your phone is designed to be used only with original batteries and chargers. Use of other batteries or chargers may cause damage to your phone and the warranty will be void.

Removing the battery

Make sure your phone is powered off to avoid the important information getting lost.

Hold battery bottom and remove the battery from the phone.

Charging the battery

New batteries are shipped partially charged. Before you can use your phone, you need to charge the battery. Some batteries will have best performance after several full charge/discharge cycles.

1. Connect data cable and charger, plug one end into your phone's data port.
2. Plug the other end of the charger into the appropriate electrical

outlet (100~240V AC).

3. When your phone indicates that the battery is fully charged, remove the charger.

Notes:

1. Before charge, make sure the battery is installed in the phone.
2. The battery can discharge gradually even when your phone is powered off. If the battery is drained for a long time, the information stored in the phone could possibly be lost. So even you don't need to use your phone for a long period, you should charge the battery some times to keep it away from drained.
3. You need longer charging period with the lower voltage.
4. You need longer time as operation as charging.
5. The normal charge temperature is during 0°C-40°C.

Battery performance

	1200mAh (standard battery)
Standby time*	100hours

Talk time*	200 minutes
------------	-------------

- Many conditions can affect battery's standby time, such as local network conditions, phone's settings, frequent operations, using data services, etc.
- The battery performance is also affected by charge state and temperature.

Basic operations

Turning your phone on and off

Turn on the phone: Press and hold Power key for more than 3 seconds to turn on your phone.

Turn off the phone: Press and hold Power key to pop up option menu, select "power off". If it is powered off you can not receive, make a call or do other operations.

Desktop manager

Lock the screen

The screen lock prevents unwanted actions on the touch screen when you are not using your phone. When the phone is left idle for a set period, the screen locks automatically if you enabled screen lock in settings→ Security.

Unlock the screen

You can unlock the screen according to your settings.

The default way is pulling to right after your screen is enabled with pressing power key.

Delete icon:

Press and hold a selected icon on desktop, you will find 'X Remove' appearing. At this time drag the icon to 'X Remove', then release.

Status bar

A status bar at the top of the screen displays phone status information and notifications.

Change wallpaper

Press on the desktop space, then pop up the following menu: Gallery/Live wallpapers/ wallpapers.



Notification panel

You can open notifications such as unread messages or missed calls directly from the notification panel.

How to open the panel:

Hold the status bars with your finger, and drag it downwards.

Making a call

Click to enter dialer interface on idle screen or main menu screen, input phone number and click  to make a call, click the End button. If you make a mistake, you can click  to delete the

number or hold it to delete all numbers
before the cursor.

Main Function

Browser

Connect the web page with the mobile network.

You can input different website to view different web page.

Press menu key you can do:

- Add a new bookmark or manage bookmarks.
- Refresh
- Exit the current window.

Do more things such as: forward, add bookmark and so on.

Calculator

Perform basic calculations such as addition, subtraction, multiplication and division.

Calendar

Click calendar to enter calendar menu.

Click the top left corner to select the mode to view calendar.



Create agenda

1. Press menu key and click "New event" button.
2. Before you can add an event, you must add at least one calendar account to your device and make

- a calendar visible.
3. Input name/Location/Time and so on.
 4. Click "Done" button.

The new agenda will appear on the calendar menu when you entering again.

Camcorder


Click  or  to take a video or photo.

Drag  + to focuses.

Click  to take a video.

Camera

You can take photos conveniently by using camera.

Click  to take photos.

Clock

Click to view the time.

Click "set alarm" to add alarm.

You can see two default alarm clock when enter.

Enter one of them, turn on the alarm:

1. Turn on the alarm.
2. Set the time.
3. Set the repeat times.
4. Set the ringtone.

5. Choose vibrate mode or not.
6. Edit label.
7. Click OK at the bottom of the screen.

Notes :

1. Press menu key to add more alarm when enter alarm clock.
2. The alarm clock will still work even the phone is powered off.
3. Don't set the phone in silence mode to guarantee the alarming effect.
4. Please change the battery in a minute or else the information stored in the phone will be lost.

Email

You can configure Email for most accounts in just a few steps according the tip on the screen.

The functions of the Email:

1. Receive email and view the text and attachments via your phone.
2. Reply and forward a received email.
3. Create a new email.

Apart from this, you also can set the inbox checking frequency.

FM Radio

You should insert headset before using FM Radio.

Search radio settings and play it:

1. Click menu key, select "Scan" scan all stations.
2. Select some stations and play it.

Gallery

View pictures and videos stored in phone or memory card.

Click "Albums" to view the picture with different tag.

Gmail

View your Gmail account and send or receive email.

Latitude

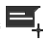
Download the map:

You can find place/navigation/find family& friends/view my place.

Messaging

Send and receive message.

Create message

Click "" to creat message.

Input receiver's phone number and edit contents.

- For phone number:
 1. You can click the keyboard to input

- number directly.
2. You can select number from messages, contacts or call logs.
 3. You can select several numbers to send.

Notes:

If the message editing is interrupted by incoming calls, alarm clock, powering off, the entered texts will be saved temporarily.

- Click "Type message" to edit the message.
- Press Menu key, pop up the submenu.

Music

Click to enter music player.


1. Artists: view different artists' songs.
2. Albums: view different albums list.
3. Songs: view all songs list.
4. Playlists: view current playlist and saved playlist.

Press menu key when playing a song, you can do :


- View the library details.
- Party shuffle.
- Add the song to playlist.
- Set the song as ringtone.
- Delete the song.

People

Search for a contact

1. Click fast search key or click ;
2. Enter the first few letters of the contact name, all contacts beginning with these letters appear.

Add a contact


Click , you can add a new contact to the phone or card.



Manage contact


Click the item to view the detail information about the contact.

Hold the menu key to view the submenu: Edit/ share/ delete/ copy to phone/ send contact/all calls to voicemail.


Phone

Click  enter dial plate, Input the number, then call out.

Input phone number, click  to make a call, click  to delete the number you do not need or hold it to delete all numbers before the cursor.


Click  enter call log, view the

detailed information.

Click  to view the contact.

Search

You can input the contact with soft key or voice.

Click  to search the network resource.

Settings

Wireless & networks

- Set call feature settings and select TTY mode or DTMF Tones from the combobox.
- Click to turn on WIFI or Bluetooth. Set the WIFI or Bluetooth.
- Turn on Data usage.
- Click to turn on Airplane mode.
- Set the tethering & portable hotspot.
- Set wifi direct settings and mobile networks.

Device

1. **Sound**

- Set volume for ringtone/ media or alarm.
- Set silence mode or not.
- Set your default incoming call

- ringtone.
- Set your default phone ringtone or notification ringtone.
- Turn on/off Dial pad touch tones/ Touch sound and so on.

2. **Display**

- Adjust the brightness of the screen.
- Choose the wallpaper from gallery/live wallpapers/ wallpapers.
- Turn on Auto-rotate screen.
- Adjust the delay before the screen automatically turns off.
- Select the font size.

3. **Storage**

View SD card and Internal storage.

4. **Battery**

View the battery usage data.

5. **Apps**

View the download/on SD card/ running.

Personal

1. **Accounts &sync**

Turn on or off the the function, manage accounts.

2. **Location services**

Turn on or off google's location service/GPS satallites/Location

&Google search.

3. **Security**

- Lock screen with a pattern, number, or password.
- Edit owner information displayed on the lock screen.
- Encrypt your accounts, settings, downloaded apps and their data, media, and other files.
- Set up SIM/RUIM card lock and edit passwords.
- Select device administrators.
- Credential storage.

4. **Language &input**

- Select language and edit personal dictionary.
- Select android keyboard or google voice typing.
- Set the voice search and text-to-speech output.
- Set the pointer speed.

5. **Backup&reset**

- Turn on or off “Back up my data” or “Automatic restore”.
- Erase all data in phone.

System

1. **Date and time**

Set the date, time, time zone and formats.

- The current date and time will display on the idle screen if you choose automatic.
- If you do not choose automatic, please set the date, time zone.
- Set the format of time and date.

2. Accessibility

- View services installed.
- Turn on large text/ Power button ends call and so on.

3. Developer options

- Turn on or off USB debugging/ Stay awake/allow mock locations.
- View development device ID.
- Set HDCP checking behavior.
- Set your full backup password.



About phone:

View phone system updates/ status /software version and other phone information.

Sound Recorder

You can record for a long time, please make sure your phone has enough storage.

Record:

1. Keep the phone near the sound source.
2. Click “” to record , click “” to

stop.

3. Finish the record; you can select "Save" or "Discard".

Voice Dialer

Keep the voice near the mike, say the number as the examples.

Videos

View and play the video on the SD card.

Safety information

For safety, only an approved adapter can be used. It does not bear responsibility for any faults that may arise due to non-conformation to this guide. For example:

Do not, in any way, cause a short-circuit. It may start a fire or the phone may explode causing injury.

Do not create a sudden impact on the battery by throwing it.

Do not dispose off batteries by putting them in a fire. They may explode or catch fire due to the electrolyte within.

Caution

Do not use the phone with a wrong battery.

Avoid using the phone in high temperature or humidity. Avoid spilling any liquid on this phone. If the phone gets wet, Switch off phone and turn off AC power supply.

Keep the phone dry. Submersion, humidity, and liquids containing minerals may corrode internal electronic circuits.

Do not store or use the phone in dusty or dirty areas as this can damage the moving parts.

Do not store the phone in hot/ cold areas.
Do not attempt to open it. Non-expert handling of the phone could damage it. Consult your authorized dealer for assistance.
Do not drop, knock or shake the phone. Rough handling may break the internal circuit boards.
Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
Do not paint the phone. Paint can clog the phone's moving parts and prevent proper function.
During lightning, do not touch the power plug or the phone line. It may result in an electric shock or death.
Do not install the phone under direct sunlight or on an uneven surface.
Before using the plug, check the available power voltage. Inaccurate power voltage may cause fire and damage.

Accessories List

- Battery
- AC Charger
- USB cable
- Earphone
- User Manual
- Warranty card

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue.

Device types E860 (FCC ID: SARHISENSE860) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.428W/kg and when properly worn on the body is 0.538 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help