

# EG59 USER MANUAL

## Main Features:

You can do much more with phone than make and receive a call.

### Bluetooth Wireless

Your phone supports Bluetooth wireless connection. You connect your phone with an optional Bluetooth headset or Bluetooth car kit to make hands free calls, or with a set of Bluetooth stereo headphones to listen to music stored on your phone.

### Music player

You can manually load music files by attaching your phone to the computer as a removable storage device. Use an optional set of Bluetooth stereo headphones to listen to music stored on your phone. Use an optional removable TF memory card with your phone to store even more songs.

### Photos

Your phone is designed to be used in a camera mode. Just aim and shoot to take a photo, you can send to your friends.

### Videos

Your phone can record videos in multimedia.

### Alarm

Your phone's alarm can work when the phone is powered on or off, which helps you not to miss every important moment of your life.

### Large Capacity Phonebook

Up to 500 records can be stored in your phone's phonebook. Each record can have name, mobile number, home number, office number and other contents.

## Safety information

For safety, use only an adapter approved by Hisense.  
Hisense does not bear responsibility for any faults that may arise due to non-conformation to this guide. Example:

- Do not, in any way, cause a short-circuit. It may start a fire or the phone may explode causing injury.
- Do not create a sudden impact on the battery by throwing it.
- Do not dispose off batteries by putting them in a fire. They may explode or catch fire due to the electrolyte within.

## Caution

- Do not use the phone with a car battery.
- Avoid using the phone in high temperature or humidity. Avoid spilling any liquid on this phone. If the phone gets wet, Switch off phone and turn off AC power supply.
- Keep the phone dry. Submersion, humidity, and liquids contain minerals that may corrode internal electronic circuits.
- Do not store or use the phone in dusty or dirty areas as this can damage the moving parts.
- Do not store the phone in hot/ cold areas.
- Do not attempt to open it. Non-expert handling of the phone could damage it. Consult your authorized Hisense dealer for assistance.
- Do not drop, knock or shake the phone. Rough handling may break the internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.

- Do not paint the phone. Paint can clog the phone's moving parts and prevent proper functioning.
- During lightning, do not touch the power plug or the phone line. It may result in an electric shock or death.
- Do not install the phone under direct sunlight or on an uneven surface.
- Before using the plug, check the available power voltage. Inaccurate power voltage may cause fire and damage.

## **FCC Interference Statement**

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operations.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio/television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## SAR Information

- This device complies with Part 22 of the FCC Rules.
- This device meets government requirements for exposure to radio waves. This device is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for device employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your device, the SAR limit is 1.6 W/kg. The highest SAR value for this device when tested for use at the head is 0.976 W/kg and when worn on the body is 0.667 W/kg.

**NOTE:** For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in

compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: SARHISENSEEG59.

**FCC Radiation Exposure Statement (For 2.4GHz Bluetooth):**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Contents	
Part Names and Functions.....	1
Main LCD .....	2
Installing the Battery.....	3
Removing the Battery.....	4
Inserting card .....	4
Basic functions .....	7
Entering Text .....	10
Fun .....	12
Music player .....	12
Video player .....	12
Camera .....	12
Take photos.....	12
FM radio .....	13
Recorder .....	13
Games .....	14
Phbook.....	15
Search.....	15
Add.....	15
Group settings.....	16
Speed dial .....	16
Own number.....	16
Memory status.....	16
Phone management.....	16
My files .....	17
Calls .....	18
Messages.....	19
Create SMS.....	19
Inbox .....	19
Sent.....	20
Outbox .....	20
Drafts.....	20
CDMA Voice mail .....	20

Settings .....	21
Bluetooth .....	23
Camera .....	24
Take photos.....	24
Alarm.....	25
Profiles .....	26
Music.....	27
Tools.....	28
Alarm.....	28
Calendar.....	28
Memo .....	28
Calculator.....	29
Ebook.....	29
Templates.....	29
Unit Converter.....	29
Query home zone.....	30
Clock.....	30
Settings .....	31
Profiles .....	31
Call settings.....	31
Security setting.....	33
Display settings .....	34
Key settings.....	34
Auto power on or off.....	35
Bluetooth.....	35
USB setting .....	35
Memory manager.....	35
Network mode setting .....	36
CDMA2000 1x.....	37
High-speed Data Service .....	37



## Part Names and Functions



	Name	Function
1	Headset	Play the voice.
2	Direction Key	Scroll the cursor up/down/left/ right.
3	Left/Right soft key	Press Left soft key to enter the main menu, Right soft key to enter the phonebook menu.
4	Clear key	Return the previous menu.
5	OK key	Open main menu& select the menu items.
6	Power key	Power on/off your phone. When powered on and in any other screen, press Power key to return to idle screen.
7	C Send key	Dial a call from CDMA network.









		In idle screen, Press to view "Dialed Numbers" from idle screen.
8	G Send key	Dial a call from GSM network. Press to view "slot selection" from idle screen.
9	headset jack	Insert the earphone.
10	Side key	Accommodate the volume.
11	Camera key	Active camera and take a photo.
12	I/O USB port	Inset battery charge & data cable.











Note:

The default phone number is 0000.

## Main LCD

### Icon area

	Display the current CDMA network signal strength. The more bars show, the stronger the signal is. When there is no network signal available, it displays ×.
	Display the current GSM network signal strength. The more bars show, the stronger the signal is. When there is no network signal available, it displays ×.
	Indicate that is on the phone.
	Indicate that is in roaming state.
	Indicate that there are new message.
	Indicate that that the phone is in silence mode.
	Indicate that that the phone is in outdoor mode.
	Indicate that that the phone is in meeting mode.

	Indicate that that the phone is in standard mode.
	Indicate that that the phone is In-car mode.
	Indicate that the Bluetooth headset is using.
	Indicate that the phone has been locked
	Indicate that the keypad has been locked
	Indicate that alarm clock or Schedule has been set.
	Indicate the current battery level.
	Indicate that the Bluetooth has been using.
	Indicate that are connecting extra operation.
	Indicate that the T-Flash card has been inserted.

2. Date and time  
You can set to Display the time and date.

## Installing the Battery

Align the golden connectors on the battery with the corresponding connector on the phone and push the opposite end of the battery until it snaps into the place.

**Note:**

Your phone is designed to be used only with Original batteries and chargers. Use of other batteries or charger may cause damage to your phone and the warranty will be void.

## Removing the Battery

Make sure your phone is powered off or you will lose any unsaved information.

Push up the middle of the bottom battery and pull it out.

## Inserting card

Before installing the card, always make sure the phone is switched off and then remove the battery.

Your phone must work with an active card provided by your service provider.

1. Slide the SIM card carefully into the SIM card slot.
2. Make sure that the golden connectors on the card are facing downwards and the beveled corner is on the right. Insert the battery and casing. (make sure the UIM card is on the bottom)

### Note:

If no card is inserted or your card is damaged, then your phone's LCD will display "Insert card" when it's powered on.

If your card is PIN-locked, your phone will display "unlock PIN". You must enter PIN before the phone can start operations. Please contact your network service provider. When inserting card, please keep it away from possible damage caused by static, scratch or bend, and put it where it is not available for children.

## **Charging the Battery**

New batteries are shipped partially charged. Before you can use your phone, you need to charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles. Plug the travel charger into your phone's connector port with the arrow facing up.

Plug the other end of the travel charger into the appropriate electrical outlet (100~230VAC).

When your phone indicates that the battery is fully charged, press the release tab and remove the travel charger.

### **Note:**

Before charge, make sure the battery is installed in the phone.

The battery can discharge gradually even when your phone is powered off. If the battery is drained for a long time, the information stored in the phone could possibly be lost.





If this makes no effect, stop charge and send the charger for repair.

If the battery's charge is extremely low, the LCD may not light even when charge has begun. After a period of charge then the LCD can light.

## **Battery Level Indicator**

Your Phone is equipped with a Lithium Ion (Li-Ion) battery which can be recharged before completely drained.

Battery Level Indicator changes according to the battery's charge volume as below:

-  Full charge
-  Partial charge
-  Low charge
-  Extremely low charge

If the charge continues to get low, the Indicator begins flashing. When the charge becomes drained, your phone gives an alert and the message of “Low battery” is displayed on the screen. Several minutes later your phone will alert again and then turn off automatically.

**Battery performance**

Local network conditions, phone’s settings, game and music playing, data services and frequent operations can affect battery’s standby time.

The battery performance is also affected by charge state, temperature.

	1400mAh (standard battery)
Standby time*	About 100 hours
Talking time*	About 200 minutes

# Basic functions

## Turning Your Phone On and Off

1. Press and hold Power (RED Phone icon) key for more than 2 seconds to turn on your phone.
2. If "Pin Code Check" is set on, the phone will prompt you to enter the PIN number. If only you input proper PIN number, the phone can enter idle display.
3. Press and hold Power Key for more than 2 seconds to turn off your phone.

## Making a Call

Your phone offers a variety of ways to make a call, including Speed Dialing and dial from Call Logs and phonebook.

### Making a Call using the Keypad

To make a call using the keypad from idle display:

Press Numeric keys to dial the phone number.

If you make a mistake, press Clear key to delete last digit.

Press and hold Clear key to delete all numbers.

If you want to dial extension number at one time, long press Right Soft key to input "P" and follow with extension number.

You can dial up to 40 digits at one time.

Press Send key to make the call.

For the extension number, you need to press Send key again.

To end the call, press Power key or Left soft key.

If the phone have two nets working, press G send key using GSM net, press C send key using CDMA network.

**Notice:**

When you enter the numbers, holding 0 can enter “+”.

**Making a Call Using Phonebook**

To dial directly from a Phonebook record from idle display:

Press Right Soft Key to enter phonebook menu, press up and down key to search your contacts.

Select a phone number and press **Send key** to dial it.

If one record has more than one phone number stored and you dial it directly, the first number is selected and dialed out.

To end the call, press or End/Power key.

**Making a Call with a Speed Dial**

After setting your Speed Dial numbers, press and hold the following keypad (Numeric) to dial automatically using your network.

**Answering a Call**

When you receive a call, your phone rings and/or vibrates and displays an incoming call message. At the same time it displays the using net service.

Press Talk key to answer the call.

Press Power key (RED Phone Icon) to reject the incoming call.

**Note:**

When you are talking with the phone and another phone is calling, you can choose to receive or reject it. Talk key to receive the call or Power key to reject the call.

**Read a Message**

When a new message is received, your phone will alert according to your settings and the message unread icon



will be displayed. Press Left Soft key to read it.

### **Recent Calls**

#### ■ Dialed Calls

Press CDMA Send key to view dialed calls list from idle display. Select the record you want with Up/Down keys and press Send key to dial it, or press OK key to view its detail.

#### ■ Received Calls

Press Down key to view the received calls list from idle display. Press UP key to view the missed calls list from idle display. Press left/right key, you can view CDMA received, GSM received and all received. Select the record you want with Up/Down keys and press Send key to dial it, or press OK key to view its detail.

When viewing list of incoming/received/missed calls, press Right Soft key to pop up the submenu. You can do with it.

## Entering Text

Multiple methods are provided making it easy for you to enter names, numbers, and messages on your phone.

Choosing a Text-Entry Method.

Multiple methods are provided making it easy for you to enter names, numbers, and messages on your phone.

Choosing a Text-Entry Method.

The input methods provided as:

1	Eng	Let the phone predict each word as you enter it. Enter English words.
2	P	Input polish.
3	abc	Enter letters.
4	123	Enter numbers only.

Whenever in a text-entry screen, press # key to selecting input method.

Press 1 key to enter punctuations and symbols in any text-entry method except number method. Use Up/Down key to scroll to other page, use Left/Right key to scroll in one line.

Press a number key one or more times to select a letter, number, or symbol showing.

### **Using English or polish Entry Method**

Predictive Text Entry lets you enter a word using one keypad per letter. This software analyzes the combination of letters you have entered using an intuitive word database, and creates a suitable word automatically.

Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypad. Press Up/Down key for other choices.

Press Left/Right key to highlight the word you want.

Press \* key to change the words to initial character capitalized, all capital characters, or all lowercase characters.

Press OK key to enter the word at the cursor location. A space is automatically inserted after the word.

Note:

The database of the predictive input software contains 20,000 most frequently used words. If the word you desired is not in the word choices, you can enter it by Tap Method.

#### **Enter letters**

Press the keyboard to enter the letters one by one. You can press one key many times to choose the right letter, number or symbol.

#### **Entering Numbers**

Press corresponding numeric key to enter the desired number.

#### **Text Entry Submenu**

When entering texts, press Right Soft Key to display submenu.

Eg: press "3" to enter paste mode. Use Left/Right Direction Keys to move to the position you want to paste the copied texts and press OK to paste them.

Note:

Press the number key to select the corresponding function in the submenu directly. E.g.: if the submenu has pop up, press "7" to select an expression.

# Fun

## Music player

You can play the files saved in phone or TF card.  
You can connect your phone to a computer and manually copy or sync music files from the computer to phone memory or to an optional TF memory card in the phone.  
Attach the USB cable to the USB port on your phone and to an available USB port on your computer.

- All songs: view all songs list.
- Playlists: view different list as: recently played, most played or recently added.
- Artists: view different artists' songs.
- Albums: view different albums list.
- Genres: view different genres list.

Press left soft key, you can do:

1. Play: play the current song.
2. Refresh library: refresh the phone's library.
3. Music library details: view the library details.

## Video player










Play the files saved on the phone.  
Press left soft key to select file, press the side key to modulate volume.

## Camera

Take photos

Select it to preview and press the left soft key to view the

function menu on both sides to make different settings:

	Switch video	to		White balance
	Brightness			Timer
	Contrast			Setting the shutter
	Resolution			sound\viewfinder\effects\ quality\continuous shot
				View the photos Take a photo

Press the camera key, and listen to the camera sound, the phone can save the photo in the My file→picture→ photo.

## FM radio

Insert the headset, you can listen to the broadcast program.

Press the left/right key to change channel, press the side key to modulate volume, press the left soft key to use the option menu.

## Recorder

Press the OK key to begin the record, then press OK key to stop the record, then the phone save the file automatically.

Press left soft key to view the option:

1. Play back: play the just record.
2. Record list: view the saved record list.

## Games

There are 3 games in the phone, you can view the help to play.

# Phbook

## Search

From Idle screen, press left soft key to view Main menu, select **Phonebook** and press **OK** to view Phonebook menu.

Press the left/right key search the entries by the name, position or group.

Cap the edit casing, input the name, position or group.

Press up or down key to select the right record, enter corresponding list.

## Add

You can select add to card 1, card 2 or phone.

Let you add records to your phonebook. Select Name and press OK key to input the name for your record.

When stored to phone, one record can have up to four numbers: mobile number, home number, office number and Fax phone. Every number being able to have up to 32 digits each. If you don't want to take use of one/two of them, just press direction key to skip. You can fill in Email-1, Email-2, Additional name, Address, Corporation, title, birthday, remark for the new addition.

When inputting phone numbers, you can input P (pause) with Right Soft key.

e.g.: 123456P213

e.g.: 123456P213

After finishing input of numbers, you can group your record under up to 21 categories.

Then you can select one ringtone for this record.

## Group settings

There are 99 groups on the phone.  
Select one of them, you can set the call rington, SMS rington or edit the group name.  
Press OK key to save the setting.

## Speed dial

Press number key to enter the number. Press the left soft key to view the option menu.  
If set the speed dial, hold the key can call out the number direction.

## Own number

View and edit the card number.  
Press left soft key to save the set.

## Memory status

View the record saved on the phone or card.

## Phone management

You should input the password, the default number is 0000.  
You can select copy entry from phone to card or the opposite.  
Delete the entry by phone, card or selected.



## My files

### **Brew**

View the brew files.

### **Audio**

View the record and voice list.

### **Other**

View the vCalendar and vCard list.

### **Picture**

View the photo list.

### **Video**

View the video list.

Click the phone and TF card icon to view the list.

Click the function icon, you can do:

1. Create folder: create a new folder.
2. Delete: delete the file.
3. Sort: according by name\ date\ size to sort.
4. Properties: view the folder's properties.

## Calls

You can view the list about the recent calls, missed calls, received calls, outgoing calls, rejected calls and call time. When view the call list, press the left soft key to view the option menu:

1. Send: send message to the number.
2. Delete: delete the current number or all number.
3. Save: save the number to the content.
4. Call: call the number.
5. IP call: select the set IP number and call out.
6. Edit before calling: edit the number and call out.
7. Add as speed dial: set the number as speed number.
8. Add as blacklist: set the number as black number.

Select the call time, you can view the dialed timer or received timer. Press the left soft key to reset to 0.

# Messages

## Create SMS

Cap to enter the edit a new message.

You can input the content with the keypad.

Press left soft key to view the "option", you can do:

1. Save: save the message to the draft box.
2. Select text: select the text to view.
- 3.
4. Copy: copy some words to other place.
5. Paste: insert some paste or expressions.
6. Cut: cut some words to other place.
7. Delete: delete the selecting text.
8. Insert template: insert different template.
9. Insert number: select one number and insert to the message.

End the message, press OK key to input the number and send the message.

### Note:

If the message editing is interrupted by incoming calls, alarm clock, power off, the entered texts will be saved temporarily. Next time you enter "Create message", the phone will ask you if the last edit should be continued. If you select "no", the last edit will be discarded.

## Inbox

Select and enter Inbox.

The messages in the Inbox are displayed.

Press Left/Right key to view inbox, outbox, draft.

Use Up/Down key to select the message, and then press

OK key to view its detail. Use Up/Down key to scroll the texts.

When reading the message, you can:

Press the **G Send** key to edit a new message. Press the **C send** key to edit a new MMS.

Press **OK** key / **left soft** key to view the sub-menus.

## Sent

View the sent

## Outbox

Select and press **OK** key to enter Outbox.

The message will save to outbox if fails to send.

The messages in the Outbox are listed.

Use **Up/Down** key to select the message, and then press **OK** key to view its detail. Use **Up/Down** key to scroll the texts.

Press left soft key to view the option menu.

## Drafts

Select and press OK key to enter Drafts.

The messages in the Inbox are displayed. Use **Up/Down** key to select the message, and then press **OK** key to view its detail. Use **Up/Down** key to scroll the texts.

## CDMA Voice mail

View the voice message.

## Settings

**Send mode:** select different mode.

**Preferred storage:** select different storage.

**Validity period:** you can set the validity time is maximum, 1 hours, 12 hours, 1 day, 1 week. Your message is sent to the network first, and then forwarded to the recipient if his phone can be accessed. Validity period is a time period, after which the network will delete the message automatically without sending it when the recipient's phone keeps inaccessible, for example powered off or with Inbox fulfilled.

**Delivery Report:** you can Activate or Deactivate the status report. Delivery report is a confirming notification from the network when your message is sent to the recipient successfully.

**Note:**

This function depends on your local network and the functionality of your recipient's phone.

You can set enable or disable to display the delivery report.

**My signature:** when using the signature, you can edit the content.

**CDMA priority:** you can set the priority about the message.

**Set CDMA replay number:**

Input the number and press left soft key to save it.

### Scheduled SMS

Create scheduled SMS: edit a new message and set time.

Scheduled SMS: view and edit the reserved message.

Expired Scheduled SMS:: view the expired reserved message.

When arrived the set time, the phone will send the message automatically.

### **Multi-recipient delivery report**

Choose and view the group delivery report.

### **SMS manager**

Select copy\ to memory card\ delete the message.

### **Memory status**

You can view the phone and card messages saved in the box.

# Bluetooth

## **Power on/off**

You can use the following feature to turn Bluetooth power on or off:  
You can turn on or turn off the power. You can view the status about the bluetooth.

## **Device's Name**

You can edit the device's name.

## **Visibility**

Select on or off the visibility.

## **Services**

Set the FTP services, Dial-up networking or auto load vCard as on or off.










## **My Devices**

You can find new device, spot "search BT device" to find a new device.

# Camera

## Take photos

Select it to preview and press the left soft key to view the function menu on both sides to make different settings:

	Switch to video	to		White balance
	Brightness			Timer
	Contrast			Setting the shutter sound\viewfinder\effects\quality\continuous shot
	Resolution			View the photos
				Take a photo

Press the camera key, and listen to the camera sound, the phone can save the photo in the My file→picture→ photo.



## Alarm

There 10 alarms to selected.

You can set the mode, ringtone and time. Set it on or off.

In alarm mode, you can set daily, weekly or specify date in a week.

In alarm ring, you can select ring from fixed ring, my audio, MP3 or Records.

When you repeat times, select once, twice or 3 times.

Set the interval as 5,10,15minutes.

## Profiles

Select and enter profile.

In the profiles, you can start 4 modes: General, Meeting Outdoor, in-car, silence. Cap "operation" you can do:

1. Modify: edit the mode. You can set the ringers and the volume. You also can make other advanced settings.
2. Restore to factory: reset the modes as the factory state.

## Music

You can play the files saved in phone or TF card.  
You can connect your phone to a computer and manually copy or sync music files from the computer to phone memory or to an optional TF memory card in the phone.  
Attach the USB cable to the USB port on your phone and to an available USB port on your computer.

- All songs: view all songs list.
- Playlists: view different list as: recently played, most played or recently added.
- Artists: view different artists' songs.
- Albums: view different albums list.
- Genres: view different genres list.

Press left soft key, you can do:

4. Play: play the current song.
5. Refresh library: refresh the phone's library.
6. Music library details: view the library details.

## Tools

### Alarm

There 10 alarms to selected.

You can set the mode, ringtone and time. Set it on or off.

In alarm mode, you can set daily, weekly or specify date in a week.

In alarm ring, you can select ring from fixed ring, my audio, MP3 or Records.

When you repeat times, select once, twice or 3 times.

Set the interval as 5,10,15minutes.

### Calendar

scroll to calendar and press OK key to display Schedule.

Select the right date, press the left soft key, you can do like this:

1. Add event: add the new schedule, fill in the corresponding option. You can set title, date, time, and the mode of the repeat.
2. Scheduled SMS: edit scheduled SMS.
3. Task list: view the task list.
4. View: view the daily or weekly task.
5. Delete: delete current day or delete all.
6. Memory status: view the phone's memory status.
7. Settings: select the time to delete the saved calculator.

### Memo

View the memo list. Press the left soft key to view option:

1. Add: add new memo on the list.
2. Edit: edit the memo.
3. Delete: delete the memo.
4. Send SMS: send the memo as SMS.
5. Export to card: export the memo to the card.
6. Delete all: delete all memo.

## Calculator

Scroll to Calculator and press OK to do arithmetic.  
The direction key can input "+", "-", "\*", "/".  
The direction is same as the common calculator.

## Ebook

Press left soft key, you can do:  
Books: view the books saved in My Files.  
Resume: go on the last reading.  
Bookmark: read the saved bookmark.  
Settings: set the backlight\ auto flip\ font color.

## Templates

Edit the English templates\ expressions and .com.

## Unit Converter

Convert the length, weight, volume, area or temperature.  
Input one number in one edit casing, the phone will gave  
the other number with different unit.

## Currency converter

Select "AON", select the unit, then input the numbers,  
Then select "CNY", view the different result.

## Query home zone

You can query china information\ country code\add home  
zone.  
Input the number, press the OK key to view the home zone.

## Clock

World clock

A world map is displayed. Press Left/Right key to move the  
square icon which represents the city's location. The city's  
name and local time are displayed below.

Time check

Change the status as on, then you can select the interval  
and edit the start and end time.

Birthday reminder

Select "recent birthdays", view the recent birthday list.

Select "set alarm", you can change the status as on, then  
you can alarm time and ringtone.

Stopwatch

Select and view stopwatch.

Split timing: select "start", "timing" and "stop" to control the  
stopwatch.

Lap timing: record the current lap time, the operation can  
consult the above.

Save records: view the saved records.

# Settings

## Profiles

Select and enter profile.

In the profiles, you can start 4 modes: General, Meeting Outdoor, in-car, silence. Cap "operation" you can do:

1. Modify: edit the mode. You can set the ringers and the volume. You also can make other advanced settings.
2. Restore to factory: reset the modes as the factory state.

## Call settings

1. CDMA -IP set

You can set CDMA IP numbers.

Press left soft key, you can delete or delete all numbers.

2. GPS-IP set

You can set GSM IP numbers.

Press left soft key, you can delete or delete all numbers.

3. CDMA supplementary service

Call Waiting

When Call Waiting is activated, if you are in a call and another call is incoming, there will be an alert and the new calling number will be displayed on the screen. You can choose to answer it or reject it. If the new call is answered, the former one will be hold and you can toggle between the two calls by Send key.

Unconditional forwarding

When activated, all calls to your number will be forwarded to a designated number unconditionally.

Select on and press OK key to input a number to which all

your calls will be forwarded. Select off to disable it.

Forward if busy

When activated, all calls to your number will be forwarded to a designated number if you are in call.

Select on and press OK key to input a number to which all your calls will be forwarded. Select off to disable it.

Forward if no answer

When activated, all calls to your number will be forwarded to a designated number if they are not answered.

Select on and press OK key to input a number to which all your calls will be forwarded. Select off to disable it.

Divert if unreachable

If the call can't reach the other side, it will be diverted to the set number.

Cancel all diverts

Cancel all set diverts.

#### 4. GSM supplementary service

Call waiting

When Call Waiting is activated, if you are in a call and another call is incoming, there will be an alert and the new calling number will be displayed on the screen. You can choose to answer it or reject it. If the new call is answered, the former one will be hold and you can toggle between the two calls by shuttle in the option.

Call forward

When Call divert is activated, if you are busy when there are some call coming .You can divert this call to another number.

Call barring

When Call barring is activated, you can barring some numbers to your phone.

#### 5. Select GSM operator



Select the GSM network as automatic or manual.  
If select manual, the user can select the operation.

6. Select GSM band  
The detail can ask the local operation.
7. CDMA international prefix  
Set the status as "on" or "off".  
If set it as "off", when user call out number with "+", the phone will displace the "+" as the prefix.
8. Refusal SMS  
You should edit the content.
9. Other  
Press the left/right key to set the answer method as pressing any key or answer key.  
Set the minute alert as on or off.  
Set the headset auto answer as on or off.

## Security setting

Input the password, the default one is 0000.

1. security item  
press OK key to select the security items.
2. Phone lock  
Set the phone lock as on or off.
3. change password  
Input your old password first, then input new password, then input new one again to confirm it.
4. blacklist  
set the phone reject number or SMS reject number.  
Press the number key to enter the number.  
Press the left soft key, you can save or delete the numbers.
5. set PIN  
You can check PIN and change PIN.

6. restore to factory setting  
Reset all settings to be those of coming out of factory. The phone's password will be needed.  
After resetting, the phone will power off automatically.  
When the phone is powered on again, all settings has been reset.

## Display settings

1. general settings  
Press direction key to set the language, time format, date format or theme.
2. Screen settings  
Set the lightness as medium or other level  
When set as auto-power saving, you can set the start and end time.  
Set the backlight time.
3. standby setting  
Set the idle wallpaper.  
set the operator information as on or off.  
Edit the greeting.
4. set time  
set the GSM time.

## Key settings

Make the auto keypad lock or backlight as on or off.  
If set the backlight as on, edit the start/end time.  
Set the shortcut key on the idle screen.

## Auto power on or off

The phone can sustain auto power on or off, if set as on, you can set the time.

## Bluetooth

### **Power**

You can use the following feature to turn Bluetooth power on or off:

You can turn on or turn off the power. You can view the status about the bluetooth.

### **Device's Name**

You can edit the device's name.

### **My Device**

You can find new device, spot "search" to find a new device.

## USB setting

Select the different function, that will start up When connecting the phone and the computer.

## Memory manager

Format the memory card, select the preferred storage and view the memory status.

## Network mode setting

Select the network mode as 1X only or 1X/EVDO hybrid mode.

## CDMA2000 1x High-speed Data Service

This mobile phone supports CDMA 1x High-speed data service. Connecting the phone to the PC by dedicated data line, Users can surf in internet anytime and anywhere.

Operation step :

First, connect the dedicated data line. The USB end is connected to PC and another end is connected to mobile phone, then confirm this connection is successful.

After connection, PC will find this hardware device and search the driver for installing. Notice: because USB interface is used, users need the specific USB driver, which is needed to buy with the data line.

Open the "control panel" of PC, and select "phone and modem", from which users can see "Hisense USB CDC Modem" has been set up successfully which denotes the connection is success.

Open the "control panel" of PC, and select "network and dial" and then select "network connection" to create the new connection. ( setting mode is different according to the operation system).

Requirement : Depending on Service Provider (Please refer to your service provider)

Dial #777

User: card

Password: card

Dial up the highest speed is 153.6kbps. The data speed is different according to the local network.

Notice:

Because a big amount of users are centralized in one cell, the dial connection will be effected, please try more. During connection, because the change of the wireless environment, the connection perhaps interrupted, please connect again. After interrupt, please confirm the setting of the phone to the "PC connection" state. In some specific instance, if the mobile phone can not be connected to PC, please reboot PC or phone. The user name and password perhaps be different according to the local network, please refer to the local operator for details.