Figure 1 Woodstock Sonos Controller (M/N: CR200) Cover Removed



Figure 2 Woodstock Sonos Controller (M/N: CR200) Battery Front



Figure 3 Woodstock Sonos Controller (M/N: CR200) Battery Back



Figure 4 Woodstock Sonos Controller (M/N: CR200) Label on Battery



Figure 5 Woodstock Sonos Controller (M/N: CR200) Main Board Removed



WOODSTOCK SONOS CONTROLLER (M/N: CR200) LCD PANEL FRONT



FIGURE 7 WOODSTOCK SONOS CONTROLLER (M/N: CR200) LCD PANEL BACK

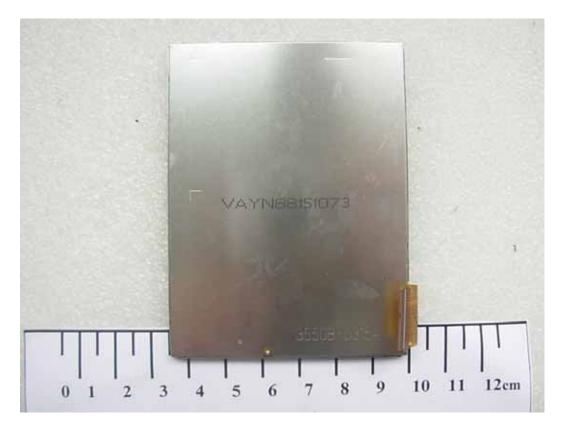


FIGURE 8 WOODSTOCK SONOS CONTROLLER (M/N: CR200) MAIN BOARD (COMPONENT SIDE)

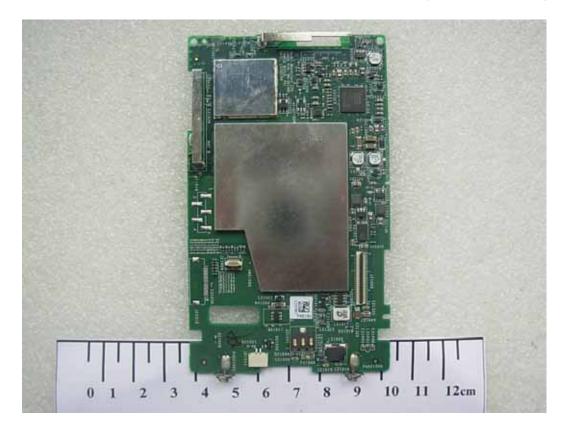


Figure 9 Woodstock Sonos Controller (M/N: CR200) Main Board (Soldered Side)

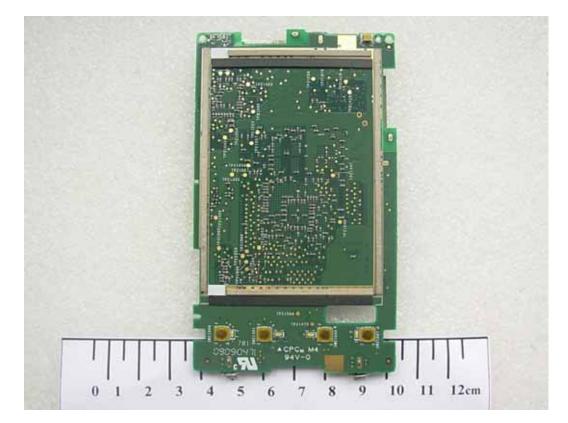


FIGURE 10 WOODSTOCK SONOS CONTROLLER (M/N: CR200) ANTENNA#1 ON MAIN BOARD



FIGURE 11 WOODSTOCK SONOS CONTROLLER (M/N: CR200) ANTENNA#2 ON MAIN BOARD



FIGURE 12 WOODSTOCK SONOS CONTROLLER (M/N: CR200) MAIN BOARD (SHIELDED SHELL REMOVED)

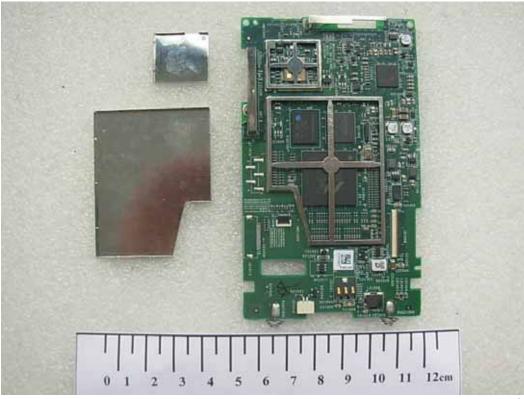


FIGURE 13 WOODSTOCK SONOS CONTROLLER (M/N: CR200) MAIN BOARD (INSIDE VIEW#1)



Figure 14 Woodstock Sonos Controller (M/N: CR200) Main Board (Inside View#2)

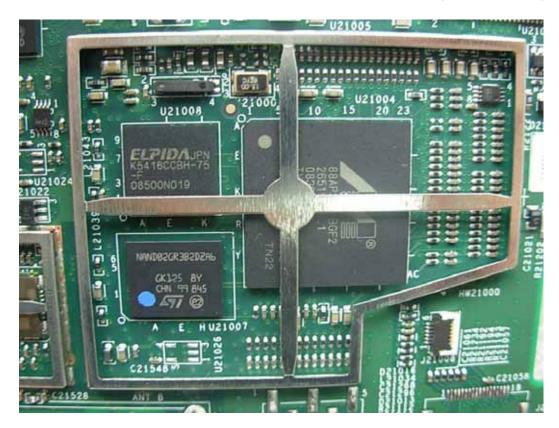


FIGURE 15 WOODSTOCK SONOS CONTROLLER (M/N: CR200) DOCK & CHARGER



FIGURE 16 WOODSTOCK SONOS CONTROLLER (M/N: CR200) LABEL ON CHARGER

SC	NOS	Model No: L I/P:AC 100-2 O/P:DC 5V	40V 50/60Hz 0 3A
c	ULUS	LT.E.POWER SUPPLY SEEK E201055 LEVEL3	
	.P.S.	⊖-€-⊕	
S/No		VEL: 115V 0562219	MADE IN CHINA

FIGURE 17 Woodstock Sonos Controller (M/N: CR200) Debug#1



FIGURE 18 Woodstock Sonos Controller (M/N: CR200) Debug#2

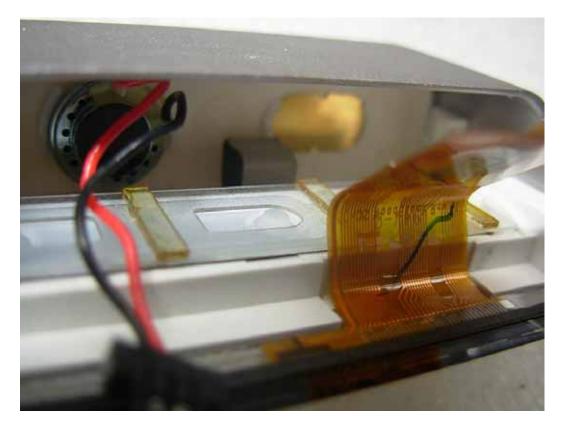


Figure 19 Woodstock Sonos Controller (M/N: CR200) Debug#3

