



## Editing Group Name

### 1 To Add Group Name




Select Edit Group from Phonebook



Press **1**



Enter the group name and press

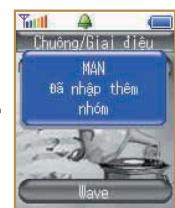

Select the Bel / Melody for the group and press



\* Up to 10 groups can be added including basic groups such as family, friends, company, and unspecified.

### 2 To Edit or Delete Group



Select Edit Group from Phonebook and select Change Name.



Select the group to edit or delete and press



Enter the group name and press



Select the Bel / Melody for the group and press





## Deleting All Numbers from Phonebook



Select Phonebook and press  
  
 and execute Delete All



Enter the password



Select 'Yes' and press



## Checking My Number



Select My Number from Phonebook




To finish, press




## Electronic Dial Function

### Electronic Dial using Pause

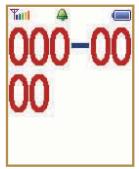


Press the phone number

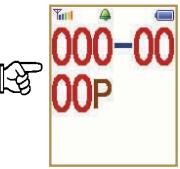

Press .  
Pause symbol 'p' will be displayed.

- This function is convenient to use when you need to press a number given in a voice message, when using the Auto Answering System (ARS).

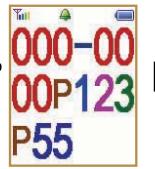

After entering the number to be dialed electronically, press .

- Insert the pause symbol before the chosen number, to electronically dial the number following the pause symbol.
- The pause symbol can be used in more than one place.

When you hear the message asking you to enter the number, press .

The number following the pause will be electronically dialed.

### 1 Introduction to Menu and How to Use Menu

1. Press .

2. Press .

Press select the 'Camera'.

Press .

1. If you take a shot with the folder opened.

- ① Camera shortcut key - Zoom, - Contrast
- ② Press and hold in Shot Mode to set/cancel the flash.
- ③ If you take a shot with the folder closed.
  - ① Press camera key to execute Shot Mode.
  - ② Press briefly to adjust the contrast.
  - ③ Press and hold to take another shot, without saving after shooting.
  - ④ Press briefly to invert.
  - ⑤ Press and hold to end camera function.
- ※ The Camera will not operate when the battery is low.



## Camera

## Taking and Saving Photos



Select Digital Camera from the Camera menu.  
Select Still Shot.



Press to take a shot.



Press to enter the name of the photo to save.




Press to save.

- Press in Shot Mode to adjust resolution, ZOOM, image quality, contrast, flash and effects.
- To cancel after shooting, press .

\* You can move the photo you want to , select/save the photo after search.



Select Digital Camera from the Camera menu.  
Select Continuous Shot.

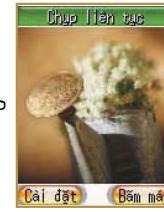

Press .



Press and enter the name of photo to save.



Press to save.

- Continuous Shot setting: 9 Times/ 12 Times/ 15 Times (Default: 9 Times)  
Press in Shot Mode to adjust resolution, ZOOM, image quality, contrast, flash and effects.
- Continuous shot speed (times) may be irregular due to variations in the camera sensor recognition or the brightness of the shooting environment.
- You can save photos one by one rather than saving all of them at once after continuous shooting. Press OK to save the first photo, and then go on to the next photo to save.

## Taking Continuous Shots

## Taking Sticker Shots



Select Digital Camera from the Camera menu.  
Select Sticker Shot



\* Up to 21 kinds of images are supported.




Press to set.



Press and enter the name of the sticker to save.



Press to save.

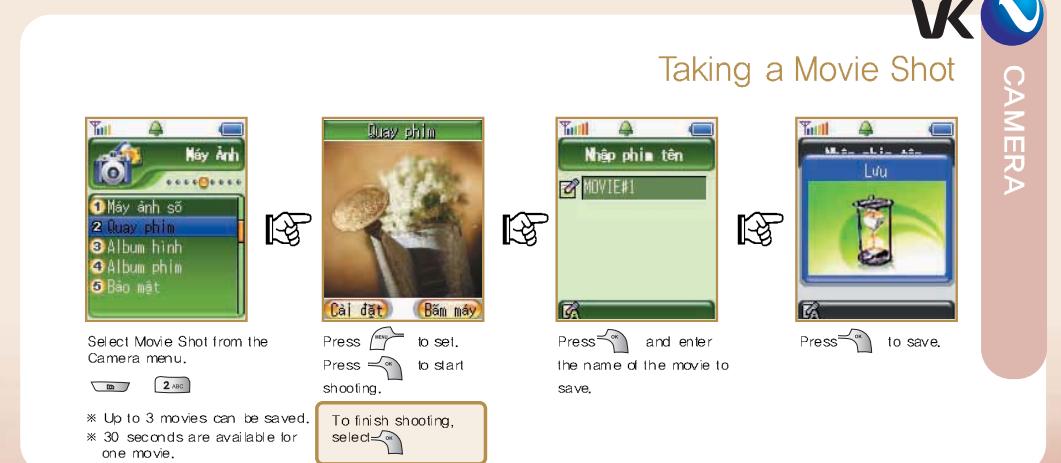

Select Movie Shot from the Camera menu.



\* Up to 3 movies can be saved.  
\* 30 seconds are available for one movie.



Press to set.  
Press to start shooting.



Press and enter the name of the movie to save.



Press to save.

## Managing Photo and Movie


- You can save photos in the photo box and use them later to set the background.
- Since images only are saved when movies are shot, there is no audio (motion capture function)



Select Manage Photo from the Camera menu.



\* Up to 50 photos can be saved.

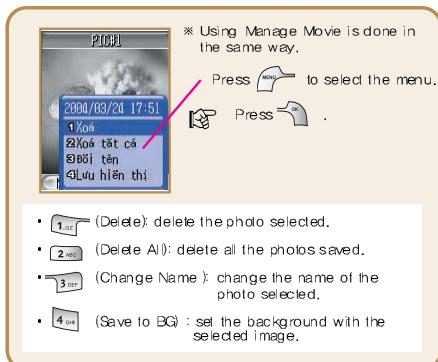

## Locking Photographs



Select Lock Photographs from the Camera menu.



Enter your password.  
(Default: 0000)



Press to select Lock/Unlock.

Press to apply.

① Introduction to Menu and How to Use Menu

1. Press  .

2. Press  and select 'Remo./Game' with  , and press  .



Remocon/Game



## Using Remote Controller



Select Remocon from the Remocon/Game menu  
 MENU



or

Press to execute the remote controller immediately.

\* The remote controller may not operate or may operate abnormally with some products (imported products, complicated products, new products).  
 \* Since the remote controller generates data while keys are pressed, the phone may temporarily not receive signals.



To use another company's remote controller properly for selected products (TV/DVD, etc.), select the manufacturer with .

In addition, you can also select the product with .

To use another company's remote controller, press to select the product, press to select the manufacturer, and press .



## Using Remote Controller Setting



Select Remocon



Select Remocon  
 MENU



Select the product



Select the manufacturer of the product and press .

## Playing Puzzle Games



Select the Remo./Game



Select Puzzle



A help menu on the game will appear. Refer to this help menu.



Press to start the game.

- Mobile phone batteries are drained fast when the games function is used.
- If no key is pressed for a certain amount of time (about one minute) during a game, the game will be automatically terminated.
- Press Help for more details.

### 1 Introduction to Menu and How to Use Menu

1. Press and press .

2. Press and select 'PIMS' with .

Press .



- ① Lịch biểu
- ② Bí kíp
- ③ Bảo thức sáng
- ④ Bảo thức
- ⑤ Ngày ghi nhớ
- ⑥ Ghi nhớ thoại
- ⑦ Calculator
- ⑧ World Time
- ⑨ Unit Converter
- # Set Time & Date

## Using the Scheduler Function

### 1 To Set Schedule



 
Select Schedule from PIMS



1.0Z



Select the date and press  to set the schedule



1.0Z



Enter the time and press  to move to the next field



1.0Z



 
Enter text and press 



1.0Z




Select the alarm time and press 




1.0Z



 Select bell/melody and press 



1.0Z

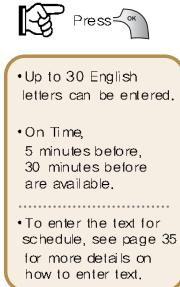

Press 

- Up to 30 English letters can be entered.
- On Time, 5 minutes before, 30 minutes before are available.

- To enter the text for schedule, see page 35 for more details on how to enter text.

## ② To View/Edit/Add/Delete Schedule



Select Scheduler  
from PIMS

MENU 7 PRS 1.QZ

### ③ To Delete All Schedule



Select Scheme from RIMS

Press  MENU

Press 

Select 'Yes' and  
press = 

## Using Memo

### 1 To Enter New Memo



\* Up to 10 memorial day can be stored.

Press OK

Up to 200 English letters can be entered including space.

The time the new memo was created will be automatically saved.

If there is an existing memo, press OK to select New Memo

### 2 To View/Edit/Delete Memo



To Enter/Delete/Delete All, press OK

- 1 : enter new memo.
- 2 : delete the memo selected.
- 3 : delete all the memos.

To check the memo text press OK

- 1 : edit the memo.
- 2 : delete the memo.

## Using Morning Call



Select Morning Call from PIMS



 
Press Set/Cancel, Time, Alert Interval and Melody to select and press .



Two alarm clocks are available. If you set the alarm in advance, alarm rings for about 3 minutes at the time you set.  
 To stop, press or open the flip and press any button.



Select Alarm from PIMS.



Select 1 or 2.



Press Set/Cancel, Time, Alert Interval and Melody to select and press .

## Using Alarm



\* How to enter detailed is same as morning calls (see page 91).

## Using Memorial Day

### ① To Set a New M-day




Select Memorial Day from PIMS.



Enter the name and time of the memorial date and select the alert interval.

\* Up to 10 memorial day can be stored.

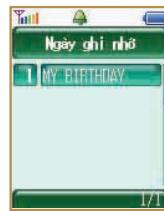

\* Alert Interval  
 • No Alarm , Alarm Once  
 • Daily Alarm(alarm rings at the time you set regardless of date)

### ② To View/Add/Edit/Delete M-day



Select Memorial Day from PIMS.



Select the memorial day to check.



To Add/Delete/Update All, press

- Press : add the M-day.
- Press : delete the M-day selected.
- Press : delete all the M-days.

To View M-day, press

To Edit/Delete M-day, press

- Press : edit the M-day.
- Press : delete the M-day selected.

## Using Voice Memo

### 1 To Record a Voice Memo




Select Voice Memo from PIMS.



Select Record and press



To finish recording press

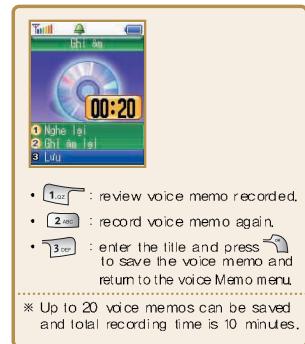

### 2 To Check Voice Memo



Select Voice Memo from PIMS.



Select Review and press



To review voice memo, press



To Play/Info/Delete/Delete All, press



- 1. OK: play the voice memo selected.
- 2. OK: check the voice memo information.
- 3. OK: delete the voice memo selected.
- 4. OK: delete all the voice memo.

## Using Calculator



## Checking World Time



## Using Unit Converter



Select Unit Converter from PIMS.



To enter the decimal point, press



Select the type of unit and press



 
Press to select the type of unit, enter the number for conversion, press .



Select the conversion unit and press .



Select Set Time & Date from PIMS.



Press the number key to enter year, month, date, time and minute.



Enter if current time is not displayed. If the user re-enters the time, the new time will be displayed.

If you press a wrong number, press to move to where you entered it wrongly and re-enter.

## Setting Current Time

① Introduction to Menu and  
How to Execute Menu

1. Press  and press .
2. Press  to select "Setting" with  and press .



- 7. Reset phone
- 8. Manage memory
- 9. Set modem
- \* Version
- # SWAP Setup

## Changing Password



Select Password Chg. from Setting.



Enter the password. (Default 0000)



Confirm the new password.



- If you forgot your password, you will need to take the unit to your service center.
- Passwords are not given out to anybody except the user and the phone manufacturer does not take any responsibility for damage due to password disclosure.

## Selecting Language




Select Language from Setting.



Select Vietnamese or English and press 



## Setting the Lock

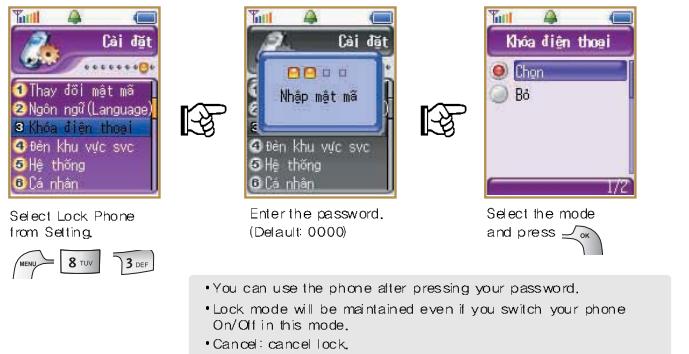

Select Lock Phone from Setting.

8 TÙM 3 DEF

- You can use the phone after pressing your password.
- Lock mode will be maintained even if you switch your phone On/Off in this mode.
- Cancel: cancel lock.

Setting International Auto Roaming

1. Thay đổi mật mã  
2. Ngôn ngữ (Language)  
3. Khóa điện thoại  
4. Bên khu vực SVC  
5. Hệ thống  
6. Cá nhân

Chọn đúng hệ thống để thực hiện cuộc gọi

SLD Telecom

Auto Select

A-Band(CHN etc)

B-Band(USA etc)

Hệ thống

Cá nhân

Select System from Setting

8 TÙM 5 ML

- This function is required when you use the mobile phone you overseas or other communication providers.
- Your phone will not be in service if you select another area in your country.
- Contact your service provider for subscription to this service and more details on this service.

Your phone is turned off and on automatically.

Setting Service Area Lamp

Select SVC, Area Lamp from Setting

Select Set or Cancel and press .

- When this function is set, the lamp on the front of the phone will blink when in the service area.
- The lamp will not be switched on in a No - Service area.

106

SETTING



## Setting Privacy

Select Privacy  
from SettingEnter the password  
(Default 0000)Select Set or  
Cancel and  
press .

1/2

## Privacy Function

When Privacy is on, your phone will ask you to enter the password whenever any button is pressed apart from the Send button, so that other persons cannot change the functions in your mobile phone.



## Reset Phone

Select Reset  
Phone from Setting

Enter the password



Select the initialization  
you want and  
press .



When you select Yes/No  
and press , your phone  
will automatically turned  
off and on.

- Reset Function: initialize all user settings and the mobile phone functions
- Reset All: delete all data except the subscriber's number.


## Manage Memory



Select Manage Memory from Setting.



You can download any number of Music Bell or Image within the total memory size regardless of type.

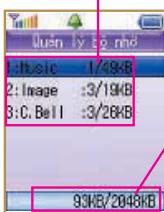


To view the contents, select the item you want and press .

- Number /size of contents
- Total memory size: 2Mbytes
  - Image: up to maximum capacity
  - Music Bell: 20
- Capacity used/Total capacity
- Select the item to check, press  and press  to view the contents in name and file size.
- To delete the contents, press 
  - 1.OK** : delete
  - 2.ABS** : delete all

## Internet Setup



 Select Internet Setup from Setting.



Since your phone is set for the Internet by default, do not change it if not unavoidable!

### To Set Initial URL

This function enables you to set the initial URL for using the Internet. (Default: <http://wap.stone.com.vn>)

### To Set Gateway and SWAP E-mail

This function enables you to set the gateway if the service provider extends the gateway and add or delete the address. (Default: <http://hgb.stone.com.vn>)

This function enables you to set the E-mail address in order to send and receive the E-mail (Default: <http://mail.stone.com.vn/bin/wap/main.exe>)

### To Initialize

This function enables you to initialize the initial URL and gateway changed by the user.

1 Introduction to Menu and How to Execute

1. Press  and press 
2. Press , select "Call Setup" with  and press 



## Entering and Setting Auto Dial

## 1 To Set/Cancel Auto Area



Select Auto Dial from Call Setup.



\* When Auto Area is set, the area number is automatically displayed in the standby screen

Press **1.02** to select Auto Area, enter the area number, select the Set/Cancel and press **OK**.

Select the Auto Dial from the Call Setup.

Press **2.02** to select the international number, enter the international code, select the Set/Cancel and press **OK**.

\* Press and hold 0 in standby mode to execute the International number

## 2 To Set/Cancel International

## 1 To Enable Voice Answer



Select Voice Answer from Call Setup



Select Voice Answer from Call Setup

Enable/disable with **OK** and press **OK**.

\* You can enable voice answer after recording a greeting see page 116.



## ② To Set Voice Answer Status



Select Voice Answer from Call Setup



[2 ABC] : Press (Screening)

[3 DEF] : Press (Wait Time)

[4 GHI] : Press (Select Greeting)

Select the status you want and press . To finish, press .

Screening ('Cancel' by default)

Select 'Set' to enable the caller to listen to the greeting you recorded.

Wait Time ('After 5 secs' by default)

You can set the time after which incoming calls transfer Voice Answer.

Select Greeting (available after recording a greeting)

You can select the greetings for Voice Answer.

## ③ To Record Greeting



Select Voice Answer from Call Setup



Press to pause the recording



To finish recording, press .

Press to select Record Greeting. Select User 1, User 2 or User 3 and press .

- [1 JKL] : listen to the greeting recorded
- [2 ABC] : record the greeting again.
- [3 DEF] : save the greeting recorded.

4 To Check Message in Inbox after Voice Answer



Select Voice Answer from Call Setup



Press to listen to the messages received.



Press to select Inbox



Select the message

1.00 : play the message selected.  
 2.00 : view information about the message selected  
 3.00 : delete the message selected  
 4.00 : delete all the messages

## Selecting Answering Method

### Open Folder

Open the folder to answer the call when there is an incoming call.

### Press Button


Open the folder and press any key to answer the call when there is an incoming call.



Select Receive Choice from Call Setup



Nhận cuộc gọi

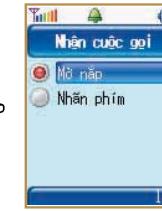

1/2

Press to select your choice and press



## Restriction of Various Functions



Call Setup menu



(Incoming Restrict)



(Caller ID)

Enter the password (Default 0000)

Select Set/Cancel or  
Display/Restrict and  
press =.

- Incoming Restrict: when there is an incoming call while "Incoming Restrict" is enabled, your phone displays "Incoming call is restricted". You can make calls or use other functions.
- Caller ID: when 'Caller ID' is set to 'Display', you can see the caller's phone number. (Contact your service provider for more information since this function is offered by service provider.)

## RECORD

## About batteries

### 1 When the battery is exhausted.



- If the battery is dead, the battery icon turns .
-  If the icon and the 'No battery' message appear, the cellular phone will shortly switch off. Please charge it.

### 2 Battery charge time and average battery life

| Classification     | Type | Charge time | Average battery life |                    |
|--------------------|------|-------------|----------------------|--------------------|
|                    |      |             | Operating Life       | Standby Life       |
| Standard (830 mAh) |      | 140 minutes | About 120 minutes    | About 90~160 hours |

- The charge time is based on the qualifying charger provided.
- The charge time may be very depending on the battery condition.
- The battery life is measured in compliance with the Standards concerning cellular phone life measurement and its notation of a cellular phone established by the Korea Consumer Protection Board.

#### Batteries are consumables

Batteries are consumables. As a battery is used, its life is gradually reduced. Purchase a new battery when the battery life is reduced to about half its initial battery life.

### 3 Tips about battery life

- If you use additional functions such as the messaging service, games, and the Internet, the battery life is reduced.
- The battery life may vary depending on the service type (Slot mode) of the base station that serves the cellular phone.
- If you stay in a No Service for a long time, the standby life is radically reduced due to high.
- The battery is consumed faster in an area where there are few radio waves or where channels (base stations) overlap.
- Making/receiving lots of calls reduce standby life radically.
- Since batteries are consumables, the battery life is reduced slowly during use.

#### What is slot mode?

Cellular wireless base stations communicated at regular intervals to identify the location of each cellular phone. This is called 'slot mode'. The more the number of communications are shorter the standby life. The communication cycle is determined by the wireless base station and is about 2.5 to 5 seconds.

### 4 Cautions and warnings about battery usage

- Be careful not to drop batteries, and do not disassemble them at random.
  - This may cause failure or the reduction of battery life, overheating.
- Do not put batteries near a heater or microwave!
  - This may cause an explosion.
- Use only the charger specified.
  - Other chargers may cause failure, overheating or explosion due to the over charge of the battery.
- Be careful not to allow the battery or the objects overheating with metal objects such as necklace or coin!
  - This may cause fire from the battery or the objects overheated.
- Do not place batteries in an area that is enclosed and excessively hot; keep them in an area that has a temperature range of between 0°C to 40°C.
  - It may alter the exterior look of the battery or cause failure.
- Keep batteries out of the reach of children.
  - Do not put batteries in your mouth and do not use a damaged battery. If leakage from a damaged battery contaminates the skin, clean it off in running water for one to two minutes.

## Menu Map

### Display

- 1.Image Select
  - Idle mode
  - Incoming call
  - Power On
  - Power Off
  - SWAP Conn.
  - Delete Image

### 2. Menu Style

- Default / Spring / Summer
- Autumn / Winter / The Sea
- Butterfly / The Stars / Night
- Sports / Car Racing

### 3. Phone Name

### 4. Backlight

- Set Time
  - 8 / 15 / 30 Seconds On
  - 1 Minute On
  - Backlight Mode
  - Main. LCD Contrast
  - Ext. LCD Contrast

### Sound

- 1.Bell Select
  - Bell
  - Funny Melody
  - Classic Melody
  - Music Bell
  - CharacBell

### 2.Bell / Vibrate

- Bell · Melody / Vibrate
- Lamp / Vibrate& Bell
- Bell & Vibrate

### 3.Ring Volume

### 4.Key Sound

- Drum / Piano
- Pup / Waterdrop
- Silence

### 5.Time Sound

- Set / Cancel

### 6.Event Sound

- OK / Notice
- Folder
- Conn. Tone
- Disconnect

### Phonebook

#### 1.Store Number

- Add Group
- Change Name
- Del Group

#### 2.Find Number

- By Name
- By Number
- By Location
- By Group

#### 3.Outgoing Call

#### 4.Incoming Call

#### 5.Missed Call

#### 6.Edit Group

#### 7.Delete All

#### 8.My Number

### Message

#### 1.Send a Msg

- New Message
- Stored Message
- Phone Page

#### 2.Message Box

- Received Msg
- Voice Msg
- Message Box
- Sent Msg
- Hold Msg

#### 3.Msg Box Setup

- Alert Setup
  - Alert Frequency
    - Once / Every 2Min. / Off
  - Msg Alert
    - Lamp / Alert Type 1,2,3
  - Msg Display
    - Sel / Cancel
- Priority
- Message Log

**Camera**

- 1.Digital Camera
- Still shot
- Continuous shot
- Sticker shot

- 2.Movie Shot

- 3.Manage Photo

- 4.Manage Movie

- 5.Lock Photographs
  - Lock / Cancel

**Remo./Game**

- 1.Remocon
- TV
- VTR
- DVD
- KARAOKE
- SETTING

- 2.Puzzle

**Pims**

- 1.Scheduler
- 2.Memo
- 3.Morning Call
- 4.Alarm
- 5.Memorial day

**6.Voice Memo**

Record

- Review / Rerecord / Save
- Review

7.Calculator

8.Worldtime

9.Unit Converter

- Length
- Weight
- Volume
- Width
- Temperature

#.Set Time&Date

**Setting**

- 1.Password Chg.
- Enter Password

2.Language

Vietnamese / English

- 3.Lock Phone
- 4.Svc Area Lamp
- 5.System
- 6.Privacy
- 7.Reset Phone

8.Manage Memory

9.Set Modem

- Alert Type
- Auto Receive
  - Cancel
  - Modem
  - Fax
- Tx Rate
  - Fax Only
  - 19.2 Kbps
  - 115.2 Kbps

\*Version

#.SWAP Setup

**Call Setup**

- 1.Auto Dial
- Auto Area
- International

2.Voice Answer

Answer

- enable / disable
- Screening
  - enable / disable

Wait Time

- after 3sec / 5sec / 10sec

Select Greeting

Record Greeting

Inbox

3.Receive Choice

Open Folder/Press Button

4.Incoming

Set / Cancel

5.Caller ID

Display / Restrict

6.Call Time

Del Last Call / Del All calls / Delete All

#### Using Environments

- Be careful around electronic devices
- Do not use the mobile phone around pace maker.
- Please don't use it around the medical devices which can be affected by RF(Radio Frequency).
- Some hearing aids can be malfunctioned by the electrical wave from the mobile phone.
- Please check with manufacturer of the hearing aid.
- Please don't use it in the dangerous environment with explosives.
- The electrical frequency signal emitted from the phone may cause malfunction to electrical system in the car.
- Please turn off the phone aboard the airplane.
- Please don't use it in the "No mobile phone" warning place.

#### Maintenance

- Please be cautious when carrying the phone in a bag or pocket with other metal objects.
- Please don't put it in any heating devices such as stove, microwave range, or high-pressure cooker.

- Please don't swing it by holding the attached string.
- Please set it to vibrating mode in public places to not interrupt other people.
- Please keep mobile phone, or its batteries out of children's reach.
- Please keep it away from dusty, filthy, or stained places.
- Please keep in mind the operation temperature range of -20°C~50°C, and not to keep it away extremely hot or cold.
- Please follow the instruction on correct usage.
- Please don't use toxic chemical substance, or strong detergent to clean the product.
- Please don't color it.
- When the cover finish is chipped and the exposed material causes allergy, tickling, swelling, or eczema, please discontinue the use, and consult a doctor.
- Please use the accessories such as the phone battery, charger, or other supplies that are VK designated.
- Please don't install any other antenna that supplied by VK.
- Be careful not to cause an impact to the product such as bending, twisting, etc.
- Make sure not to sit on the phone by putting it in your back pocket.
- Please don't wear it around the waist.
- Please don't leave the product close to devices using magnetic material such as credit card, calling card, bank book, bus ticket, etc.
- Please don't use it for other purpose.

## TROUBLESHOOTING

- **When the mobile phone malfunctions while in use, or doesn't work at all,**
  - Separate the battery from the unit, then re-insert. If the problem persists, please contact a service center.
- **When can't see the display screen well,**
  - Using the phone under direct sunlight can cause such. Please use it in the shady place, or where there is enough light. Please adjust the brightness of the screen.
- **When the phone malfunctions while in use, or the power doesn't turn on,**
  - Separate the battery from the unit, then re-insert.
- **When the battery life is different from the manual,**
  - The battery life will shorten when charging and discharging continues for a prolonged time. The battery life varies if it is left in cold or hot places. (See page 17)

## About Electrical frequency

While the power is turned on, the phone sends and receives high frequency energy. Information and Communication Department has posted safety regulation on the effects of this kind of high frequency energy on humans and this phone is made in compliance of such regulation. This electrical frequency protection regulation defines the maximum allowable exposure limit, and this limit includes extra allowance to protect all, regardless the age or the health condition. The defined exposure limit is 1.6w/kg. Cell phones, under the Information and Communication Regulation #2000-93 (Electrical Frequency Absorption Measurement Standard), it must pass Electrical Frequency Absorption Rate, or SAR(Specific Absorption Rate) in order to be able to market the product. For detailed information on electrical frequency and the SAR values on our models, Please refer to the homepage below.

- EMF(<http://www.emf.or.kr>) / Radio Research Laboratory (<http://www.rrl.go.kr>)
- FCC (<http://www.fcc.gov/oet/rfsafety>) / CTIA(<http://www.wow-com.com>)
- FDA(<http://www.fda.gov/cdma/consumer>) / UK NRPB(<http://www.nrpb.org.uk>)
- WHO(<http://www.who.int/emf>)

In accordance to Information and Communication Department Regulation #200-93(Electrical Frequency Protection Act), only the VK supplied accessories or consumables can be used to be covered under this protection. Otherwise, such protection cannot be guaranteed.

----- Additional page -----

**Caution:** Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC RF EXPOSURE INFORMATION

### Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damaged the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

#### **Body-worn Operation**

This device has been tested for body-worn operation and meets FCC RF exposure guidelines, and positions the handset at a minimum of 1.5Cm from the body. Use of any body-worn accessories may not compliance with FCC RF exposure guidelines.

*For more information about RF exposure, please visit the FCC website an [www.fcc.gov](http://www.fcc.gov)*

#### **Specific Absorption Rate (SAR) for Wireless Phones**

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user for a wireless handset. The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SAR's do not represent a variation in safety. All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6W/kg are considered safe for use by the public.

The highest reported SAR values of 1.500 are:

CDMA mode (Part 22)- Head: 1.500 W/kg; Body-worn: 1.290 W/kg

#### **FCC Radio Frequency Emission**

This phone meets the FCC Radio Frequency Emission Guidelines. FCC ID number: SBWVK100M

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/fccid>