

## PLAZZO RF REMOTE CONTROL

# User's Manual

### 1. Introduction :

The RF remote control for curtain controller is consist of the keypad like the picture and to use indication LED for operating.

### 2. Transmitting Frequencies :

The RF remote control can transmit a frequencies( 433.92 MHz ).

The device will transmit 433.92MHz carrier if press one key of Open, Stop, Close, Reg keys.

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. And (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

The transmitter will be turn off automatically after 10 seconds if a keypad will be pressed continuously.



### 3. Electrical Specifications (PLAZZO)

Items	Specifications	Remarks
Model Name	PLAZZO	
Frequency	433.92MHz	
Frequency drift	±100KHz	
Transmitter Power	Max. +0dBm	
Antenna	PCB Pattern Antenna	
Power Supply	2x AAA Alkaline battery	
Modulation method	ASK/OOK	
Communication method	Simplex	
Stand by Current	Below 1uA	
Transmit Current	Max. 10mA	
Operating Temperature	0°C ~55°C	

#### **4. To Program RF Remote controller ID to Curtain Controller**

1. Press for few second a program button on curtain controller.
2. Press for few second a registration button on the remote controller.
3. And the Curtain controller will register your rf remote controller.

#### **5. To operate**

1. Register your remote controller to the curtain controller.
2. Press any key on remote controller, and blinks led.
3. Curtain controller makes to operate a curtain (sheer and drapery) (raising, lowering, opening, closing, stopping).