

Programming Instruction

1. Open the battery cover, find S, C buttons and a programming switch
2. Press the (S) set button and hear 1 beep
3. On keypad, punch in desired code from 2 digits up to 8 digits, then press the unlock button on keypad to enter this code
4. Engage lock by pressing the lock button on the keypad
5. Test the lock by pressing this code then unlock key
6. Repeat procedure 2 and 3 to program up to 6 different sets of code

To Delete Or Erase A Code

1. Press the (C) cancel button in the battery module
2. Enter the code desired to delete, then press the unlock button, hear 2 confirmation beeps
3. Repeat 1 and 2 to delete other codes

To Erase All Code Previously Programmed

Press the C (cancel button) and hold for 10 seconds, then hear 2 confirmation beeps.

This reset the lock

Lock Function will NOT operate without any code preprogrammed

Auto Relock Function

Switch the function button to position (1), the unit auto relock in 10 seconds after every unlock entry.

Switch the function button to position (2) to deactivate the Auto Lock Function

Factory setting is at position (2)

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE