LEASE READ BEFORE OPERATING THIS EQUIPMENT.

IMPORTANT SAFETY INSTRUCTION



4. Follow all instructions

This device complies with part 15 of the FCC rules. Do not use this product near water and moisture, for Operation is subject to the following two conditions: example: near a bathfub_washbowl_kithen sink or laund (1) this device may not cause harmful interference, and tub; in a wet basement; or near a swimming pool. (2) this device must accept any interference received, including interference that may cause undesired operation.

assure continued compliance, follow the attached stallation instructions and use only shielded cables when ecting to other devices. Modifications not authorized by anufacturer may void user's authority to operate this

amplifiers) that produce heat. Before using the unit, be sure to read all operating nstructions carefully. Please note that these are gener precautions and may not pertain to your unit for example

this unit may not have the capability to be connected to an outdoor antenna. Read these instructions

All the safety and operating instructions should be read before the products is operated.

2. Keep these instructions The safely and operating instructions should be retained for future reference.

All warnings on the product and in the operating instructions should be adhered to.

All operating and use instructions should be followed: 5. Do not use this apparatus near water

6. Clean only with dry cloth plug this products from the wall outlet before cleaning not use liquid cleaners or aerosol cleaners. Use a dry

This product should never be placed near or over a

proper ventilation is provided or the manufacturer's

8. Do not install near any heat sources such as radiator

heat registers, stoves, or other apparatus (including

instructions have been adhered to.

radiator or heat source. This product should not be place

in a built-in installation such as a bookcase or rack unles

cloth for cleaning.

7. Do not block any ventilation openings. Install in accordance with manufacturer's instructions. its and openings in the cabinet and in the back bottom are provided for bentilation, to ensure reliable operation of the product and to protect it from overhead hese openings must not be blocked or covered. The penings should never or over a radiator or heat sour This product on a bed, sofa, rug or other similar surfac

Never push objects of any kind into the product through

to avoid injury from tip-over.

9. Do not defeat the safety purpose of the polarized or grounding-tupe plug. A polarized plug has two blac with one wider than the other. A grounding prong, the wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, nsult an electrician for replacement of the obsolete

10. Protect the prower cord from being walked on or pinched particularly at plugs, convenience receptacle

11. Only use attachedments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the nanufacturer, or sold with the apparatus. When a cart is used, use caution when

moving the cart/apparatus combination Portable Cart Warning

3. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or lug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15. Power Source The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consu your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system extreme care should be taken to keep from touchi such power lines or circuits as contact with them migh

can result in a risk or fire or electric shock.

as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product. dropped or the unit does not operate normally.

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical
Code, ANSI/NFPA70. provides, information with respect to proper grounding of

the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of and the point where they exit from the apparatus. grounding conductors, location of antenna discharg product, connection to grounding electrodes and

> Do not attempt to service this product yourself as opening ot removing covers may expose you to dangerous voltage or other hazards. Refer all servicing

n replacement parts are required, be sure the service

technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the orginal part. Unauthorized substitutions may result n fire or electric shock or ther hazards.

Upon completion of any service or repairs to this produc

the service technician to perform safety checks to determine that the product is in proper operating condition 23. Wall or Ceiling Monting The product should be mounted to a wall or ceiling only

a. When the power-supply cord or plug is damaged b. If liquid has been spilled or objects have fallen into the

25. Note to CATV System Installer

Do not overload wall outlets and extension cords as this system of the building, as close to the point of cable entry

> is required when the unit has been damaged in any way such as the following: the power-supply cord or plug ha been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been

requirements for the grounding electrodes.

length. Insert the AC plug of the cord into any

as recommended by the manufacturer.

24. Damage Requiring Service ug the product from the wall outlet and refre servicing to qualified service personnel under the following

If the product has been exposed to rain or water. If the product does not operate normally by following the operating instructions.

f the product has been dropped or the cabinet has been damaged. . When the product exhibits a distinct change in performance-this indicates a need for service.

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides quidelines for proper grounding and, in particular, specifie at the cable ground shall be connected to the ground

NOTE: Refer all servicing to qualified service personnel Servicing

19. Outdoor Antenna Grounding

to qualified service personnel.

POWER SOURCE

Unwind the AC power cord and extend it to its full

convenient AC 120V~; 60Hz 60Hz household outlet.

1. This unit is equipped with a polarized AC plug which has one blade wider than the other. This is a safety

Please do not try to defeat this safety feature by using a non-polarized adaptor or by filling the wider blade to make it fit into your outlet. If this plug does not fit into your outlet, you should contact a qualified licensed electrician to replace your obsolete outlet.

Install the batteries as follows:

2. If the AC power is disconnected or if there is a power failure, this electronic clock is designed to continue

compartment. (Alkaline batteries are recommended for longer playing time.) c. Replace the battery door.

BATTERY PRECAUTIONS:

Follow these precautions when using a battery in this device: 1. Use only the size and type of battery specified.

5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow

To Wall Outlet

feature to reduce the likelihood of electric shock. This polarized AC plug will only fit in a polarized AC outlet. If you find that you cannot insert this plug to you're wall outlet, you may have an obsolete non-polarized outlet.

operating internally (without showing the time on the Clock Display) with two (2) x AAA size batteries (not included)

a. Open the battery door on the bottom by slide it off. b. Insert two (2) "AAA" size batteries (not included) according to the polarity diagram inside the battery

1. PM Indicator

2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.

remove the batteries to prevent damage or injury from possible battery leakage.


3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh

4. If the batteries in the device are consumed or the device is not to be used for a long period of time,

battery manufacturer's instructions.) 6. Do not dispose of battery in fire. Battery may explodes or leak.

7. Clean the battery contacts and also those of the device prior to battery installation.

LOCATION OF CONTROLS

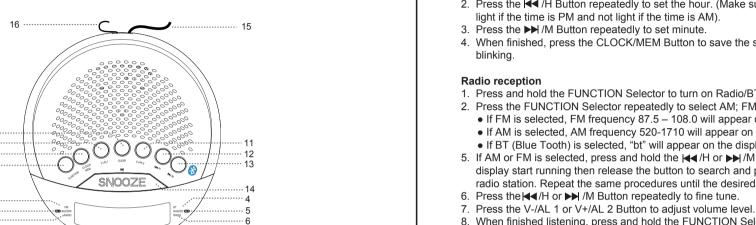

2. AL (Alarm) 1 BUZZER Indicator

3. AL (Alarm) 1 RADIO Indicator

5. AL (Alarm) 2 BUZZER Indicator 6. AL (Alarm) 2 RADIO Indicator 7. FUNCTION Selector

8. CLOCK/MEM (Memory) Button 9. V (Volume) -/ AL 1 (Alarm 1 set) Button

10. SLEEP Button 11. V (Volume) +/ AL 2 (Alarm 2 set) Button 12. ◄ /H (Skip Backward/Hour set) Button

13. ►► /M (Skip Forward/Minute set) Button Play/Pause)/SNOOZE Button

BT Indicator

AC Power Cord 16. FM Antenna 17. Battery Door (On the bottom)

OPERATION

To set or reset the actual local time:

1. Press and hold the CLOCK/MEM Button until the display is blinking. 2. Press the ◄◄ /H Button repeatedly to set the hour. (Make sure the PM Indicator on the display is

light if the time is PM and not light if the time is AM). 3. Press the ►► /M Button repeatedly to set minute.

4. When finished, press the CLOCK/MEM Button to save the settings and exit. The display will stop

1. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth).

2. Press the FUNCTION Selector repeatedly to select AM; FM or BT as desired. • If FM is selected. FM frequency 87.5 – 108.0 will appear on the display.

• If AM is selected, AM frequency 520-1710 will appear on the display. If BT (Blue Tooth) is selected, "bt" will appear on the display.

5. If AM or FM is selected, press and hold the I◄◄ /H or ▶▶I /M Button until the frequency on the display start running then release the button to search and plays the next (previous) available Shut off alarm:

radio station. Repeat the same procedures until the desired radio station was found and plays. 6. Press the ◄ /H or ► /M Button repeatedly to fine tune.

8. When finished listening, press and hold the FUNCTION Selector approximate 1 second to turn off the Radio/BT.

FM: The FM Antenna wire in the rear of unit is for radio reception. If reception is weak, unwound and extended the wire or relocation the wire to improve the radio reception.

AM: This unit has a build in ferrite rod antenna, which provides adequate reception in most areas. If reception is weak, turn the unit to improve reception.

3. Repeat the same procedures until all the desired radio stations were stored into the memory.

Radio station presetting: I. Receive the desired radio station as the previously procedure.

2. Press and hold the CLOCK/MEM Button, "P XX" will appear on the display and blinking. Press the ◄◄ /H or ▶▶ /M Button repeatedly to select the location (P 01 – P 10) you want stored to. Then press the CLOCK/MEM Button again to store it.

4. After settings, press the CLOCK/MEM Button repeatedly to select and plays the desired stored

• If the back up batteries had not installed and the power supply was failure, the preset radio stations will be erased. The stored radio station only can be deleted by store another new radio station.

Total 10 radio stations can be store in the memory per each band.

Alarm setting Alarm 1 setting:

1. Make sure the unit is in Radio/BT off mode before setting. 2. Press and hold the V-/AL 1 Button until Alarm 1 time appear on the display and blinking.

3. Press the |◀◀ /H Button repeatedly to set the hour of alarm 1. (Make sure the PM Indicator on the display is light if the alarm time is PM and not light if the alarm time is AM).

4. Press the ►► /M Button repeatedly to set the minute of alarm 1. 5. Press the V-/AL 1 Button to save the settings and exit.

6. Press the V-/AL 1 Button repeatedly to set the wake up mode to Buzzer (AL 1 BUZZER Indicator will light) or radio (AL 1 RADIO Indicator will light).

Note: If Radio mode is selected, received the desired radio station and set the volume to desired leve before activated the alarm. Otherwise, no sound or sound weak when alarm goes off.

Same as above alarm 1 settings. But, press the V+/AL 2 Button instead of V-/AL 1 Button.

When alarm goes off, press the FUNCTION Selector to turn it off, the alarm will reset for next day.

 To turn off the alarm completely (not reset for next day). Press the V-/AL 1 Button (V+-/AL 2 Turn on the BT function of the external BT Device. Button for alarm 2) repeatedly until all alarm indicators turned off.

The alarm can be temporarily turned off manually by pressing the ►II /SNOOZE Button; the alarm

will turn back on automatically nine (9) minutes later. This feature can be repeated until the FUNCTION Selector was pressed.

BT (Blue Tooth)

In first time use or re-pairing to new BT Device, pairing the unit to external BT Device as

- 1. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth). 2. Press the Radio FUNCTION Selector repeatedly until "bt" appear on the display. The BT
- Indicator will light and blinking. Power on the external BT Device and enter to searching mode. Start pairing as the on screen

instructions on the external BT Device. After paired, the BT Indicator will stop blinking. (For details pairing procedures, please refer to the user's manual of your BT Device).

• When the external BT player searched the unit, our model number "CR41483" will appear on the external BT Device's display. Pairing code "0000" or "1234" may need to enter.

Normal operation after pairing:

2. Press and hold the FUNCTION Selector to turn on Radio/BT (Blue Tooth).

- 3. Press the FUNCTION Selector repeatedly until "bt" appears on the display. The BT Indicator will light and blinking. Wait until the BT Indicator stop blinking. (It needs a few seconds).
- 4. Plays the music in the connected BT Device as usual.
- Press the V-/AL 1 or V+/AL 2 Button to adjust volume level.
- Press the I◄◄ /H or ▶► /M Buttons repeatedly to skip the tracks.
- Press the ►I /SNOOZE Button to pause, press again to resume normal playback. 6. When finished listening, press and hold the FUNCTION Selector approximate 1 second to turn

During playback:

In Radio or BT power on mode, press the SLEEP Button to activate the sleep function. the time of sleep timer will appear on the display. Press the button repeatedly to set the sleep timer to 10 – 90 minutes as desire. To turn off the sleep timer before time up, press and hold FUNCTION Selector to turn it off

operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you

TROUBLESHOOTING GUIDE

Symptom Possible Cause Solution Power

No power

Unwound and extended the Location for radio receiving wire antenna or relocation the reception

Radio no sound Volume at minimum

Indicator is blinking any BT device

Sound distortion or unstable

General Specifications:

Power Consumption: .

Radio Band Coverage: ...

Impedance of speaker:

1 x User's Manual

Power Source:

Audio power: .

not good

press the VOLUME + Button BT (Blue Tooth)

Increase Volume level by

improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's The distance of the unit and Close the BT device to the Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d)

of your unit. Please ship your unit to:

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

AC Power cord has not plug Plug it to any AC wall outlet

having AC 120V~, 60Hz in wall outlet DC Back up not functioning Back up batteries consume Replace new batteries

BT not functioning and BT The unit has not paired to Pair the unit to BT device as

... AC 120V~, 60Hz

.. AM 520-1710 kHz

..... 8 Ohm: 2 W

FM 87.5 – 108.0 MHz

... 8 Watt

BT device too far

This warranty is void if the product has been: a) Used in a commercial application of rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is

Damage to the product not used in the USA.

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and

workmanship under normal use for a period of 90 days from date of purchase. If service

is required, please return the product to the store where it was purchased for exchange

or, pack the unit in the original packing material with all accessories if applicable, a copy

of your sales receipt and a Cashier's check or Money Order for \$7.00 (to cover shipping

and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please

make sure that the cashier check or money order is redeemable through a U.S. bank.

Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can

not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt

Craig Electronics Inc.

1160 NW 163 Drive

Miami. FI 33169

the product thereafter.

To Obtain Service on your Product email:service@craigelectronics.com

CR41483 WC E0FG1 B0US

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Printed in China