

PBT3001 User Manual

20130722



Bluetooth Speaker
User Manual
PBT3001



Questions?
Need some help?
This manual will help you
enjoy your new product.

If you still have questions,
call our help line:
1-877-768-8483

or email us at:
polaroidsupport@southerntelecom.com

Let's Get Started

In the box



Bluetooth Speaker



User Guide



3.5 mm
Auxiliary Cable

 


Remote
Control



DC 5V AC
Adapter Cable


Battery Installation for Remote Control



NOTE: The battery for the remote control (1 CR205 lithium battery) is included. To replace the battery, push and slide out the battery door in the remote control. Replace the battery with a new CR2025 battery with the polarity "+" facing up. Slide the door

Charging the Bluetooth Speaker

 - Connect the small end of the AC adapter into the DC 5V port on the back of the speaker.
- Connect the large end of the AC adapter into an outlet.

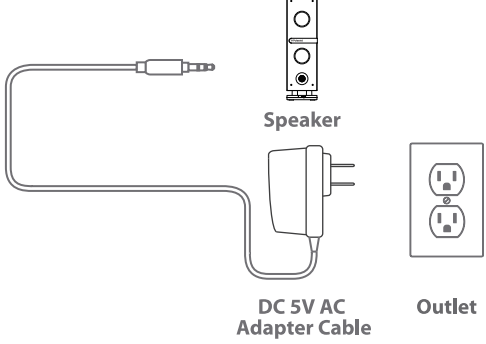


Speaker

DC 5V AC
Adapter Cable

Outlet

Pairing the PBT3001

 - Turn the PBT3001 on by plugging the large end of the AC adapter into an outlet and the small end of the AC adapter, and moving the Power ON/OFF switch to the ON position. A beep sound will be made and the LED light indicator will blink RED and BLUE indicating the unit is in pairing mode.
- Keep your PBT3001 and Bluetooth enabled device within 3 feet of each other during the pairing process.
- Set your mobile phone or other Bluetooth enabled device to search for Bluetooth devices.

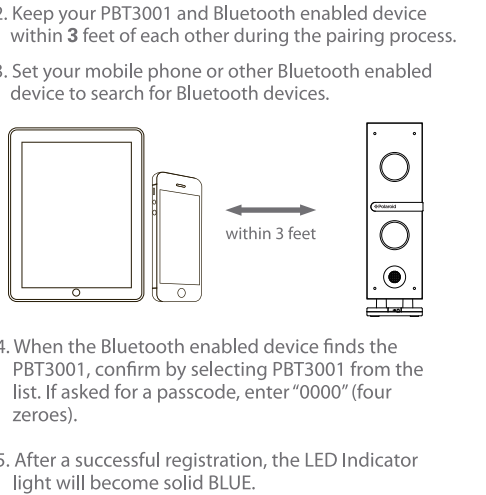


Back

Front

NOTE: The illustrations above are of many Bluetooth enabled phones today, and are used to explain the pairing process. Your mobile phone's interface and interaction with the speaker may be slightly different from the illustration above.


On an iPhone

 - Go to SETTINGS > GENERAL > BLUETOOTH (Make sure Bluetooth is turned ON)

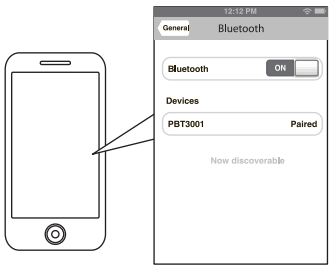


On a Blackberry

 - Go to SETTINGS/OPTIONS > BLUETOOTH
- Enable BLUETOOTH

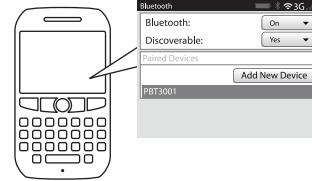


On an Android Phone

 - Go to SETTINGS > BLUETOOTH > MENU > Search for devices (Make sure Bluetooth is turned ON)

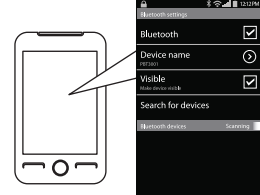

On other Cell Phones/Devices

 Review the instruction manual that came with your phone/device.

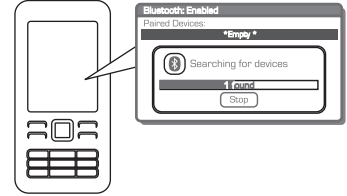


NOTE:

The illustrations above are of many Bluetooth enabled phones today, and are used to explain the pairing process. Your mobile phone's interface and interaction with the headphones may be slightly different from the illustration above.

Using your Bluetooth Speaker

Powering ON/OFF

 - To turn ON, plug the large end of the AC adapter into an outlet and the small end of the AC adapter; move the Power ON/OFF switch to the ON position. A beep sound will be made and the LED light indicator will blink RED and BLUE.
- To turn OFF, move the Power ON/OFF switch to the OFF position. The LED light will turn off.

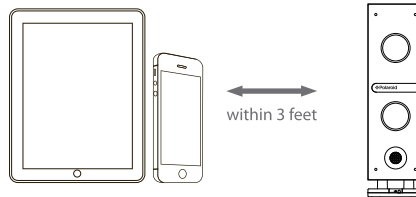

within 3 feet

Playing Music

Once connected via Bluetooth, you can control **all functions** with your device. To play music, you can press the [▶] button on the remote control. Some devices require you to start playing music on your device first. Once playback has begun, you can PLAY/PAUSE the music by pressing the [▶] button on the remote control (not all mobile phones support the control of music using Bluetooth).

Play/Pause

Press the [▶] button to pause the music. To resume music playback, press the [▶] button again.

Adjusting Volume

-Press the [+] and [-] buttons to adjust the volume level.

Skipping Songs

-During playback, press the [◀] button to play the previous track and the [▶] button to play the next track.

*The Polaroid Bluetooth Speaker is compatible with any brand of Bluetooth-enabled phone or music device that supports Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

In order for Bluetooth devices to communicate with one another properly, they must utilize the same Bluetooth profile. To determine the profiles supported by your device (mobile phone, gaming console, computer or mp3 player), please refer to the device's user guide.

Certain Bluetooth features including those listed may not be supported by all compatible Bluetooth-enabled devices, and/or the functionality of such features may be limited in certain devices.

Using as a Wired Speaker

The PBT3001 can be used as a wired speaker by using the included 3.5mm auxiliary cable.

- Make sure the Bluetooth Speaker is plugged in and ON.
- Plug one end of the auxiliary cable into the AUX in jack located on the back of the speaker.
- Plug the other end of the auxiliary cable into the headphone jack of any media device, which has a 3.5mm headphone jack.
- Use your media device's music controls to control the music and volume. The volume controls will work on the remote control, but the rest will not function when using PBT3001 as a wired speaker.

NOTE: When the AUX IN cable is connected, the AUX IN source will be selected and there will be no audio output from the Bluetooth source.

Troubleshooting tips

The Bluetooth Speaker won't turn on.

- The battery may be exhausted. Try charging the battery.

There is no audio signal through the Bluetooth connection.

- If the Bluetooth Speaker is turned OFF, then turn it ON.

The Bluetooth Speaker may not be paired to the Bluetooth enabled device. Try checking whether the connection exists. If necessary, try pairing the Bluetooth enabled device to the Bluetooth Speaker again.

The volume level of the Bluetooth enabled device may be too low. Try increasing the volume of the Bluetooth enabled device.

I can pair the Bluetooth Speaker with my Bluetooth enabled device, but I cannot hear any music?

- Make sure your Bluetooth enabled device supports A2DP profile.

Turn up the volume on your Bluetooth enabled device.

For some Bluetooth enabled devices, you must open your Bluetooth settings and make sure "media" is turned ON.

My Bluetooth enabled device is not able to pair with the Bluetooth Speaker.

- Turn the PBT3001 on by plugging the large end of the AC adapter into an outlet and the small end of the AC adapter, and moving the Power ON/OFF switch to the ON position. A beep sound will be made and the LED light indicator will blink RED and BLUE indicating the unit is in pairing mode.

Keep your Bluetooth Speaker and Bluetooth enabled device within 3 feet of each other during the pairing process.

After a successful registration, the LED Indicator light will become solid BLUE.

Try repeating the pairing process, see "Pairing the PBT3001".

Safety information

Limited Warranty

Observe all signs in the designated areas where some electronic devices or RF radio products are required to be switched off. These could include airplanes, hospitals, blasting areas, and potentially explosive atmospheres.

Legal information

FCC Part 15:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southerntelecom.com

Monday - Friday: 8AM - 10PM (EST)

Polaroid, Polaroid & Pixel and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.
© 2013 All Rights Reserved

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.