## **JUKEBOX BLUETOOTH® SPEAKER SYSTEM** WITH COLOR LIGHTS

EASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CHT935BT-BLS



Keep these instructions
 The sately and operating instructions should be retained for future reference.

or has been dropped.

6. Clean only with dry cloth

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions

 Unplug this apparatus during lightning storms or when unused for long periods of time. 14. Refer all servicing to qualified service personnel.

have fallen into the apparatus, the apparatus has been have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, ask the service technician to perform safety checks to determine that the product is in proper operating conditions the product is in proper operating conditions.

Then the power-supply cord or plug is damaged.

8. Do not install near any heat sources such as radiators, 18. Object and liquid entry heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

an electrician for replacement of the obsolete outlet.

combination to avoid injury from tip-over.

ervicing is required when the apparatus has been Upon completion of any service or repairs to this product

The product should be operated only from the type of as recommended by the manufacturer. 24. Damage requiring service consult your appliance dealer or local power company.

For products intended to operate from battery power,

For products intended to operate from battery p

with them might be fatal. ensive work by a qualified technician to restore the

25. Note to CATV system installer Never spill or spray any type of liquid on the product.

Refer all servicing to qualified service personnel. Servicing

against voltage surges and

as the following: the power-supply cord or plug has been damaged, liquid has been spilled into the unit, the unit has been exposed to rain or moisture, the unit has been ctrical Code, ANSI/NFPA 70, provides information dropped or the unit does not operate normally. th respect to proper grounding of the mast and grounding electrodes and requirements for the grounding

Adaptor to a wall outlet having AC 100-240V~,

The product should be mounted to a wall or ceiling only

. If liquid has been spilled or objects have fallen into the If the product has been exposed to rain or water. d. If the product does not operate normally by following the

luct to its normal operation.
product has been dropped or the cabinet has been

performance – this indicates a need for service.

When the product exhibits a distinct change in


is required when the unit has been damaged any way such

particular, specifies that the cable ground shall be


# opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

NOTE: This AC/DC Adaptor is intended to be correctly orientated in a vertical or floor mount

**OCATION OF CONTROLS** 

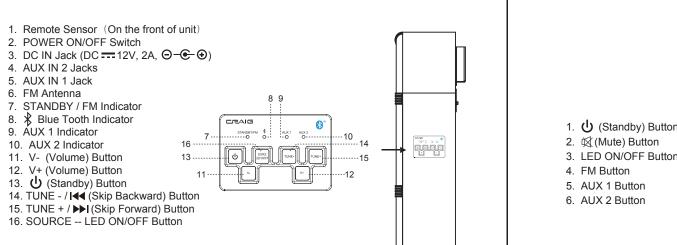


## **BATTERIES INSTALLATION(Remote Control** LOCATION OF CONTROL (REMOTE CONTROL

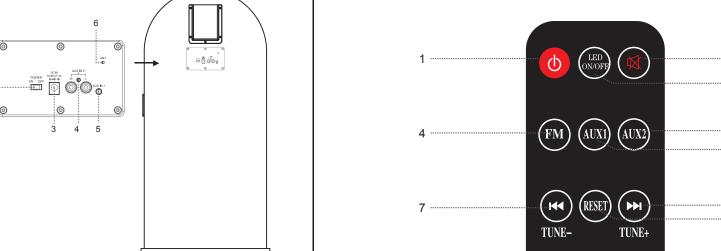

I. (1) (Standby) Button 3. LED ON/OFF Button

# n first time use, slide the insulation film from the battery door and discard it

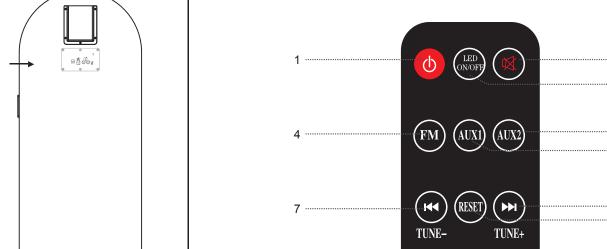

3. Close the battery tray.

BATTERY PRECAUTIONS:

When the battery is consumed, replace the battery as below:

ollow these precautions when using a battery in this device:

partment. A reversed battery may cause damage to the device

Do not dispose of battery in fire. Battery may explodes or leak.

Use only the size and type of battery specified.

follow battery manufacturer's instructions.)

on the REMOTE SENSOR of the unit, the remote

operation may be unstable.

Push the tap on the battery trap and slide it out as the figure below:


2. Install a new CR 2025 button cell to the battery trap as the polarity makings on the rear of

Be sure to follow the correct polarity when installing the battery as indicated in the battery


not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old

'. Clean the battery contacts and also those of the device prior to battery installation.

**EFFECTIVE DISTANCE OF REMOTE TRANSMIT** 

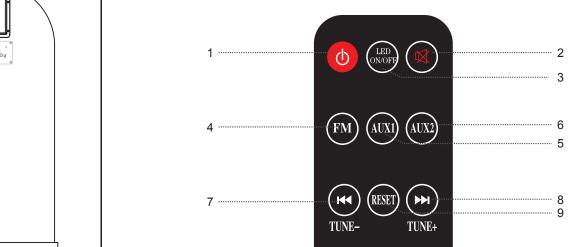

7. TUNE -/I◀◀ (Skip Backward) Button 8. TUNE+/▶►I(Skip Forward) Button RESET Button When there is an obstacle between the unit and the transmitter, the transmitter may not operate. 11. VOL (Volume) - Button When direct sunlight, an incandescent lamp, 12. VOL (Volume) + Button fluorescent lamp or any other strong light shines

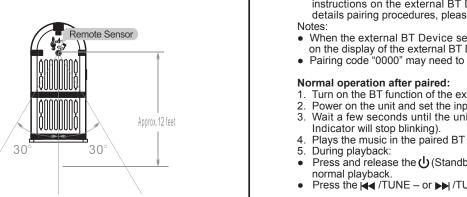

**GENERAL:**1. Slide the POWER ON/OFF Switch on the rear of unit to ON position to power on the unit. The

he correspondence indicator will turn on. 3. Press the SOURCE Button on the unit repeatedly or correspondence buttons on the Remote the external device is in high level. Otherwise, sound from this unit is weak). ontrol to select the desired input source.

Press the VOL (Volume) +/- Buttons to adjust volume level.

Press the ☒ (MUTE) Button on the Remote Control to turn off the sound temporary, press again 6. When finished, press and hole the  $oldsymbol{\psi}$  (Standby) Button on the unit then release the button or

## 1. To turn on the Decorative LED, press and hold the SOURCE -- LED ON/OFF Button on the unit

or press the LED ON/OFF Button on the remote control.

2. To turn it off. press and hold the SOURCE -- LED ON/OFF Button on the unit or press the LED

\_\_\_\_

3. Press the TÚŃE+/ I◀◀ or TUNE -/ ▶▶ Button to auto search the next or pervious available FM e batteries in the device are consumed or the device is not to be used for a long period time, remove the batteries to prevent damage or injury from possible battery leakage. 4. Repeated the same procedures until the desired FM Station is searched and play.

Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. The Antenna wire on the rear of unit is for radio reception. If reception is weak, unwound and

extended the wire or relocation the wire to improve the radio reception.

. Power on the unit as previous procedures. Press the SOURCE Button on the unit repeatedly until the BT Indicator is light and blinking (Or press

details pairing procedures, please refer to the user's manual of your BT Device.). VCR/DVR | O When the external BT Device searched the unit, our model number "CHT935BT-BLS" will appear
 the displace of the part o

Pairing code "0000" may need to enter.

rn on the BT function of the external BT Device. Power on the unit and set the input source to BT mode as previous procedures.

Wait a few seconds until the unit paired to the external BT Device automatically. (The BT

ess and release the  $\dot{\mathbf{U}}$  (Standby) Button on the unit to pause, press and release again to resume

Press the |◄◄ /TUNE - or ▶► /TUNE + Button on the unit or Remote Control to skip tracks.

ugs) to the Phones Jack; Line Out Jack or AUX Out Jack on external audio device such li nones; iPad; iPod; MP3 Player; Discman ... etc. Insert the other end to the AUX IN 1 Jar

OURCE -- LED ON/OFF Button on the unit repeatedly until the AUX 1 Indicator is (Or press the AUX 1 Button on the Remote Control to go to AUX 1 mode directly.)

ays the music on the connected external Audio device as usual. (Make sure the volume level

. Insert one of the plug from the supplied Audio connection cable (with 3.5mm stereo mini

AUX P

press the b (Standby) Button on the Remote Control to turn the unit off (standby mode).

7. If long period of time will not use the unit. Turn off the unit by slide the POWER ON/OFF Switch on the rear of unit to OFF position. All the indicators will turn off. o o

ON/OFF Button on the remote control.

Power on the unit as previous procedures.
Press the SOURCE -- LED ON/OFF Button on the unit repeatedly until the STANDBY/FM andicator is light and blinking. (Or press the FM Button on the Remote Control to go to radio FM

1. Insert one end of RCA connection cable ( Not supplied ) to the Audio Out Jacks (RCA Type) on

external Video/Audio device such like TV; DVD Player; VCR ... etc. Insert the other end to the JX in 2 Jacks on the rear of the unit as the figure below. Power on the unit as previously procedures

Press the SOURCE -- LED ON/OFF Button on the unit repeatedly until the AUX 2 Indicator is int. (Or press the AUX 2 Button on the Remote Control to go to AUX 2 mode directly

Plays the music on the connected external Audio device as usual. (Make sure the volume level rist time use or re-pairing to new BT Device, pairing the unit to external BT Device as below: of the external device is in high level. Otherwise, sound from this unit is weak).

> Volume level of the connected device too high level of the connected device BT not functioning The external BT device too Place the external BT

ys the music in the paired BT Device as usual.

# TROUBLESHOOTING GUIDE

.....DC == 12V, 2A, Centre Positive • • Power Source: ... Check the follows before requesting service: Power Source of Remote Control: ....DC == 3V, 1 x CR 2025 Button Cell (Included) POSSIBLE CAUSE POSSIBLE SOULTION Power Consumption: AC/DC Adaptor had not Plug it to the wall outlet ..... 87.5-108MHz Radio FM Band Coverage: . ..... Up to 32 Feet in open area BT Effective Range: .... plug in wall outlet properly Remote Control Effective Range .. ....Up to 12 Feet in open area Small plug from the supplied Insert the small plug from Audio Power: ... AC/DC Adaptor had not the supplied AC/DC Adaptor Impedance of Speakers: connected to the unit to the DC in Jack on the

Accessories:

1 x User's Manual

**GENERAL SPECIFICATIONS:** 

1160 NW 163 Drive Miami, FI 33169

> This warranty is void if the product has been: a) Used in a commercial application rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

LIMITED WARRANTY

However, there is no guarantee that interference will not occur in a particular installation. If this Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

interference by one or more of the following measures: warranties, including the warranty of merchantability, are limited in duration to the period Reorient or relocate the receiving antenna. of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter. Increase the separation between the equipment and receiver.

Under no circumstance shall Craig be liable for any loss or consequential damage aris out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitation on implied warranties or exclusion of consequential damage. Therefore, these

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment. This equipment should be installed and operated with minimum distance 20cm

## raig warrants this product to be free from manufacturing defects in material a

workmanship under normal use for a period of 90 days from date of purchase. If serv is required, please return the product to the store where it was purchased for exchange or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$18.00 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit ca not be repaired or replaced, a refund will be forwarded to you within four weeks of receip of your unit. Please ship your unit to:

Craig Electronics Inc

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the This warranty is not transferable and only applies to the original purchase. Any implied

Connect the equipment into an outlet on a circuit different from that to which the receiver is Consult the dealer or an experienced radio/TV technician for help. restrictions may not apply to you.

(1) This device may not cause harmful interference.

void the user's authority to operate the equipment.

protection against harmful interference in a residential installation.

## FCC Radiation Exposure Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

(2) This device must accept any interference received, including interference that may cause

2. Changes or modifications not expressly approved by the party responsible for compliance could

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

This equipment generates uses and can radiate radio frequency energy and, if not installed and

used in accordance with the instructions, may cause harmful interference to radio communications.

rear of unit

the rear of unit to ON

(Standby) Button on the unit

release the button or Press

the 🖒 (Standby) Button on

the Remote Control to turn

the VOL (Volume) + Button

the connected device as usual

Rise the volume level of the

Set the input source as the

Reduce the volume level by

press the VOL (Volume) - Button

Reduce the volume and/or bass

on the unit from standby

approx. 2 seconds then

POWER Switch is in OFF Slide the POWER Switch on

Volume in minimum position Rise volume level by press

The connected device is not Plays the music/movie in

connected device weak connected device

far from the unit device close to the unit

The unit in standby mode Press and hold the (1)

position

Sound output of the

Input source incorrect

control consumed

1 x Remote Control (Use 1 x CR 2025 button cell, already installed)

1 x Audio Connection Cable with 3.5mm Stereo Mini Plugs

1 x AC/DC Adaptor (Input: AC 100-240V~, 50/60Hz 1A;

Output: DC == 12V, 2A ⊖- ⊕ , Centre Positive )

To Obtain Service on your Product

email:service@craigelectronics.com

CHT935BT-BLS WC E0FG1 V0US

between the radiator & your body