

# Kodak

## PIXPRO AZ527

Digital Camera

### User Manual



# Before You Start

---

## **Declaration of Conformity**

Responsible Party: JK Imaging Ltd.

Address: JK Imaging Ltd., 17239 So. Main Street, Gardena, CA 90248 USA  
JK Imaging Europe, 71 Clarendon Road, Watford, WD17 1DS, UK

Company Website: <http://kodakpixpro.com>

## **INDUSTRY CANADA**

This device complies with Canadian RSS-210.

This device complies with Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement:

This product complies with the Canadian portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. Additional RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

---

## For Customers in Europe



This symbol [crossed-out wheel bin WEEE Annex IV] indicates separate collection of electrical waste and electronic equipment in the European countries. Please do not throw the equipment into domestic refuse. Please use the return and collection systems available in your country for proper, safe disposal of this product.



Batteries: Please dispose of used batteries at designated collection centers.



Packaging: Please follow local regulations for the recycling of packaging.



“CE” mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. “CE” marked cameras are intended for sales in Europe.

### Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC.

The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

- EN 60950-1: 2006+A11:2009 +A1:2010 +A12:2011

Safety of Information Technology Equipment

- EN 50566: 2013

Product standard to demonstrate compliance of radio frequency fields from handheld and body-mounted wireless communication devices used by the general public (30 MHz — 6 GHz)

- EN 62209-2: 2010

Human exposure to radio frequency fields from handheld and body-mounted wireless communication devices — Human models, instrumentation, and procedures

---

Part 2: Procedure to determine the specific absorption rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)

- EN 300 328 V1.8.1 : 2012

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2.4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive.

- EN 301 489-1 V1.9.2: 2011

Electromagnetic compatibility and Radio Spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.

- EN 301 489-17 V2.2.1:2012

Electromagnetic compatibility and Radio spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2.4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment.

## **For Customers in the U.S.A.**

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### Radiation Exposure Statement:

This product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. Additional RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

---

## About this Manual

Thank you for purchasing the KODAK PIXPRO Digital Camera. Please carefully read this manual and keep it well for future reference.

- JK Imaging Ltd. reserves all rights of this document. No part of this published manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form, by any means, without the prior written permission of JK Imaging Ltd..
- All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.
- This manual provides you with instructions on how to use your new KODAK PIXPRO Digital Camera. Every effort has been made to ensure that the contents of this manual are accurate; however JK Imaging Ltd. reserves the right to make changes without notice.
- Throughout this manual, the following symbols are used to help you locate information quickly and easily:



Indicates useful information.

- In the instructions below, the following symbols may be used throughout this manual on how to operate the camera. This is to facilitate better understanding:  
[Item properties] : The optional properties in the camera interface are indicated by the symbol [ ] .

# Safety Notes

---

## **Safety notes for this camera**

- Do not drop the camera or allow it to hit solid objects.
- Do not attempt to disassemble or repair the camera.
- Do not use or store the camera in dusty places or on a beach to prevent dust or sand from entering the camera, causing possible damage to it.
- Do not use or store the camera in a hot environment or under direct sunlight.
- Do not use or store the camera near a powerful magnetic field, for example near a magnet or transformer.
- Avoid touching the lens of the camera.
- Do not expose the camera to direct sunlight for a long period time.
- To prevent the camera from being damaged by moisture, do not use or store the camera in very humid environments, such as in rain or near bodies of water.
- If water accidentally comes in contact with the camera. turn the camera off, remove the battery and the memory card, and dry it within 24 hours
- When you take the camera from a cold place to a warmer environment, condensation may occur. Please wait for a reasonable period of time before you turn it on.
- Before you remove the battery and memory card, the camera should be turned off.
- When you clean the body of the camera, don not use abrasive, alcohol-based or organic cleaner.
- Use a professional lens wiping cloth and dedicated cleaner to wipe and clean the lens.
- Download your photos and remove the memory card when you are going to store the camera for a long period of time.
- If this camera is not in use for a long time, please keep it in a dry and clean condition.
- Our company will not pay compensation for any failure of playback of pictures or videos caused by improper operation.

---

## Safety notes for battery

- Please use a battery that is the same type as the one included.
- Please use the attached charger to charge the battery.
- If battery fluid leaks inside the camera, contact our customer service department. If the battery fluid leaks onto your skin, rinse your skin with clean water and seek immediate medical attention.
- Disposal of used batteries should be carried out in accordance with local (national or regional) regulations.
- To prevent the battery from being damaged, do not drop the battery or allow it to hit solid objects or to be scratched by the objects.
- Do not let the battery come in contact with metal objects (including coins) to avoid short circuiting, discharging, excessive heat, or possible leakage.
- Do not attempt to disassemble the battery.
- Do not expose the battery to water. Always keep the battery contacts dry.
- Do not heat the battery or throw it into a fire to avoid a possible explosion.
- Do not store the battery in a hot environment or in direct sunlight.
- If the battery overheats during charging or use, stop charging or use immediately. Turn off the product, remove the battery carefully, and wait until it cools down.
- When the camera is stored for a long period of time, remove the battery and keep it in a dry place that is not accessible to infants and children.
- In a colder environment, the performance of the battery could be noticeably reduced.
- When you install the battery, install it according to the positive and negative markings on the battery compartment. Never force it into the battery compartment.



---

## Safety notes for memory card

- We suggest buying only well-known, name brand memory cards to ensure peak performance.
- Format the memory card using the camera before you use it or insert a new one.
- Do not drop the memory card or allow it to hit solid objects to avoid damaging it.
- Do not attempt to disassemble or repair the memory card.
- Do not expose the memory card to water. Always keep it dry.
- Do not remove the memory card when the camera is turned on. Otherwise, the memory card could be damaged.
- Do not directly edit the data on the memory card. Copy the data to your PC before you edit them.
- When the camera is stored for a long period of time, be sure to download your photos and remove the memory card. Store it in a dry environment.
- Do not modify the name of the files or folders of the memory card using your PC. Modifying the file names may cause the files to not be recognized on the camera or a possible error may occur.
- A photo taken with the camera will be stored in the folder that is automatically generated on the memory card. Do not store photos that are not taken using this camera in these folders as the pictures cannot be recognized during the playback.
- When you insert a memory card, make sure the notch of the card matches the markings on the top of the card slot.

---

## Other Safety Notes

- Do not disconnect the power or turn the camera off during the update process. Doing so may cause incorrect data to be written and the camera may not power on later.
- Do not hang the neck strap of the camera around the neck of a child.
- When using your camera on an airplane, observe the relevant rules specified by the airline.
- Due to the limitations of manufacturing technology, the LCD may have a few dead or bright pixels. These pixels do not affect the quality or performance of the camera, photos or video.
- Do not expose the LCD to water. In a humid environment, only wipe it with a soft and dry cleaning cloth.
- If the LCD screen is damaged, pay particular attention to the liquid crystal in the screen. If any of the following situations arise, take the recommended immediate action indicated below:
  1. If liquid crystal comes in contact with your skin, please wipe with a dry cloth, wash thoroughly with soap, and rinse with plenty of clean water.
  2. If liquid crystal gets into your eye, flush the eye immediately with plenty of clean water for at least 15 minutes and then seek for medical assistance.
  3. If liquid crystal is swallowed, immediately flush your mouth thoroughly with clean water and induce vomiting. Seek for medical assistance.

# Contents

---

Before You Start.....	1
Safety Notes.....	6
Contents.....	10
Getting Ready .....	15
Accessories Included.....	15
Install Lens Cap and Neck Strap.....	16
Part Names .....	17
Installing Battery and Memory Card.....	19
Charging Battery.....	21
Turning Camera On and Off.....	23
How to take pictures.....	23
Set your Language, Date/Time .....	24
Mode Overview .....	27
Display Setting.....	27
LCD Display .....	28

---

Overview of the screen icons in photo shooting mode .....	28
Overview of the screen icons in movie mode.....	29
Overview of the screen icons in playback mode.....	30
<b>Using the Mode Dial.....</b>	<b>31</b>
Select an appropriate capture mode.....	31
Auto Mode.....	32
Program AE.....	34
Shutter priority.....	34
Aperture priority.....	34
Manual Mode.....	34
Face Beautifier.....	36
Wi-Fi Mode.....	37
Scene Mode.....	45
Movie Mode.....	50
Custom Settings.....	51
<b>Basic Operation .....</b>	<b>53</b>

---

---

Using the Zoom Function.....	53
Focus Setting .....	54
Macro Mode.....	55
Self-timer Setting .....	56
Flash Mode .....	57
White Balance Setting.....	58
Continuous Shot .....	59
EV Setting.....	60
Using Quick Recording.....	62
i Button Function Menu.....	63
<b>Playback Mode .....</b>	<b>64</b>
Viewing Photos and Videos.....	64
Thumbnail View.....	65
Using Zoom Playback (for still pictures only).....	66
Photos and Video Deletion.....	67
Slideshow .....	68
Continuous Capture Group Playback.....	69

---

Animation panorama play .....	70
<b>Using the Menu .....</b>	<b>71</b>
Photo Setup Menu.....	71
Photo Shooting Settings Menu .....	76
Movie Menu .....	80
Movie Setting Menu .....	83
Playback Menu.....	85
Playback Settings Menu.....	89
Setup Menu .....	93
Sound Settings .....	94
Power Saver .....	94
Language .....	95
Date/Time .....	95
LCD Brightness.....	95
File Setting .....	96
Format.....	97

---

 
Copy to Card.....	97
File Numbering.....	98
Reset.....	98
FW Version .....	99
<b>Connection Settings .....</b>	<b>100</b>
Connecting to a Computer .....	101
Connecting to a PictBridge Compatible Printer .....	103
Using the PictBridge Menu.....	105
Video System .....	109
Set Eye-Fi Card Connection Mode.....	110
Supported HDMI Connections .....	111
<b>Appendices.....</b>	<b>112</b>
Product Specifications.....	112
Prompts and Warning Messages.....	116
Troubleshooting.....	120

# Getting Ready


---

## Accessories Included


Your camera box should contain the camera model you purchased along with the following accessories. If anything is missing or appears to be damaged, please contact your retailer. (The battery charger may be different in shape than what is pictured below. This is due to different power requirements across countries or regions)




Rechargeable  
Li-ion battery

 

AC adapter

 

Micro USB cable

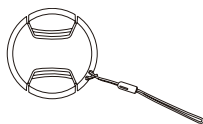

Lens cap with cord



Neck strap



Quick start guide



Warranty card




Service card






---

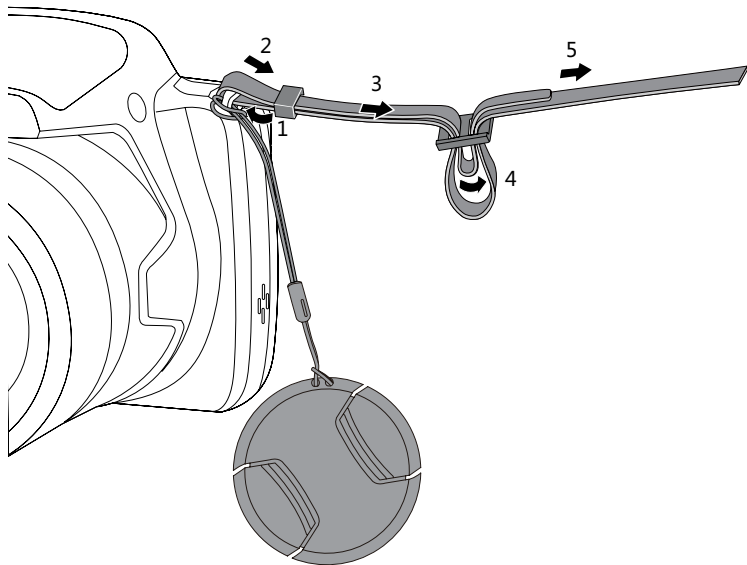
## Install Lens Cap and Neck Strap



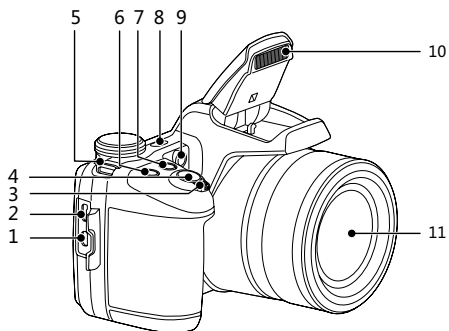

 

 


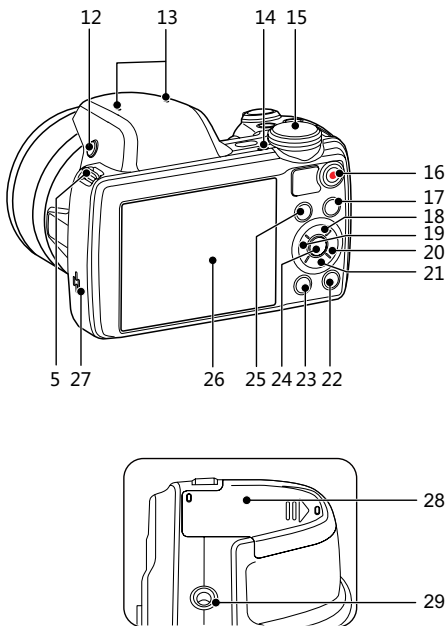


## Part Names



1. Micro HDMI port
2. Micro USB port
3. Zoom lever
4. Shutter button
5. Strap eyelet
6.  Exposure compensation button
7.  Continuous shot button
8. Power button
9. AF assist beam/Self-timer lamp
10. Flash lamp
11. Lens




- 12. Flash button
- 13. Microphone
- 14. Indicator lamp
- 15. Mode dial
- 16.  Fast video recording button
- 17.  Menu button
- 18. [AF] AF button/Arrow button (Up)
- 19. [] Macro button/Arrow button (Left)
- 20. [] Flash button/Arrow button (Right)
- 21. [ ] Delete button/Self-timer button/Arrow button (Down)
- 22.  Display button
- 23.  Playback button
- 24.  SET button
- 25.  i button
- 26. LCD
- 27. Speaker
- 28. Battery cover
- 29. Tripod socket


---

## Installing Battery and Memory Card


1. Open the battery cover.

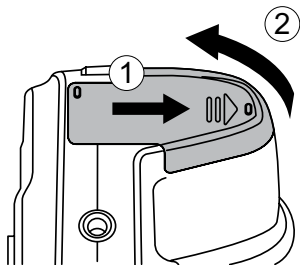


2. Insert the battery into the battery compartment according to the negative and positive directions as illustrated in the picture. Push the battery down until it locks in place.

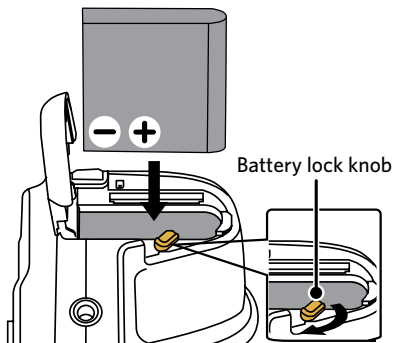

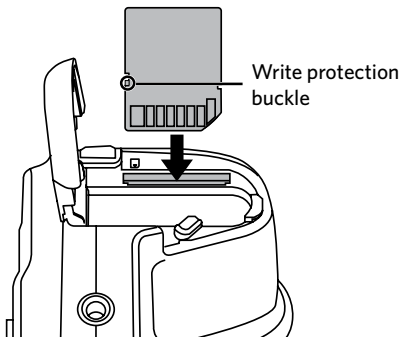

3. Insert the memory card into the memory card slot as shown in the diagram below:

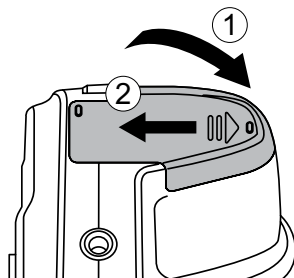

4. Close the battery cover.




 The memory card (SD/SDHC) is optional and not included in all camera packaging. It needs to be purchased separately. Please use an original memory card which is Class 4 or higher and has a capacity of 4GB to 32GB.


 To remove your memory card, open the battery cover, gently press the memory card to eject it and remove it carefully.


## Charging Battery


Please insert the battery and charge it under shutdown mode.

1. Connect the camera and the power charger using the supplied Micro USB cable.
2. Insert the plug of the power charger into the power outlet to charge the battery.


 After the battery is stored for a long period of time, use the supplied power charger to charge the battery prior to use.

 To have maximum battery life, charge the battery for at least 4 hours the first time.


 **Charging indicator:**  
Steady orange: Charging  
The indicator will go out once charging is finished, and the camera will be powered off automatically.

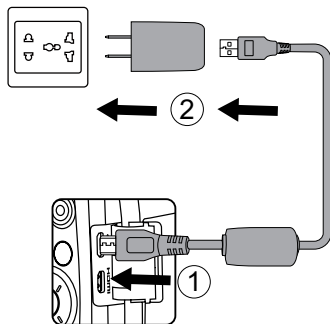

Indicator lamp

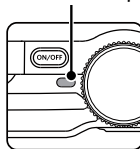

- 
3. When the camera is turned off, you can also connect the camera to your PC using a Micro USB cable to charge the battery.

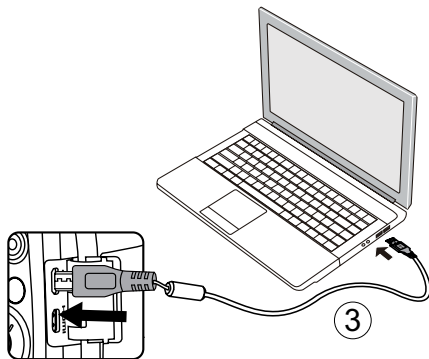


Please charge the battery indoors between 0°C and 40°C.

---

## Turning Camera On and Off

Press the Power button to turn the camera on. To turn the camera off, press the Power button again.

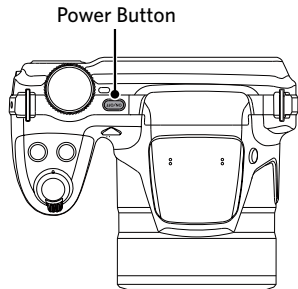

Press and hold the  button to power on and enter Playback mode.

## How to take pictures


1. Hold the camera with both hands , not blocking the flash and lens by fingers.
2. Aim the camera at the object and then frame with the LCD.
3. Use the zoom lever to select Tele or Wide positions to zoom in or out on your subject.
4. Press the shutter button half way to focus on the subject. When the focus frame turns green, press the shutter button completely down to take the picture.



# Set your Language, Date/Time


 


 


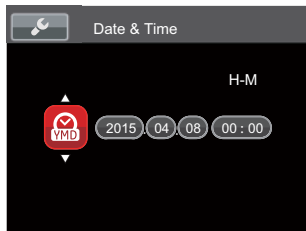

 
 


 

 



## Set your Language, Date/Time after the first power-on


1. When you turn the camera on for the first time, the language selection screen appears.
2. Press the [▲AF]/[▼🗑️🕒]/[◀️🌿]/[▶️🌿] buttons to select your desired language.
3. After you press the (SET) button to confirm the selection, the Date/Time settings screen appears.
4. Press the [◀️🌿]/[▶️🌿] button to select the Date/Time to be adjusted: Time is displayed in YYYY.MM.DD HH:MM.
5. Press the [▲AF]/[▼🗑️🕒] button to adjust the value for the selected Date/Time.
6. Press the (SET) button to confirm the time settings and the shooting screen appears.



## Resetting your Language



 

 


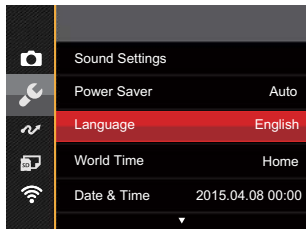
After you set your language for the first time, follow the instructions below to reset your language.



1. Press the  button, press the [**▲AF**]/[**▼**  ] button to select , and press the  button to enter the menu.
2. Press the [**▲AF**]/[**▼**  ] button to select , and press the /[**▶** ] button to enter the menu.
3. Press the [**▲AF**]/[**▼**  ] button to select [Language] and press the /[**▶** ] button to enter the menu.
4. Press the [**▲AF**]/[**▼**  ]/[**◀** ] buttons to select your desired language and press the  button to confirm.
5. Press the  button and the shooting screen appears.



## Resetting Date/Time

After you set your Date/Time for the first time, follow the instructions below to reset date and time.


1. Press the  button, press the [**▲AF**] / [**▼🗑️🔌**] button to select , and press the  button to enter the menu.
2. Press the [**▲AF**] / [**▼🗑️🔌**] button to select , and press the  / [**▶️⚡**] button to enter the menu.
3. Press the [**▲AF**] / [**▼🗑️🔌**] button to select [Date & Time] and press the  / [**▶️⚡**] button to enter the menu.
4. Press the [**⏪👉**] / [**▶️⚡**] button to select the Date/Time to be adjusted: Time is displayed in YYYY.MM.DD HH:MM.
5. Press the [**▲AF**] / [**▼🗑️🔌**] button to press the value for your selected block. After you finish your settings, press the  button to confirm.
6. Press the  button and the shooting screen appears.

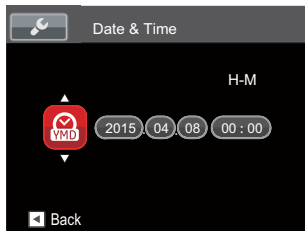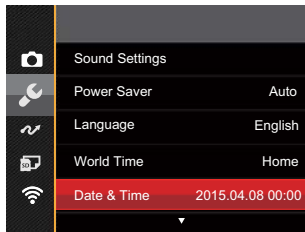

# Mode Overview



---

## Display Setting


Press the  button to display the settings: Classic, Full, Off.

**Classic:** Displays the camera parameters on screen

**Off:** Does not display any additional icons on screen

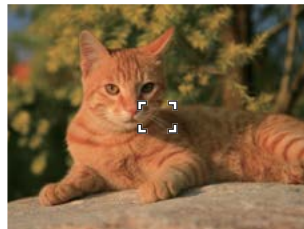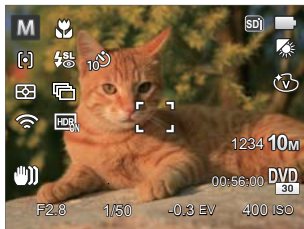


**Full:** Camera parameters with Grid and Histogram

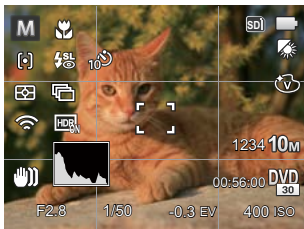


# LCD Display

## Overview of the screen icons in photo shooting mode

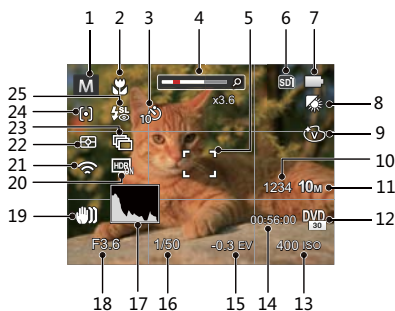


- 1 Shooting Mode
- 2 Macro Mode
- 3 Self-timer
- 4 Zoom Display (By turning the Zoom Lever)
- 5 Focus Frame
- 6 Memory Card/Built-in Memory
- 7 Battery Status
- 8 White Balance
- 9 Color Effect
- 10 Number of remaining shots
- 11 Image Size
- 12 Video Quality
- 13 ISO Value
- 14 Remaining Recording Time
- 15 Exposure Compensation
- 16 Shutter Speed
- 17 Histogram
- 18 Aperture Value
- 19 OIS (Optical Image Stabilization)
- 20 HDR
- 21 Eye-Fi ON (with signal)
- 22 Expo Metering
- 23 Continuous Shot
- 24 AF Mode
- 25 Flash Mode


## Overview of the screen icons in movie mode

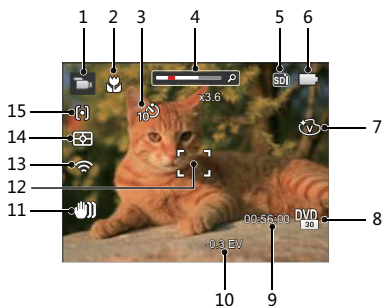


- 1 Movie Mode
- 2 Macro Mode
- 3 Self-timer
- 4 Zoom Display (By turning the Zoom Lever)
- 5 Memory Card/Built-in Memory
- 6 Battery Status

- 7 Color Effect
- 8 Video Quality
- 9 Remaining Recording Time
- 10 Exposure Compensation
- 11 OIS (Optical Image Stabilization)
- 12 Focus Frame
- 13 Eye-Fi ON (with signal)
- 14 Expo Metering
- 15 AF Mode

 For optimal video shooting, it is recommended that an SDHC memory card be used.

 Optical Zoom and Digital Zoom can be adjusted (208X in total). Digital Zoom can be adjusted to 4X.

## Overview of the screen icons in playback mode

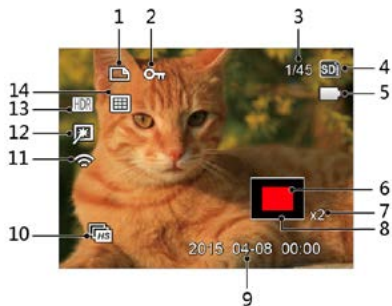

- 1 DPOF File
- 2 File Protection
- 3 Memory Space (indicating the current number of photos and total number of photos)

- 4 Memory Card/Built-in Memory
- 5 Battery Status
- 6 Zoom Magnification Area
- 7 Image Zoom Ratios
- 8 Image Zone
- 9 Shooting Date
- 10 Continuous Capture Group Playback
- 11 Eye-Fi ON (with signal)
- 12 Touch-up
- 13 HDR
- 14 Date Folder

# Using the Mode Dial

---

This camera provides a convenient mode dial that allows you to manually switch among different modes with ease.

## Select an appropriate capture mode

1. Press the Power button to turn the camera on. Aim the camera at the object and then frame with the LCD.
2. Rotate the mode dial to select an appropriate shooting mode.



Auto Mode



Manual Mode



Movie Mode



Program AE



Face Beautifier



Custom Settings



Shutter priority



Wi-Fi Mode



Aperture priority



Scene Mode


3. Rotate the zoom lever to zoom in or out of the subjects and compose a photo within the framing scope.
4. Press the Shutter button half way down to focus on the subject. When the focus frame turns green, press the Shutter button completely down to take the picture.



---

## Auto Mode

The camera will automatically detect the most suitable scene to capture the best pictures.

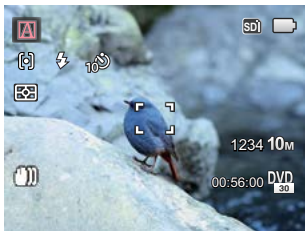

## Auto Mode

The camera will automatically adjust the exposure and focus to ensure the best possible pictures.

## Landscape Mode

For landscapes, will automatically adjust the exposure and reproduce vivid green and blue colors.

---

## **Portrait Mode**

Most suitable for capturing people with focus on their faces.

## **Night Portrait**

When you take portraits at night, or in low light conditions, will automatically adjust the exposure for people and night scenes.

## **Backlit Portrait**

When the sun or any other light source is behind you, will automatically adjust the foreground exposure to produce the best pictures possible.

## **Night Mode**

For night scenes, will automatically increase the ISO value to compensate for low light.

## **Macro Mode**

To produce more detailed close-ups, will automatically engage the camera's Macro Mode and automatically focus the lens.

---

## **Program AE P**

The user can switch the ISO and EV value according to personal preference, the camera can automatically set the shutter speed and aperture value.

## **Shutter priority S**

The user can adjust the shutter speed, EV and ISO values. It is mostly used to shoot the moving object.

## **Aperture priority A**


The user can adjust the aperture size, EV and ISO values. It is generally used to shoot inanimate object and control the view depth.


## **Manual Mode M**






The user can adjust the aperture size, shutter speed and ISO values manually. It is generally used to shoot static photos.

## Mode: PSAM

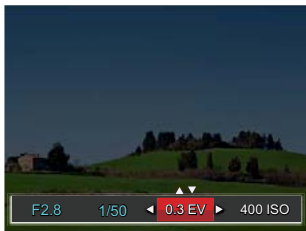Follow the steps below to adjust the parameters:

 1. Rotate the mode dial to select a mode you want, press the  button to configure settings.



2. Press the  /  button to select an adjustment item.
3. Press the  /  button to adjust the parameters.
4. Press the  button to confirm the settings and enter the shooting screen.


 
 



Items that can be adjusted under **PSAM** mode: (○: Optional X: Not optional, auto display)

Mode \ Items	Aperture value	Shutter speed	EV value	ISO value
<b>P</b>	X	X	○	○
<b>S</b>	X	○	○	○
<b>A</b>	○	X	○	○
<b>M</b>	○	○	X	○




---

## Face Beautifier

The camera is set to automatically adjust camera exposure for realistic portrayal of skin tones.

1. Rotate the mode dial to select .
2. Press the  button and press the [AF]/[/] button to select .
3. Press the [/] button to select an option and press the  button to confirm and return to photo shooting mode.



-  Effect 1: Skin Soften
-  Effect 2: Skin Soften+Eye Brightening
-  Effect 3: Skin Soften+Eye Brightening+Eye Enlargement

---

## Wi-Fi Mode

Make image transmission and remote control by connecting smart device with Wi-Fi.

### **Matters needing attention before use**

- Your smart device operating system version needs to be iOS 7 or higher, or Android 4.2 or higher. If not, please upgrade your smart device before using the APP.
- Please do not use in places having high intensity magnetic field, electrostatic and electric wave interference (for example near a microwave oven), which may cause failure in receiving signals.
- To maintain a connection, please keep the camera within 10 meters (32.8 feet) without signal shielding interference.
- Please do not use Wi-Fi connection functionality on a plane.
- The camera and the smart device can only be connected one to one.


---

## Route of downloading the APP package:



Please download APP installation package (APP name: PIXPRO Remote Viewer) to your smart device from the path below and install this application procedure.


### ■ Android system:

For Android devices, search and download the App "PIXPRO Remote Viewer"  in Google play, and install it following the instructions on the interface.



<https://play.google.com/store/apps/details?id=com.jkimagining.pixproremoteviewer>

### ■ iOS system:

For Apple devices, search and download the App "PIXPRO Remote Viewer"  in App store, and install it following the instructions on the interface.



<https://itunes.apple.com/us/app/pixpro-remote-viewer/id833154167?mt=8>

## Refer to the "PIXPRO Remote Viewer User Manual" located on the web:

### Americas




<http://kodakpixpro.com/Americas/support/downloads.php>



### Europe



 


<http://www.kodakpixpro.com/Europe/support/multi-lang-downloads.php>

- 
1. Rotate the mode dial to select  and then enter the Wi-Fi selection interface.



2. Press the [] / [] button to select and set options.

-  [Settings] : Customize the Wi-Fi settings for the camera system.
-  [Station] : Use the Station Mode to connect to a "Personal Hotspot" created by your mobile device.
-  [AP mode] : In AP mode, the camera will act as an access point enabling another Wi-Fi device to connect to it.





Rotate the mode dial to disconnect.




## AP mode

This camera may connect with your smart device through Wi-Fi.

### Settings of Camera:


1. Select  and press the  button to enter the setting interface.

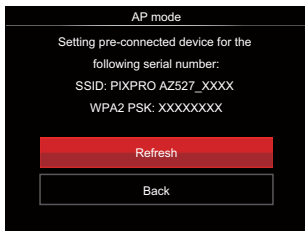

Press the [AF]/[] button to select:

- Refresh: Create a new WPA2 PSK password
- Back: Back to previous page

### Settings of Smart Device:



2. Enable the Wi-Fi of smart device and then search surrounding wireless devices.
3. Select the name of camera SSID to be connected and then input the eight-digit number password after WPA2 PSK on the camera.
4. Click the icon of the APP  to enable the APP.


### Set up completion:

5. Once the APP is connected to the camera, functional operations can be enabled on the smart device.

## Station




Enable image transmission and remote control by connecting the camera with a Wi-Fi access point created by your smart device.

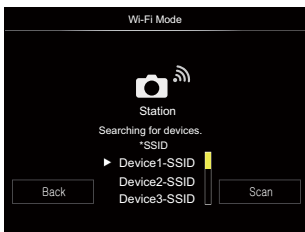1. Enable the Wi-Fi access point of smart device.
2. Select  on camera and then press the  button to confirm connection with smart device.




 

 

Press the  /  button to select:

- Scan: Search again surrounding wireless devices.
- ▶: Select the name of device to be connected.
- Back: Back to Wi-Fi mode select screen.

3. Press the  /  button to select the name of smart device to be connected and then press the  button to confirm. Then, the camera enters the password input interface.





Meanings of interface icons:

Icon	Description
	Delete the last letter
	Switch the display of letters in capital and lowercase
	Move the Cursor
	Switch the symbol input
	Input Space

- Press the [▲AF]/[▼🗑️🔄]/[🔒🔓]/[▶⚡] buttons to select and then press the (SET) button to confirm your selection. Enter the completion of WPA2 PSK after password storage.
- Connect immediately after saving.


- If connected, the LCD will display as shown below:

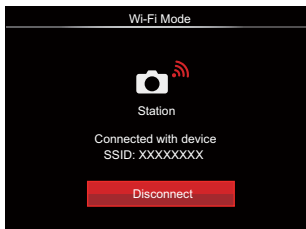


- If connect failed, please check Wi-Fi device and try again.
- After connection, click the icon of the APP  on the smart device, you may use it to carry out relative operation.

## Display of Wi-Fi Connection Status

The Wi-Fi has successfully connected but APP is not enabled:

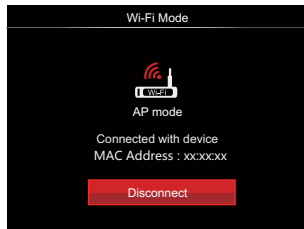


The Wi-Fi has successfully connected and APP is enabled:

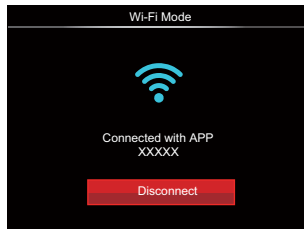


---

### For interrupting the connection:

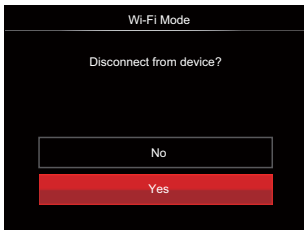

- No: Keep Wi-Fi connected and back to previous page.
- Yes: Disconnect and back to Wi-Fi mode for interface connection.



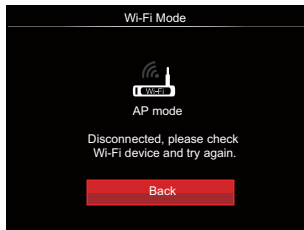


### The Wi-Fi of smart device interrupts:





- Back: Back to Wi-Fi mode SSID screen.

## Settings

The name of this camera can be changed through key stroking.

1. Select  and then press the  button to enter the setting interface.
2. Press the  /  button to select the option to be adjusted and then press the  button to enter the menu.

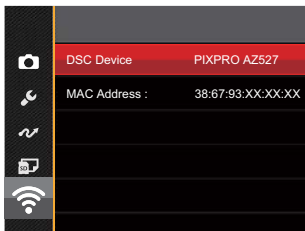

3. Press the  button to confirm settings and then skip the menu.

## DSC Device

The default name of DSC Device is 「PIXPRO AZ527」. Change the name of DSC device through key stroking.



For the method of input, please refer to the introduction on password input on Page 41.


 
## MAC Address


Check the wireless MAC Address of this camera.







---
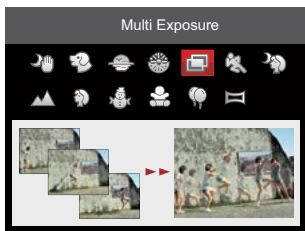
## Scene Mode SCN

The user can select an appropriate mode from the 13 scene modes according to the type of environment you are shooting. The camera then configures the most appropriate settings automatically.

1. Rotate the mode dial to select **SCN**.
2. Press the [**▲AF**] / [**▼**  ] / [**◀** ] / [**▶** ] buttons to select a scene, and press the  button to confirm.



3. If any need of changing the scene, please press the  button and then the  button and finally the [**▲AF**] / [**▼**  ] / [**◀** ] / [**▶** ] buttons to reselect the scene.

---

## Handheld Night

Reduce blur when shooting low light/ illuminated scenes.



Quickly take 4 photos below 8M (including 8M) and then overlap as a clear night image.

## Pet Mode

Rapidly identify pet (dog/cat), capture the dynamic moment of pet.



When a cat /dog face is detected, a white focus frame appears. The camera will take a picture and save it regardless of whether the focus is successful (if successful, there appears a green focus frame; if not, there is an orange frame).



At most, 10 dog/cat faces can be detected at one time.

## Sunset

For sunsets. Capture subjects in strong sunlight.




## Fireworks

For fireworks at night. Suggest using tripod.

---

## Multi Exposure

Suitable for shooting moving objects (as many as 7) in the same background.

-  Keep camera steady before shooting. Press and hold the Shutter button to take 7 photos continuously when it will stop automatically. To stop shooting, release the Shutter button in the midway.
-  Objects shall be moved only from left to the right in order to be recorded. Objects moving from other directions would not be recorded.
-  Shooting effect will be influenced if object is moving too fast or too close.

## Sport

For fast-moving subjects. Capture sharp action shots without blur.

## Night Portrait

For portraits against night time scenery (Suggest using tripod).

## Landscape

Speed adjusted for brilliant images.



---

## Portrait

For shooting portraits

## Snow

For subjects in the snow. Reduce underexposure.

## Children

For kids and pets. Flash is disabled for eye protection.







 

 


## Party

For subjects at night without using a tripod. Capture sharp shots without blur.

## Panorama Mode

This feature allows you to capture a panoramic view that will have significantly more content than a single photograph. Follow the instruction arrow with a smooth and steady movement of the camera to seamlessly shoot an ultra-wide scene of up to 360 degrees.





 

Follow the steps below:

1. Select Panorama Mode (  ), and then press the  button to confirm.
2. Press the [▲AF] / [▼  ] / [◀ ] / [▶ ] buttons to select a shooting direction. (The right direction is used as default if you do not make any choice) 2 seconds later, the camera is ready to take pictures. You can also press the  button or half press the Shutter button to be ready to take pictures.

- 
3. Compose your shot on the LCD and half press the Shutter button to focus on the subject. After focusing, fully press the Shutter button down to take picture. At this time, the process dialog of panorama mode stitching appears on the screen.



4. Rotate the camera according to the set direction. When the range of rotation does not exceed the range that the camera can detect, the progress dialog along the indication arrow partially turns red. When it completely turns red, panorama mode shooting is finished.



-  Panoramic image can be played back by the method of flash playing. Please see the animation panoramic playback on page 70.
-  During shooting, the flash, self-timer, macro modes and exposure compensation are not available. Focus adjustment is also not available at this time.
-  During panorama mode shooting, press the  button to interrupt shooting and save the current pictures taken. Press the  button to cancel shooting and not to save the previously taken pictures.
-  During panorama mode shooting, when the moving direction of the camera is wrong or the angle deviates from the internal settings, the LCD shows a warning message [Improper alignment. Please try again.] and the current pictures taken are saved.


---


## Movie Mode

Switch to this mode to record videos.

Follow the steps below:

1. Rotate the mode dial to select , and it will enter the movie screen.
2. Press the  button or the Shutter button to start recording.

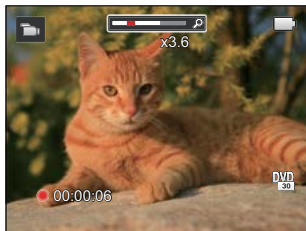

3. Press the  button or the Shutter button again to stop recording, save it automatically and then the camera will return to the movie screen.



In the recording process, you can rotate the zoom lever to zoom in or out of the subject.


---

## Custom Settings CS


The user can store frequently used shooting modes or scene modes with parameters and switch to this mode for quick adjustment.

### Settings under CS mode (unset state or state after reset):

1. Rotate the mode dial to select **CS**, and then the camera enters the setting interface as shown below:

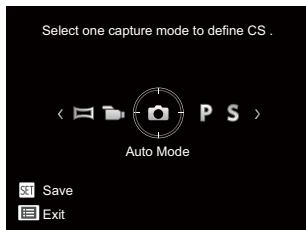


2. As shown in the picture, press the [] / [] button to select a capture mode that you want to define as **CS**, and press the button to enter the shooting screen.
3. As shown in the picture, press the button to confirm setting or to exit without setting by turning the mode dial.

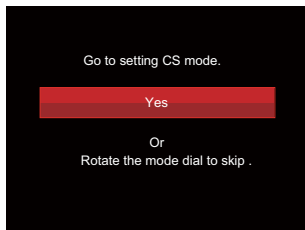


### For setting under other modes (use this method to select a different custom setting):

1. Select any mode or scene mode to be stored.
2. Set your desired parameters in the current mode.
3. Press the button and then the [] / [] button to select , and press the button to enter the menu.
4. Press the [] / [] button to select , and press the / [] button to enter the menu.


5. Press the [▼] [🗑️] [🔄] button to select [Custom Settings] and then press the (SET) / [⏻] button to enter the menu

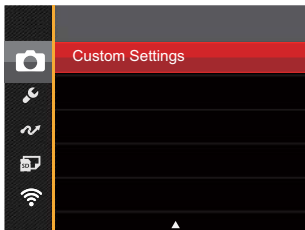


6. Select [Yes] to save or [No] to cancel.

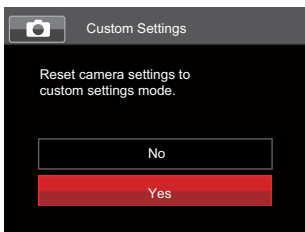

7. Rotate the mode dial to switch to **CS** .
8. The photo settings you stored the last time are invoked.

 When the **CS** mode is used for the first time, there is no preset parameter stored in the **CS** mode.


 If you want to remove the parameter setting of [Custom Settings] , please utilize the reset function as described on page 98.

# Basic Operation

---

## Using the Zoom Function

Your camera is equipped with two types of zoom functions: optical zoom and digital zoom. Toggle the zoom lever of the camera to zoom in or out of the subject while taking pictures.

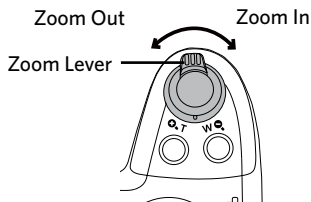

When the optical zoom reaches the threshold as digital zoom, release and turn the zoom lever to T to switch between the optical zoom and digital zoom.




Zoom Indicator

---

## Focus Setting

This function can be adjusted in **PSAM** mode, please follow the steps below to configure the settings:

1. Press the [**▲AF**] button to enter the Focus menu.

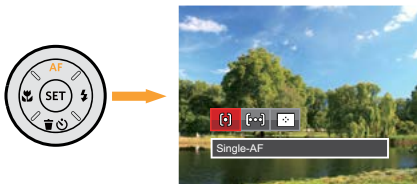

2. Press the [**◀**🌸] / [**▶**🌸] button to select the following 3 modes:

- [**🌸**] Single-AF  
The focus frame appears on the center of the LCD to focus on the subject.
- [**🌸**] Multi-AF  
The camera automatically focuses the subject in a wide area to find the focus point.
- [**🌸**] Object Tracking  
Smart tracking of the object in motion under the focusing shooting.

3. Press the (SET) button to confirm the settings and enter the shooting screen.



Once enabled, Object Tracking will only work when lens is focused on the object.

---

# Macro Mode



The Macro Setting is ideal for shooting small objects or close-up photos. This mode allows you to focus on subjects very close to the camera.

It can be adjusted in **PSAM** + [📷] mode, please follow the steps below to configure the settings:

1. Press the [📷] button to enter the Marco menu.



2. Press the [📷] / [📷] button to select the following 2 modes:

-  Macro Off  
Select this option to disable Macro.
-  Macro On  
Select this option to make focusing on the object closer to the lens (At the W side, the shooting distance should be more than 1 cm).

3. Press the (SET) button to confirm the settings and enter the shooting screen.


 


# Self-timer Setting




Using this function can take photos at regular time. The camera can be set to shoot after 2 seconds, 10 seconds since pressing the Shutter button or shoot after smile.


It can be adjusted in **PSAM** mode, please follow the steps below to configure the settings:

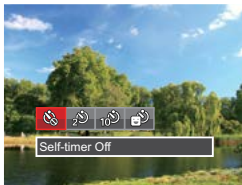1. Press the [▼🗑️😊] button to enter the Self-timer menu.



2. Press the [🌸] / [▶📷] button to select the following 4 modes:

-  Self-timer Off  
Disables the Self-timer.
-  Self-timer 2 sec  
A single picture is shot 2 seconds after the shutter button is pressed.
-  Self-timer 10 sec  
A single picture is shot 10 seconds after the shutter button is pressed.

-  Self-timer Smile  
Press the shutter button and a picture will be taken immediately after a smile is detected.

3. Press the [SET] button to confirm the settings and enter the shooting screen.



When enabling the self-timer, pressing the shutter button or the [▼🗑️😊] button can disable the self-timer and return to the shooting screen while keeping the self-timer setting.




When enabling the smile detection, pressing the shutter button or the [SET] button can disable the self-timer and return to the shooting screen without keeping the self-timer Smile setting.


# Flash Mode

The flash provides supplemental light for the scene. The flash is usually used when shooting against the light to highlight the object; it is also suitable for metering and shooting in darker scenes to improve the exposure.


 
It can be adjusted in **PSAM** mode, please follow the steps below to configure the settings:


1. Press the Flash Button  to pop up the flash.

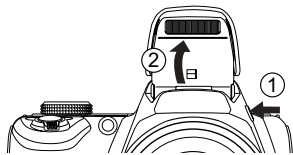



2. Press the  button to enter the Flash menu.





3. Press the  /  button to select the following 6 modes:


-  Force Off  
Flash is turned off.


-  Flash Auto  
Camera flash goes off automatically based on existing light conditions.

-  Fill Flash  
The flash will engage with each shot even if there is enough available light to take the photo without flash.

-  Slow Sync.  
This allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop. The use of a tripod is recommended when shooting with this setting.

-  Slow Sync. + Red-Eye  
Use this mode for slow synchro shots with red-eye reduction.

-  Red-Eye Reduction  
The camera emits a brief pre-flash before the picture is taken to reduce red-eye effects.

4. Press the  button to confirm the settings and enter the shooting screen.

# White Balance Setting

The white balance function allows adjustment of the color temperature for different light sources. It can be adjusted in **PSAM** mode, please follow the steps below to configure the settings:

1. Press **SET** button to enter the White Balance menu.



2. Press the **[Left Arrow]** / **[Right Arrow]** button to select the following 8 modes:


- **AUTO WB** AWB
- Daylight
- Cloudy

- Fluorescent
- Fluorescent CWF
- Incandescent
- Manual WB  
(Fully press the Shutter button to detect the white balance value)
- Color Temp. (1900K-10000K)  
Press the **[Up Arrow]** / **[Down Arrow]** button to "Adjust the K value";  
Press the **[Left Arrow]** button to exit the K value.

 
 
3. Press the **SET** button to confirm the settings and enter the shooting screen.



# Continuous Shot




This function can be adjusted in **PSAM** mode, please follow the steps below to configure the settings:


1. Press the  button to enter the Continuous Shot menu.




2. Press the  /  button to select the following 5 modes:

-  Single  
Capture a single shot only.
-  Continuous Shot  
Take several pictures at a time.

-  Cont. Shot-High Speed (VGA)  
For continuous shot with VGA pixel.
-  Cont. Shot-Fast (2M)  
For continuous shot with 2M pixels.
-  Time-Lapse  
Take pictures based on the preset interval (30sec/ 1min/ 5min/ 10min).

3. Press the  button to confirm the settings and enter the shooting screen.
4. Press the Shutter button to start continuous shooting.







 In Continuous Shot mode, the flash is automatically set to Force Off in order to achieve quick succession of shots.

---



# EV Setting

 
The EV function menu of the camera includes functions, such as EV adjustment, ISO adjustment, Shutter adjustment, Aperture adjustment, etc. Using the appropriate function settings can improve your pictures.

Please follow the steps below to configure the settings:

1. Press the  button to display the settings screen.
2. Press the  /  button to select the setting options.
3. Press the  /  button to adjust the option values.
4. Press the  button to confirm the settings and enter the shooting screen.

## Exposure Compensation

Set up to adjust the picture brightness. In the case of a very high contrast between the photographed object and the background, the brightness of the picture can be appropriately adjusted. (Adjustable in **PSA**   Mode)

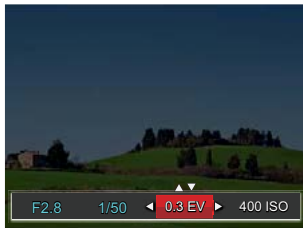


The adjustable range of exposure value is from EV -3.0 to EV+3.0.

---

## ISO


ISO allows you to set the sensitivity of the camera sensor. Please use a higher ISO value in darker places and a lower value in brighter conditions. (Adjustable in **PSAM** Mode).

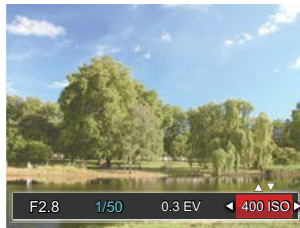

The camera's ISO settings include: Auto, 100, 200, 400, 800, 1600 and 3200.

## Shutter Adjustment


For shutter speed, the camera may automatically set the aperture value corresponding to the manually set shutter speed so as to obtain a most suitable exposure value. The movement of object may be shown by adjusting the shutter speed. High shutter value will allow you to clearly capture the movement of fast moving objects while a low shutter value will allow you to take a picture of a fast moving object while showing a strong sense of movement. (Adjustable in **SM** Mode).

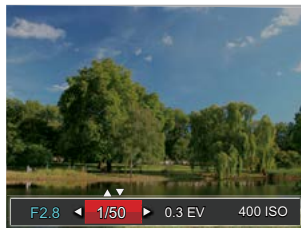


---

## Aperture Adjustment


You can adjust the aperture size value. Selecting a large aperture opening will emphasize the point of focus and show a blurry background and foreground. A small aperture opening will keep both the background and main object in clear focus. (Adjustable in **AM** Mode)

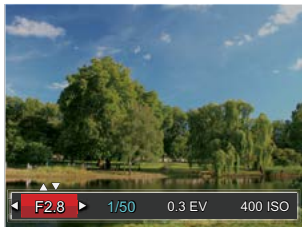

## Using Quick Recording

In shooting mode, press the  button to begin recording video.

 





 
After recording, press the  button or the shutter button to stop recording. The camera will store the video and return to the shooting screen.


## i Button Function Menu

The Image Color Setting allows you to select different color effects.







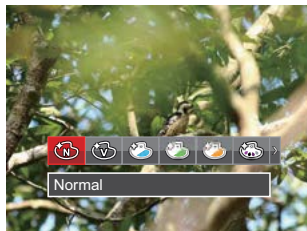

 







 



 







It can be adjusted in **PSAM**  mode, please follow the steps below to configure the settings:

1. Press the  button to select the Image Color Setting Menu.
2. Press the  /  button to select the Image Color Setting options.

 (  ) represents optional in Movie mode.



There are 20 Image Color options in photo shooting mode **PSAM**:

 Normal (  )	 Sepia (  )	 Vignetting
 Vivid (  )	 Partial Color-Red (  )	 Salon
 Japan Style	 Partial Color-Blue (  )	 Fish Eye (20M Not optional)
 Italian Style	 Partial Color-Yellow (  )	 Reflection
 French Style	 Partial Color-Green (  )	 4 Grids - Stylish (2M)
 Punk	 Negative	 Sketch
 Black and White (  )	 Dreamy	



# Playback Mode

## Viewing Photos and Videos

To view photos and videos on the LCD:

1. After pressing the **[▶]** button, the last photo or video clip taken will be displayed on the LCD.
2. Use the **[◀📷]** / **[▶📷]** button to scroll through the photos or video clips stored in the internal memory or on the memory card.
3. To play a selected video clip, press the **[SET]** button to enter the movie playback mode.


During video playback, the operating instructions will appear on the screen. Press the appropriate buttons to enable the corresponding functions.

Under Playback



1	Increase volume
2	Pause
3	Fast forward
4	Decrease volume
5	Rewind


Paused

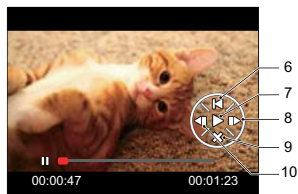


6	Back to the beginning of the video
7	Play
8	Play video forward
9	Cancel playback
10	Play video backward


---





## Thumbnail View

When in playback mode, rotate the zoom lever counter to the **W**  position to display thumbnail images of the photos and videos on the screen.

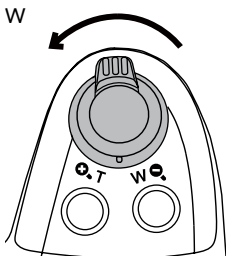

   
1. Slide the zoom lever to switch between 3x3 and 4x4 thumbnails.

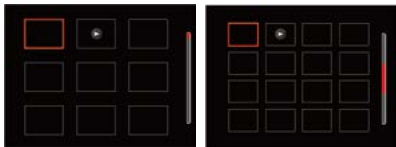



 

2. Press the [**▲**AF] / [**▼**  ] / [**◀** ] / [**▶** ] buttons to select a picture or video clip to view and press the **(SET)** button to restore it to the original size.





 

 

When the icon  appears, it means this is a video file.

## Using Zoom Playback (for still pictures only)

When playing back photos, you can also use the Zoom Lever to zoom in on the photos 2 to 8 times.



1. Press the  button to switch to playback mode.
2. Press the  /  button to select a picture to be zoomed in.
3. Rotate the zoom lever clockwise to  **T** to zoom in.

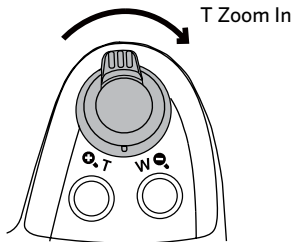

4. The screen will display the number of times and area of the photo zooming operation.
5. Press the  /  /  /  buttons to navigate and select a part of the image to be zoomed in.
6. Press the  button to return the image to its original scale.



Movie images cannot be magnified.

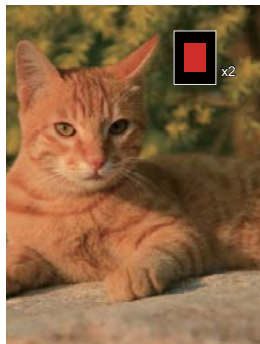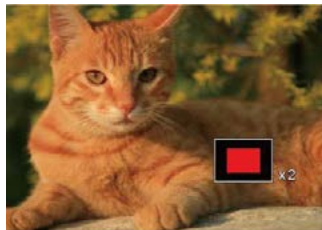


---

## Photos and Video Deletion

In playback mode, press the [▼🗑️🕒] button to delete your photos and videos.

To delete photos or videos:

1. Press the [⏮] button to switch to playback mode.
2. Press the [◀️🌸] / [▶️🌸] button to select the photos and videos to be deleted.
3. Press the [▼🗑️🕒] button and the deletion screen is displayed.

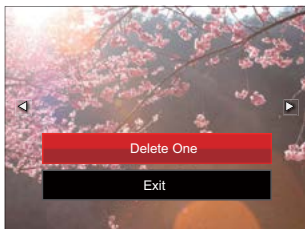

4. Press the [▲AF] / [▼🗑️🕒] button to select [Delete One] or [Exit] and press the [SET] button to confirm.



Erased photos/video clips cannot be recovered.




 



Please refer to page 91 for instructions on deleting more than one image at a time.





---

# Slideshow

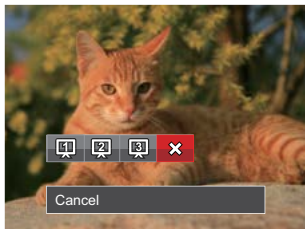This setting allows you to view all the stored images as a slideshow.

1. Press the  button to enter playback screen.
2. Press the  button to enter slide option.
3. Press the  /  button to select slideshow playing or [Cancel] to return to the playback screen.








4. Press the  button to confirm the setting.
  -  The continuous capture group playback may be displayed by slideshow.
  -  Pictures rotate automatically during a slide show.
  -  Slide playing function supports movie playing.

---

## Continuous Capture Group Playback

Cont.Shot-High Speed (VGA) and Cont.Shot-Fast (2M) can make continuous capture for group image playback.



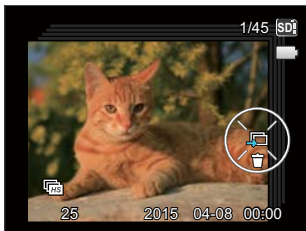

1. Press  button to enter playback screen.
2. Press the [] / [] button to select cont. group.
3. Press  to start playback.




 
 
 

---

## Animation panorama play

Panoramic animation playing is to play full size image in accordance with the shooting direction. After playing, it will automatically return to the static screen of panoramic image.

1. Press the  button to enter playback screen.
2. Press the [] / [] button to select animated panoramic photos.
3. Press the  button to play in selected shooting direction.



 In the process of panoramic animation playback, press the [  ] button (  ) to stop playing and return to the playback screen.

# Using the Menus

## Photo Setup Menu

Functions that can be enabled are different under each mode.

Mode: PSAM + SCNCS

1. In photo shooting mode, press the button to enter the shooting menu.
2. Press the [] / [] [] button to select the item to be set.
3. Press the [] [] / [] [] button to select an option and press the button to confirm.

Refer to the following pages for more details about each setting.

## Expo Metering

Use this setting to select the “target” size of the camera’s field of view to be metered.



- AiAE (Artificial Intelligence AE): Automatically selects the central and peripheral metering, to calculate the reasonable value of metering by weighting.
- Spot: For metering targets a small area in the center of the camera’s field of view.
- Center: For metering targets a slightly larger area in the center of the cameras field of view.



It can be adjusted in all modes except for Panorama Mode.