 



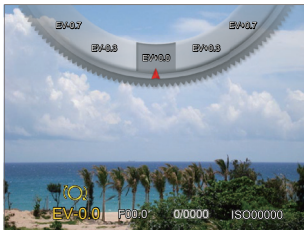 
Function Ring (Smart) Mode


Rotate the lens function ring to set parameters of aperture, shutter, ISO, EV, etc.


1. Switch the lens function ring lever to position **SMART**.

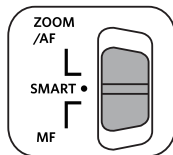

2. Rotate the lens function ring or rolling the  jog dial to select options needed.



3. Press the  button to complete the setting and enter shooting screen.

 
 The selection of functions of Function Ring (Smart) in the menu is needed before using Function Ring (Smart) mode. The default setting is Normal. (See P91 for details)



Options	Referred Pages
Normal	P64
Aperture priority	P66
Shutter priority	P65
EV	P64
ISO	P65
Continuous Shot	P62
Color	P67
White Balance	P60
Image Size	P82
Expo Metering	P79
Flash	P58
AF Area	P55

 
MF(Manual Focus) Mode

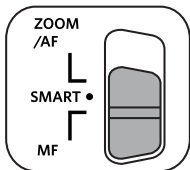

Rotate the lens function ring for manual focus.

1. Switch the lens function ring lever to position **MF**.

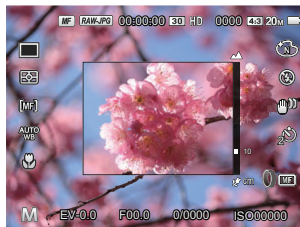

2. If the lens function ring is operated or rolling the  jog dial, the focus enlargement frame will appear on the LCD. After clear focus is achieved through manual adjustment, press the  button to close the focus enlargement frame. The camera will return to the normal shooting screen. Semi-pressing the shutter button will have no effect; you need to fully press the shutter button to take a normal photo.




 


-  Manual focus works only under the **P S A M** mode.
-  The MF assist needs to be enabled in the menu before it will function. (See P85 for details)

PLAYBACK

Viewing Photos and Videos

 
For viewing taken photos and videos on the LCD:





1. After pressing the , the last photo or video clip taken will be displayed on the LCD.
2. Press the []/[] button to scroll through the photos or video clips stored in the built-in memory or on the memory card.
3. To play a selected video clip, press the  button to enter the movie playback mode. An operation guide appears on the screen when playing back a video. Press the appropriate buttons to enable the corresponding functions.

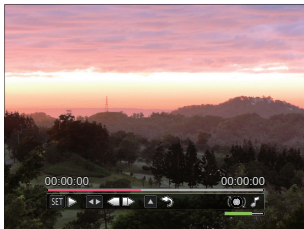


Under Playback








Paused



 
 	Pause
	Rewind
	Fast Forward

	Clockwise Volume Up Counterclockwise Volume Down
	Volume
	Mute

 	Play
	Frame Backward
	Frame Forward
	Cancel playback

Thumbnail View

When in playback mode, rotate the zoom lever counter to the **W** position to display thumbnail images of the photos and videos on the screen.

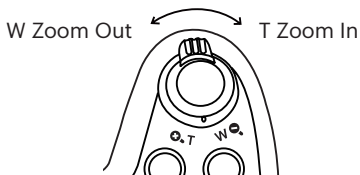

1. Slide the zoom lever to switch between 3x3 and 4x4 thumbnails.








2. Press the [**▲ AF**]/[**▼**]/[**⏻**]/[**▶ ⚡**] button to select a picture or video clip to view and press the **SET** button to restore it to the original size.
3. As shown in the picture, press the **☰** button to select index mode.
4 options in [Index Mode] :
 - Single Index
 - Date Folder
 - Cont. Group
 - Slide Show

 
 
When the icon  appears, it means this is a video file.






When the icon  appears, it means this is a continuous group file.

Using Zoom Playback (for still pictures only)

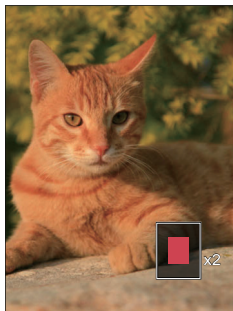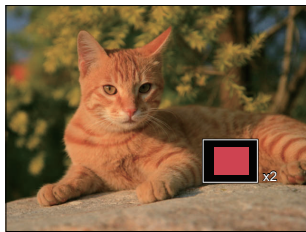When playing back photos, you can also use the zoom lever to zoom in on the photos 2 to 8 times.

1. Press the  button to switch to playback mode.
2. Press the []/[] button to select a picture to be zoomed in.
3. Rotate the zoom lever to  position to zoom in.
4. Rolling the  jog dial clockwise to zoom in and counterclockwise to zoom out.
5. The bottom right corner of the LCD will display the number of times and area of the photo zooming operation.







6. Press the [ **AF**]/[]/[]/[] button to navigate and select a part of the image to be zoomed in.
7. Press the  button to return the image to its original scale.

 


Movie images cannot be magnified.

 
Continuous Shot Group Playback

High speed (VGA) and fast (2M) can make Continuous Shot for group image playback.

1. Press the  button to enter playback screen.
2. Press the []/[] button to select continuous group.
3. Press the  button to start playback.

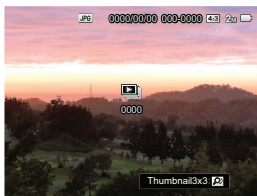



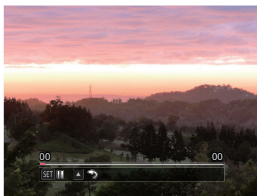

Cont. Group









Playing



Pause

 	Pause
 	Cancel Play (back to 1:1 playback for continuous group)





Playing

 
 	Play
	Previous photo (loop available only in continuous group)
	Next photo (loop available only in continuous group)
 	Cancel Play (back to 1:1 playback for continuous group)

Pause

 
Animation Panorama Play

Panoramic animation playing is to play full size image in accordance with the shooting direction. After playing, it will automatically return to the static screen of panoramic image.

1. Press the  button to enter playback screen.
2. Press the []/[] button to select animated panoramic photos.
3. Press the  button to play in selected shooting direction.

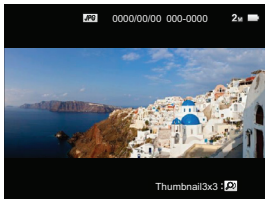



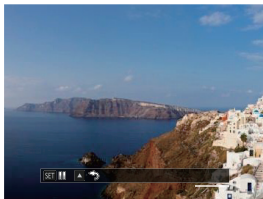

Video Panorama






Playing



Pause



 	Pause
 	Cancel Play

 
 In the process of panoramic animation playback, press the [ **AF**] button to stop playing and return to the playback screen.







 Picture will not be rotated during panorama play or pause.

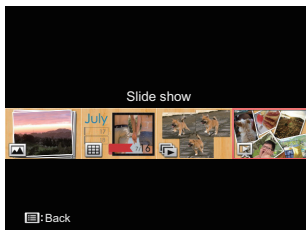 
Slideshow





This setting allows you to view all the stored images as a slideshow.

1. Press the  button to enter playback screen.
2. Rotate the zoom lever counter to the **w** position to display thumbnails 3x3 and then press the  button to select the index mode.

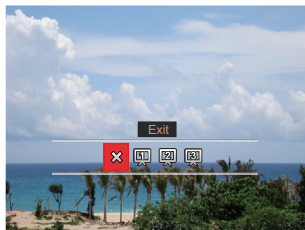

3. Press the []/[] button to select slideshow playing and then press the  button to enter slide option.
4. Press the []/[] button to select play effect and then press the  button to confirm.



 
-  Exit
-  Type 1: Slow-in and slow-out
-  Type 2: Separate in middle and move off to the left and right
-  Type 3: Separate into blocks and spin in

Photos and Video Deletion

In playback mode, press the [▼ 🗑️ 🔄] button to delete your photos and videos.

To delete photos or videos:

1. Press the [⏪] button to switch to playback mode.
2. Press the [◀️ 🗑️]/[▶️ ⚡] button to select the photos or videos to be deleted.
3. Press the [▼ 🗑️ 🔄] button and the deletion screen is displayed.

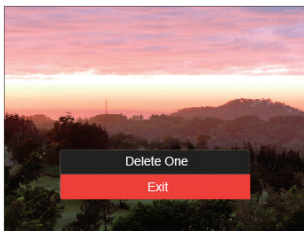

4. Press the [▲ AF]/[▼ 🗑️ 🔄] button to select [Delete One] or [Exit] and press the [SET] button to confirm.



Erased photos/video clips cannot be recovered.



Please refer to page 98 for instructions on deleting more than one image at a time.

USING THE MENUS

Shooting Menu

Mode: **PSAM** **SCNCS**

1. In shooting mode, press the button to enter the shooting menu.

12 options in [Shooting Menu]:

- Continuous Shot Mode (refer to P62)
- Expo Metering
- AF (Auto Focus) Area (refer to P55)
- WB (White Balance) Mode (refer to P60)
- Macro Mode (refer to P56)
- Color (refer to P67)
- Flash mode (refer to P58)
- OIS (Optical Image Stabilization)
- Self-Timer Mode (refer to P57)
- Beautifier (Adjustable only in Mode)
- Select Scene (Adjustable only in **SCN** Mode)
- Menu

2. Press the [**AF**]/[] button to select the shooting menu to be set.
3. Press the []/[] button or rolling the jog dial to select options of the shooting menu to be set and then press the button to confirm.

Refer to the following pages for more details about each setting.



Functions that can be enabled are different under each mode.