

Kodak

PIXPRO SP1

Digital Action Cam

User Manual



BEFORE YOU START

Declaration of Conformity

Responsible Party: JK Imaging Ltd.

Address: 1411 W. 190th Street, Suite 550, Gardena, CA 90248, USA

Company Website: www.kodakcamera.jkilt.com

For Customers in Canada

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For Customers in Europe



"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" marked products are intended for sales in Europe.



This symbol [crossed-out wheeled bin WEEE Annex IV] indicates separate collection of electrical waste and electronic equipment in the European countries. Please do not throw the equipment into domestic refuse. Please use the return and collection systems available in your country for proper, safe disposal of this product.

For Customers in the U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

About this Manual

Thank you for purchasing this product. Please read this manual carefully and keep it in a safe place for future reference.

- JK Imaging Ltd . reserves all rights to this manual. No part of this published manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form, by any means, without the prior written permission of JK Imaging Ltd . .
- All trademarks mentioned in this manual are used for identification purposes only and are properties of their respective owners.
- This manual provides you with instructions on how to use your new KODAK PIXPRO Digital Action Cam. Every effort has been made to ensure that the contents of this manual are accurate. However, JK Imaging Ltd. reserves the right to make changes without notice.
- Throughout this manual, the following symbols are used to help you locate information quickly and easily:
 -  Indicates useful information.
 -  Indicates precautions are to be taken while operating the product.
- In this Manual, digital action cam is referred to as action cam.

SAFETY NOTES

Waterproof / Dustproof / Shockproof / Freeze-proof

- JIS / IEC waterproof grade 8 (IPX8).
- JIS / IEC dustproof grade 6 (IP6X).
- Height for shockproof rating is 2.0m.
- Suitable temperature range for freeze proof capability is -10°C and above.

Product Notes:


- Do not disassemble or repair the product by yourself.
- Do not heavily drop or knock this product. Improper handling may damage this product.
- Avoid touching the Lens Cover and lens element please use professional lens cleaning paper together with lens cleaning agents to wipe the lens and keep the lens clean.
- Do not use corrosive, alcoholic or organic-solvent-containing cleaners to wipe this product.
- Do not use or store this product in high temperature environment.
- Do not expose the lens to strong light sources (e.g. Daylight, etc.) for extended periods of time.
- Do not use or store the product in strong magnetic field environment.
- If the product is quickly transferred from a low temperature environment to a high temperature environment, water condensation may occur in the product due to physical changes. In this case, it is recommended to wait until the product returns to room temperature before you turn it on.
- If a photo or video cannot be played back due to human-caused improper operation, the Company shall assume no liability or responsibility for compensation.
- Store the product in a dry and clean environment when you are going to store the product for a long period of time.

Waterproofing Notes:

- Do not use the product below 10 meters underwater.
- Do not use this product in a geothermal spring.
- Please do not open the rear cover underwater.
- If water accidentally comes in contact with the product, please do not open the rear cover immediately. Turn the product off, and dry it with a clean, dry and lint free cloth. Then open the rear cover, and remove the battery and the memory card.
- When opening the rear cover, if there are water drops on the contact surface between the inside of the rear cover and the body, please do dry the water drops.
- After using the product in water or near sand, mud or other foreign materials, please rinse it with clean water (close the rear cover when cleaning). After cleaning, dry the product with a clean, dry and lint free cloth.
- If there is dust, sand or other foreign materials on the waterproof rubber of the rear cover and its contact surface, please wipe it with a clean, dry and lint free cloth timely.
- To ensure the waterproof capability of the product, make sure before using that there is no damage to or foreign matters in the waterproof rubber, and then close the rear cover tightly.



Waterproof rubber with scratches and cracks will allow water to penetrate into the product. Contact customer service immediately for maintenance with replacement of new waterproof rubber.

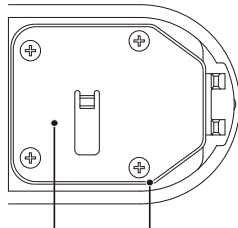

Rear Cover Waterproof Rubber

Battery Notes:

- Please use the battery of the accessory type.
- If the battery overheats during charging or use, stop charging or use immediately. Turn off the product, remove the battery carefully, and wait until it cools down.
- Please keep the battery contacts clean and dry.
- Please install the battery according to the positive and negative markings on the battery compartment. Never force it into the battery compartment.
- If battery fluid leaks into the product, please contact your retailer. If battery fluid leaks onto your skin, rinse your skin immediately with clean water and seek for medical attention.
- To prevent the battery from being damaged, do not drop the battery, impact it with heavy objects or scratch it with sharp objects.
- Do not let the battery come in contact with metal objects (including coins) to avoid short circuiting, discharging, excessive heat, or possible leakage.
- Do not heat the battery or throw it into a fire to avoid a possible explosion.
- When the product is stored for a long period of time, please remove the battery for storage.
- Do not store the battery in a hot environment.
- In colder environments, the performance of the battery may be noticeably reduced.
- Do not attempt to disassemble the battery.
- Disposal of used batteries should be carried out in accordance with the local (national or regional) regulations.

Memory Card Notes:

- The memory card referred to in this manual is Micro SD Card or Micro SDHC card.
- Please buy a genuine memory card of a well-known brand.
- Please keep the memory card clean and dry.
- When inserting a memory card, make sure the notch direction of the card matches the notch direction of the memory card mark near the card slot. Do not force the memory card into the card slot.
- Before using a brand new memory card, please format the memory card first.
- A photo or video taken with the product will be stored in the folder that is automatically generated on the memory card. Do not store photos or videos that are not taken using the product in these folders in case that the files cannot be normally recognized in playback.
- Do not directly edit the data on the memory card. Copy the data to your computer disk before editing.
- Do not modify the names of the files or folders on the memory card using your PC. Modifying the name of the files or folders may cause the files to not be recognized by the product or possibly an error may occur.
- Please turn the product off before removing the memory card. Otherwise, the memory card could be damaged.
- When the product is stored for a long period of time, please backup the data on the memory card and remove the memory card for storage.

Other Notes:

- Do not disconnect the power or turn the product off during the update process. Doing so may cause incorrect data to be written and the product may not power on later.
- When using your product on an airplane, observe the relevant rules specified by the airline.
- Due to the limitations of manufacturing technology, the LCD screen may have a few dead or bright pixels. These pixels do no effect the quality of the photos or video.
- If the LCD screen is damaged, pay particular attention to the liquid crystal in the screen. If any of the following situations arise, take the recommended immediate action indicated below:
 1. If liquid crystal comes in contact with your skin, please wipe with a dry cloth, wash thoroughly with a soap, and rinse with plenty of clean water.
 2. If liquid crystal gets into your eye, flush the eye immediately with plenty of clean water for at least 15 minutes and then seek for medical assistance.
 3. If liquid crystal is swallowed, immediately flush your mouth thoroughly with clean water and induce vomiting. Seek for medical assistance.

Contents

BEFORE YOU START.....	1
SAFETY NOTES	4
Contents	9
GETTING READY	13
Accessories Included.....	13
Part Names.....	15
Installing and Dismantling the Lens Cover	18
Special Accessories.....	20
Installing Battery and Memory Card	34
Charging	36

Introduction to Various Button Functions	37
Operation Method.....	39
Turn On / Off	39
Set your Language, Date and Time after the first power-on	40
LCD Screen Display	41
Introduction to Basic Operation of Recording and Shooting.....	42
LCD Screen Display under Playback Status	44
Introduction to Basic Operation of Playback.....	45
Introduction to the Setting Mode of Menu Options	50
Menu Introduction	51
Introduction to General Settings	52

Introduction to Mode Settings	57
Movie Settings Introduction	58
Still Settings Introduction	65
AP Settings Introduction	68
Mobile Phone APP Operating Method.....	71
Position Service Function	71
APP Home	73
Playback	73
Remote Viewfinder.....	83
About	86
Connection Port Use Description	87



Connect a Computer.....87

HDMI Connected TV Output.....89

APPENDICES90

Specifications.....90

Prompts and Warning Messages.....93

Trouble Shooting.....97



GETTING READY

Accessories Included

Your product box should contain the product you purchased along with the following accessories. If anything is missing or appears to be damaged, please contact your retailer. (Based on sales in different countries or regions, the shape of the AC adapter will vary. The actual product will prevail)



 
Quick Start Guide



Service Card




Warranty Card



CD-ROM



 
Rechargeable
Li-ion battery




AC Adapter



USB Cable

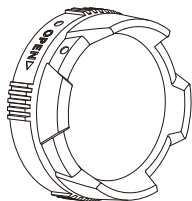

Standard Lens Cover

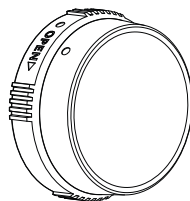


Underwater Lens Cover




Standard Lens Cover has been installed on the product when leaving factory.


Part Names

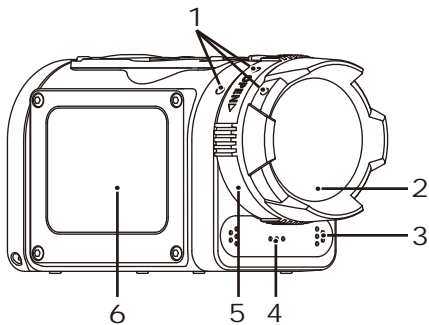


1	Alignment Point
2	Standard Lens Cover
3	Microphone
4	Speaker
5	Lens Cover Ring
6	LCD Screen

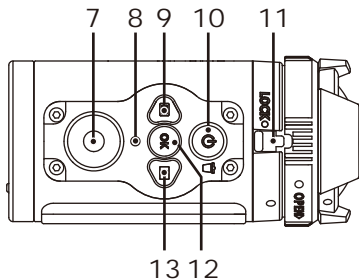

7	Video Recording Button / Shot Button
8	Status Indicator
9	Menu Button / Direction Button (Upper)
10	Power Button / Delete Button
11	Lens Cover Buckle
12	OK Button
13	Playback Button / Direction Button (Lower)

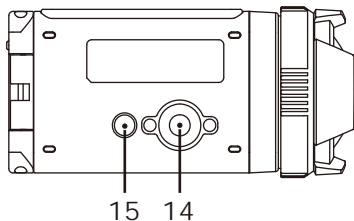


14	Tripod Socket
15	Location Hole

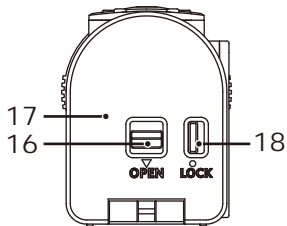

16	Rear Cover Open Switch
17	Rear Cover
18	Rear Cover Switch

Rear Cover Open Status

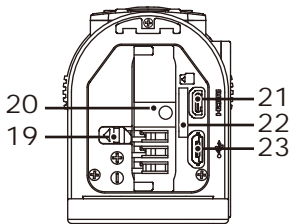

19	Battery Lock
20	Battery Compartment
21	HDMI Port
22	Micro SD Card Slot
23	USB Port

Installing and Dismantling the Lens Cover


Two types of replaceable lens covers are provided for the product.

Standard Lens Cover:

Applicable under general conditions.

Visual angle in the air is about 160° .

Focusing in water is unavailable.

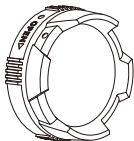


Underwater Lens Cover:

Applicable in water.


Visual angle in the air is about 130° , and

visual angle in water is about 90° .

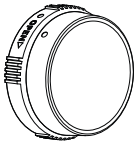

Steps for dismantling the lens cover:

1. Hold the product with your left hand, and pull the lens buckle with your finger to the left end as illustrated in the picture. Hold the lens cover ring with your right hand and rotate to the OPEN arrow direction.
2. When three alignment points are in a straight line, loose your left hand from the lens buckle, and remove the lens cover from the right with your right hand.

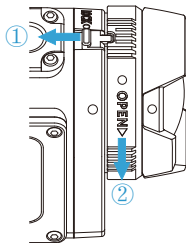


Steps for installing the lens cover:

1. Hold the product with your left hand, and pull the lens buckle with your finger to the left end as illustrated in the photo. hold the lens cover ring with your right hand.
2. When three alignment points are in a straight line, buckle the lens cover to the lens, and rotate against the OPEN arrow direction.
3. When the notch of the lens cover ring is aligned with the lens buckle, loose your left hand from the lens buckle, and loose your right hand from the lens cover.



Please select appropriate lens cover when taking videos and pictures, otherwise it will affect the image effect.

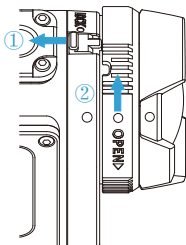

Special Accessories

To provide you with more fun during travel and sports, we also provide you with several accessories designed with different characteristics. Based on sales in different countries or regions, the type of the accessory will vary. The actual product will prevail.



Before using (especially in water or strenuous exercise), please pay attention to make a fixing protection to prevent damage or loss to the product.

Adhesive mount (flat) : accessory applicable to skateboard



Adhesive mount (curved) : accessory applicable to helmet




Installation Method:

There are two types of adhesive mounts: flat and curved. You may select based on the shape of the object to be used.

Both types can be assembled in the same way, taking the adhesive mount (flat) as an example:

1. Align the location pole of the base to the location hole of the action cam, and align the screw on the base to the tripod socket of the action cam. Rotate the screw for fixing.

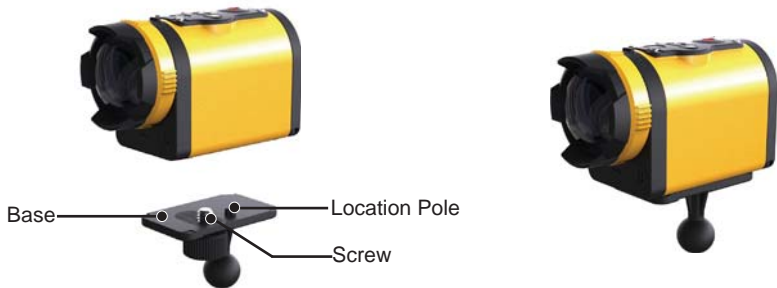


2. Tie one end of the rope to the adhesive mount, and the other end to the rear cover shaft.
3. Assemble the base, pre-tightening handle and adhesive mount according to the direction illustrated in the picture. First press the base into the adhesive mount, and then rotate and tighten the pre-tightening handle.



4. Tack the double-sided adhesive at the bottom of the adhesive mount to the object to be used.



Double-sided adhesive is disposable. It can be purchased separately and replaced if needed.

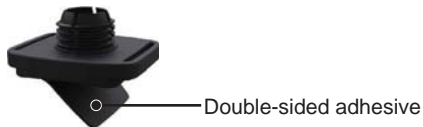

Handlebar mount : accessory applicable to bicycle




Installation Method:

1. Set the handlebar clamp to the handlebar, and rotate the screw for fixing.



2. Align the location pole of the base to the location hole of the action cam, and align the screw on the base to the tripod socket of the action cam. Rotate the screw for fixing.
3. Assemble the base, pre-tightening handle and handlebar clamp according to the direction illustrated in the picture. First press the base into the handlebar clamp, and then rotate and tighten the pre-tightening handle.

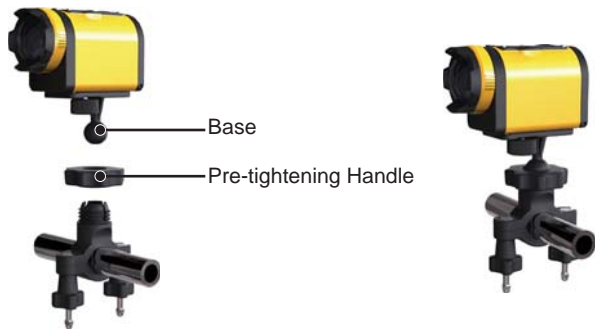


Suction mount : accessory applicable to be attached to the automotive windshield (or smooth surface)



Installation Method:

1. Align the location pole of the base to the location hole of the action cam, and align the screw on the base to the Tripod Socket of the action cam. Rotate the screw for fixing.

2. Assemble the base, pre-tightening handle and suction mount according to the direction illustrated in the Picture. First press the base into the suction mount, and then rotate and tighten the pre-tightening handle.

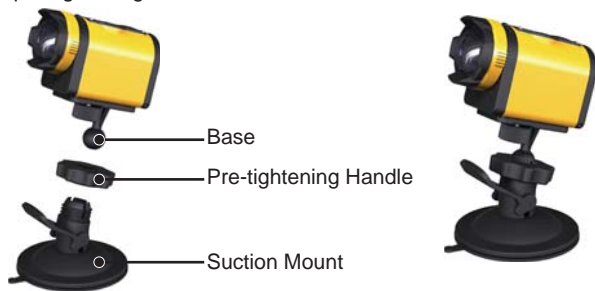

3. First, clean the suction mount and the windshield, and then attach the suction cup to the windshield (or smooth surface). Press the handle to make it attached to the windscreen.



Vented helmet strap mount : accessory applicable to bicycle helmet



Installation Method:


1. Expand the band first, and then thread both ends of the band into the helmet.



Band



2. Thread both ends of the band into the buckle, and then press the buckle clamp.

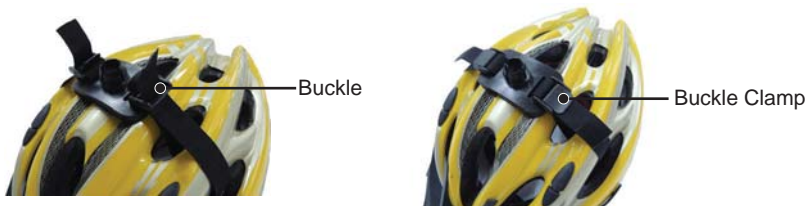

3. Align the location pole of the base to the location hole of the action cam, and align the screw on the base to the tripod socket of the action cam. Rotate the screw for fixing.
4. Assemble the base, pre-tightening handle and vented helmet strap mount according to the direction illustrated in the picture. First press the base into the vented helmet strap mount, and then rotate and tighten the pre-tightening handle.



Head strap mount : accessory applicable to mount the action cam on your head




Installation Method:

1. Insert the angle bracket into the mount, align the location pole on the angle bracket to the location hole of the action cam, and align the screw on the angle bracket to the tripod socket of the action cam. Rotate the screw for fixing.



2. Set the band to your head and adjust the degree of tightness.


Surfboard adhesive mount : accessory applicable to surfboard

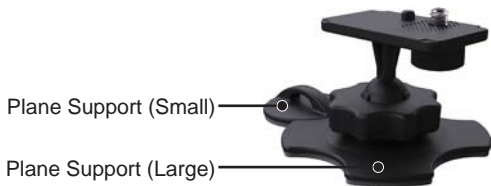

Installation Method:

1. Align the location pole of the base to the location hole of the action cam, and align the screw on the base to the Tripod Socket of the action cam. Rotate the screw for fixing.
2. Tie one end of the rope to the plane support (small), and the other end to the rear cover shaft of the action cam.

3. Assemble the base, pre-tightening handle and plane support (large) according to the direction illustrated in the Picture. First press the base into the plane support (large), and then rotate and tighten the pre-tightening handle.

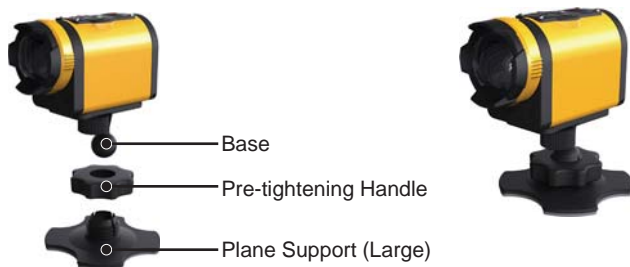

4. Tack the double-sided adhesive at the bottoms of the plane support (large) and the plane support (small) to the object to be used.



Double-sided adhesive is disposable. It can be purchased separately and replaced if needed.



Extended Arm :


You can add one or two extended arms (except head bank mount) to each kit, to help you to adjust the mounting angle of the action cam more flexibly.




Installing Battery and Memory Card

1. Open the rear cover


First, set the rear cover switch to the right, and push the open switch of the rear cover downward. Then rotate the rear cover around the shaft direction to open upward.

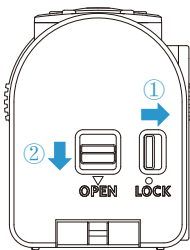

2. Insert the battery into the battery compartment according to the negative and positive directions as illustrated in the following picture.

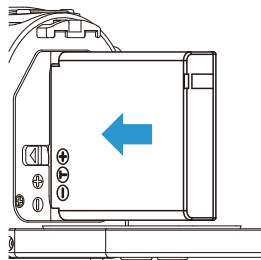

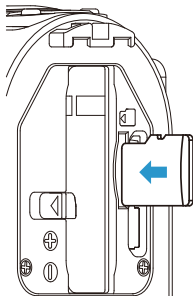

3. Insert the memory card into the card slot according to the direction illustrated in the picture when the product is turned off. When inserting a memory card, make sure the notch direction of the card matches the notch direction of the memory card over the card slot. Do not force the memory card into the card slot.




4. Close the battery cover

First, rotate the back over around the shaft direction to close upward. The rear cover will “click” when tightly closed. Finally, the set the rear cover switch to the left.

-  Memory card (refers to Micro SD card or Micro SDHC card) is optional, which is not included in the product package and need to be purchased separately. Please purchase a genuine memory card with a storage capacity range of 4GB to 32GB, in order to ensure the safe preservation of data. It is recommended to use a memory card of Class 6 or higher.


-  To remove the memory card, please open the rear cover and gently push the memory card. After it is ejected, remove the card carefully.

-  The product will automatically turn off if the memory card is inserted and extracted when the product is on.


Charging

Please charge after the product is turned off.

1. Connect the product to the AC adapter with a USB cable.
2. Then insert the plug of the AC adapter to the power outlet for charging.

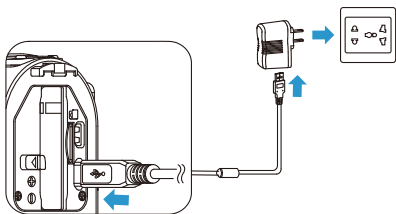

- After the battery is stored for a long period, use the supplied AC adapter to charge the battery prior to use.
- You may use external power supplies (output voltage of 5V, output current of 1A), namely vehicle power supply or mobile power pack to charge the product.

3. You can also connect the product to your computer with a USB cable to charge the battery. If you press and hold the power button  during charging to turn off the product, the charging will be stopped.

- Charging indicator:**
Red flash: Charging
Green on: Charging complete
- To have maximum battery life, charge the battery for at least 4 hours the first time.
- Please charge the battery indoors between 0°C and 40°C.
- If being connected to the computer USB port of 100mA, the product will have no response due to insufficient power supply.






Introduction to Various Button Functions




Viewfinder status refers to viewfinder of recording and shooting.








To save power, if the product is not operated for a period, it will automatically enter the LCD off status. Press any button can wake LCD.

Button	Name	Menu Status	Viewfinder Status	Recording
	Power Button / Delete Button	Short press: no action	Short press: display all information when the it is hidden	Short press: no action
		Press and hold: turn off the product		
	OK Button	Confirm selection	Recording mode / Shooting mode switch	No action
	Menu Button / Direction Button (Upper)	Switch upward	Enter menu	No action
	Playback Button / Direction Button (Lower)	Switch downward	Enter single photo status	No action
	Video Recording Button / Shot Button	Enter viewfinder status (except Wireless feature)	Start recording / Shooting a photo	Stop recording





In the viewfinder status, when the Motion detection or Time Lapse function is set to be enabled, press  to enter the state of preparing for video recording.

Button	Name	Single Photo	Movie Playback		
			Playing Back	Fast Forwarding / Rewinding	Pausing
	Power Button / Delete Button	Short press: delete	Short press: back to the initial state of the movie		
		Press and hold: turn off the product			
	OK Button	Photo file: no action Movie file: start playback	Pause	Normal speed playback	Continue to play back
	Menu Button / Direction Button (Upper)	Previous File	Rewind	Rewind	Previous Frame
	Playback Button / Direction Button (Lower)	Next File	Forward	Forward	Next Frame
	Video Recording Button / Shot Button	Enter viewfinder status	No action		


Operation Method

Turn On / Off

Turn on:

When the power is off, press and hold  for more than 2 seconds to turn on the product; or press and hold  for more than 2 seconds to turn on the product and enter the playback status.













Turn off:

When the power is on, press and hold  for more than 2 seconds to turn off the product.




If the product cannot be turned on / off normally, you can remove the battery for forced power cut.

Set your Language, Date and Time after the first power-on



1. Press and hold the  to turn on the product and enter the language selection screen;
2. Press  or  to select language;
3. After pressing  button to select desired language, the product will enter [Date / Time] setting screen;
4. Press  or  to adjust the date and time display format, and press  to confirm the display format;
5. In the date and time options, press  or  to adjust the values, and press  to confirm and jump to the next option;
6. After the setting is completed, select , press  to confirm, and enter the viewfinder status.



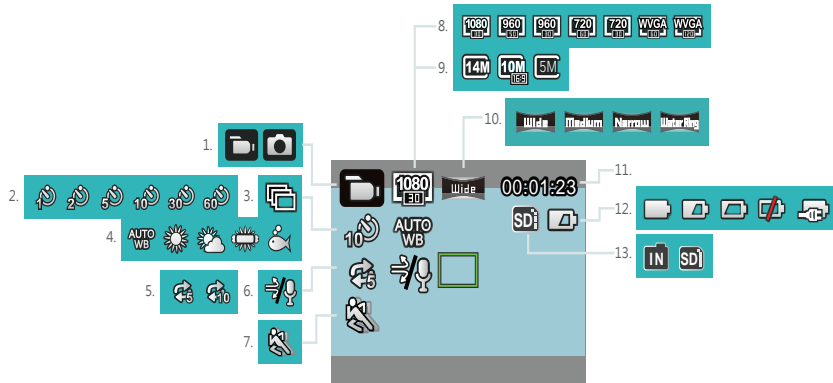

LCD Screen Display






1. Mode Display
2. Time Lapse Display
3. Burst Shot Display
4. White Balance Display
5. Loop recording Display
6. Wind Cut Display
7. Motion detection Display
8. Movie Size Display
9. Still Size Display
10. Field of View Display
11. Remaining Recording Time Display / Number of remaining shots Display
12. Battery Status Display
13. Memory / Memory Card Display


 Some icons will automatically hide after a 2 second display. Press  to display all current setting Message.

  Indicates 16:9 display range.


  Indicates 4:3 display range.

Introduction to Basic Operation of Recording and Shooting

1. Enter the viewfinder status, and press  to switch between recording mode or shooting mode;
2. Align the lens to the object to be recorded, and press  for recording or shooting;
3. Under the recording mode, repress the  to stop recording.

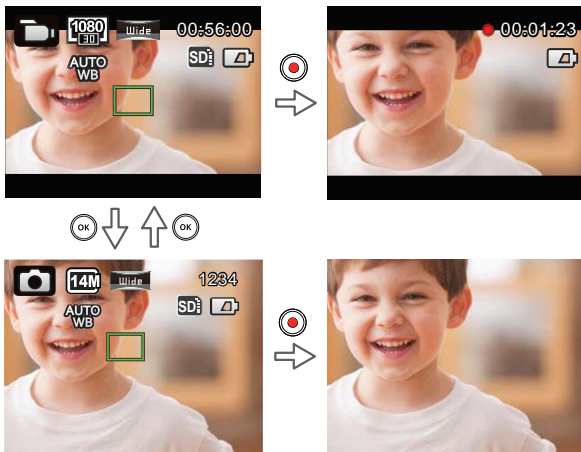


Under shooting mode status, when the product detects a human face, a green focus frame will appear. When two or more human faces are detected, a green main focus frame and a white secondary focus frame will appear.

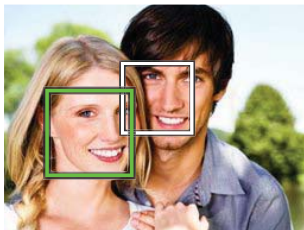




When the product rotates around the lens axis for 180°, the display screen on the LCD is positive display.

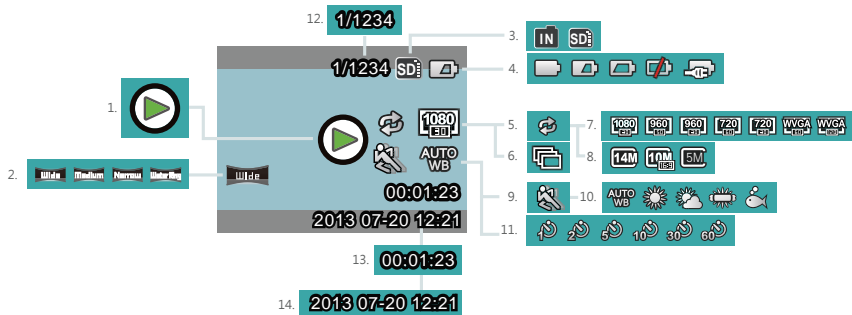

LCD Screen Display under Playback Status





1. Movie Display
2. Field of View Display
3. Memory Card or Memory Display
4. Battery Status Display
5. Loop recording Display
6. Burst Shot Display
7. Movie Size Display
8. Still Size Display
9. Motion Detection Display
10. White Balance Display
11. Time Lapse Display
12. Display of Current number of Shots / Total Number of Shots
13. Movie Time Length Display
14. Shooting Time and Date Display

 Some icons will automatically hide after a 2 second display.




  Only displayed when playing back the movie file.

  Indicates 16:9 display range.

  Indicates 4:3 display range.

Introduction to Basic Operation of Playback

Single Photo:

1. Under the viewfinder status, press  to enter the playback status of video and pictures;
2. Display movie or picture files on the LCD screen;
3. Press  or  to view the movies or pictures stored in the memory card or memory.



Press the Recording Button  to back to the viewfinder status.



When the memory card is inserted, only files in the memory card instead of files in the memory will be displayed.



If there is no video in the memory card or memory, the no image warning window will appear.



Movie Playback:


1. Select movie to be played back, and press  to start movie playback.



2. When playing back the movie, a operation guidance will appear on the screen. You can press buttons to perform the corresponding functions.

Press  : Movie playback rewind, multiple presses will fasten the speed: x2 / x4 / x8 / x16

Press  : Movie playback forward, multiple presses will fasten the speed: x2 / x4 / x8 / x16

Press  : Under normal playback mode, the movie playback will be paused; under the forward, rewind or pause status, normal speed playback will be recovered

Press  : Movie playback back to the initial state

Movie playback rewind or forward:




Movie playback pause:





There will be no sound output during rewinding or forwarding.

Movie or Picture Delete:

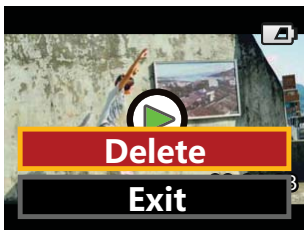1. Select the movies or photos to be deleted, and press **Ⓢ** to enter the Delete screen. Press **⏪** or **⏩** to select [Delete] , and press **Ⓞ** to confirm;
2. After a movie or a photo is successfully deleted, LCD will display the next movie or photo. You can continue Delete.
3. If you want to exit the Delete screen, select [Exit] , and press **Ⓞ** to confirm.



-  Movie or picture cannot be restored after being deleted.
-  The protected file cannot be deleted.

Rotation:

The direction sensor comes with the product can automatically adjust the direction during file playback according to the rotating direction detected during shooting, in order to ensure that what you see are positive images.











The direction of rotation refers to the direction rotating around the lens center clockwise or counterclockwise. Only when the direction sensor detects that the product has rotated for 180°, the rotation feature is effective. Rotation of 90° or 270° is invalid.



The product will record the detected 180 ° rotation information in a file. When you use a player supporting rotation tag identification (such as Quick Time) for playing, the image can be automatically converted to positive.

Introduction to the Setting Mode of Menu Options

1. Under the viewfinder status, press  to enter first-level menu interface of the menu;
 2. Press  or  to select [Mode Settings] , [Movie Settings] , [Still Settings] , [AP Settings] and [General Settings] ;
 3. Press  to confirm, and to enter the corresponding secondary level menu interface;
 4. Select items with * on the secondary level menu, and press  to confirm and to enter the tertiary menu interface;
 5. Select [Movie] or [Shot] or [Exit] in the secondary menu, and press  confirm to back to the first level menu interface.
-  In the menu interface (except for the Wireless connecting status), press  to back to the viewfinder status.

Menu Introduction

First Level Menu	Mode Settings	Movie Settings	Still Settings	AP Settings	General Settings
Secondary Level Menu	Movie	* Movie Size	* Still Size		* Sound Settings
	Shot	* Time Lapse	* Burst Shot		* Power Off
		* Loop recording	* Field of View		* Wireless Power Saving
		* Field of View	* White Balance		* Date / Time
		* Motion detection	Exit		* Language
		* Wind Cut			* Format
		* White Balance			* Copy to Card
		Exit			* Reset Settings
					* FW Version
					Exit





Introduction to General Settings

10 options in the [General Settings] of the first level menu:

- [Sound Settings]
- [Power Off]
- [Wireless Power Saving]
- [Date / Time]
- [Language]
- [Format]
- [Copy to Card]
- [Reset Settings]
- [FW Version]
- [Exit]

Sound Settings



There are 4 options in the [Sound Settings] :

-  Volume 1
-  Volume 2
-  Volume 3
-  Off

Power Off

Power Off means the product will automatically shut down after 60 seconds after the LCD is off.

There are 2 options in [Power Off] :

-  Off
-  60 seconds





The Power Off will be invalid during recording, movie playing back and wireless connecting.

Wireless Power Saving









 

Wireless Power Saving refer to that after 10 seconds of remote-controlled recording with APP, the wireless connection will automatically disconnect, but the product will maintain a recording status, in order to achieve energy-saving effect.

There are 2 options in [Wireless Power Saving] :

-  Enable
-  Off






Date / Time

When the setting of Date and time after the first power-on is complete, if date and time need to be reset, please operate as the following.

1. Enter the [Date / Time] in the secondary level interface and press  to confirm;
2. Press  or  to adjust the date and time display format, and press  confirm the display format;
3. In the date and time options, press  or  to adjust the values, and press  to confirm;
4. After the setting is completed, select , and press  to confirm and back to [Date / Time] in the secondary level interface;
5. Press  to back to the viewfinder status.

Language

When the setting of language after the first power-on is complete, if the language need to be reset, please operate as the following.

1. Enter the [Language] in the secondary level interface and press  confirm;
2. Press  or  to select language;
3. Press  to confirm and back to [Language] in the secondary level interface;
4. Press  to back to the viewfinder status.

Format

Format can clear all data stored in the memory card or memory (including protected movies and photos).

There are 2 options in [Format] :

-  Cancel
-  Confirm



When a memory card is inserted in the product, only the memory will be formatted; when a memory card is inserted, only the card is formatted.

Copy to Card

Copy to Card is to copy the files in the memory to the memory card

There are 2 options in [Copy to Card] :

- ✘ Cancel
- ✔ Confirm



When the memory card cannot be detected by the product, options will not be displayed on the [Copy to Card] interface.

Reset Settings

Reset Settings can recover all settings of the product to the factory default settings.

There are 2 options in the [Reset Settings] :

- ✘ Cancel
- ✔ Confirm



After select and confirm Reset Settings, immediately turn off and then turned on the product. The language setting screen and time settings screen will appear. The viewfinder status can only be entered after the setting is completed.

FW Version

FW Version can display the current version.

When a new version is stored in the memory card, the firmware can be updated.


There are 2 options in 「Update firmware?」 :

- **X** Cancel
- **✓** Confirm





The following operation need to be followed to update the firmware:

1. Enter the FW Version interface, and press **OK** to enter the tertiary level menu 「Update the firmware?」. LCD will display 「new version: X.XX」;
2. Select **✓**, and press **OK** to confirm. The product will start to update;
3. Whether the update is successful or failed, the product will automatically shut down.







-  If the low battery warning is displayed, then charge before updating the version.


 


Introduction to Mode Settings

2 options in the [Mode Settings] of the first level menu:

-  [Movie] : for recording movies
-  [Still] : for shooting photos

Mode Settings use method:

1. After selecting  or  options, press  to confirm.
2. Press  to enter the viewfinder status, and display your selected  or  status.

 Under the viewfinder status, directly press , to perform  or  status switch.

Movie Settings Introduction

There are 8 options in First Level menu [Movie Settings]:

- [Movie Size]
- [Time Lapse]
- [Loop recording]
- [Field of View]
- [Motion detection]
- [Wind Cut]
- [White Balance]
- [Exit]

Movie Size

Movie Size refers to the image resolution during recording.

There are 7 options in [Movie Size] :

- [1080P30] : 1920×1080 (30fps)
- [960P50] : 1280×960 (50fps)
- [960P30] : 1280×960 (30fps)
- [720P60] : 1280×720 (60fps)
- [720P30] : 1280×720 (30fps)
- [WVGA60] : 848×480 (60fps)
- [WVGA120] : 848×480 (120fps)



When selecting [WVGA120], the product shoots ultra high speed movies, and plays back with normal 30 fps speed, in order to capture visually indistinguishable moments easily.



When selecting [WVGA120], the maximum recordable time is 60 seconds, when the time reaches 60 seconds, the product will automatically stop recording and back to the viewfinder state.



When selecting [WVGA120] , the sound cannot be recorded.



When selecting [WVGA120] , [Time Lapse] , [Loop recording] or [Motion detection] cannot be enabled.



When selecting [WVGA60] , [Time Lapse] or [Loop recording] cannot be enabled.






 
 
The maximum recording time of a 4GB memory card:

Movie Size	Memory card volume	The maximum recording time is about
1080P30	4GB	32 minutes
960P50	4GB	32 minutes
960P30	4GB	50 minutes
720P60	4GB	35 minutes
720P30	4GB	64 minutes
WVGA60	4GB	64 minutes
WVGA120	4GB	35 minutes




Time Lapse

Time Lapse means to record a frame at an interval of a period of time, and splice the frames together to present a condensed video which usually requires a long period of time to complete.




There are 7 options in [Time Lapse] :

-  Off
-  1 second
-  2 seconds
-  5 seconds
-  10 seconds
-  30 seconds
-  60 seconds

Time Lapse use method:

1. After selecting Time Lapse time, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press , the LCD will display red font time countdown;
3. Press  again to finish recording.






-  Movie Size cannot be selected as WVGA120 or WVGA60.
-  The sound cannot be recorded.
-  When Loop recording or Motion detection is enabled, the Time Lapse feature cannot be used.




Loop recording

Loop recording means to record as independent segments of movies according to selected time length from the beginning of recording, until the manual stop of recording. When the memory card is full, the product will overwrite the recorded files starting from the first movie circularly.




There are 3 options in [Loop recording] :

-  Off
-  5 minutes
-  10 minutes

Loop recording use method:

1. After selecting Loop recording time, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to start recording;
3. Press  again to finish recording.



-  Movie Size cannot be selected as WVGA120 or WVGA60.
-  When Time Lapse or Motion detection is enabled, the Loop recording feature cannot be used.
-  Loop recording feature can only be used when there is a memory card in the product.




Field of View

Field of View means the image receiving angle range of the product.

There are 4 options in [Field of View] :

-  Ultra Wide
-  Medium
-  Narrow
-  Water Ring

Field of View use method:

1. After selecting the Field of View angle, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to start recording;
3. Press  again to finish recording.





Medium or Narrow can only be selected when the Movie Size is set to [1080P30] . If Movie Size other than [1080P30] are selected under Medium or Narrow status, the product will automatically set the Field of View to Ultra Wide.




Motion detection

Motion detection means that if the product detects moving objects entering into the LCD screen, it will automatically start recording. During the recording process, if there is no moving object detected for 10 continuous seconds, the recording will be automatically paused.

There are 2 options in [Motion detection] :

-  Off
-  Enable

Motion detection use method:

1. After the motion detection is enabled, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press , if the product detects moving objects, it will automatically start recording;
3. Stop recording when there is no change in the image within 10seconds;
4. When the image changes again, the product will start recording automatically, and this time it will regenerate a video file;
5. During recording, you may press the  to stop recording.

When Motion detection feature is enabled, Time Lapse or Loop recording setting cannot be performed.

Movie Size cannot be selected as WVGA120.

Motion detection interface icon:

- ① Indicates the total time of recording
- ② Indicates the date / time of the product
- ③ Indicates the total time from the beginning of recording





When the memory card is full, ① will become red font and flashes continuously.






Wind Cut


Wind Cut refers to the reduction of noise caused by wind.

There are 2 options in [Wind Cut] :

-  Enable
-  Off

Wind cut use method:



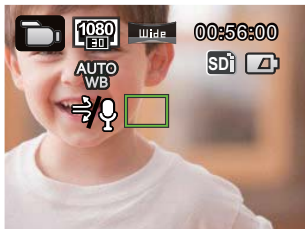


1. After the wind cut is enabled, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to start recording;
3. Press  again to finish recording.






White Balance

White balance means that the user adjusts the color temperature under different light sources to ensure that the colors are reproduced correctly.

There are 5 options in [white balance] :

-  AWB
-  Daylight
-  Cloudy
-  Fluorescent
-  Underwater

White balance use method:

1. After the white balance is enabled, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to start recording;
3. Press  again to finish recording.

Still Settings Introduction

There are 5 options in First Level menu [Still Settings] :

- [Still Size]
- [Burst Shot]
- [Field of View]
- [White Balance]
- [Exit]

Still Size

The Still Size are benchmarked against the pixels of the images, a photo having higher image resolution contains more details and is capable of better meeting big-screen fine photo printing requirements.

There are 3 options in [Still Size] :

- [14MP] : 4320×3240(4:3)
- [10MP] : 4320×2432(16:9)
- [5MP] : 2592×1944(4:3)

Number of photos that a 4GB memory can shoot at most:

Still Size	Memory card volume	About photos that can be shot at most
14MP	4GB	913 shots
10MP	4GB	1211 shots
5MP	4GB	2398 shots



Burst Shot

Burst Shot that ten photos are shot continuously one single time before auto pause.

There are 2 options in [Burst Shot] :

-  Off
-  Enable

Burst Shot method:

1. After Enable in Burst Shot is selected, press  to back to the viewfinder status, LCD will display corresponding icons;
2. Press  to enable Burst Shot shooting. It will stop after 10 photos are shot.



Field of View

Field of View means the image receiving angle range of the product.

There are 4 options in Field of View :

-  Ultra Wide
-  Medium
-  Narrow
-  Water Ring

Field of View use method:

1. After selecting the Field of View angle, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to shoot.








When the shooting dimension is set to [5MP] , Medium and Narrow cannot be enabled.


 
White Balance

White balance means that the user adjusts the color temperature under different light sources to ensure that the colors are reproduced correctly.

There are 5 options in [white balance] :

-  AWB
-  Daylight
-  Cloudy
-  Fluorescent
-  Underwater

White balance use method:

1. After an option of the white balance is selected, press  to back to the viewfinder status. LCD will display corresponding icons;
2. Press  to shoot.

AP Settings Introduction

The action cam can be connected with your smart phone through wireless.



Please confirm the following matters needing attention at first before connection:

1. Your mobile phone system version needs to be iOS 4 or Android 2.3 and higher versions. If not, please upgrade your mobile phone system version at first.
2. Please do not use in places having high intensity magnetic field, electrostatic and electric wave interference (for example near a microwave oven), which may cause failure in receiving signals.
3. Please keep the distance between the action cam and the mobile phone within 10 meters without signal shielding interference.
4. Please do not use wireless connection function on a plane.
5. The action cam and the mobile phone only can be connected one to one.
6. When the temperature of the battery is higher than 65 °C:
 - ① AP setting cannot be enabled;



- ② Wireless connection will be automatically interrupted in wireless connection process.

Connection setting method of the product and the mobile phone:

Step 1: setting on the product

1. Press  in the viewfinder status, select [AP Settings], and press  to enable wireless connection function so that the SSID interface in [AP mode] appears. SSID and WPA2 password messages are displayed in the interface.






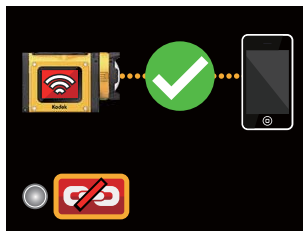
 Wireless connection process takes about 30 seconds. At this moment, except for , other buttons are deactivated.


Step 2: setting on the mobile phone

1. Download the special APP installation package (APP name: PIXPRO SP1) from the APP store, and install;
2. Enable the wireless function of the mobile phone to search surrounding wireless devices;
3. Select the name of the action cam to be connected (PIXPRO-SP1_XXXX), and input the eight-digit digital password of WPA2 of the action cam;
4. Click the icon of the APP to enable the APP.


Step 3: setting on the action cam

1. The action cam and the mobile phone begin to connect with each other. If connection is succeeded, functional operations can be enabled on the mobile phone. If needing to interrupt connection, press , so that the selection interface appears, select , press , interrupt connection, and return to the SSID interface;



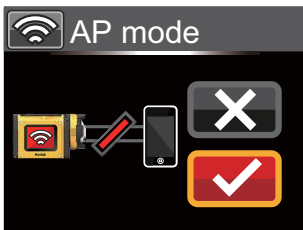

2. If connect APP failed, select ↶, press ⏪ to back to the SSID interface, select ↶, press ⏪, and upgrade the WPA2 password. Next, perform connection operation again on the mobile phone;

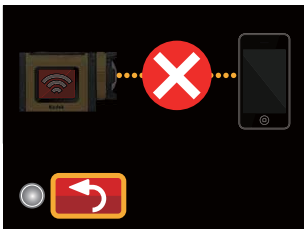

3. If needing to turn off wireless, press ⏪ button or press ⏪ after selecting OFF in the SSID interface so that the selection interface of turning off wireless or not appears, select ✓, press ⏪ to turn off wireless.



Mobile Phone APP Operating Method

Position Service Function

After confirming that the connection of the mobile phone and the action cam is succeeded, click the PIXPRO SP1 icon on the main interface of the mobile phone to enable APP.

APP supports the position service function. It may record GPS information in the photo files.

Android system:

1. When the APP is enabled for the first time, it may prompt that ["PIXPRO SP1" Would Like to Use Your Current Location !] . If the position service of the mobile phone is not enabled, you may select whether to enable the position service or not according to prompting in the interface.
2. When the APP is enabled for the second time or later, if the position service function has been enabled already, the interface will directly turn to the home page of the APP; and if the position service function is not enabled, you may select whether to enable the position service or not according to prompting in the interface.

iOS system:

1. When the APP is enabled for the first time, if the position service is enabled, it will prompt whether to not ["PIXPRO SP1 " Would Like to Use Your Current Location !] ; if the position service is disabled, it will prompt [Turn on Location services to allow "PIXPRO SP1" to determine Your Location.] ; and if clicking [setting] , the mobile phone position service setting interface will appear.
2. When the APP is enabled for the second time or later, status of position service:

Position service state selected at the first-time enabling of the APP	The second-time or later enabling of the APP	
	The position service is enabled	The position service is Off
Enable	Enable the position service	A prompting message [Turn on Location services to allow "PIXPRO SP1" to determine Your Location] will appear; and if clicking [setting] , the mobile phone position service setting interface will appear.
Off	A prompting message that [Location Service is disabled for PIXPRO SP1. Please exit PIXPRO SP1 , then go to 'Settings; General; Location Services' and enable the service for PIXPRO SP1.] ; and if clicking [Confirm] , the APP home interface will appear. Besides, the position service will be automatically disabled.	

APP Home

Enter APP Home interface, and three options are displayed:

- [Playback] : enter playback state
- [Remote Viewfinder] :
 enter the viewfinder status
 and control the action cam
 to shoot by using the mobile
 phone
- [About] : check the version of the
 APP.



In the interface of the APP, click ◀ to back to the previous stage of interface. But in index Playback and Remote Viewfinder states, click ◀ to back to the APP home directly.

Playback

Click [playback] in the APP Home to enter the playback state.




There are three playback manners in the playback state:

- Index playback (action cam / mobile phone)
- Single photo (movie / photo)
- Enlargement playback

Index playback (action cam / mobile phone)

1. In the APP Home, click 「playback」 to enter the index playback state, and enter the photo album of the action cam in default.





-  : enter the viewfinder status
-  : download files in the action cam into the mobile phone
-  : delete files .


2. The index playback interfaces of the mobile phone and the action cam can be switched by shifting a red dot on the interface of the mobile phone.







3. The index playback interface of the mobile phone displays files downloaded from the action cam to the mobile phone.




-  : enter the viewfinder status
-  : selection of multiple photos

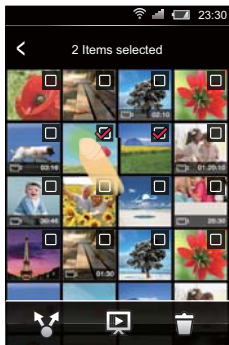Enter the selection interface after selecting , and click thumbnails so that files needing to be edited can be selected. Clicking the same thumbnail for the second time will cancel selection.



-  : share
-  : slide play
-  : delete


Setting function


Click  at the right upper corner of the interface so that the setting interface can appear.







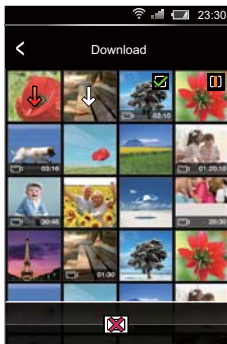

Cache can be wiped in the Android system.
Cache can be wiped in the iOS, where login and Logout accounts also can be set.


Download function





In the index playback interface of the action cam, click  to enter the download mode. Arbitrarily select a file to begin downloading.



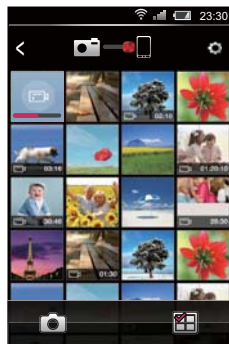



-  : downloading
-  : wait downloading
-  : the download is complete
-  : cancel download
-  : fail in downloading


-  Downloading will be continued after switching to the index interface of the mobile phone, and the downloading progress bar will be displayed.





-  Only choose at most 20 files at the same time.
-  In the index playback interface, clicking  or  will pause downloading. Files will be continuously downloaded automatically when the playback interface appears again.

Delete function

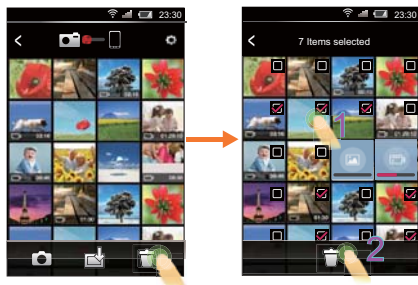


1. In the index playback interface of the action cam, click  to enter the selection interface, select the files to be deleted, click  again to delete the files, and select whether or not to delete in the delete prompting interface.
2. In the index playback interface of the mobile phone, click  to enter the selection interface, select the files needing to be deleted, click  to delete the files, and select whether or not to delete in the delete prompting interface.




 The files which are being downloaded and wait downloading cannot be deleted.


 No select box is displayed on the file which is being downloaded.

Slide play function



1. In the index playback interface of the mobile phone, click  to enter the selection interface;
2. Firstly, select the files to be played, and then click  to start slide play;
3. If no file is selected, directly click  so that all files will be played.




 Clicking a photo in slide play will stop slide play and the single photo interface will appear.

 When playing movie in a slide, only the first frame is displayed; clicking the movie will stop slide play and the movie play interface will appear.

Share function

1. In the index playback interface of the mobile phone, click  to enter the selection interface.
2. Select the files to be shared, and click  to pop up the share option.



 Transmission procedure is determined according to the settings of the mobile phone.

Single Photo




In the index playback interface, the single photo interface will appear if a single file is clicked.


Front and back files can be selected to be browsed through sliding from side to side.


100% enlargement screen will appear by double clicking one single photo, and the original dimension will be recovered by double clicking again.

During playback the movie files on the action cam, it will prompt that [Wireless transmission would be slowly. Suggest download to play movie files.] ; and in 2 seconds, the iOS system will directly enter the play status, while the Android system will pop up player options.

1. Executable operations in single photo playback of the files at the action cam side:

-  : enter the viewfinder status
-  : download the files in the action cam into the mobile phone
-  : delete

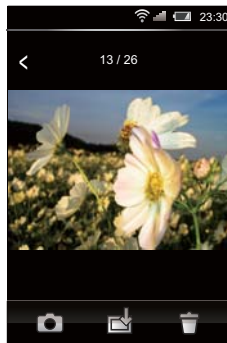


-  iOS system interface has one more function than the Android system:

-  /  : start play / pause play


2. Executable operations in single photo playback of the files on the mobile phone:

-  : share
-  : slide play
-  : edit
-  : delete

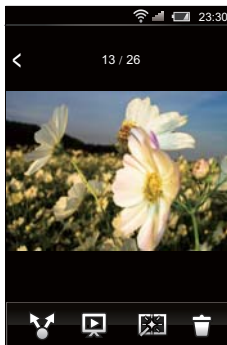


Edit function:

1. Editing photo files:

Click  to enter the effect interface, where filter effects, brightness adjustment and modeling effects can be set.

• Filter effects:

The filter effects are divided into 23 types. More effect options can be viewed by sliding the effect option bar from side to side.

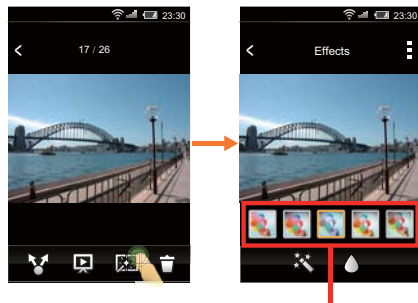

Effect option bar

- Brightness adjustment effects:




- Modeling effects:



Firstly click the effect your like and then click (Android system) / (iOS system) to select the options of [saving] or uploading to social networks or [cancel] .

- 2. Editing movie files:

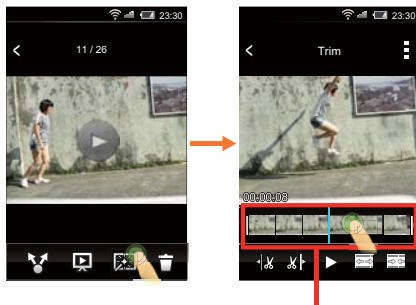


 


Click to enter the trim interface.



Quick browse bar

- and : play movies
- : increase the number of frames
- : shorten the number of frames
- : trim starting point
- : trim finishing point

Steps of movie trim

- ① According to the desired trim accuracy of the movie, click  or  to increase or shorten the number of frames.
- ② Slide the quick browse bar from side to side so that the vertical line stays on thumbnails needing to be cut, and click  to select the trim starting point.
- ③ Slide the quick browse bar again to the right so that the vertical line stays on the thumbnails needing to be cut, and click  to select the Trim finishing point.
- ④ Click  (Android system) /  (iOS system) to select the option of [save] or uploading to social networks, or [cancel] .

Remote Viewfinder

Click [Remote Viewfinder] in the APP Home to enter the viewfinder status, and control the action cam to shoot by using the mobile phone.



After Wireless is connected successfully, the setting parameters of the action cam are automatically restored in default states.



The files shot through the APP are saved in the action cam.

The setting parameters of the action cam are displayed at the tops of the video mode and the shooting mode interfaces on the mobile phone.

Movie Size: [1080P30]
[960P50]
[960P30]
[720P60]






[720P30]


[WVGA60]

[WVGA120]


Burst Shot:  Off
 Enable




Field of View:  Ultra Wide
 Medium
 Narrow
 Water Ring

White balance:  AWB
 Daylight
 Cloudy
 Fluorescent
 Underwater

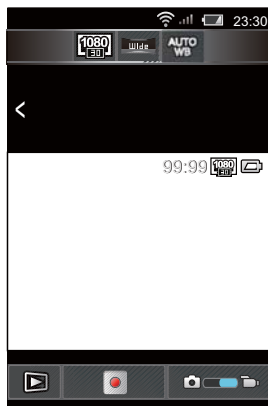


 The characteristics of the parameters are just the same as the action cam.

Video mode:




-  : enter the index playback state on the action cam.
-  : start video recording / stop video recording
-  : switch to the shooting mode from the video mode

Video mode use method:

1. Click icons at the top of the interface to set corresponding parameters.
2. Click  to start video recording, and click  again to stop video recording.
3. Click  to enter the index playback state.



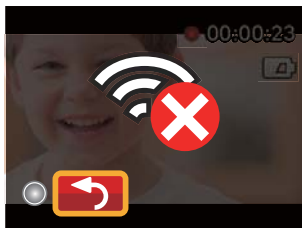


In wireless power saving enabled state, a prompting message about breaking of wireless connection in 10 seconds will be popped up when video recording on the mobile phone; at this moment, if the user does not stop video recording, wireless online will be automatically disconnected, and wireless disconnection message will be displayed and video recording is continued on the action cam.








Shooting mode:

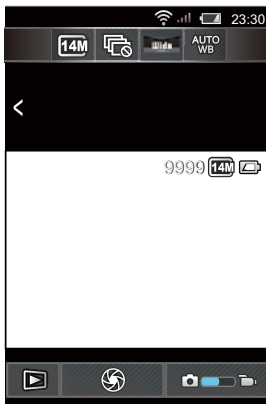Shooting mode use method:

1. Click icons at the top of the interface to set corresponding parameters.
2. Click  to shoot photos.
3. Click  to enter the index playback state.



-  : enter the index playback state on the action cam.
-  : shoot photos
-    : switch to the video mode from the shooting mode

About

Click 「About」 in the APP Home, so that the version of the APP can be checked.

Connection Port Use Description


Connect a Computer

The product can be connected to the computer by using a USB cable so as to copy the files in the product into the computer.

Steps:

1. Open the rear cover of the product, connect one end of the USB cable to the computer (the computer needs to be in on state) and the other end to the USB port of the product;
2. Display rolling connection cartoon on the product. The computer will automatically sense the product.
3. Open the folder of the product on the computer and copy the data you need to the computer.
4. After transmission is completed, please cancel the USB connection in the way of safely pulling out the USB device from the computer system;
5. Pull out the USB cable. The product will automatically shut down.


The product supports Windows operating systems (Windows XP, Windows Vista , Windows 7, and Windows 8) and the Mac operating system.

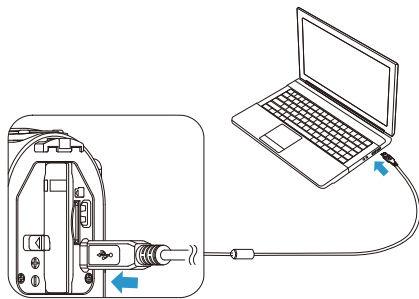



If being connected to the computer USB port of 100mA, the product will have no response due to insufficient power supply.



Long pressing  in the connection process will cause shut-down and stop of communication between the computer and the product.




If a memory card is inserted in the product, only files in the memory card will be read. If needing to read the files in the internal memory, please pull out the memory card at first.

HDMI Connected TV Output



The product is capable of realizing movie and photo playback on a TV through HDMI.

The HDMI connection of the product is defaulted as automatic connection way.

Steps:

1. Open the rear cover of the product, connect one end of the HDMI cable to a TV which is up to the HDMI standard (the TV and the product both need to be in on state) and the other end to the HDMI port of the product;
2. Display rolling connection cartoon on the product;
3. Automatically enter the playback state after the connection is built. The operating method is the same as the [Introduction to Basic Operation of Playback] on page 45, but  is deactivated; and the LCD screen of the product does not display movies or photos.



If the product is connected to the TV in off state, press and hold  and  to power on, and enter the playback state.

APPENDICES

Specifications







[Design and specifications are subject to change without notice.]





Active Pixels		14.24 Megapixels
Total Pixels		15.31 Megapixels [1/2.33" MOS]
Lens	Focal Length	3.0mm
	Equivalent to 35mm film	16.8mm
	F number	F2.8
	Lens Construction	6 groups 6 elements
	Optical Zoom	Fixed focus
	Focusing Range	Normal: 60cm ~ ∞
Field of View		Ultra Wide, Medium, Narrow, Water Ring
Anti-Handshake		EIS
File Format	Still Image	Exif 2.3 (JPEG)
	Movie	Movie Format: MOV (H.264), Audio: Linear PCM (Stereo)




Image Dimensions	Still Size	(4:3) 14MP: 4320×3240 5MP: 2592×1944	(16:9) 10MP: 4320×2432
	Movie Size	1920×1080(30fps), 1280×960(50fps), 1280×960(30fps), 1280×720(60fps), 1280×720(30fps), 840×480(60fps) VHS recording: 848×480(120fps)	
Detection Features		Face detection	
Waterproof Feature		Up to 10 m underwater	
Shockproof Feature		Up to 2 m	
Dustproof Feature		Equivalent to JIS / IEC (IP6X)	
Freeze-proofing Feature		-10°C	
Wireless		Supported	
LCD Screen		1.5 inch (115k Pixels)	
ISO Sensitivity		Auto (100~800)	
Exposure Metering Method		Artificial Intelligence AE (AiAE), Face AE	
Exposure Control Method		Program AE (AE-Lock)	





Burst Shot	Supported
Playback Modes	Single Photo
White Balance	Auto (AWB), Daylight, Cloudy, Fluorescent, Underwater
Storage Media	Internal Memory: Approx. 100 MB
	Micro SD / Micro SDHC Card (Up to 32GB Support) \ [MMC Card not supported]
Language Support	Support 27 languages: English, Chinese (simplified and traditional), Japanese, Korean, French, Spanish, Portuguese, Thai, Indonesian, Vietnamese, Italian, German, Dutch, Russian, Polish, Swedish, Danish, Finnish, Norwegian, Greek, Turkish, Hungarian, Croatian, Czech, Arabic, Hindi
Interface	USB 2.0 (Micro 5 pin USB) , HDMI (Type D)
Power supply	Rechargeable Li-ion Battery LB-080, 3.6V 1250mAh, In-action cam Charging
Battery Performance	Approx. 350 Shots (Based on CIPA Standards); Approx. 130 min for Video (@1080p/30fps)
Operation Environment	Temperature: -10 ~ 40°C, Humidity: 0 ~ 90%
Dimensions	84.7×51.4×39.5mm (Based on CIPA Test Standards)
Weight	Approx. 135g (excluding battery and memory card)

Prompts and Warning Messages

Message	Description	Reset Mode
	<ul style="list-style-type: none"> ■ When using “Copy to card”, if the number of folders in the memory card exceeds the maximum number of folders (999), the copy and access actions cannot be performed. ■ This message indicates that a long read time may be caused due to too many folders in the product ■ During shooting, if the files or folders have reached the maximum number (9999 for files, 999 for folders), the memory card cannot be accessed. 	<ul style="list-style-type: none"> ■ End the message after the product processing ■ End the message after the product processing ■ The message will disappear after 2 seconds.
	<ul style="list-style-type: none"> ■ When the file is protected, the message will appear on the screen if the delete action is performed. 	<ul style="list-style-type: none"> ■ The message will disappear after 2 seconds.
	<ul style="list-style-type: none"> ■ When turning on the product or pressing  , the product detects that the memory card is out of space. 	<ul style="list-style-type: none"> ■ The message will disappear after 3 seconds.

Message	Description	Reset Mode
	<ul style="list-style-type: none"> ■ When turning on the product or pressing , the product detects that the memory is out of space. 	<ul style="list-style-type: none"> ■ The message will disappear after 3 seconds.
	<ul style="list-style-type: none"> ■ Updating firmware. 	<ul style="list-style-type: none"> ■ Turn off the product after the updating is completed, and cancel the message.
	<ul style="list-style-type: none"> ■ The memory card still cannot be recognized after format. ■ An error occurs when reading the memory card. ■ Interruption logging problem is encountered in the period of writing in the memory card or recording in the video recording or shooting process. 	<ul style="list-style-type: none"> ■ The message will disappear in 2 seconds, and the screen of format or not will appear . ■ The message will disappear in 2 seconds, and the screen of format or not will appear . ■ Return to the viewfinder status will be displayed in 2 seconds.

Message	Description	Reset Mode
	<ul style="list-style-type: none"> ■ The memory card still cannot be recognized after format. ■ Interruption logging problem is encountered in the period of writing in the memory card or recording in the video recording or shooting process. 	<ul style="list-style-type: none"> ■ The message will disappear in 2 seconds, and the screen of format or not will appear. ■ Return to the viewfinder status will be displayed in 2 seconds.
	<ul style="list-style-type: none"> ■ When a memory card lower than Class 4 is used to record a HD or above movie, the writing speed will be slower and recording will not continue. 	<ul style="list-style-type: none"> ■ Cancel the message and return to the viewfinder status in 4 seconds.
	<ul style="list-style-type: none"> ■ The time of file processing (imaging processing, in synthesis, in saving, edition after-processing, archiving coping, in Format and the like) exceeds 2 seconds. 	<ul style="list-style-type: none"> ■ The message will disappear after the operation is completed.

Message	Description	Reset Mode
	<ul style="list-style-type: none"> ■ Connecting to the computer USB ■ Connecting to the HDMI device 	<ul style="list-style-type: none"> ■ The display is ended after connection is succeeded.
	<ul style="list-style-type: none"> ■ Caution will appear before power off when the battery of the product is already dead. ■ The firmware cannot be updated when power is insufficient. 	<ul style="list-style-type: none"> ■ It will shut down after displaying for 2 seconds. ■ A message appears to prompt updating after full charging and returning to the update screen.
	<ul style="list-style-type: none"> ■ The message will be displayed when the temperature of the battery reaches 70 °C during recording. 	<ul style="list-style-type: none"> ■ It will shut down automatically in 2 seconds, and can be recovered to use only after the temperature is reduced.
	<ul style="list-style-type: none"> ■ When the AP setting is enabled, the message will be displayed when the temperature of the battery is in the range from 65 to 70 °C. 	<ul style="list-style-type: none"> ■ Return to the menu interface in 2 seconds and recover use only after the temperature is reduced.

Trouble Shooting

Problem	Possible causes	Solution
Product does not turn on	<ul style="list-style-type: none">■ The battery has been depleted.	<ul style="list-style-type: none">■ Charge the battery.
Exceeded maximum folder number	<ul style="list-style-type: none">■ If the files or folders have reached the maximum number (9999 for files, 999 for folders), the memory card cannot be accessed.	<ul style="list-style-type: none">■ Copy the data to the computer disk, and format the memory card using the product.
Writing speed of the memory card is slow	<ul style="list-style-type: none">■ When a memory card lower than Class 4 is used to record a movie of ultra-high speed, the writing speed will be slower and recording will not continue.	<ul style="list-style-type: none">■ Use a higher-class memory card, or format this card before shooting.
Too many videos to process	<ul style="list-style-type: none">■ The number of pictures or folders in the memory card exceeds the specifications, so the playback cannot be displayed or played back by date.	<ul style="list-style-type: none">■ Delete unwanted files.
High temperature warning	<ul style="list-style-type: none">■ Battery overheat	<ul style="list-style-type: none">■ Remove the battery when the product is turned off. Continue to use the battery when it cools.



The Kodak trademark and trade dress are used under license from Kodak.

© 2013 by JK Imaging Ltd. All rights reserved.

JK Imaging Ltd. 1411 W. 190th Street, Suite 550,
Gardena, CA 90248, USA

www.kodakcamera.jkilt.com