

WIRELESS REMOTE (ENGLISH)

Thank you for purchasing the Mad Catz Wireless Remote for use with the Wii video game system. Be sure to register your product online at www.madcatz.com and check out our full line of other quality video game accessories.

IMPORTANT! Before using the Wii with this product, read the Wii instruction manual for safety, health, and other information regarding the use of the Wii.

GENERAL SETUP

1. Insert fresh batteries into the battery compartment.
2. Sync the Remote with the Wii console as described below if needed.
3. Attach the wrist strap to the loop found at the bottom of the Remote.
4. Insert hand through wrist strap and hold Remote firmly.
5. Move the strap's slider towards your wrist to ensure a secure fit.
6. The Remote is ready for use.

SYNCHRONIZING THE REMOTE

There are two (2) ways to sync the Remote with the Wii console: using the Wii's SYNC button, and using the Wii's HOME Menu.

A) Using the Wii's SYNC button

1. Power ON the Wii console.
2. Open the SD Card slot cover on the front of the Wii to reveal the console's SYNC button
3. Remove the Remote's battery cover to reveal its SYNC button.
4. Press and release the Wii's SYNC button.
5. Press and release the Remote's SYNC button.
6. Once a wireless connection between the Wii console and the Remote has been successfully established, the Remote's player indicator LED will illuminate solid blue. The illuminated LED indicates that Remote's player number, one through four (1-4).
7. Re-attach the Remote's battery cover.
8. Repeat for additional Remotes.

B) Using the Wii's HOME Menu

1. Using a Remote that is already synchronized with the Wii console, press the Remote's HOME button.
2. Select the "Wii Remote Settings" option from the HOME Menu.
3. Select the "Reconnect" option.
4. Simultaneously press and release the "1" and "2" buttons on the Remote. If you are syncing multiple Remotes, press and release the "1" and "2" buttons on each Remote in the order you want them synced. This order will determine the Remote's player number, one through four (1-4).
5. Once a wireless connection between the Wii console and the Remote(s) has been successfully established, the player indicator LED on each Remote will illuminate solid blue. The illuminated LED indicates that Remote's player number, one through four (1-4).

5-YEAR LIMITED WARRANTY

Mad Catz warrants this product to be free from defects in materials and workmanship for the warranty period. This non-transferable, five (5) year limited warranty is only to you, the first end-user purchaser. If a defect covered by this warranty occurs AND you have registered your product with Mad Catz AND you provide proof of purchase, Mad Catz, at its option, will repair or replace the product at no charge.

The Mad Catz five (5) year limited warranty is available to North American and European customers. Your sole and exclusive remedy is repair or replacement of your Mad Catz product. In no event shall Mad Catz liability exceed the original purchase price of the product. This warranty does not apply to: (a) normal wear and tear or abusive use; (b) industrial, professional or commercial use; (c) if the product has been tampered with or modified.

To receive warranty service you must:

- North America: call Mad Catz Technical Support at 1.800.659.2287 or 1.619.683.2815
- Europe: call Mad Catz Technical Support at +44 (0) 8450-508418
- Obtain a Return Authorization Number from Mad Catz Technical Support
- Ship the product to Mad Catz at your expense for service
- Enclose a copy of the original sales receipt showing a purchase date
- Enclose a full return address with daytime and evening phone numbers

TECHNICAL SUPPORT

Online Support and User Guides: www.madcatz.com

E-mail: techsupport@madcatz.com

North American telephone: Available 8 A.M. to 4 P.M. Pacific Standard Time, Monday through Friday (excluding holidays) at 1.800.659.2287 (US only) or 1.619.683.2815 (outside US).

E-mail: techsupporteurope@madcatz.com

European telephone: Available 9 A.M. to 5 P.M. Greenwich Mean Time, Monday through Friday (excluding bank holidays) at +44 (0) 8450-508418

⚠ CAUTIONS ⚠

- Use this unit only as intended.
- To prevent fire or shock hazard, do not expose this unit to rain or moisture. Do not use within 30' of any water such as swimming pools, bathtubs, or sinks.
- To avoid electrical shock, do not disassemble. Refer servicing to qualified personnel only.
- Never insert objects of any kind, other than authorized items, into the product as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands and/or arms while operating the unit. If the condition persists, consult a doctor.
- Do not attempt to operate the unit in any way except with your hands. Do not bring the unit in contact with your head, face, or near the bones of any other part of your body.
- Avoid prolonged use of this unit. Take breaks every 30 minutes.
- The vibration function of this unit can aggravate injuries. Switch OFF or do not use the vibration function of the unit if you have any ailment of the bones or joints of your hands or arms.
- Route all cords so that they are not likely to be walked on or tripped over. Make sure that cords are not placed in a position or areas where they may become pinched or damaged.
- Do not wrap cords around any part of anyone's body.
- Do not allow children to play with cords.
- Misuse of batteries within this unit may cause batteries to leak and/or explode and lead to personal injury.
- This product contains small parts that may cause choking if swallowed. Not intended for use by children under 3 years of age.

SEIZURES

Some individuals may have seizures or black outs triggered by the flashing lights on television or in video games, even if they have never before had a seizure.

Anyone who has had a seizure, loss of awareness, or other symptom linked to an epileptic condition should consult a doctor before playing a video game.

Parents should be aware when their children play video games and observe them regularly. Stop playing and consult a doctor if you or your child have any of the following symptoms:

Convulsions
Loss of awareness
Involuntary movements
Eye or muscle twitching
Altered vision
Disorientation

When playing video games:

1. Sit or stand as far from the screen as possible.
2. Play video games on the smallest available screen.
3. Do not play if you are tired or need rest.
4. Play in a well-lighted room.
5. Take a 15-minute break every hour.

REPETITIVE MOTION INJURIES

Playing video games (and the repetitive motion involved) can make your muscles, joints or skin hurt. Playing video games in moderation can help avoid such damage. Also:

- Take a 10- to 15-minute break every hour, even if you don't think you need it.

- If your hands, wrists or arms begin to hurt or feel sore or tired, stop playing and rest them for several hours before playing again.
- If pain and soreness continues, stop playing and consult a doctor.

FCC Part 15 section 15.105

FCC NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 section 15.105

Warning: Any changes or modifications made on the system not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

Model Number: 5726

Trade Name: Wireless Remote

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

©2010 Mad Catz, Inc. 7480 Mission Valley Rd., Suite 101, San Diego, CA 92108, U.S.A. Mad Catz and the Mad Catz logo are trademarks or registered trademarks of Mad Catz, Inc., its subsidiaries and affiliates. The shape and design of this product are a trade dress of Mad Catz. International and domestic patents pending. Wii and Nunchuk are trademarks or registered trademarks of Nintendo. This product is not sponsored, endorsed or approved by Nintendo. TouchSense Technology licensed from Immersion Corporation. Protected by one or more patents referenced in this documentation. Made in China. Printed in Hong Kong. All rights reserved. Product features, appearance and specifications may be subject to change without notice. Please retain this information for future reference.

U.S. Patents: 4823634, 4896554, 5184319, 5185561, 5220260, 5235868, 5389865, 5414337, 5459382, B1 5459382, 5482056, 5513100, 5559412, 5576727, 5589854, 5592401, 5623582, 5629594, 5631861, 5676157, 5691898, 5701140, 5721566, 5724264, 5731804, 5734373, 5739811, 5767839, 5769640, 5790108, 5805140, 5821920, 5825308, 5828197, 5831408, 5844392, 5872438, 5880714, 5889670, 5889672, 5907487, 5929607, 5930741, 5929846, 5956484, 5959613, 5999168, 6015473, 6020875, 6020876, 6020967, 6024576, 6028593, 6037927, 6042555, 6046727, 6050718, 6050962, 6057828, 6059506, 6061004, 6067077, 6078308, 6078876, D427635, 6088017, 6088019, 6100874, 6101530, 6104158, 6104379, 6104382, 6106301, 6110130, 6125337, 6125385, 6128006, 6131097, 6134506, 6147674, 6148280, 6154198, 6154201, 6161126, 6162190, 6166723, 6169540, 6184868, 6191774, 6195592, 6201533, 6211861, 6215470, 6219032, 6219033, 6232891, 6243078, 6246390, 6252579, 6252583, 6256011, 6259382, 6271828, 6271833, 6275213 B1, 6278439, 6281651, 6285351, 6288705, 6292170, 5754023, *RE37374, 6292174, 6300936, 6300937, 6300938, 6304091, 6310605, 6317116, 6323837, 6342880, 6343349, 6348911, 6353850, 6353427, 6366272, 6366273, 6374255, 6380925, 6396232, 6400352, 6411276, 6413229, 6424333, 6424356, 6429846, 6428490, 6433771, 6437771, 6448977, 6469692, 6470302, 6486872, 6497672, 6563487, 6564168, 6580417, 6636161, 6636197, 6639581, 6654000, 6661403, 6680729, 6683437, 6686901, 6686911, 6693622, 6693626, 6697043, 6697044, 6697048, 6697748, 6697086, 6703550, 6704001, 6704002, 6704683, 6705871, 6707443, 6715045, 6750877, 6762745, 6781569

Questions? Visit our web site at www.madcatz.com or call 1.800.659.2287 (USA only) or 1.619.683.2815 or +44 (0) 8450-508418 in Europe.