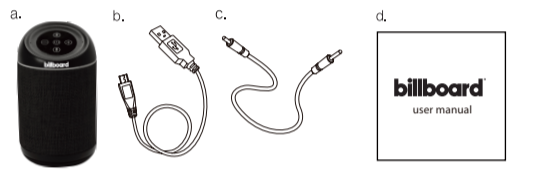 


billboard®
Smart Wireless Wifi Speaker

USER MANUAL

ITEM DESCRIPTION
Thank you for purchasing the billboard® Smart Wireless Wi-Fi Speaker. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.
Package contains:
a. Speaker
b. USB charging cable
c. AUX Cable
d. User manual




Technical Support: techsupport@esicellular.com or call (212) 883-8838
© 2018 Billboard IP Holdings, LLC. All rights reserved. Billboard®, the Billboard logo, HOT 100 and associated characters, trademarks and design elements are owned and licensed by Billboard IP Holdings, LLC.
The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.
© 2018 Amazon.com Inc. All rights reserved. Amazon, the Amazon logo, Amazon Alexa, and associated design elements are owned and licensed by Amazon.com Inc.
All other trademarks are property of their respective companies.

FCC Information
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Federal Communications Commission (FCC) Statement
This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.
Warning:
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Information
Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.
- Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime.
- If left unused, a fully charged battery will lose its charge over time.
- Never use any charger that is damaged.
- Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery.
- Optimal temperature for the battery is between 0° C and 45° C (32° F and 113° F).
- A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle.
- Do not dispose as household waste.

BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.




It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR SMART WIRELESS WI-FI SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.
Your speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:
1. Do not assemble, throw away or damage the speaker.
2. Store the speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the speaker away from direct sunlight, fire, and high voltage equipment. Do not store the speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
4. The speaker are not toys. Please keep it out of the reach of young children.
Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.
Charging the battery
This device has an internal, rechargeable battery.
1. Plug the charger cable into the speaker.
2. Connect the charger to a USB power source. Charging does not start, disconnect the charger plug it in again, and retry.
3. When the battery is fully charged, disconnect the charger from the USB power source and the speaker. The talk and standby times may vary when used with different devices, settings, and environments.

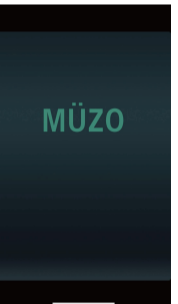 
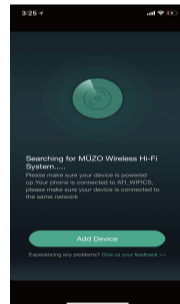 
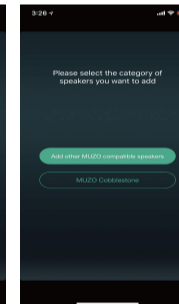 
APP Download
The "Muzo player" app lets you play music and audio from streaming services like Spotify, iHeartRadio, and others. Download the app for your device by searching for the "Muzo player" in the Apple App Store or Google Play store.
Note that this app is designed for mobile devices only, such as smartphones or Wi-Fi enabled tablets. It is not available for use on a regular desktop or laptop computers.
Initial Wi-Fi Setup
To use the speaker's Wi-Fi features, the speaker and your phone must be connected to a Wi-Fi network. The app will guide you through the process, just follow the on-screen instructions and have your network password ready. The Steps listed below and following visual guides are provided for your reference.
1. Press and hold the Power button to power on the speaker. The speaker should start in Wi-Fi mode, indicated by a flashing white LED. If it is not in Wi-Fi mode, press the Power button until Wi-Fi is selected. Normally there are voice prompts which are the Wi-Fi mode.
2. On your phone, launch the Muzo player app and press "ADD". Following the on-screen prompts to connect the speaker to your Wi-Fi network.
3. When the speaker and your phone are successfully connected, a voice prompt will announce the connection.
4. With the Wi-Fi connection complete, the app will automatically begin the process to connect to Amazon Alexa. Follow the On-screen prompts to link Alexa with the speaker and begin using Amazon Alexa Voice Services. You will need to enter your Amazon account information to use Alexa.

LIMITED WARRANTY
ESI Cases & Accessories Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.
This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor to any product the extent of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.
Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories Inc.
The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. **THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.**
This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.
Send product with \$11.95 shipping & handling fee to:
ESI Cases & Accessories, Inc.
44 East 32nd Street
New York, NY 10016
Tech Support: 212-883-8838 | TechSupport@ESICellular.com

OVERVIEW
1. **Power/Mode Button:** Press and hold to power the speaker ON or OFF. Press to switch between WiFi a
2. & 3. **Volume:** Press to adjust the volume.
4. **Alexa on:** Press to activate Amazon Alexa and say command, you can also just say, "Alexa, ..." within range of the speaker's microphones.
5. **Alexa off:** Press to deactivate Amazon Alexa.

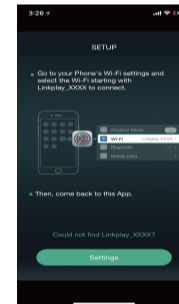 
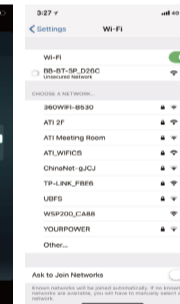 
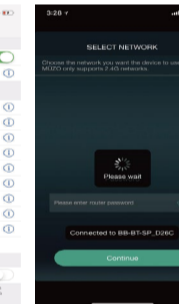 


Initial Wi-Fi Setup Visual Guide
Download the MUZO PLAYER in the APPLE STORE or Google app website.

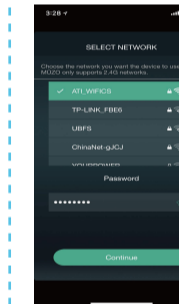 
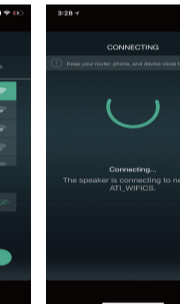 
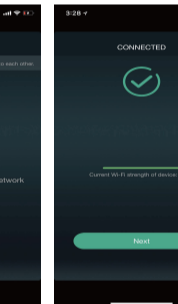 
1. Enter the MUZO.
2. Searching the wifi and connect.
3. Click the MUZO Cobblestone.

Initial Wi-Fi Setup Visual Guide

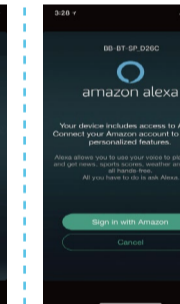 
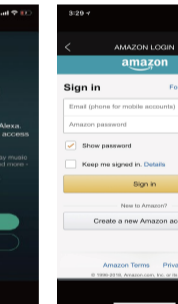 
4. Choose settings and connect ur wifi speaker.
5. Found the BB-BT-SP _D26c pairing name and connect it.
6. Connected BB-BT-SP_D26C.

Initial Wi-Fi Setup Visual Guide

7. Connected home wifi.
8. The speaker is connecting to network.
9. Connected.

Initial Wi-Fi Setup Visual Guide

10. Sign in with Amazon.
11. Login Amazon account.

77-007-01401

WSP300B

billboard®

1.0

BB2113

(1:1)mm

2018-9-18