

BIKE SPEAKER & PHONE HOLDER

AGES
14+

INCLUDED

Bluetooth® Speaker
Bike Mount
USB Charging Cable

PAIRING

Your device must have Bluetooth® capability. Turn off any devices that may have been previously paired to the speakers.

1. Press and hold the power button to turn speaker on. You will hear a beep.
2. Place your device within 3 ft.
3. Enable Bluetooth® on your device and search for new Bluetooth® devices. Refer to your device's manual on how to enable and operate Bluetooth®.
4. Select BIKE SPEAKER from the list of Bluetooth® available devices.
5. A beep from the speakers will notify you when the speaker is successfully paired.
6. You can now stream music wirelessly from your device to your speakers.

Note: If you restart the speaker it will automatically pair with your device. A beep will notify you when the speaker is successfully paired.

CHARGING

1. Remove USB protector cover.
2. Attach the small part of the USB charging cable to the speaker.
3. Attach the other portion of the cable to a computer's USB port.
4. A red light will turn on, indicating speakers are charging.
5. Remove the USB cable from computer when the red LED light turns off.
6. Close with USB protector cover.

 
Note: It takes approximately 1 hour to fully charge speakers.

Model #8000913
Input: 5V/1A (MAX)
Output Audio Power: 3W
Battery Capacity: 230mAh


SAFETY WARNINGS: PLEASE READ ALL SAFETY WARNINGS BEFORE USE

- Not a toy. Keep out of reach of children.
- Use this product only for its intended use.
- This item has no user serviceable components. Do not disassemble.
- Do not expose to extreme temperatures or moisture.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.


MOUNTING

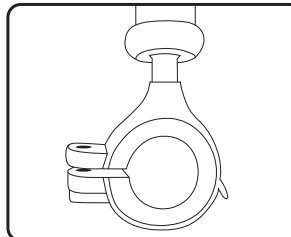

 
1. Remove screw then add grips according to the thickness of your handle bar.

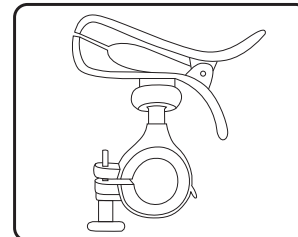

 2. Position the mount then lock it into place.

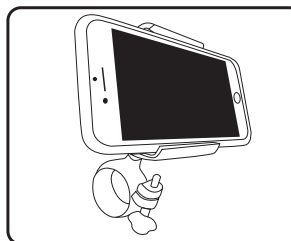

 3. Add your phone to the mount once the mount is fully secure.

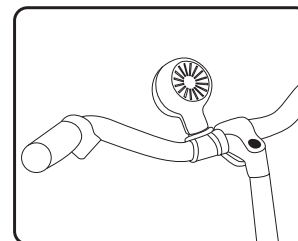

4. Mount the speaker by looping it around the handle bar.

RECHARGEABLE BATTERY WARNING:

- This product contains batteries that are non-replaceable
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult Supervision of the battery while it is charging is required.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.