

# Spy Communication Watch Walkie Talkie

## Contents

- 2 x Spy Walkie Talkies



- A. Channel Setting - Displays what channel you are on
- B. Receiver Indicator - Indicates when you are receiving transmissions
- C. Transmission Indicator - Indicates when you are transmitting transmissions
- D. Paging Indicator - Displays when unit is paging
- E. Low Battery Indicator - Turns on when battery is low
- F. Time Indicator - Displays time in 12-hour time
- G. VOX Mode Indicator - Indicates when VOX mode is active
- H. Volume Indicator - More bars indicates increased volume

### USING YOUR WALKIES - TALK FEATURES:

- **Talk/Call Button** - Press the Talk/Call Button once to transmit your voice. Rapidly press two times to page the other walkie or walkies on the corresponding channel. You will hear a brief tone when you have paged other walkies.
- **Voice Operated Transmission Mode (VOX)** - Select VOX on or off using the Menu Button. Once this feature is active you can speak directly into the microphone without having to press the Talk/Call Button.
- **Scan Button** - Press once to search for activity on any of the 7 channels. Press the Talk/Call button to exit.

### USING YOUR WALKIES - MENU BUTTON:

- **ON/Watch Mode/OFF** - Press the Power/Menu Button to turn walkies on. Press and hold the Power/Menu Button for 3 seconds to only display time (Watch Mode). To turn unit off, press and hold the Power/Menu Button until display is off.
- **Changing channels** - Press the Menu Button once to enter this mode. The Channel icon number will blink then use the Select Up and Select Down Buttons to choose a channel. There are 7 total channels. Make sure that both walkies are on the same channel for them to communicate with each other.
- **Turning VOX on/off** - Press the Menu Button twice to enter this mode. The VOX icon will blink then select on or off using the Select UP and the Select Down Buttons.
- **Setting Time** - Press the Menu Button three times to change hour and four times to change minutes. Use the Select UP and Select Down Buttons to change hour or minutes.
- Press the Talk/Call Button to exit any selection or wait 10 seconds.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- Use this product only for its intended purpose. Do not use attachments of any kind.
- This product has no user serviceable components. Do not disassemble.
- Impact the product before every use. If the product appears damaged in any manner, discontinue use, and discard immediately.

### BATTERY WARNING:


- There is a risk of fire and injury if battery is handled or misused
- Do not expose battery to extreme temperatures or moisture
- Keep away from flammable materials
- Remove batteries when not in use
- Recycle or dispose of batteries according to federal, state, and local laws
- Do not dispose of batteries in a fire - they may leak and explode
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal
- Only use manufacturer specified battery(ies), charger(s), and/or adapters
- Always use, replace, and recharge (if applicable) batteries under adult supervision

### WARNING:

For wrist worn operation, this watch has been tested and meet the FCC RF exposure guidelines when used with the (KINGDA PLASTIC ELECTRONIC LIMITED) accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

### BATTERY INSTALLATION:

- Use a Phillips head screwdriver to remove the battery compartment cover on the back of the game
- Insert 3 "AAA" batteries (not included) in the polarity direction shown on the diagram above
- Replace the battery cover and tighten screw

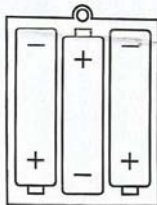

©2017 MerchSource, LLC. and all associated logos are trademarks of MerchSource, LLC. All rights reserved.  
Distributed by MerchSource, LLC, Irvine, CA 92618.

For technical support, please visit [www.merchsource.com](http://www.merchsource.com) or call 1-800-374-2744.

The artwork and design of this instruction manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notices from this manual.

Printed in China



**WARNING:**  
CHOKING HAZARD - Small Parts.  
Not for Children under 3 years.