

Copyright©2011 Haier Technologies Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.










Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

 
Haier Technologies Company reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions






Please read these simple guidelines. Not following them may be dangerous or illegal.

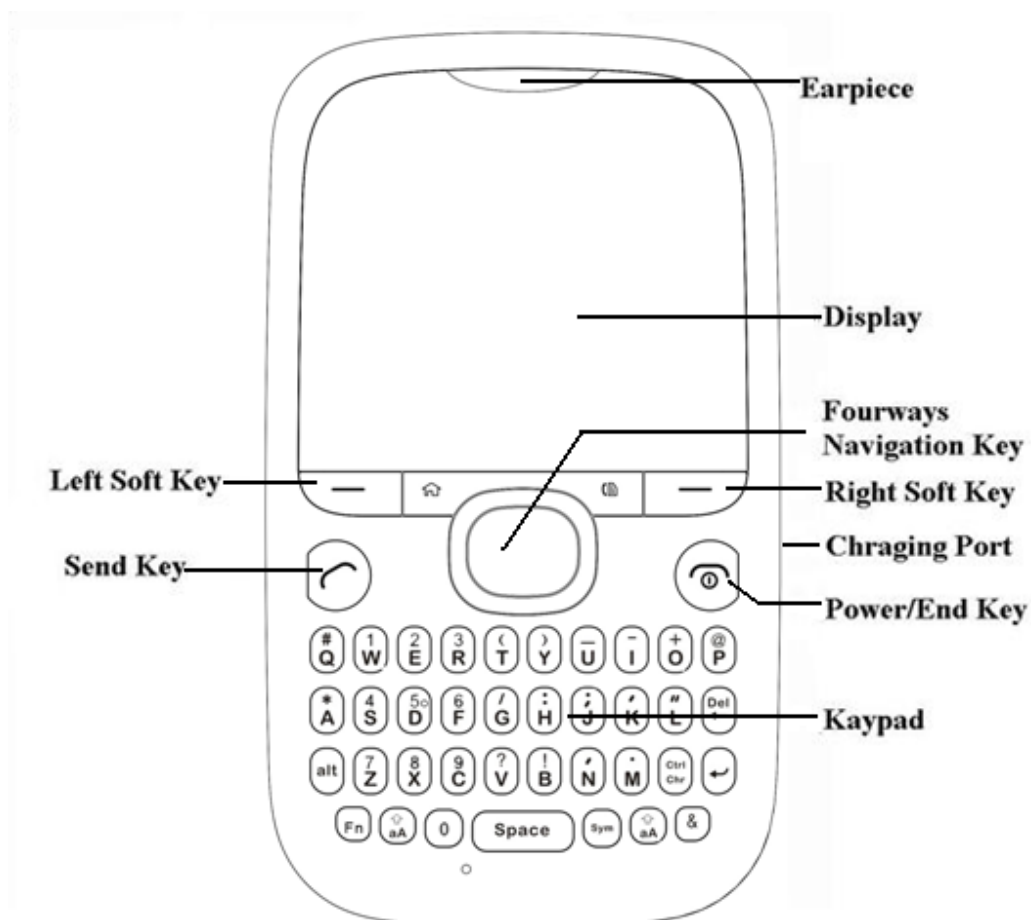



	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Phone appearance











Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Enter the all calls list in idle mode. • Dial or answer a call.
	<ul style="list-style-type: none"> • Press and hold to switch your phone on/off. • End a call during a phone call. • Reject an incoming call. • Return to standby.
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> • Quick into Call history, Settings, Mp3 player and Messages menu in idle mode.

	<ul style="list-style-type: none"> • Control the cursor directions. • Increase or decrease the volume during a call.
	<ul style="list-style-type: none"> • Enter numbers and characters. • Press and hold the 1-9 keys to dial speed-dial phone numbers.
	<ul style="list-style-type: none"> • Enter the * symbol. • Press and hold to lock the keypad in idle mode. • Press twice to enter '+' in idle mode. • Press three times to enter 'P' in idle mode. • Press four times to enter 'T' in idle mode.
	<ul style="list-style-type: none"> • Enter the # symbol. • Press and hold to enable or disable the vibrator .
	<ul style="list-style-type: none"> • Activate symbol mode.

Screen Icons

Icon	Description	Icon	Description
	Network signal strength		Battery power level
	New message received		Ringer mode
	Alarm clock on		Silence mode
	Roaming service mode		Vibrator enable

 
Battery

Removing the Battery



1. Turn off your phone.
2. Gently lift the battery cover outwards.
3. Gently lift the battery outwards.
4. Take out the battery.

Installing the Battery

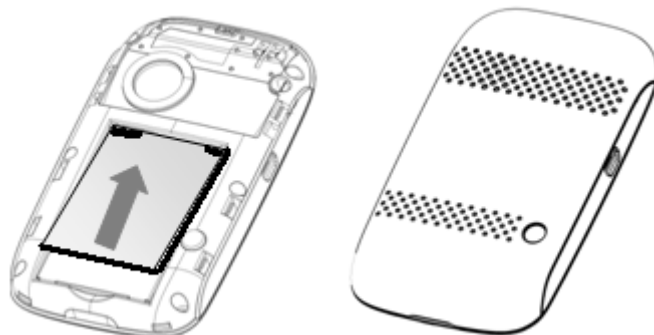


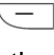






1. Place the battery in the battery compartment.
2. Close the battery cover.

Charging the Battery


1. Plug the charger transformer into a standard outlet.
2. Insert the charger output into charging port of the right of the phone
3. The rolling of the electric quantity bar indicates that the phone begins to charge.
4. After charging is complete, switch off the electric supply and pull out the charger's jack.

Using the Function Menu


1. In idle mode, press  key or  key to display the **Menu** interface.
2. Press  key to scroll to a menu item.
3. Press  key to display the menu.
4. Display the submenu in either of the ways:
 - Press  key to scroll to a submenu item and press  key to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  key to return to the previous menu or quit the function menu.
Press  key to return to the idle screen.

Making a call


1. Dialing

Select a desired entry from the names list or directly type in the phone number in idle mode, then press  key to dial.


2. Making an international call



- Enter “+” and the country code, area code (without prefix zero) and phone number.
- Press  key to dial.

3. Ending a call

Press  key to end a call.

Receiving a call

1. Press  key or any key (need setting) to answer the call.

Or press  [Silence] key once to close incoming ringer, then press  [Answer] key again to receive the incoming call.

2. Press  [Ignore] key or  key to reject the incoming call.

Phone Lock

The phone lock code is used to protect your phone from unauthorized use.

It can be set automatically to lock your phone each time it is switched on or when in idle mode. In this condition, you can only dial emergency call.

Emergency call number is: 110/112.

When phone is locked, to unlock, user must enter the preset security code (The default code is 0000).

Keypad lock

The keypad lock can prevent you from accidental calls.

If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically gets locked again.

When the keypad is locked, only call the emergency number.

Press “unlock” and then press * key to unlock.




Text input method

1. Your phone provides following text input methods:

- English input method: input English characters.
- Numeric input method: input numeric characters.

Input method	Icon	Letter case
Multi-tap	Abc	Word/sentence case text, only available at the beginning of a word/sentence.
	ABC	Upper case
	abc	Lower case
Numeric	123	-

2. Change the input method

- Short press  key to enter symbol list;
- Press  and  key to switch between Multi-tap and Numeric mode.

RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. The model (FCC ID: SG70121HC-C53) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.449 W/kg and when properly worn on the body is 0.842 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help