

Copyright©2008 Haier Technologies Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.










Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

 
Haier Technologies Company reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions







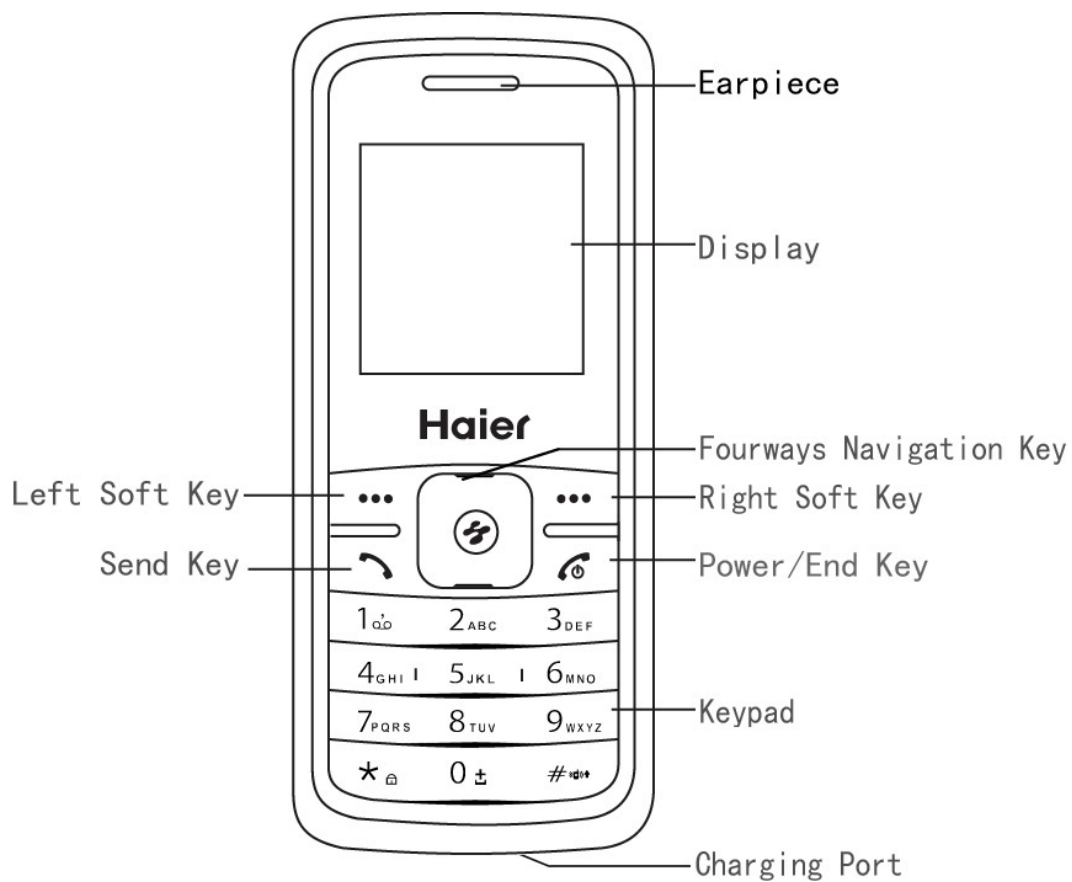

Please read these simple guidelines. Not following them may be dangerous or illegal.

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.















Your Phone



Keys and Functions

 
Press...	To...
	<ul style="list-style-type: none"> • Enter the recent call list in idle mode. • Dial or answer a call.
	<ul style="list-style-type: none"> • Press and hold to switch your phone on/off. • End a call during a phone call. • Reject an incoming call by pressing the key twice. • Return to standby.
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> • Quick into Scheduler, Profiles, Messages menu and Names list • Control the cursor directions • Increase or decrease the volume during a call.
	<ul style="list-style-type: none"> • Enter numbers and characters. • Press and hold the 1-9 keys to dial speed-dial phone numbers. • Select a submenu item labeled with the corresponding number.
	<ul style="list-style-type: none"> • Enter the * symbol. • Press and hold to lock the keypad in idle mode, and press 123 to unlock. • Activate symbol mode.
	<ul style="list-style-type: none"> • Enter the # symbol. • Press and hold to enable or disable the Vibrate only profile. • Press to switch between different input method in writing mode.

Screen Icons

Icon	Description	Icon	Description
	Network signal strength		Battery power level
	New message received		Memory for messages full
	Alarm clock on		Scheduler enabled
	Call connected		Ringer mode
	Vibration mode		Vibr then ring mode
	Silence mode		Vibr and ring mode
	One beep mode		Headset profile

Installing the Battery

 
1. Place the battery in the battery compartment.
2. Close the battery cover by sliding the cover upwards.

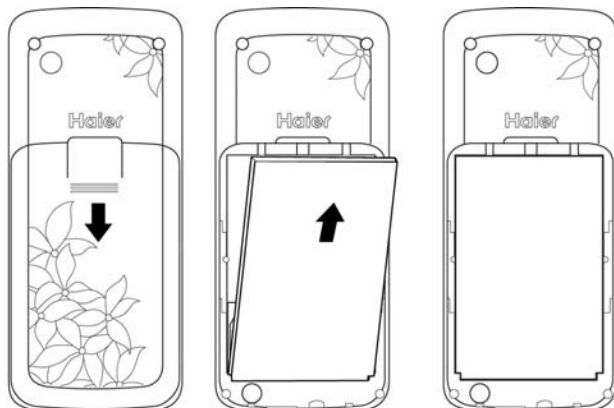

Installing the battery

Removing the Battery

 
1. Turn off your phone.
2. Remove the battery cover by sliding the cover downwards.
3. Use your fingernail to gently lift the upper edge of the battery outwards.
4. Take out the battery.

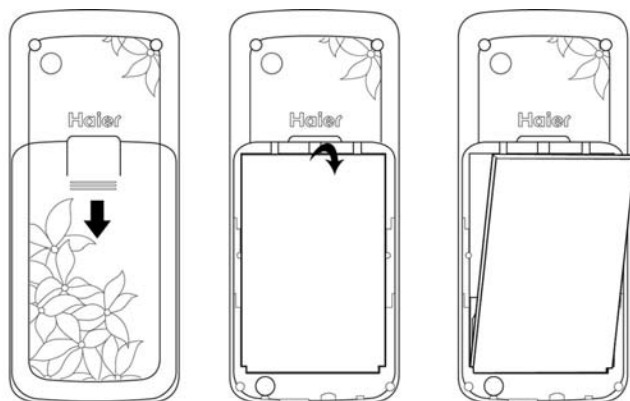

Removing the battery

Installing the RUIM Card

 
1. Remove the battery after switching off your phone.
2. Turn the metal face of the RUIM card down and slide it into the slot provided by your phone.
3. Reinstall the battery.

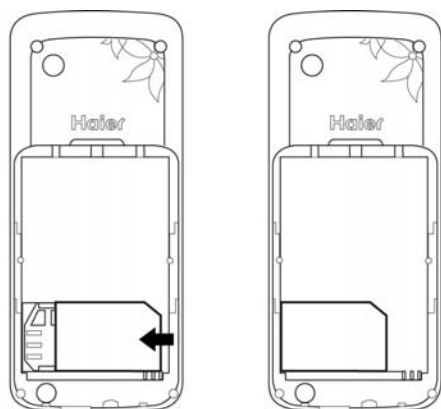

Installing RUIIM card

Removing the RUIIM Card

 
1. Remove the battery after switching off your phone.
2. Slide out the RUIIM card from the RUIIM slot.
3. Reinstall the battery.

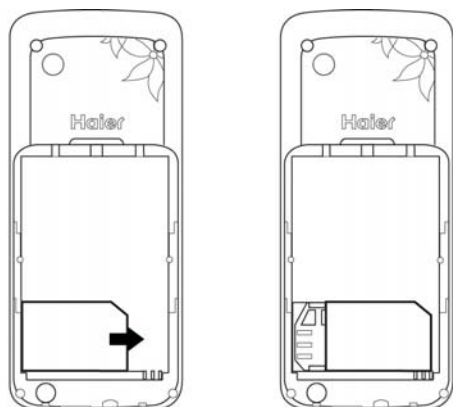





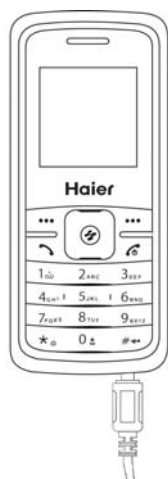


Removing RUIIM card

Charging the Battery

1. Plug the charger transformer into a standard outlet.
2. Insert the charger output into charging port of the bottom of the phone
3. The rolling of the electric quantity bar indicates that the phone begins to charge.
4. When the battery level full and stop rolled, the phone will display 'Battery full'.
5. After charging is complete, switch off the electric supply and pull out the charger's jack.

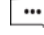


Using the Function Menu



1. In idle mode, press  to display the **Menu** interface.
2. Press  to scroll to a menu item.
3. Press  to display the menu.
4. Display the submenu in either of the ways:
 - Press  to scroll to a submenu item and press  to display the submenu.
 - Press the number key corresponding to the number of a submenu to display it.
5. Press  to return to the previous menu or quit the function menu.
Press  to return to the idle screen.

Making a call


1. Dialing

Select a desired entry from the names list or directly type in the phone number in idle mode, press  key to dial.



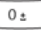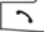

2. Making an international call

- Press and hold  key until "+" appears on screen.
- Enter the country code, area code (without prefix zero) and phone number.
- Press  key to dial.

3. Ending a call

You can end a call at any time by holding down the  key till the call has been terminated.


Receiving a call



1. Press  key or any key (need setting) to answer the call.
Or press  key [Silence] once to close incoming ringer, press  [Accept] again to receive the incoming call.
2. Press  key twice to reject the incoming call.

Phone Lock

The phone lock code is used to protect your phone from unauthorized use. It can be set automatically to lock your phone each time it is switched on or when in idle mode. In this condition, you can only dial emergency call. Emergency call numbers are: 112/911. When phone is locked, to unlock user must enter the preset security code (The default code is 000000).

PIN and PUK

You can set protection code (PIN code) in order to prevent random using of your phone by others. Each time you restart your phone, the phone will prompt you to enter PIN code. You can get PIN code from your mobile phone service provider. In this condition, press  key to dial emergency call. Emergency call numbers are: 112/911.




- Input PIN code and press  key. (For security, an * will be displayed on the screen in place of the number you enter.)
- If you make a wrong enter, you can press  key to re-enter the code.

Note:

If you have entered the PIN code incorrectly continuously for max retry limits, the RUIM card will be automatically locked. In this condition, the phone will prompt for PUK (PIN Unlocking key). You can get the PUK from your mobile phone service provider.

Radio

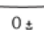With this feature, you can use your phone to tune, save channels, and listen to FM radio stations when headset is plugged into your phone.

In radio main interface, you can use the  key to switch FM sound on/off and use the  key to switch between earphone pattern and outside pattern, and you also can use the  key to switch between common mode and prestore mode. By default, the radio is in common mode. Here in radio main interface press up/down navigation key to adjust the volume and press left/right navigation key to move 0.1 MHz


forwards/backwards along the current FM band.

You can select 'Search up/down' menu to search an available channel forwards/backwards along the current FM band. You can select 'Auto tuning' menu to automatically search for and save available channels to channel list.


When there are radio channels saved in channel list, phone allows you to set radio to prestore mode. Here in radio main interface press up/down navigation key to adjust the volume and press left/right navigation key to search the next frequency which is saved in channel list.

Changing the Text Input method


Your phone provides eZi input method. You can enter alphanumeric characters when working with the names or when you are using the message service, etc.

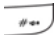Under the text-editing mode, press the  key to switch the input method.

Entering Number (123)

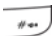1. In text-editing mode, press the  key several times until '123' is displayed at the top-right corner of the screen.
2. Press the numeric keys to input numbers.


Entering Character (Abc/abc/ABC)

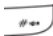By pressing the  key and choosing 'Abc', 'abc' or 'ABC', you can enter uppercase and lowercase letters, and you can also press and hold the numeric keys to input numbers directly.

- 1) The 'Abc' option allows you to type the first letter of each sentence in uppercase. When you have typed the first letter, 'Abc' will be changed to 'abc' automatically.
- 2) The 'abc' option allows you to type in lowercase letters.
- 3) The 'ABC' option allows you to type in uppercase letters.

You can press desired numeric key, once to input a character, twice to display the second character, by analogy to finish the text.

Entering Character (en/En)

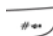By pressing the  key and choosing 'en' or 'En', you can create a word without having to type in all the characters of that word.

- 1) The 'en' option allows you to type predictive text in English with the first letter of each sentence in lowercase.
- 2) The 'En' option allows you to type predictive text in English with the first letter of each sentence in uppercase. When you have typed the first word, 'En' will be


changed to 'en' automatically.

Associated words should be displayed after you have to type in a single letter or first few letters of the word you want to input. Then you can insert the desired word by pressing the



key or 4-ways navigation keys and single pressing corresponding numeric key.

Entering symbols

1. Press the  key to enter the special character library.
2. Press 4-ways navigation keys to view the symbol you need.
3. Press the corresponding numeric key to select.

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HC-D2000 (FCC ID: SG70808HC-D2000) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.496 W/kg and when properly worn on the body is 0.395 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help