

Copyright©2008 Qingdao Haier Technologies Co., Ltd.

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Qinddao Haier Technologies Co., Ltd.

Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

Qingdao Haier reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of “Warnings and Precautions”.

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Getting to Know Your Phone

1. Packing list

Your phone package box contains the following items:

- 1 Handset
- 1 Battery
- 1 Charge


1. Basic specification

- Size: 104.3mm [L] ×45.5mm [W] ×14.1mm [H]
- Weight: 65g (including the battery)
- Standby Time: 100-130 hours
- Talking Time: 2-4 hours
- The battery charging temperature: 0°C—45°C
- The handset working temperature: -10°C—50°C

Notice:

Standby time is the handset continuous working time without making phone calls. Standby time and talking time are both depending on mobile phone using situations, network situations and environments.

Your Phone

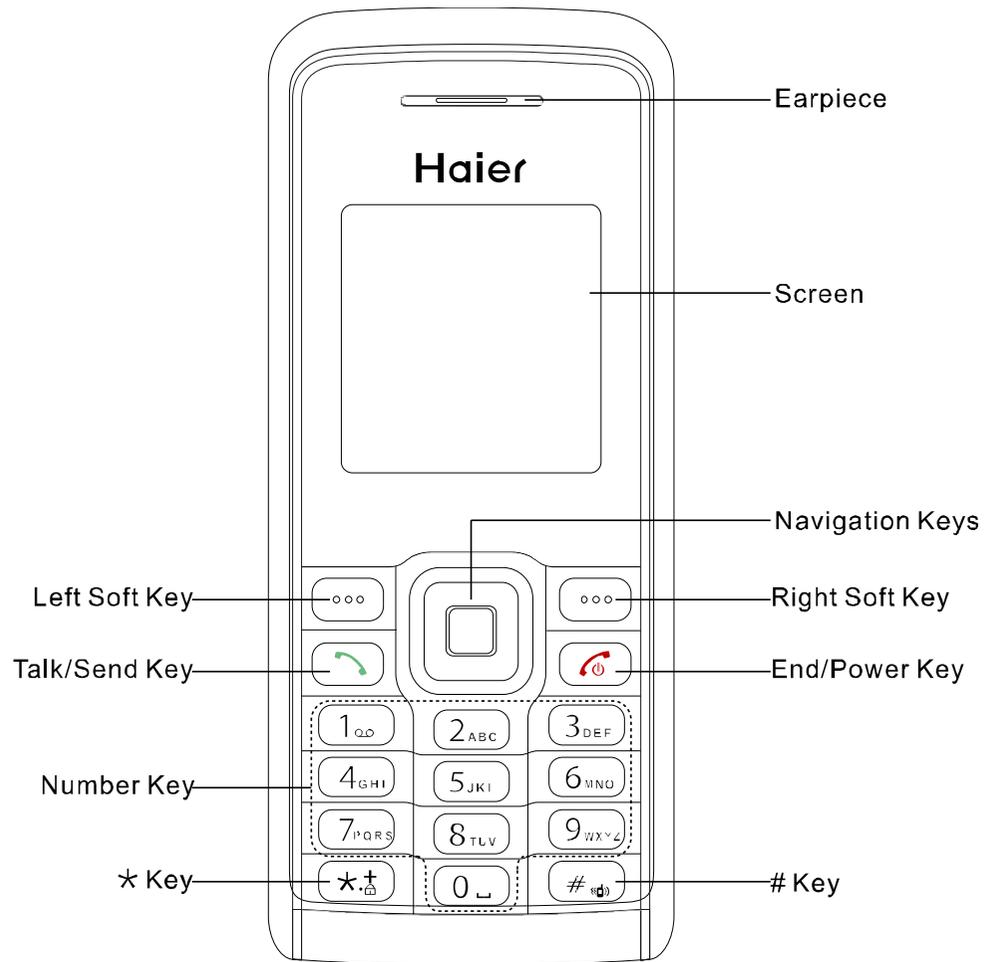

Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> View the dialed calls in the standby mode. Make or answer a call.
	<ul style="list-style-type: none"> Power on or off the phone (by pressing and holding it). End a call or reject an incoming call. Return to the home screen.
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> Display the FM radio interface , the Extra interface , the Profile interface , and the Create message interface in the standby mode. During a call, you can press to increase the volume and press to decrease the volume.

Press...	To...
 	<ul style="list-style-type: none"> Enter numbers and characters. Speed-dial phone numbers in the standby mode (by pressing and holding the 2-9 keys). Enter the number of a contact quickly in the standby mode (by pressing one or more of the 1-9 keys and then pressing #). Enter the voice mailbox in the standby mode (by pressing and holding the 1 key).
	<ul style="list-style-type: none"> Enter the * symbol. After entering a telephone number and holding this key (then you will see "P" on the screen), enter the extension number. Display the list of punctuations in the editing mode.
	<ul style="list-style-type: none"> Enter the # symbol. Select a text input mode in the editing mode. Enter the Mute profile in any other profile (by pressing and holding this key). And you will only enter the Standard profile by pressing and holding it in the Mute profile.

 Notice:

 L indicates the left soft key.

 R indicates the right soft key.

Icon bar

Icon	Description
	Indicating signal strength.
	You have one or several new text messages.
	Indicating the earphone is plugged.
	Indicating the mobile phone is under roaming service mode.
	Indicating Call forward is activated.
	You have set the alarm clock.
	Indicating the keypad is locked.
	Indicating the FM radio is activated.
	Indicating battery power level.
	You have set the Standard mode.
	You have set the Conference mode.
	You have set the Outdoor mode.
	You have set the Mute mode.
	You have set the Customize mode.
	You have one or several missed call.



Menu Tree

Contacts	Recent Calls	FM radio
Add new Contact list Group Copy all Speed dial Delete all records Location selection Memory status	Received calls Dialed calls Missed calls Delete all Call duration	Channel list Auto search Auto search setting Close
Extra	Messages	Games
Alarm clock Memo Calendar Calculator Stopwatch Unit conversion Time zone	Create message Inbox Outbox Draftbox Templates Voicemail Broadcast message Storage status Settings Delete all	Tetris Gamebox Game settings
Profile	SIM Tool Kit	Settings
Standard Conference Outdoor Mute Customize		Display settings Phone settings Call settings Network settings Security settings Restore factory settings

Install and Charge the Phone



1. Remove the battery cover

2. Insert the SIM card

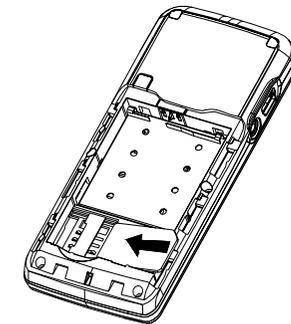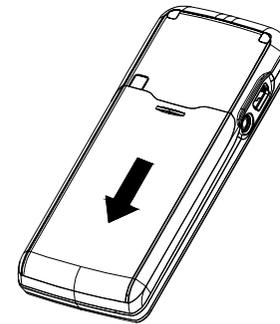

3. Install the battery

4. Plug the travel adapter into the phone

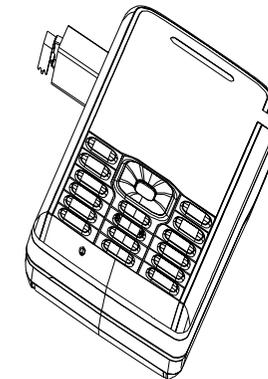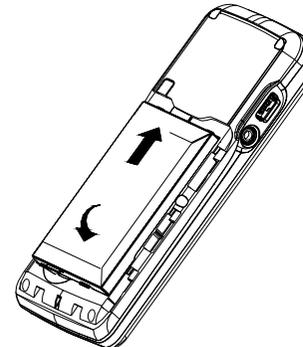

Charging the Battery

1. Connect the charger to the charger interface on the side of your phone.
Make sure that the arrow on the charger connector faces the left side of the phone.
2. Connect the charger to an AC power socket.
3. During the charging, the charging icon is displaying in animation.
4. When the charging icon becomes static, the battery is fully

charged. Disconnect the charger from the AC power socket.

5. Disconnect the charger from the phone.

Using the Function Menu

1. In the standby mode, press L (**Menu**) to display the **Menu** interface.

2. Press  to scroll to a menu item.

3. Press L (**OK**) to display the menu.

4. Press R (**Back**) to return to the previous menu or quit the function menu.

To return to the standby mode, Press .

Making a Call

1. In the standby mode, enter a phone number.
 - To make an international call, press  twice to enter the international long distance code of "+". Then enter the number to be dialed, in the format of "country code + region code + phone number".
 - To call a number with an extension, press  three times to insert "P" between the phone number and the extension number.
2. Press  to dial the number.
3. Press  to end the call.

 Notice:

- When the phone is locked, enter the lock code to unlock the phone first; otherwise, you can make emergency calls or answer calls only.
- In the standby mode, press  to view the **Dialed calls**. Select a record and press  to dial.
- Select a contact from the phonebook and press  to dial.

Answering a Call

When there is an incoming call, you can press  or L (**Accept**) to answer it; Press R (**Reject**) or  to reject the call.

If the **Any key answer** function is enabled, you can press any key except R and  to answer an incoming call.

Phone Lock

The phone lock protects your phone from unauthorized use. The default phone lock code is 0000. You can change it into any numeric string of 4 to 8 digits.

If the phone lock function is enabled, you need to enter the correct phone lock code when the phone is powered on or in the standby mode.

PIN and PUK

The personal identity number (PIN) protects your SIM card from unauthorized use. The PIN unlocking key (PUK) can unblock the blocked PIN. Both PIN and PUK are delivered with the SIM card. For details, consult your service provider.

If you enter wrong PINs for a ₁₁ specified number of times

consecutively, the phone asks you to enter the PUK code. If you enter wrong PUKs for a specified number of times consecutively, the SIM card is invalidated permanently. Contact your service provider for a new card.

Locking the Keypad

When the keypad is locked, you can press  to answer an incoming call or make emergency calls.

You can press L and  to unlock the keypad.

When the **Keypad lock** function is enabled, if there is no operation on the phone for a preset period in the standby mode, the keypad is locked automatically.

Changing the Text Input Modes

The indicator of the current text input mode is displayed on the screen. In the editing mode, press  to change the input mode.

 Notice:

- In the editing mode, press R (**Delete**) once to delete the letter on the left of the cursor. Press and hold R (**Delete**) to delete all the letters at a time.
- In the "Eng" input mode, press  to enter a space. In the "ABC" or "abc" input mode, press  once to enter a space, twice to enter "0".
- Press  repeatedly to select and enter the commonly used punctuations except in the "123" input mode.

Entering English (Eng)

In the "Eng" input mode, do the following to enter the English letters:

1. Press each key only once according to the spelling sequence of the desired word. Then the phone displays the commonly used word according to the numeric sequence of key presses.
2. Press  to scroll to the desired word.
3. Press  to switch the selected characters between upper case and lower case.
4. Press L to enter the word.

Entering English (ABC and abc)

In the "ABC" or "abc" input mode, you can press a key labeled the desired letters once to enter the first letter on the key, twice to enter the second letter on the key, and so on.

If the letter you want to enter is on the same key as the previous one, you can enter the letter only after the cursor appears again.

Entering Numbers

- In the "123" input mode, press a key labeled the desired number.
- In the "ABC" or "abc" input mode, press a numeric key repeatedly until the desired number appears on the screen.

Entering Symbols

1. In any input mode, press  to display a symbol list.
2. Press  to scroll to the desired symbol.

3. Press L to enter the symbol.

FM Radio

1. Insert the headset to the headset jack properly.
2. Select **Menu** and press  to scroll to **FM radio**. Press L (**OK**) and to select it. After loading, the phone plays a program.
3. In the **FM radio** screen:
 - Press  and  to select a channel.
 - Press  and  to adjust the volume.
 - Press L (**Options**) to select **Channel list**, **Auto search**, **Auto search setting** or **Close**.

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HG-M170 (FCC ID: SG70811HG-M170) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.353 W/kg and when properly worn on the body is 0.245 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.