

Copyright©2009 Haier Technologies Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.










Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

 
Haier Technologies Company reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions






 

Please read these simple guidelines. Not following them may be dangerous or illegal.

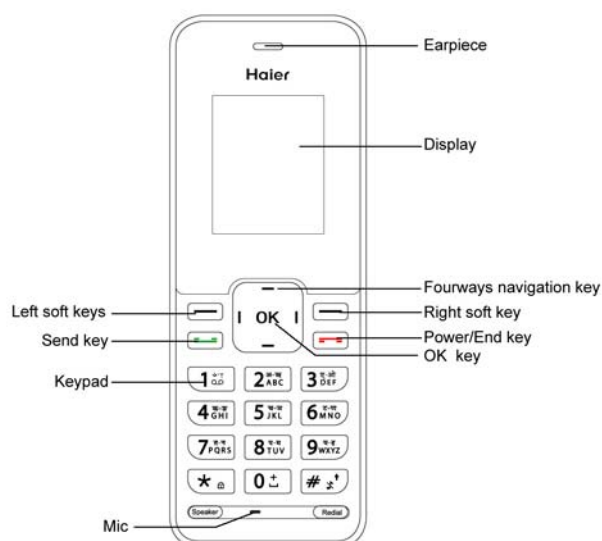	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Phone appearance



Keys and Functions

Press...	To...
	<ul style="list-style-type: none"> • Enter the all calls list in idle mode. • Dial or answer a call.
	<ul style="list-style-type: none"> • Press and hold to switch your phone on/off. • End a call during a phone call. • Reject an incoming call. • Return to standby.
	Select the option displayed on the lower left corner of the screen.
	Select the option displayed on the lower right corner of the screen.
	<ul style="list-style-type: none"> • Select the option displayed on the lower middle of the screen. • Control the cursor directions. • Increase or decrease the volume during a call.
	<ul style="list-style-type: none"> • Enter numbers and characters. • Press 1-98 keys and then press the send key to dial speed-dial phone numbers.
	<ul style="list-style-type: none"> • Enter the * symbol. • Press and hold to lock the keypad in idle mode. • Activate symbol mode.




- Enter the # symbol.
- Press and hold to enable or disable the **Silent** profile.
- Press to switch between different input method in writing mode.

Screen Icons


Icon	Description	Icon	Description
	Network signal strength		Battery power level
	New message received		Memory for messages full
	Alarm clock on		Headset
	No signal		Call connected
	Ringer mode		Silent mode
	Meeting mode		Outdoor mode

Battery and RUIIM card

 
1. Removing the battery.

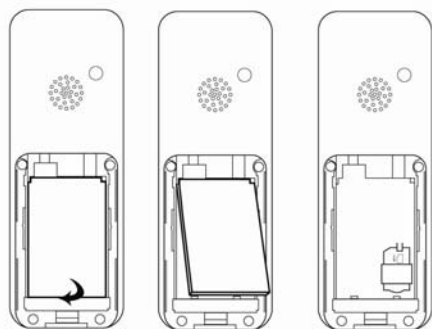

 
2. Installing the battery.

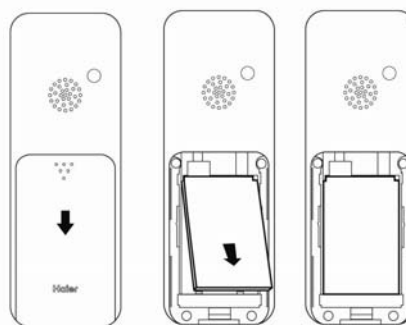

 3. Insert the RUIIM card.

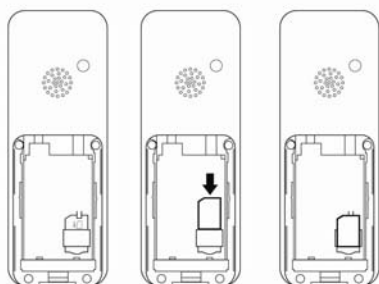

 
4. Remove the RUIIM card.

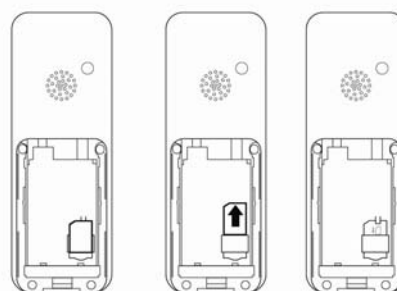




Charging the Battery

 1. Plug the charger transformer into a standard outlet.
2. Insert the charger output into charging port of the bottom of the phone or put the phone on the charge pedestal.
3. The rolling of the electric quantity bar indicates that the phone begins to charge.

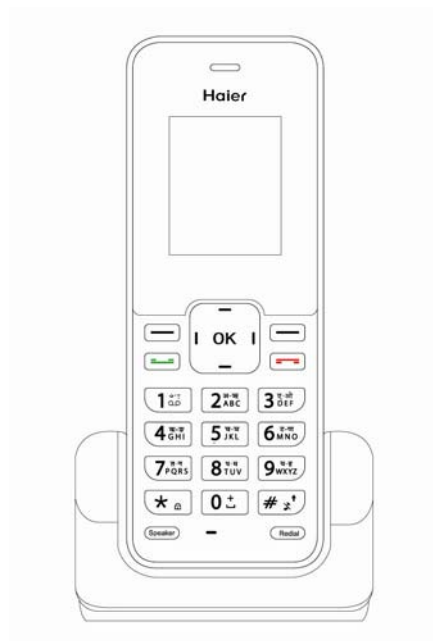4. When the battery level full and stop rolled, the phone will display 'Charge complete'.
5. After charging is complete, switch off the electric supply and pull out the charger's jack.




Using the Function Menu

 

1. In idle mode, press OK key to display the **Menu** interface.
2. Press  key to scroll to a menu item.
3. Press OK key to display the menu.
4. Press  key to return to the previous menu or quit the function menu.
Press  key to return to the idle screen.

Making a call

1. Dialing

Select a desired entry from the names list or directly type in the phone number in idle mode, then press  key to dial.




2. Making an international call

- Press and hold  key to enter "+".
- Enter the country code, area code (without prefix zero) and phone number.
- Press  key to dial.

3. Ending a call

Press  key to end a call.

Receiving a call

1. Press  key or any key (need setting) to answer the call.
2. Press  [Ignore] key or  key to reject the incoming call.

Phone Lock

The phone lock code is used to protect your phone from unauthorized use.


It can be set automatically to lock your phone each time it is switched on or when in idle mode. In this condition, you can only dial emergency call.

Emergency call number is: 100/101/102.


When phone is locked, to unlock user must enter the preset security code (The default code is 0000).

Changing the Text Input Method

Your phone provides eZi input method. You can enter alphanumeric characters when working with the names or when you are using the message service, etc.


Under the text-editing mode, press the  key to switch the input method.

Entering Character (Hindi)

By pressing the  key and choosing 'Hindi', you can create a word without having to type in all the characters of that word.

Associated words should be displayed after you have to type in a single letter or first few letters of the word you want to input. Then you can insert the desired word by pressing 4-ways navigation keys and the OK key.


Entering Character (abc/ABC)

By pressing the  key and choosing 'abc' or 'ABC', you can enter uppercase and lowercase letters, and you can also press and hold the numeric keys to input numbers directly.

- 1) The 'abc' option allows you to type in lowercase letters.
- 2) The 'ABC' option allows you to type in uppercase letters.


You can press desired numeric key, once to input a character, twice to display the second character, by analogy to finish the text.

Entering Character (En)


By pressing the  key and choosing 'En', you can create a word without having to type in all the characters of that word.

Associated words should be displayed after you have to type in a single letter or first few letters of the word you want to input. Then you can insert the desired word by pressing 4-ways navigation keys and the OK key.

Entering Number (123)

1. In text-editing mode, press the  key several times until '123' is displayed at the top-right corner of the screen.
2. Press the numeric keys to input numbers.

Entering Symbols

1. Press the  key to enter the special character library.
2. Press 4-ways navigation keys to view the symbol you need.
3. Press the OK key to select.

RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device (FCC ID: SG7090824HC-FC500) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.116 W/kg and when properly worn on the body is 0.880 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.