

		制 造 文 件 Manufacture Document	
主题 Title	CE310 RF Manual Control Document	文件编号 Doc. No.	

修 改 记 录
Update Records

版 次 Rev. No.	修 改 摘 要 Update Summary	生效日期 Effective Date	编 制 Prepared By	签 名 Signature
01	新发行 New issue			
审核栏/Check By:		批准栏/Approval By:		

文件发放部门名单
Distribution list:

文件受控状态(印章)
Document Control Status (Stamp)

制造文件
Manufacture Document

主题
Title CE310 RF Manual Control Document


文件编号
Doc. No.

In this document, we will discuss the way to control CE310 working under transmitting mode, which is achieved by using QRCT tool to control EUT.

Before connect the EUT to the PC, you must install the USB driver firstly.


1. Connect the EUT to computer by USB cable. And open the ETS, select the communication port – USB.
2. Config MS under TX mode

Configure usb port:

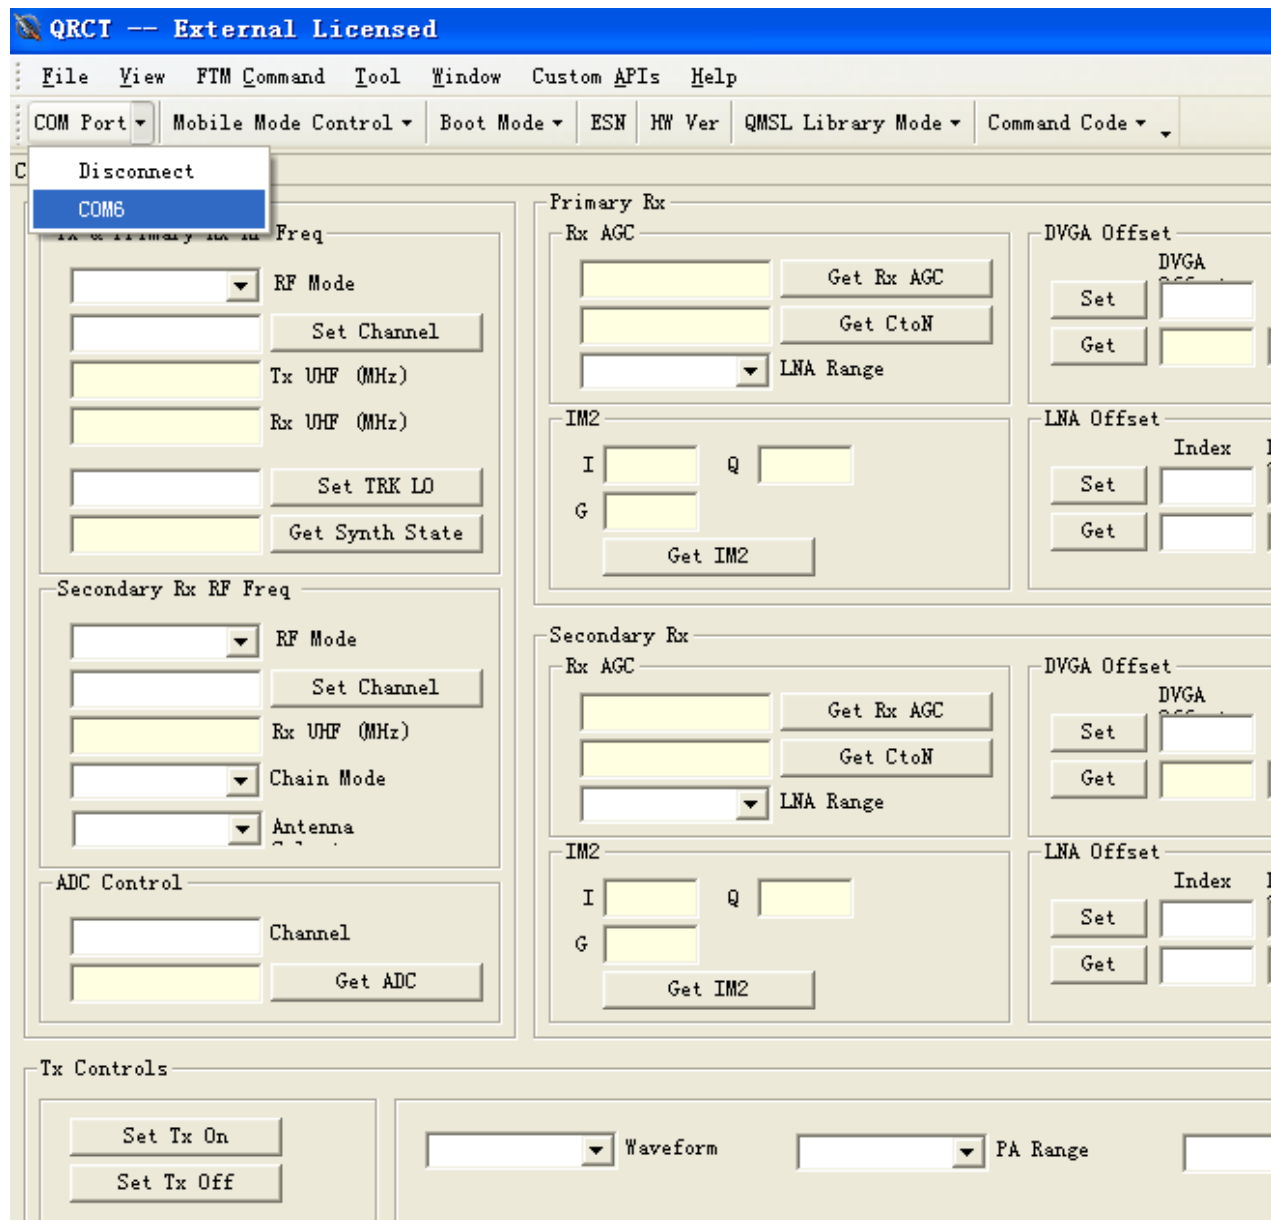


主题 Title	CE310 RF Manual Control Document	文件编号 Doc. No.	
-------------	----------------------------------	------------------	--

2.2 enter FTM MODE

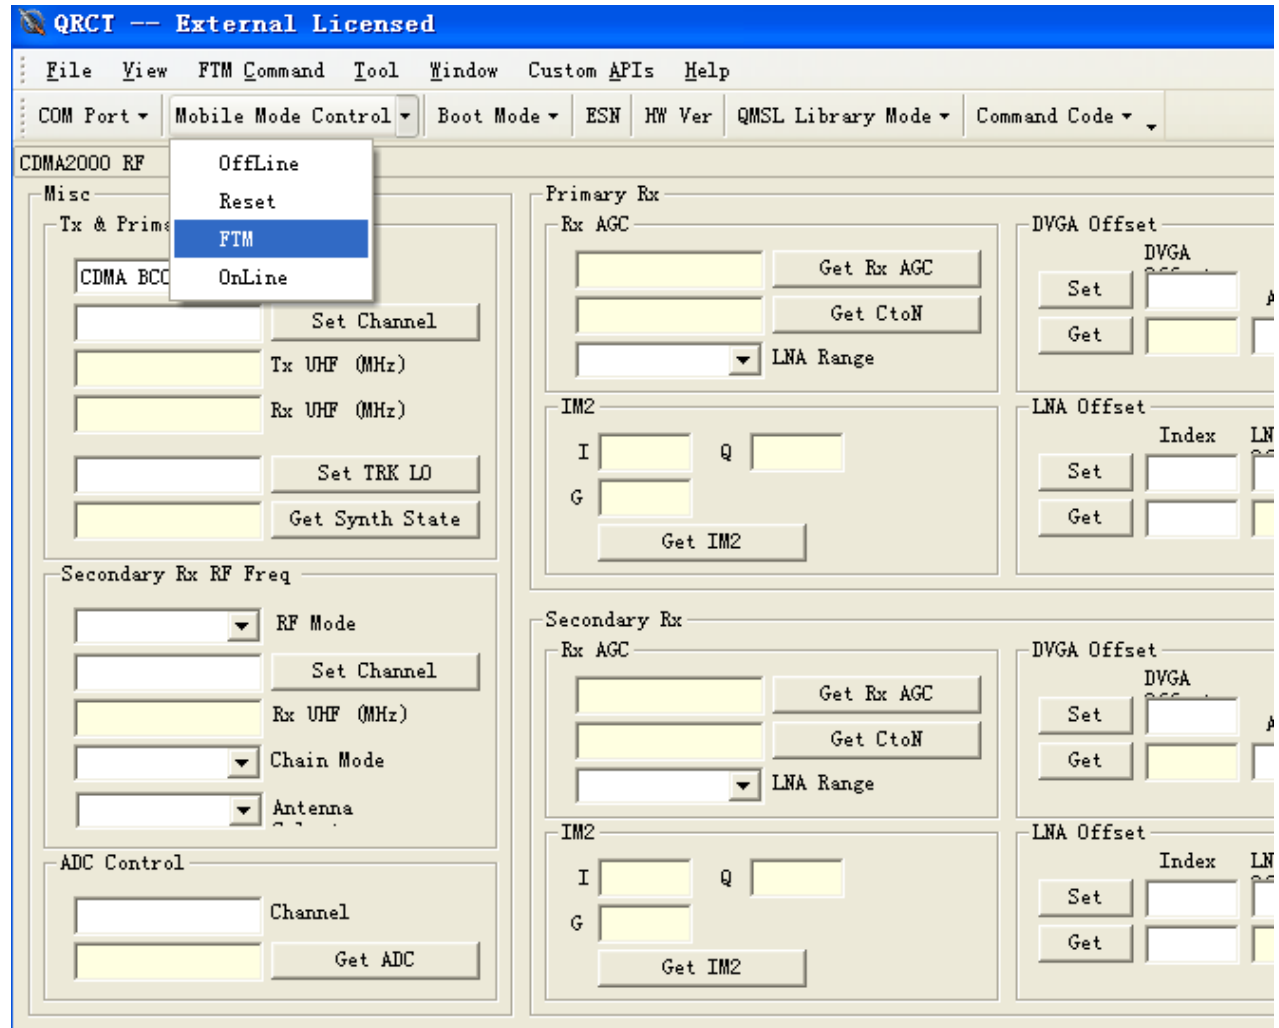


Set channel parameter:

主题 Title	CE310 RF Manual Control Document	文件编号 Doc. No.	
-------------	----------------------------------	------------------	--

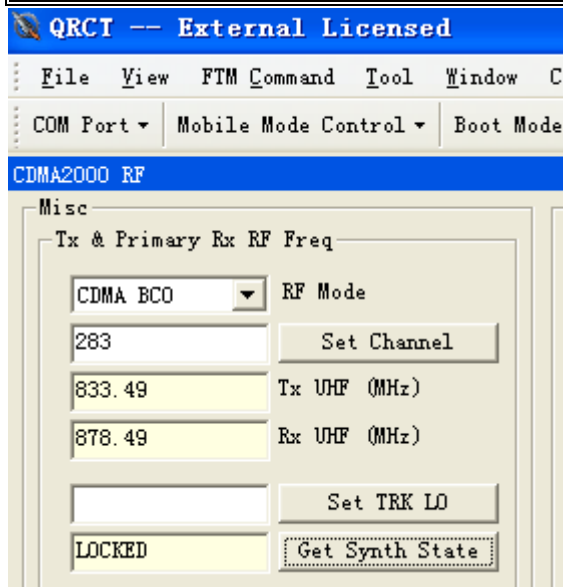

Set TX parameter:

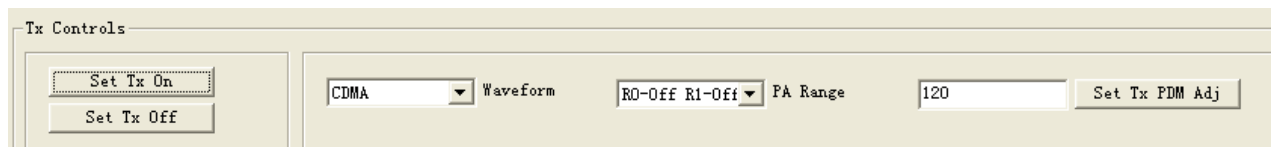

Set the wireless communication tester (such as Agilent8960 or CMU200) in right channel and band. We can see the power that the MS transmits in the test set on the screen.