










This document and all its contents included remain the proprietary material of Qingdao Haier Telecom Co. Ltd. (Haier Telecom) and are protected by the Chinese laws and applicable international conventions on copyrights. Any reproduction, transmission, disclosure, revision, modification or use otherwise of this document or the whole or part of its contents, in whatever form and by whatever means, is not permitted without prior express written authorization from Haier Telecom. Offenders will be liable for any and all damages caused by their offence hereof and will be subject to all remedies that Haier Telecom is entitled to seek under applicable laws.

# Contents


## 1. Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

	Do not switch the phone on where Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obeys all traffic laws. Always keep your hands free, to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow all regulations and rules enforced.
	Do not use the phone at a refueling station. Do not use near fuel or chemicals.
	Follow all instructions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of children. Do not use the phone while connected to the charger or with wet hand or bare feet.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life. Please remove the battery only after the phone is switched off normally, otherwise it could cause unpredictable damage for the phone.
	Only qualified personnel should service the phone. Faulty service may be dangerous and may invalidate any warranty applicable to the device.

## 2. Handset guide

The illustration below displays the main components of your phone.

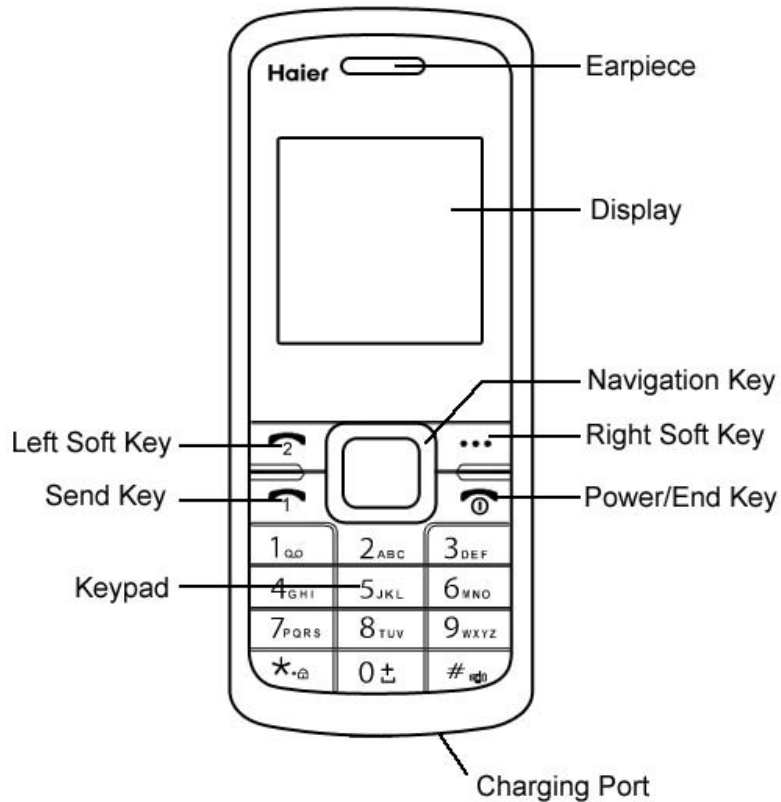 












The appearance of the mobile phone and introduction:

Name	Description
Left soft key (LSK)	In standby mode, press left soft key to enter Menu.
Right soft key (RSK)	In standby mode, press right soft key to enter Names.
Send key	In standby mode, press this key to access the all calls.
End (Power) key	Long press: power on, power off.
Up key	In standby mode, press this key to show the Shortcuts.
Down key	In standby mode, press this key to show the Alarm.
Left key	In standby mode, press this key to show the User profiles.
Right key	In standby mode, press this key to show the Tone settings.

Number keys	Enter numbers, letters, and some special characters. In standby mode, press and hold 1 key to access your voice mail server.
* key	In standby mode, long press this key to select the symbol “*”, “+”, “p”, “w”. Short press this key to input the symbol “*”. In standby mode, press LSK then * key to lock the keypad.
# key	In standby mode, long press this key to enable or disable the Silent mode. Short press this key to input the symbol “#”.


Notice: long press means pressing the key for more than 2 seconds; short press means pressing key for less than 2 seconds.

## 2.1 Idle mode screen

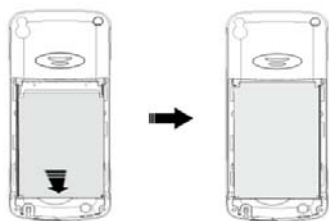 
Icon	Description
	Indicates signal strength.
	You have one or several missed call.
	You have one or several new text messages.
	You have one or several new multimedia messages.
	Indicates a headset is connected to the phone.
	Alarm clock has been activated.
	Indicates ring alert type.
	Indicates vibrate alert type.
	Indicates vibrate and ring alert type.
	Indicates vibrate then ring alert type.
	Indicates battery power level.

## 2.2 Battery

### 2.2.1 Installing and removing




Install the battery

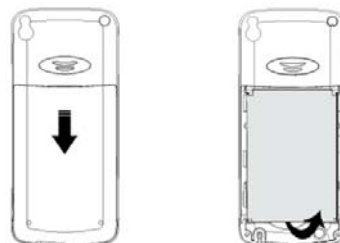 

Remove the battery

## 2.2.2 Charging the battery

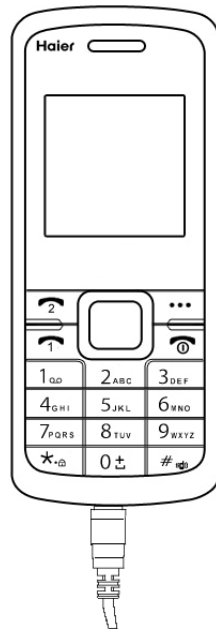 

## 2.3 SIM card

### 2.3.1 Insert and remove the SIM card



Insert the SIM card

Remove the SIM card

## 2.4 Making and receiving a call

### 2.4.1 To make a call

You can use the function only after the network-prompting icon is shown on screen.

#### 1. Making phone call using the keypad

After dual cards have been inserted into your phone, in idle mode, directly type in the

phone number to dial.

Notes: press send key to dial using SIM1 card and press LSK to dial using SIM2 card.

#### 2. Making phone call using contacts

Enter the phonebook to view the contacts list and select a desired entry to dial.

#### 3. Making phone call using call logs

In idle mode, press send key to access the call logs, scroll to the number or name you wish to dial.

#### 4. Making phone call using speed dial

In idle mode, long press a number key to make phone call.

#### 5. Ending a call

You can end a call at any time by pressing end key till the call has been terminated.

### 2.4.2 To receive a call

When an incoming call arrives, phone will alert you.

Press the send key to answer.

To reject the call, press the end key.

### 2.4.3 During a phone call

During a phone call, press up/down navigation key to increase/decrease the volume, press RSK to activate handsfree function, press LSK (options) to view the following options:

#### 1. Hold single call

This is useful if you want to make a new call during a call. Put the current call on hold, but maintain connection of the communication line.

#### 2. End single call

End the current call.

#### 3. New call

Enter dial-up interface, dial another phone number.

#### 4. Phonebook

Allow you to view the phone book option.

#### 5. Messaging

Allow you to view the message option.

#### 6. Mute

Allow you to temporarily turn the microphone off.

#### 7. DTMF

Dual Tone Multi Frequency.

This function allows you to set whether send out DTMF signal.



 
 
 
 
 
 
 
## 3. Input method

Your phone provides the following input methods.

English input method: input English characters.

Spanish input method: input Spanish characters.

Numeric input method: input numeric characters.

Input method	Icon	Letter case
Intelligent	 ABC	English upper case
	 abc	English lower case
	 ES	Spanish upper case
	 es	Spanish lower case
Multi-tap	 ABC	English upper case
	 abc	English lower case
	 ES	Spanish upper case
	 es	Spanish lower case
Numeric	 123	-

Press \* key to enter the symbol list.

Press # key to switch between intelligent, Multi-tap and Numeric mode.

## 4. File manager

Use the menu to manager the files you saved in the phone memory.

## 5. Phonebook

You can store names and phone numbers as entries in names list. These entries are stored in your phone or SIM card memory.

### 5.1 Quick search

This function allows you to find the desired contact quickly.

Press any key, the first contact corresponding to the first letter of the key appears. To search further, continue to enter the letters with the keys.

### 5.2 Search contact

This function allows you to find preferred contact from the names list.

## 5.3 Add new contact

With this function, you can choose either the SIM names or Phone names to store the new item.

## 5.4 Copy contacts

This feature allows you to copy all entries from SIM to phone, phone to SIM and SIM to SIM.

## 5.5 Move contacts

This feature allows you to move all entries from SIM to phone, phone to SIM and SIM to SIM.

## 5.6 Delete all contacts

This feature allows complete erasing of all contacts either in SIM card memory or Phone memory, the information thus deleted is unrecoverable.

## 5.7 Caller groups

You can classify a number of contacts into one group in accordance with their relationship, for example: Friends, Family, VIP, Business, Others.

## 5.8 Extra numbers

Allow you edit the SIM owner number and SIM SOS number.

## 5.9 Phonebook settings

### 5.8.1 Preferred storage

You can select the preferred storage.

### 5.8.2 Speed dial

Speed dial is a fast way to call one of your special numbers.

1. To assign a speed dial number



Phonebook ->Phonebook settings ->Speed dial->Set number->select a desired number from the contact list.

2. To dial a speed dial number

When Status is enabled to on, in idle mode, long press number key and the corresponding number will automatically be dialed.

By default the 1 key is used to set voice mail number.

### 5.8.3 My number

Allow you edit and send my number.

### 5.8.4 Memory status

This function helps you to check the number of entries stored in the names lists.

You can check the memory status of the SIM card and phone memory, including total memories and used memories.

## 6. Fun & Games

You can play the game provided by your phone and set the games settings.

## 7. Call center

### 7.1 Call history

Call history stores information about the missed calls, dialed calls, received calls, delete calls, call timers, call cost, text message counter, GPRS counter.

### 7.2 Call settings

#### 7.2.1 SIM1/SIM2 call settings

1. Caller ID

This function needs to be supported by network, including the following sub-menu: Set by network, Hide ID, Send ID.

2. Call waiting

If your mobile phone service provider supports this feature, the call waiting notifies you of an incoming call even while you are on a call.

### 3. Call divert

Call divert is a network service.

This service is used to forward incoming calls to your voice mail service or to another number depending on certain conditions in which your phone is unavailable or you don't want to receive any call.

### 4. Call barring

You can set restriction for calls made from or to your phone.

### 5. Line switching

You can choose between Line 1 and Line 2.

### 6. Closed user group

**This function needs support of network. For details, please consult local network operator.**

## 7.2.2 Advance settings

### 1. Blacklist

When Blacklist Mode is set to 'On', the numbers which are stored in blacklist number list can not call your phone successfully.

This function is depended on the service provider's network.

### 2. Auto redial

Allows you redial automatically when one time trial dial fails by turning on this function.

### 3. IP dial

Edit and activate IP dial number.

### 4. Call time display

Whether display your call time during the call.

### 5. Call time reminder

During a phone call, as your call duration nears the set time, alert will sound.

### 6. Auto quick end

During a phone call, as your call duration arrives the set time, your call will be ended automatically.

### 7. Reject by SMS

**If you select 'On' option, the default message will be automatically sent to the caller's phone number when you reject the incoming call by pressing 'Options->Reject by SMS'.**

## 8. Messaging

### 8.1 Write message

Allow you edit text message. Press numeric key to input corresponding characters, and then press LSK to access the following sub-menu:

#### 1. Sent to

Enter the recipient's number or retrieve a number from the phonebook, then press LSK to send.

## 2. Input method

Allow you switch method.

## 3. Insert template

Allow you to apply one of the preset message templates to the text.

## 4. Advanced

Allow you insert object, insert number, insert name, insert bookmark, text format.

## 5. Save to Drafts

Allow you save the message to the draft.

## 8.2 Inbox

Inbox contains the received text messages.

## 8.3 Drafts

You can read the text messages saved in draft.

## 8.4 Outbox

Use the menu to view and search the messages you sent.

## 8.5 MMS

MMS can contain characters, voice segment and pictures, including the following sub-menu: Write message, Inbox, Outbox, Drafts, Templates, MMS settings.

## 8.6 Broadcast message

Use the menu to set Receive mode, Read message, Languages, Channel settings.

## 8.7 Templates

Select the template message you want to use, you can use, edit, remove etc.

## 8.8 SMS settings

Enter the menu to set SMS settings. Select the option you want to set to edit.

## 9. FM radio

Before use the FM radio, you must plug the headset into your phone.

When you playing the radio, the function of keys is as follows:

Up navigation key: enter the auto search mode, here press LSK/RSK to find the next channel on the band

Down navigation key: play/stop the radio

Left/right navigation key: move 0.1 MHz forwards/backwards along the current FM band

LSK: enter the sub-menu

RSK: exit

\*key/#key: adjust the volume

### 9.1 Channel list

Allow you to save maximum 9 channels in channel list. You can play, delete, edit.

### 9.2 Manual input

Allow you to input a channel manually to play.

### 9.3 Auto search

Allow you to auto search and save channels.

### 9.4 Settings

Allow you set the following functions: Background play, Loudspeaker.

## 10. Organizer

### 10.1 Calendar

Enter this menu to set the calendar and view further options i.e. Add event, Jump to date.

### 10.2 Tasks

Use the menu to add the task list and to set for Date, Call, Anniversary.

## 10.3 Alarm

This function allows you to set the alarm to ring at a specific time. Your phone provides 5 alarm clocks.

# 11. Settings

## 11.1 Dual SIM settings

You can select the following options: Dual SIM open, Only SIM1 open, Only SIM2 open, Flight mode.

## 11.2 Phone settings

### 11.2.1 Time and date

You can customize the display of times and dates throughout your phone.

### 11.2.2 Schedule power on/off

You can set the time that the phone is powered on/off automatically.

### 11.2.3 Language

This function allows you to set the displayed language.

### 11.2.4 Pref. input method

Set the default input method.

### 11.2.5 Display

Allow you to set the following options: Wallpaper, Screen saver, Power on display, Power off display, Show date and time, Show owner number.

### 11.2.6 Greeting text

Allow you to set the greetings to be displayed on main screen when power on.

### 11.2.7 Dedicated key

Allow you to set the shortcuts. The option includes up, down, left, right.

### 11.2.8 Misc. settings

Allow you to adjust the LCD backlight.

## 11.3 Network settings

You can set the network parameters.

## 11.4 Security settings

### 11.4.1 SIM1/SIM2 security settings

#### 1. SIM lock

This option is used to set the PIN code.

The PIN code is used to protect your SIM card from random using by others. If set to on, access to your SIM card will be restricted each time the phone is powered on.

Note: The SIM card will be locked after entering the wrong PIN code for max retry limits. In this condition, phone will ask for PUK (PIN unlocking key), which is available from the service provider.

#### 2. Fixed dial

When Fixed Dial is set to 'On', the only numbers that can be dialed from your phone are those stored in the Fixed Dial List.

Before activate this feature, you must enter the PIN2 code.

Availability of the Fixed Dial feature depends on the type of SIM card you have.

#### 3. Barred dial

When Barred Dial is enabled, the numbers which are stored in barred dial list can not be dialed from your phone.

Note: This function is depended on the service provider's network.

#### 4. Change password

This option is used to change PIN, PIN2 code.

### 11.4.2 Phone lock

This option is used to set the phone lock code.

The lock code can be set to protect your phone from unauthorized use. It can be set to automatically lock your phone each time it is switched on.

By default the phone lock code is set at '0000'

### 11.4.3 Auto keypad lock

This function is used to lock the keypad automatically when phone is not in use.

### 11.4.4 Change password

This option is used to change phone password.

## 11.5 Data account

Use the menu to set the GSM data and GPRS.

## 11.6 Restore factory settings

Use this menu to reset the phone's settings to the original factory settings

# 12. User profiles

The profiles function provides a quick and convenient way to reset your phone setting for a particular environment.

Your phone provides 5 profiles: General, Meeting, Outdoor, Indoor, Headset.

Each profile has a factory settings, however you can adjust each profile to suit your requirements.

#### 1. Tone settings

You can allocate different ringers for Incoming call, Power on, Power off, Message and Keypad.

#### 2. Volume

This function allows you to adjust the volume output of the Ringtone and Key tone.

#### 3. Alert type

You can set alerts for incoming calls by using this function.

#### 4. Ring type

Allow you to select the required ring type, including Single, Repeat and Ascending.

#### 5. Extra tone

Allow you to select Warning, Error, Camp on and Connect.

#### 6. Answer mode

You can answer a call by pressing Any key or Auto (only headset profile).

## 13. Extra

### 13.1 Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

### 13.2 Currency converter

Use the menu to convert the currency. Write the currency rate, press LSK to write the amount of local currency and press LSK.

## 14. Services

Allow you view the contents provided by your SIM card service and internet service.

## 15. Shortcuts

Use this menu to set the shortcuts.

## 16. Care and maintenance

If your mobile phone has abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone after sales for help.

Common problems	Check item
Cannot charge	Please check if the charger is properly connected to the phone and the power source jack.
Cannot power on	Please check if the battery level is too low; Please check if the battery is properly loaded; Please press power key for enough time.
Insert the SIM card but cannot read the information in the SIM card	Please check if the SIM card is properly inserted; Please check if your SIM card is valid.
Cannot make phone call	Please check if the phone number is valid. Please check if you are in service area.



Poor voice quality	Please check if the phone signal is strong enough. If you are in a building, please move near the window.
The contact cannot get your voice during the phone call	Please check if your mike is blocked by fittings or other blocks.

## RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HG-M307S (FCC ID: SG71001HG-M307S) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.503 W/kg and when properly worn on the body is 1.531 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.