

This document and all its contents included remain the proprietary material of Qingdao Haier Telecom Co. Ltd. (Haier Telecom) and are protected by the Chinese laws and applicable international conventions on copyrights. Any reproduction, transmission, disclosure, revision, modification or use otherwise of this document or the whole or part of its contents, in whatever form and by whatever means, is not permitted without prior express written authorization from Haier Telecom. Offenders will be liable for any and all damages caused by their offence hereof and will be subject to all remedies that Haier Telecom is entitled to seek under applicable laws.










Contents

Contents.....	2
1. Safety Precautions.....	4
2. Handset guide.....	5
2.1 Idle mode screen.....	6
2.2 Battery.....	6
2.3 SIM card.....	7
2.4 Making and receiving a call.....	7
3. Input method.....	8
3.1 Using the English Mode.....	9
3.3 Using the Spanish Mode.....	9
3.4 Using the Number Mode.....	9
4. Phonebook.....	9
4.1 View.....	9
4.2 Send text message.....	9
4.3 Send multimedia message.....	9
4.4 Call.....	9
4.5 Edit.....	9
4.6 Delete.....	10
4.7 Copy.....	10
4.8 Move.....	10
4.9 Send contact.....	10
4.10 Mark several.....	10
4.11 Caller groups.....	10
4.12 Phonebook settings.....	10
5. Multimedia.....	11
5.1 Camera.....	11
5.2 Video recorder.....	12
5.4 Video player.....	12
5.4 Audio player.....	12
5.5 FM radio.....	12
5.6 Sound recorder.....	12
5.7 Image viewer.....	13
5.8 Games.....	13
6. Call Center.....	13
7. Settings.....	13
7.1 Phone settings.....	13
7.2 Network settings.....	14
7.3 Security settings.....	14
7.4 Call settings.....	15
7.5 Restore factory settings.....	16
8. Messages.....	16

8.1 SMS	16
8.2 MMS	17
9. File manager	18
10. User profiles	18
11. Organizer.....	19
11.1 Calculator	19
11.2 Calendar.....	19
11.3 Tasks	19
11.4 Alarm	19
11.5 World clock.....	19
11.6 Notes.....	20
11.7 Bluetooth	20
12. Services	21
12.1 SIM Tool Kit.....	21
12.2 Internet service	21
12.3 Data account.....	22
13. Care and maintenance.....	22

1. Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.

	Do not switch the phone on where Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all traffic laws. Always keep your hands free, to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow all regulations and rules enforced.
	Do not use the phone at a refueling station. Do not use near fuel or chemicals.
	Follow all instructions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of children. Do not use the phone while connected to the charger or with wet hand or bare feet.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life. Please remove the battery only after the phone is switched off normally, otherwise it could cause unpredictable damage for the phone.
	Only qualified personnel should service the phone. Faulty service may be dangerous and may invalidate any warranty applicable to the device.

2. Handset guide

The illustration below displays the main components of your phone.















The appearance of the mobile phone and introduction:

Name	Description
1 Left Soft key	Select the option displayed on the lower left corner of the screen.
2 Right Soft key	Select the option displayed on the lower right corner of the screen.
3 Send key	In standby mode, press this key to enter the recent calls list.
4 Navigation key	In standby mode, quick into the Shortcuts, Audio player, Write message and FM radio. In menu mode and when entering text, scroll through the menu and text.
5 End(Power) key	Long press: power on, power off. Short press: return to Idle screen.
6 Center Select key	This is the center key in the navigation keypad. In standby mode, use this key to enter the Main menu view.
7 Delete key	Delete the letters when you edit wrong.
8 Number keys	Enter numbers, letters, and some special characters. In Idle screen, long press '#' key to enable or disable the Meeting Mode.
9 Camera key	In idle screen, press this key, will go to camera screen.
10 SMS key	In idle screen, press the key, will go to SMS screen
11 Audio player key	In idle screen, press the key, will go to Audio player screen
12 Charge port	Charge port and USB port
13 Side key	In Idle screen: turn up or turn down voice


Notes: long press means pressing the key for more than 2 seconds; short press means pressing key for less than 2 seconds.

2.1 Idle mode screen

Icon	Description
	Indicates signal strength.
	You have one or several missed calls.
	You have one or several new text messages.
	You have one or several new multimedia messages.
	Alarm clock has been activated.
	Indicates a headset is connected to the phone
	Indicates ring alert type.
	Indicates vibrate alert type.
	Indicates vibrate and ring alert type.
	Indicates vibrate then ring alert type.
	Indicates Silent mode.
	Indicates battery power level.

2.2 Battery

2.2.1 Installing and removing

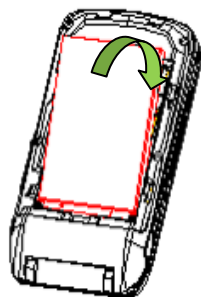


2.2.2 Charging the battery



2.3 SIM card

2.3.1 Insert SIM card

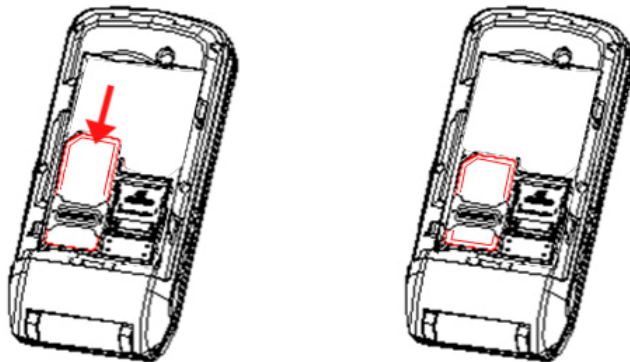

2.4.1 To make a call

You can use the function only after the network-prompting icon is shown on screen.

1. Making phone call using the keypad

After SIM card has been inserted into your phone, in idle mode, directly type in the phone number to dial.

2. Making phone call using contacts

Enter the phonebook to view the contacts list and select a desired entry to dial.

3. Making phone call using call history

In idle mode, press send key to access the recent calls list, scroll to the number or name you wish to dial.

4. Making phone call using speed dial

In idle mode, press and hold 2-9 key to make phone call you set.

5. Ending a call

You can end a call at any time by pressing end key till the call has been terminated.

2.4.2 To receive a call

When an incoming call arrives, phone will alert you.

Press the send key to answer.

Press RSK [Mute] once to close incoming ringer, press RSK [Reject] twice to reject the call.

2.4.3 During a phone call

During a phone call, press left/right navigation key to increase/decrease the volume, press RSK to activate hand-free function, press LSK to view the following options:

1. Hold call

This is useful if you want to make a new call during a call. Put the current call on hold, but maintain connection of the communication line.

2. End call

End the current call.

3. New call

Enter the digital dialing contact surface.

4. Phonebook

Allow you to view the Phonebook option.

5. SMS

Allow you to view the Messages option.

6. Recorder

Allow you to record the call sound.

7. Mute

Allow you to temporarily turn the microphone off.

8. DTMF

Dual Tone Multi Frequency

This function allows you to set whether send out DTMF signal.

3. Input method

When you are in a display that allows characters to be entered, you will notice the text input mode indicator on the display. You can change the Text Input Mode by pressing # Key and insert symbols by pressing * Key. To insert a space between characters, press 0 key except in Numeric mode.

3.1 Using the English Mode

This phone provides Capital and Small mode for you to enter text.

3.3 Using the Spanish Mode

This phone provides Capital and Small Spanish mode for you to enter text.

3.4 Using the Number Mode

The Number mode enables you to enter numbers in a text message (a telephone number for example).

4. Phonebook

4.1 View

View the contact information.

4.2 Send text message

You can send SMS to the contact.

4.3 Send multimedia message

You can send MMS to the contact

4.4 Call

Call to the selected contacts.

4.5 Edit

Edit Contact Information

4.6 Delete

Delete the current contact information

4.7 Copy

- 1, Copy the contact to Phone or SIM card
- 2, Contact information will be saved as the files to the phone or memory card

4.8 Move

Move the contact from SIM to phone, Phone to SIM

4.9 Send contact

Send contact information as files by SMS,MMS and Bluetooth.

4.10 Mark several

Can selectively one or more records to copy, move, delete and other operations

4.11 Caller groups

Classify a number of contacts into one group in accordance with their relationship.

4.12 Phonebook settings

4.12.1 Preferred storage

Select the default saving position.

4.12.2 Speed dial

Speed dial is a fast way to call one of your special numbers.

1. To assign a speed dial number
You can select a desired number from the contacts list.
2. To dial a speed dial number

When Status is enabled to on, in idle mode, long press number key and the corresponding number will automatically be dialed.

By default the 1 key is used to set voice mail number

4.12.3 Extra numbers

Edit the SIM owner number and name

4.12.4 Memory status

View the storage capacity of phonebook of SIM card and phone

4.12.5 Copy contacts

Copy all entries from SIM to phone or phone to SIM

4.12.6 Move contacts

Move all entries from SIM to phone or phone to SIM

4.12.7 Delete all contacts

Delete all contacts from SIM card or Phone.

5. Multimedia

5.1 Camera

You can take pictures, save and view them and send them as multimedia message. Press center navigation key to capture the scene. The pictures taken will be saved under Photos file.

You can press LSK to enter the following options:

1. Photos

Enter the menu to View and edit the pictures.

2. Camera settings

Set camera parameters, such as EV, Anti-flicker, Delay timer.

3. Image settings

Set the size and quality of the image.

4. White balance

Adjust the picture color to the lighting conditions.

5. Scene mode

Choose auto or night mode.

6. Storage

Select saving path for the photos.

7. Restore default

Revert to the default settings.

5.2 Video recorder

The phone provides a clear Video recording function. The camera screen, press the middle button to start recording, recording process by pressing the middle button to pause the recording, press the right soft key to stop recording. Press the left soft key framing interface can be the following options, which a more detailed set of parameters

1. Camcorder settings

Set video device parameters

2. Video Settings

Set video parameters

3. White balance

Adjust the picture color to the lighting conditions.

4. Effect settings

Choose a special photo effects

5. Storage

Select saving path for the photos.

6. Restore default

Revert to the default setting

5.4 Video player

You can play Video files. Video files should be saved under **Videos** file.

5.4 Audio player

You can play audio files. Audio files should be saved under **My Music** file.

5.5 FM radio

With this feature, you can listen to FM radio stations.

5.6 Sound recorder

Use the menu to make the record of the sound.

The files recorded will save under **Audio** file.

5.7 Image viewer

Use the menu to review the image. Image files should be saved under **Photos** file. When you view the image, you can press the up/down navigation key to view the last/next image.

5.8 Games

You can play the game provided by your phone and set the games settings.

6. Call Center

Call Center stores information about the missed calls, dialled calls, and received calls. You can view the call timers, call cost, text message counter, and GPRS counter; also you can delete call logs.

Notes: This function should only be used for reference. For details, please consult your network operator.

7. Settings

7.1 Phone settings

Enter the submenu Phone Settings to operate:

7.1.1 Time and date

You can customize the display of times and dates throughout your phone.

7.1.2 Schedule power on/off

You may set status and time of each one; however you may not set same time in different items, to avoid conflict.

7.1.3 Language

Select language to display on mobile phone.

7.1.4 Pref. input methods

Select the default initial input method.

7.1.5 Display

Allow you to set the following options: Wallpaper, Screen saver, Show date and time.

7.1.6 Shortcuts

Setup the shortcuts list.

7.1.7 Dedicated key

Use the menu to set the shortcuts. It includes Up, Down, Left, Right navigation key.

7.1.8 Auto update of date and time

If you open this feature, Phone time and date will be auto update after you login network or MMS.

7.1.9 Flight mode

Supply normal mode, flight mode, query when power on. Flight mode applies on board.

7.1.10 Misc. settings

Adjust the LCD backlight.

7.2 Network settings

Use the menu to set the network. It contains Network selection, Preferences, GPRS connection.

7.3 Security settings

7.3.1 SIM lock

This option is used to set the PIN code.

The PIN code is used to protect your SIM card from random using by others. If set to on, access to your SIM card will be restricted each time the phone is powered on.

Note: The SIM card will be locked after entering the wrong PIN code for max retry limits. In this condition, phone will ask for PUK (PIN unlocking key), which is available from the service provider.

7.3.2 Phone lock

This option is used to set the phone lock code.

The lock code can be set to protect your phone from unauthorized use. It can be set to automatically lock your phone each time it is switched on.

The default phone password normally is 0000; please change it to your own password as soon as possible.

7.3.3 Change password

This option is used to change PIN code, PIN2 code and phone password.

7.4 Call settings

7.4.1. Caller ID

This function needs to be supported by network, including the following sub-menu: Set by network, Hide ID, Send ID.

7.4.2 Call waiting

If your mobile phone service provider supports this feature, the call waiting notifies you of an incoming call even while you are on a call.

7.4.3 Call divert

Call divert is a network service.

This service is used to forward incoming calls to your voice mail service or to another number depending on certain conditions in which your phone is unavailable or you don't want to receive any call.

7.4.4 Call barring

You can set restriction for calls made from or to your phone.

7.4.5 Line switching

You can choose between Line 1 and Line 2.

7.4.6 Advance settings

1. Auto redial.

Allows you redial automatically when one time trial dial fails by turning on this function.

2. Call time display

Whether display your call time during the call.

3. Call time reminder

During a phone call, as your call duration nears the set time, alert will sound.

4. Auto quick end

Function with a time limit on the call. Beyond setting the length of time, the phone automatically hang up call

7.5 Restore factory settings

Use this menu to reset the phone's settings to the original factory settings

8. Messages

8.1 SMS

8.1.1 Write message

Allow you to edit text message. When composing text messages, check the number of characters allowed in the top-right corner of the screen.

Press LSK to enter the Option menu:

1. Send to

Enter the recipient's number or retrieve a number from the phonebook, then press LSK to send.

2. Input method

Select different input methods to write message according to requirements.

3. Advanced

Allow you insert object, Insert template, insert contact number, insert contact name, and insert bookmark; also allow you set text format.

4. Save to Drafts

Save the message to the draft.

8.1.2 Inbox

Store the text messages you received

8.1.3 Drafts

You can read the messages saved in draft.

8.1.4 Outbox

View and search the messages you sent but failed

8.1.5 Sent messages

View and search the messages you sent successfully

8.1.6 Delete messages

Delete all messages from Inbox, Drafts, Outbox, Send messages
Delete all messages one time.

8.1.7 Templates

Select the SMS templates you want to use

8.1.8 SMS settings

Enter the menu to set SMS settings. Select the option you want to set to edit.

8.2 MMS

8.2.1 Write message

Allow you to edit multimedia message. Press LSK to enter the Option menu:

1. Done

Complete MMS and Exit

2. Input method

Select different input methods to write message according to requirements.

3. Add picture

Insert the picture to multimedia message.

4. Add audio

Insert audio to multimedia message.

5. Add attachment

Insert attachment to multimedia message.

6. Add bookmark text

Edit the subject to multimedia message.

7. Preview

Preview the MMS you edit.

8. Add slide before, Add slide behind, slide time

Add slide behind or before the current slide, and set the slide time.

9. Save to Drafts

Save the message to the draft.

8.2.2 Inbox

Store the messages you received

8.2.3 Outbox

View and search the messages you sent successfully

8.2.4 Drafts

You can read the messages saved in draft.

8.2.6 MMS settings

Enter the menu to set MMS settings. Select the option you want to set to edit.

9. File manager

Use the menu to manager the files you stored in the phone memory and memory card.

10. User profiles

The phone provides multiple scene modes for you to choose according to different events and environment. The headset mode is activated only when the headset is connected; when headset mode is on, other modes are deactivated.

Each scene mode can be edited the following contents:

1. Tone settings

You can allocate different ringtones for Incoming call, Alarm, Power on, Power off, Message and Keypad.

2. Volume

This function allows you to adjust the volume output of the Ringtone and Key tone.

3. Alert type

Allows you to specify how you are to be informed of any incoming calls.

4. Ring type

Allow you to select the required ring type.

5. Extra tone

Allows you to select turning on or off for the tone of "Warning", "Error", "Camp on" and "Connect".

6. Answer mode

You can answer a call by pressing Any key or Auto (only headset profile).

11. Organizer

11.1 Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

11.2 Calendar

Enter this menu to view the calendar.

11.3 Tasks

Records in the future to do and to time to remind

11.4 Alarm

Allow you to set the alarm to ring at a specific time.

11.5 World clock

Enter submenu World Time, the world time zone image appears; move the coordinate by the left/right navigation key, the interface will show the time of located city.

11.6 Notes

Enter the menu, in the current notebook is empty, you can press the left soft key to add a notepad; when the notebook is not empty, press the left soft key and select New Notepad menu, you can add Notepad

11.7 Bluetooth

11.7.1 Power

Turn on or turn off Bluetooth

11.7.2 Visibility

If Visibility is turned on, others Phone can search to yours

11.7.3 My device

Determine the search for Bluetooth devices, the phone will begin on the effective range of Bluetooth devices to search.

When the search to the target Bluetooth device, you need to pair to transfer data. The phone is paired with a Bluetooth headset, Bluetooth headset pairing must enter the password (usually 0000, available on the Bluetooth headset manual); with other Bluetooth device pairing, follow the prompts, such as a password, enter both the general the same password, the password can be any combination of numbers

11.7.4 Search audio device

Search for audio device and connect them

11.7.5 My name

You can view or edit the name of the machine

11.7.6 Advanced

- 1, you can choose audio path, first Storage path
- 2, Display phone address

12. Services

Allow you view the contents provided by your SIM card service and internet service.

12.1 SIM Tool Kit

The function is provided by the network provider. It might have different menu items with different SIM card service. If the SIM card or network provider does not support the service, the function is unavailable. Please contact the network provider for more information.

12.2 Internet service

12.2.1 Homepage

Start up all the set websites in connection setup.

12.2.2 Bookmarks

You may save the WAP address in the bookmark to quickly re-visit the page.

12.2.3 Recent pages

Records the page visited, for the next visit.

12.2.4 Input address

Input the Web page address of a site you want to visit.

12.2.5 Service inbox

Mobile phone can receive the service messages sent by your service provider (For example, service message can be notice on relevant news abstract or a new web set.)

12.2.6 Settings

1. Profiles

Select the profile you want to use.

2. Browser options

Set waiting time and whether display pictures when browse web page.

3. Service message settings

Select to turn on or off to receive messages from service desk.

4. Clear Cache

Clear all temporary stored internet files saved in the phone.

5. Clear Cookies

Clear the history record of browsed web pages.

12.3 Data account

Use the menu to set the GSM data and GPRS.

13. Care and maintenance

If your mobile phone has abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone after sales for help.

Common problems	Check item
Cannot charge	Please check if the charger is properly connected to the phone and the power source jack.
Cannot power on	Please check if the battery level is too low; Please check if the battery is properly loaded; Please press power key for enough time.
Insert the SIM card but cannot read the information in the SIM card	Please check if the SIM card is properly inserted; Please check if your SIM card is valid.
Cannot make phone call	Please check if the phone number is valid. Please check if you are in service area.
Poor voice quality	Please check if the phone signal is strong enough. If you are in a building, please move near the window.
The contact cannot get your voice during the phone call	Please check if your mike is blocked by fittings or other blocks.

RF Exposure Information

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. The model (FCC ID: SG71105HG-M720) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.932 W/kg and when properly worn on the body is 1.154 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.