


User Manual



Precautions

	<p>Please carefully read and observe the terms below: Safe power on Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.</p>
	<p>Safe transportation first Please observe all related local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.</p>
	<p>Turn off when in the hospital Please follow related limitations. Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane Please follow related limitations. Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.</p>
	<p>Turn off around exposure Area Please observe related limitations and do not use your mobile phone near an area where explosions can occur.</p>
	<p>Backup Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Use qualified after sales service Only a qualified technician can install or repair your mobile phone. Please contact the authorized service center in case of phone failure.</p>
	<p>Accessories and batteries Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.</p>

Your phone

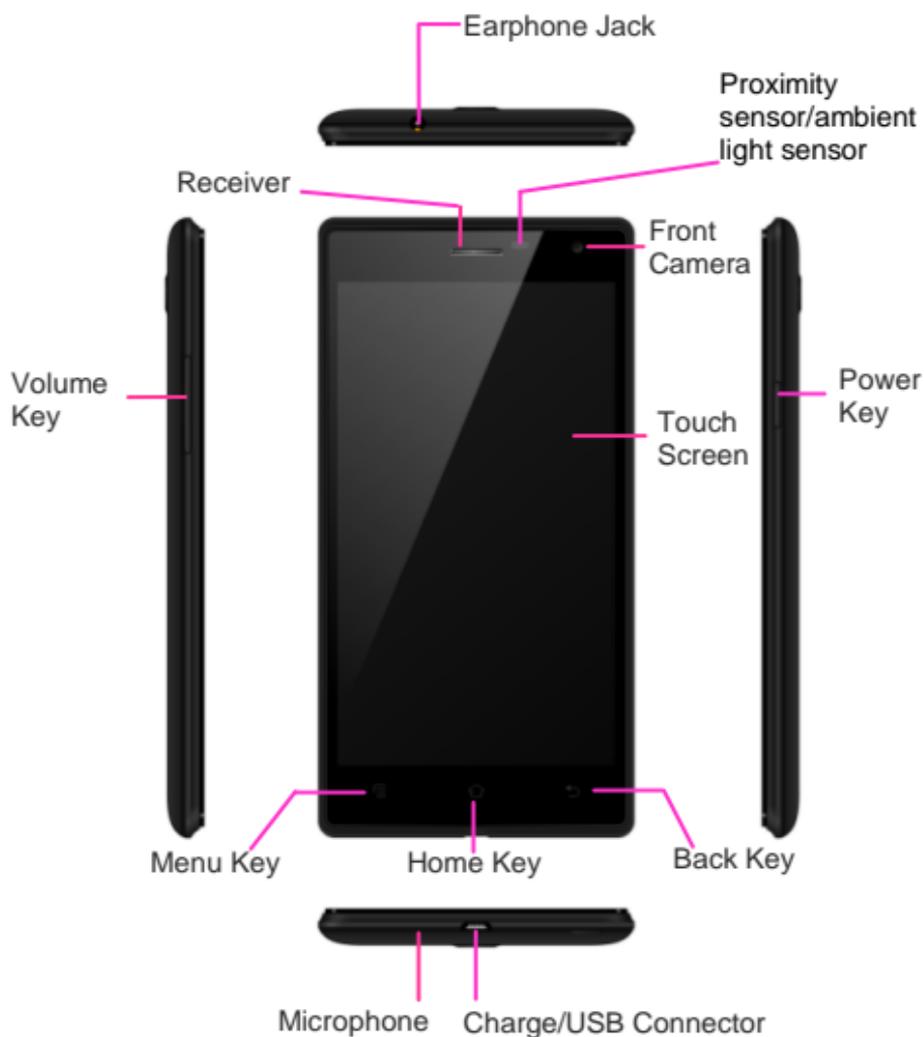

Your phone



Your phone

Name	Function
Power Key	Long press To turn on / off the phone from, and short press to turn on / off the screen backlight or screen lock the phone
Ear Piece	Receive the voice
Sensors	1. Ambiance sensor, for detecting the light or surrounding brightness 2. Proximity sensor, used to measure distance between the phone and turn off the display during a call
Front Camera	Capturing images using front camera
Microphone	Voice receiver
Menu Key	To enter the option menu
Home Key	Short Press to return to home screen and long press to show the list off previous application opened
Return Key	Return to the previous menu or screen
The volume keys	Increase volume level or Decrease volume level
Headset Port	To connect your 3.5" handsfree or audio port
Micro-USB Port	To connect the charger or data cable


Your phone

Flash Light	Brighten the environment when you capture images.
Rear Camera	Capturing images using rear camera
Loud Speaker	Produces the sound, phone ringtone, notification and loud the conversation sound

Battery Cover & Battery

Removing the Battery Cover

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and remove the cover according to the arrow direction.

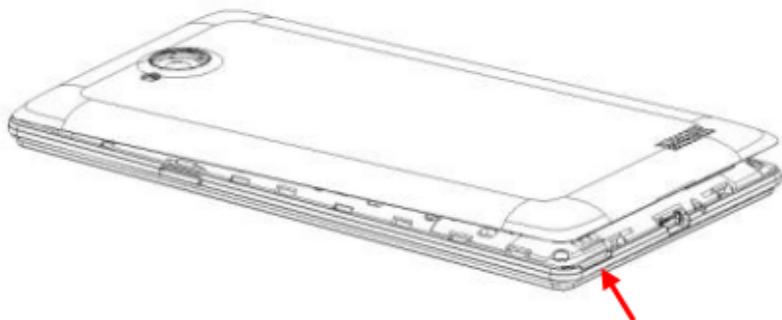


Installing the Battery

1. With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place
2. Ensure the battery is inserted in the phone. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.


Battery Cover & Battery

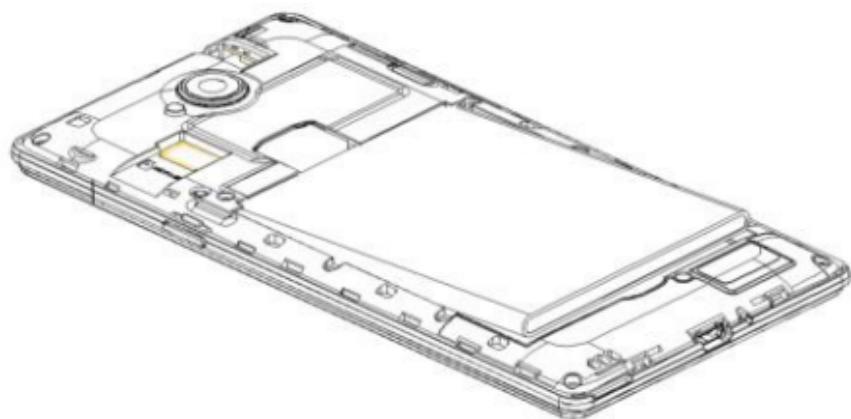

SIM Card & microSD


Installing the SIM Card

Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

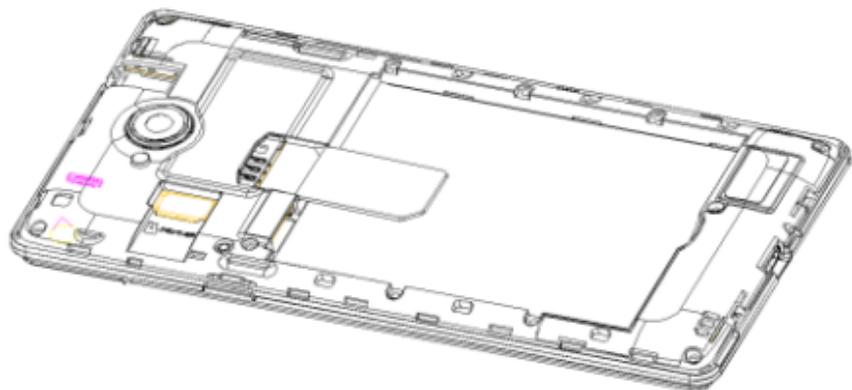

Installing the microSD Memory Card

Slide microSD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

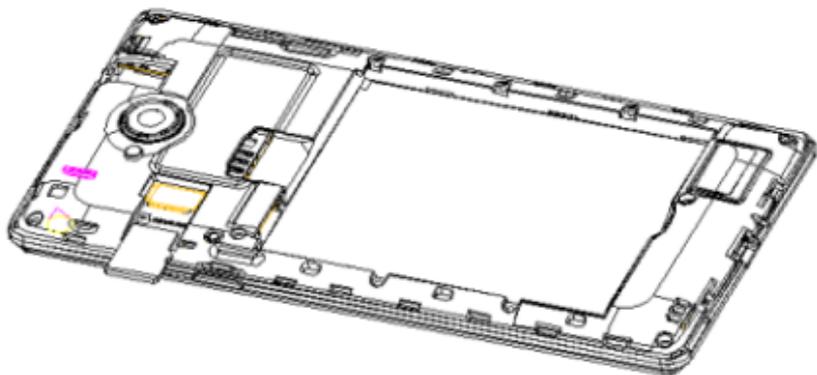

Phone Function

Turning on and off the phone

To turn on the phone:

Press and hold Power key for more than 3 seconds to turn on your phone.

Turn off the phone:

Press and hold Power key to pop up option menu, select "power off". If it is powered off you cannot receive, make a call or do other operations.

Locking the Screen

To save your battery, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing the Power Key

Unlocking the Screen

To wake up the touch screen, just press the Power Key again, and then drag the lock icon to the right on the screen to unlock according to the clue on the screen.

Phone Function



Lock icon

Phone Function




Unlock icon

Status Bar

The status bar at the top of the screen contains icons that tell you about messages and phone status and shows what's going on in your phone. You can drag down the status bar to open the Notification panel and get more information. In the toolkits you can quickly start the common applications such as Bluetooth, Wi-Fi and so on.

Phone Function

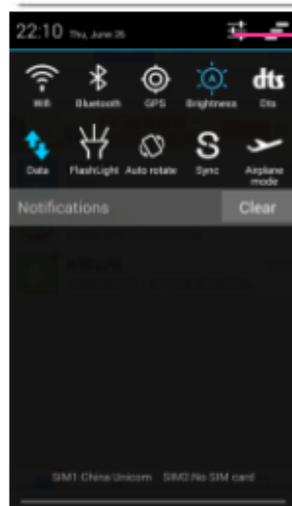

Touch to open the system settings

The Home screen is your gateway to the main features in your phone.

Notifications: Drag down to open the Notification panel




Status bar

Slide the Home screen left or right to view more content in other panels on the Home screen.

Launcher
Touch to enter Main menu.
Browse all the installed applications

Phone Function

The phone provides you with Options menus.
Touch the Menu Key to enter customizing:

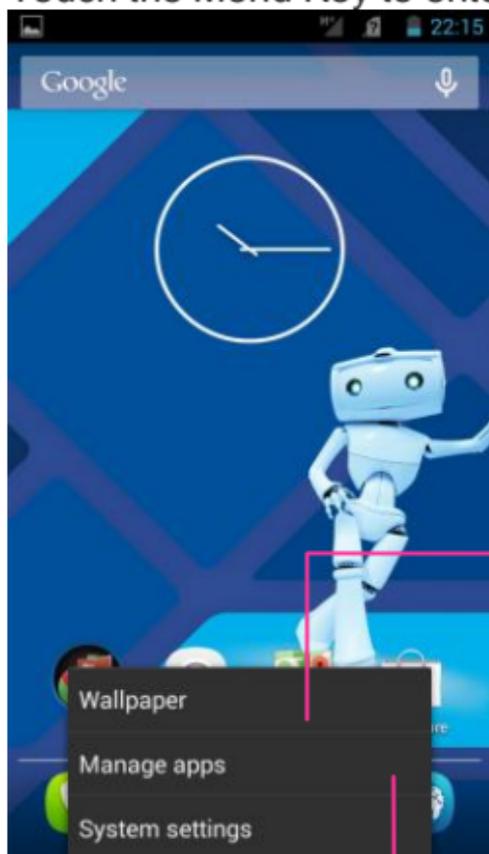

Touch to select a wallpaper, and set it as the wallpaper of Home screen.

Touch to enter the Settings, and set the system preferences.

Touch to enter the Apps, and manage applications.


Phone Function

Making a Call

Touch  to enter the Dial pad.

The phone offers you several ways of making a call.

You can make a call through the Phone, People, Messaging and Call log.

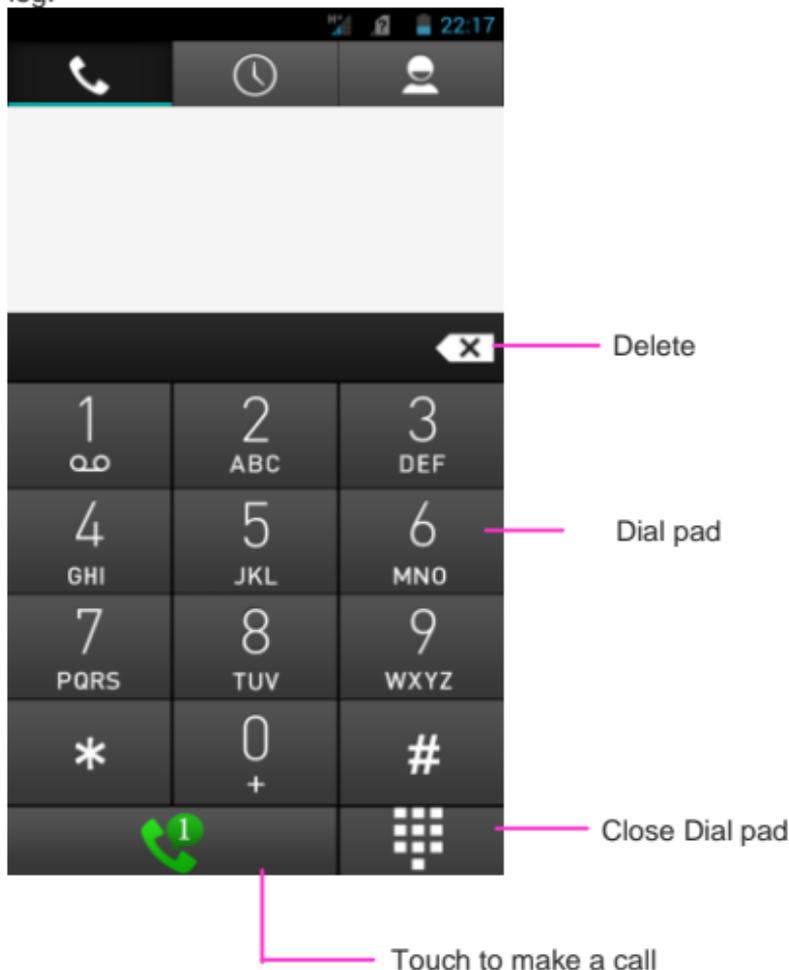


Connecting to WLAN

Connecting to WLAN

1. You can connect to the WLAN, and use it to surf the Internet at high speed and download.

Touch Launcher → Settings → WLAN.

2. Turn on the switch to activate WLAN.

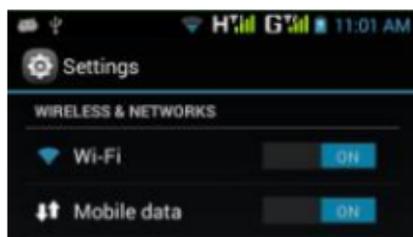


3. Touch WLAN.

4. Choose an available WLAN network to connect.



5. Secured networks are indicated with a Lock icon. If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details).

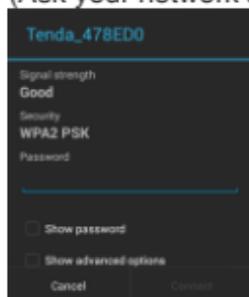


6. Touch "Connect".

Accessing the Internet

Using the Browser

 Touch  to enter the Browser.




Touch to look through the thumbnails of all web page windows, and switch the web pages.



Accessing the Internet

When you are viewing the web page, touch the Menu Key, the following options are available to you:

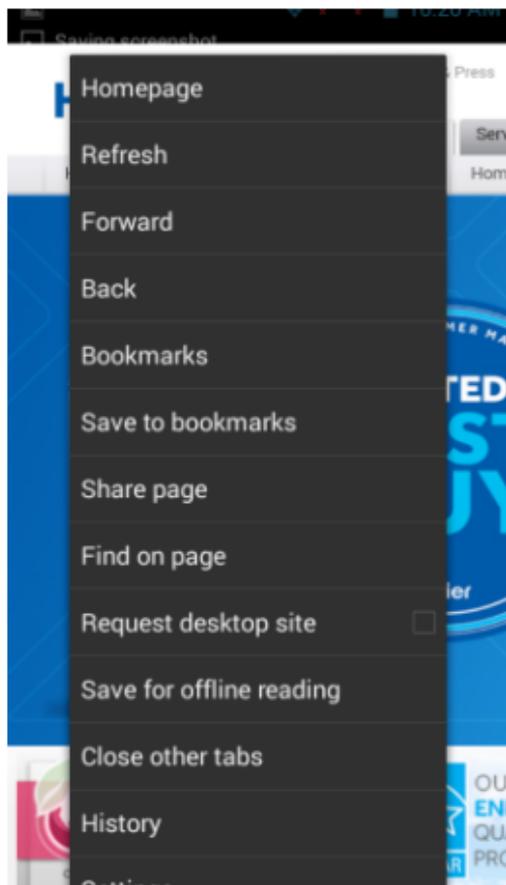


Taking Pictures/Videos

Taking pictures and videos

Touch  to enter the Camera.

Flash light switch
button

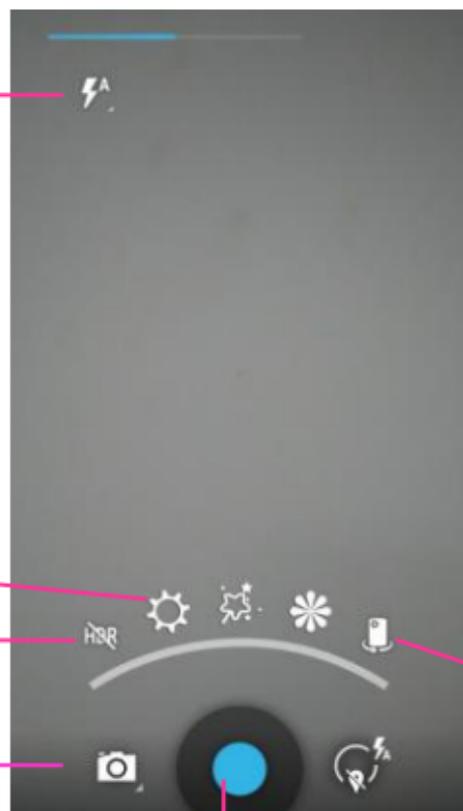

Settings

Quick
function

Switch before the
camera


Touch to
select other
option

Take picture

Music Player

Music Player

Touch  to enter Music.

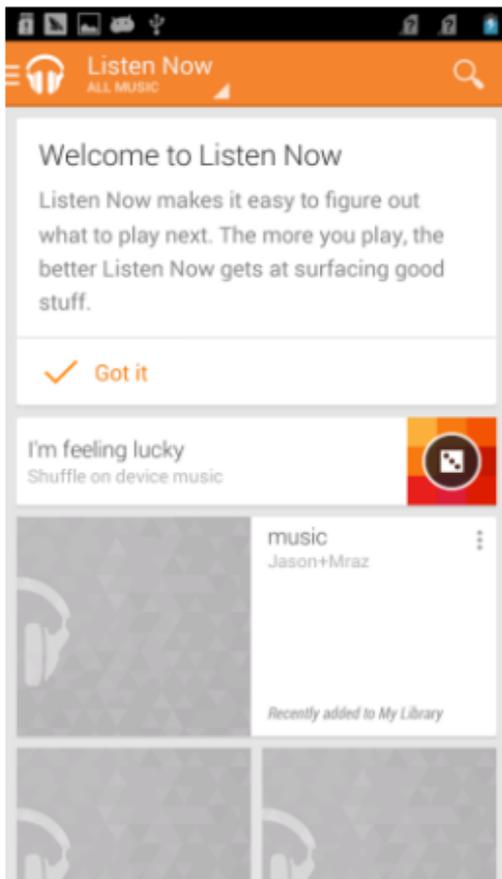

Troubleshooting

Frequently Asked Questions	Cause and Solution
Fail to turn on	Press the Power Key for over 1 second. Check if the battery is properly connected. Please remove and install it again, retry to turn it on; Check if battery is appropriately charged.
Fail to connect network	Weak signal. Please try and move to a location with strong signal and try connecting to the network again; Please ensure that you are not beyond the network coverage of service providers; Please ensure you have a valid SIM card. Please contact your network provider for further information;
Poor quality of calling	Please check if the sound volume is tuned improperly In an area with poor receiving condition, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again. While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.
SIM Card Error	Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. The SIM card is not installed. The SIM card is damaged. Please contact your network service provider.
Callers cannot contact you	Please check if the mobile phone is on and connected with the network. Please check if the Call barring or call divert is activated. Please check if the SIM card is valid.
Fail to set some functions	Wrong operation. The network provider does not support the function, or you have not applied for it.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



FCC Regulations:

This mobile phone complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This model phone meets the government's requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

The SAR limit set by the FCC is 1.6 W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model phone as reported to the FCC when tested for use at the ear is 0.494W/kg and when worn on the

body, as described in this user guide, is 0.930W/kg (Body-worn measurements differ among phone models, depending upon available enhancements and FCC requirements.)

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: SG71111HW-W861.

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions the handset a minimum of 1.0 cm from the body. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the phone at the ear, position the handset a minimum of 1.0 cm from your body when the phone is switched on.