

• **Copyright©2012 Haier Technologies Co., Ltd**

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Technologies Co., Ltd.







Statement




The contents of this manual maybe different with the cell phone please according to the cell phone.

Haier reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of "Warnings and Precautions".

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.

	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Contents

1 Getting to Know Your Phone	1
Basic specification	1
Mobile phone appearance	1
2 Getting Started	7
Install and charge the phone.....	7
3 Basic Functions	8
Switching On/Off.....	8
Making phone call.....	9
Answering the call.....	11
Operations during a call.....	11
Keypad lock	12
4 Text Entry	12
Text input method	12
Change the input method	13
5 Contacts	13

List	14
View	14
Edit	14
Option	15
Groups settings.....	15
Speed Dial	16
6 Call History	17
7 MP3 Player	17
8 My Files	18
Phone memory	18
Memory card.....	18
Memory status	19
Format memory card	19
9 Messages	19
Write messages	19
Inbox.....	20

Outbox	20
Drafts	21
Favourites	21
Templates	21
Delete messages	21
Settings.....	22
Memory status	22
Voicemail	22
10 Opera Mini	23
11 Web.....	23
12 Facebook.....	23
13 Twitter	24
14 Freedom.....	24
UTK	24
Brew Application Manager	24
15 Tools	25

Camera	25
Games	26
Profiles.....	26
FM Radio	27
Voice Record	27
Alarm	27
Scheduler	28
Calculator	28
World Time.....	28
Stopwatch	28
Notepad	29
Currency Converter	29
16 Settings.....	29
Display	29
Phone setting.....	30
Call Setting	32
Firewall	32
Security.....	33

Phone info	34
17 Care And Maintain	34
18 Safe Information	37
19 Troubleshooting Guide	42

1 Getting to Know Your Phone

Basic specification

- Size: 108.6*45.2*13.3(mm)
- Standby Time: about 700 hours
- Talking Time: about 360 Minutes

Notice:

Standby time is the handset continuous working time without making phone calls. Standby time and talking time are both depending on mobile phone using situations, network situations and environments.

Mobile phone appearance


Mobile phone view



The appearance of the mobile phone and introductions





Name	Description
(1) Left soft key	In standby mode, press left soft key to Main menu.
(2) Right soft key	In standby mode, press right soft key to Names.
(3) Send key	Making or answering a call. In standby mode, press this key to enter the all calls screen.
(4) End (power) key	End calls or reject calls. Long press: power on, power off.
(5) Up key	In standby mode, press up key to Message Menu.
(5) Down key	In standby status, press down key to Contacts Menu
(5) Left key	In standby mode, press left key to enter FM Radio.
(5) Right key	In standby mode, press right key to enter MP3 Player
(5) Center key	In standby mode, short press Center key to enter Freedom menu.










 


(6) Number keys	Number keys
(7) Headset connector	Before using headset, pull in the headset to this port.
(8) Electric torch	Long press the down key will open the flashlight
(9) Camera	Taking Photos
(10) USB/Charger connector	Plug the travel adapter into the charger connector.





 Notice:

Long press means pressing key more than or equal 2 seconds; short press means pressing key less than 2 seconds.

Icon bar

Icon	Description
	Indicates signal strength.
	Indicates call in progress.
	Indicating the mobile phone is under roaming service mode.
	Indicating the keypad is locked or the phone locked.


Icon	Description
	One or several new text messages.
	One or several new voice mails.
	Playing the FM radio function.
	Connect the earphone.
	You have set the scheduler or the alarm clock.
	You have set the general mode.
	You have set the vibration mode.
	You have set the outdoor mode.
	You have set the meeting mode.
	You have set the silence mode
	Connected to the computer used the USB line
	Data flow.

Icon	Description
	Data flow dormant
	Playing Music.
	Pausing Music.
	The memory card.


2 Getting Started

Install and charge the phone

 1. Remove the back casing

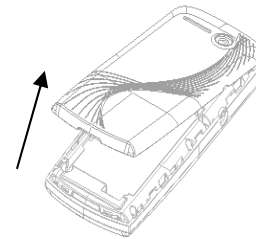

 
2. Insert the RUIIM card

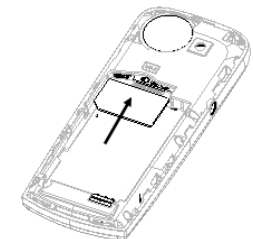

3. Insert the battery



 4. Insert the back casing

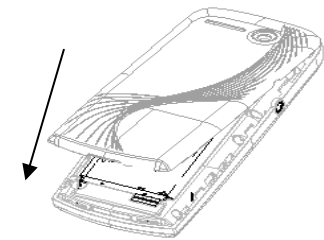

3 Basic Functions

Switching On/Off

- In the power off status, long press the **Power Key** to switch on the phone.

- In the power on status, long press the **Power Key** to switch off the phone.

Making phone call

Making phone call by dialing number

1. In the standby mode, enter the phone number you want to dial, and press the **Send Key** to make the call.
2. To end the call, press the **End Key**.

 Notice:

Can input P/T by multi-tap press [*] key, the number after P/T is extension number.

Making phone call using contacts

1. In the standby mode, short press **Center key** to access the **Main menu > Contacts**;
2. Select **List** to view the contacts list, and press **Up/Down key** to choose one contact, or select **Search** to search out the contact you want to call.
3. Press the **Send Key** to make the phone call.

Making phone call using call history number

1. In the standby mode, press the **Send Key** to display the last 150 numbers in call history.
2. Select the number or name you want to redial, and press the **Send Key**.

Making phone call using speed dial

In standby mode, press and hold one number key [1-9] to make phone call. See chapter 5 for more information about setting speed dial.

Making a conference call

Conference call is network services that allow taking part in a conference call with other participants.

1. Make a call to the first participant.
 2. Enter another number of the second participant; or get the number from your Contacts.
 3. Press the **Send Key**, the first participant will be hold on.
 4. When the second participant picks up, press **Send Key** to connect the call.
 5. To end the conference call, press the **End Key**.
-

Notice:

The conference call services according to local network provider. Please confirm and contact network provider firstly.

Answering the call

Answer or silence an incoming call

1. To answer the call, press the **Send Key** or select <Answer>. Press <Silence> to mute the ringing tone before you answer the call.
2. To reject the call, press the **End Key** or select <Ignore>.

Adjust the receiver volume

Press the navigation key of your phone to adjust the volume of the receiver during a call. When adjusting the volume, a bar chart appears in the display indicating the volume level.

Answer a call with the keypad locked

To answer a call while the keypad is locked, press the **Send Key**.

During the call, the option menu still can be used. When you end or reject the call, the keypad automatically re-locks.

Operations during a call

During a call press <Options> and one of the following options: **Contact, Messages, Speaker Off (On), DTMF Off(On),New Call, Mute On (off),Continuous (Burst) DTMF, Voice Privacy, Notepad.**

Keypad lock

To prevent the keys from being accidentally pressed, you can lock the keypad.

When the keypad is locked, only emergency numbers can be dialed.

Press “LSK” then press “*” to Unlock keypad

4 Text Entry

Text input method

Your phone provides following text input methods:


- English input method: input English characters;
- Numeric input method: input numeric characters;
- Bengali input method: input Bengali characters;

Input method	Icon	Letter case
Predictive	ben	Bengali characters
Multi-tap	Abc	Word/sentence case text, only available at the beginning of a word/sentence.

	ABC	Upper case
	abc	Lower case
Numeric	123	number characters

Change the input method

- Long press [*] to enter symbol list;
- Long press [#] to switch among Predictive, Multi-tap and Numeric mode.
- Press [0] to select text and automatically add a space in predictive mode or Multi-tap mode.

 Notice:

Press [1] to insert common symbol under the Predictive mode or Multi-tap mode.

5 Contacts

You can store names and phone numbers (contacts) in the phone and the RUIM card

memory.

In the standby mode, press <menu> to access the **Main menu > Contacts**

List

All: Display contacts stored in phone and RUIM.

Phone: Display contacts stored in phone.

RUIM: Display contacts stored in RUIM.

Groups: You can add members into groups from the phone contacts. You can also send messages, make calls or set incoming call ringer by groups.

Speed Dial: You can set 8 speed dial numbers. In standby screen, you can press and hold one number key [2-9] to make a call with the set speed dial number.

View

Press center key, Display the details of the selected contact.

Edit

In the contact details screen, press center key you can edit the fields of the current contact.

Option

In contacts list > Select Options menu to do the below operations:

Search: You can find contacts by Name, Number or Location quickly

Add New: You can add new contacts to phone or RUIM

Call: You can call this contact

Send Message: You can edit message and send it to the contact

Send Business Card Via SMS: You can send Business Card through SMS

Delete: You can delete the selected contacts

Copy: You can copy the selected contacts between phone and RUIM

Edit Before Call: You can change the number to be dialed

Sort: You can sort the contacts list by name or location

Mark Several: You can mark several contacts for deleting or copying them

My Number: You can edit the own number

Memory status: You can view the memory status in phone and RUIM

Groups settings

1. In the standby screen, press <menu> to access the **Main menu > Contacts > Groups**;
2. Select one group and press <Options> to operate the below options:


Add Member: Add members to group from the contacts list of phone

Send Message: send messages to group members

Set Group Ringtone: Set special ring to the group

Rename: Edit the group's name

Remove: Remove the group members

 Notice:

If the group ringer is not set, the default call ringer will play when there is an incoming call except in Silence or Vibration.

Speed Dial

Use this menu to assign a speed dial number (2 to 9 items).

In Idle mode, press and hold one number key to dial the speed dial entry.

1. In the standby mode, press <menu> to access the **Main menu > Contacts > Speed Dial**;
2. Select one empty entry, and set the number you want to dial, press < Search > and select **number from contact or edit speed dial number**.
3. Enter the number, and press < Left soft key >.

6 Call History

Call history stores information about the last missed, received, or dialed calls. It also adds the total duration of all calls. When the number of calls exceeds the maximum, the most last call replaces the oldest.

In the standby mode, press <menu> to access the **Main menu > Call History**

7 MP3 Player

You can play the music with this application. In the music library interface select "Options/Refresh music library", then it will search music from the music folder in phone memory and memory card

, and add them to the library.

Please select the music from the artists, albums, playlists, all songs, and genres to play.

 **Notice:**

Listen to music at a moderate level. Listening to musics with high volume may damage your hearing.

8 My Files

In my files menu you can manage your data folders.

In the standby mode, press <menu> to access the **Main menu > My Files.**

Phone memory

Resource files stored on the phone memory, For example: record, music, ringer, image, photo, etc.

Memory card

Resource files stored on the phone memory card, For example: record, music, ringer, image, photo, etc.

Memory status

Show phone and memory card store status information.

Format memory card

All data will be lost after format memory card.

9 Messages

Your phone is capable of creating, sending and receiving text messages.

In the standby mode, press <menu> to access the **Main menu > Messages**

Write messages

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS> Write Message;**
2. Enter your message.
3. Press <Options> and select **Send**.

4. To send the message to more than one recipient, you can input many recipients.
5. Press the Select key to send the message.

Using options while writing SMS messages

While composing a message, press <Options> to access the following options: **Send, Insert symbol, Insert expression, Priority, Validity, Deferred delivery, Delivery report, Insert templates, Insert business card, Save to drafts, Mark text, Copy, Paste, Cut.**

Inbox

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS > Inbox;**
2. While viewing a message list, press <Options> to access the following options: **Reply, Forward, Delete, Delete all, Call, Edit before call, Move to favourite, Use details, Copy, Lock, Mark several, Search.**

Outbox

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS > Outbox;**
2. While viewing a message list, press <Options> to access the following options: **Resend, Forward, Delete, Delete All, Call, Move to Favourite, Mark several.**

Drafts

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS >Drafts**;
2. Press <Options> to access the following options: **Send, Delete, Delete all, Move to favourite, Mark several.**

Favourites

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS >Favourites**;
2. Press <Options> to access the following options: **Forward, Delete, Delete all, Lock, Mark several.**

Templates

1. In the standby mode, press <menu> to access the **Main menu > Messages > SMS >Templates**;
2. Press <Options> to access the following options: **Edit, Delete, Send.**

Delete messages

In the standby mode, press <menu> to access the **Main menu > Messages > SMS >Delete**

messages and one of the following options: **Inbox, Outbox, Drafts, Favourites, Delete all**

Settings

In the standby mode, press <menu> to access the **Main menu > Messages > SMS > Settings** and one of the following options: **Save location, Priority, Auto save, Delivery report, Deferred delivery, Validity period, Auto delete, Call back number, Signature, Auto Scroll, SMS on call reject, Input setting, LMS Option, Message counter.**

Memory status

In the standby mode, press <menu> to access the **Main menu > Messages > SMS > Memory Status**
View the amount of memory currently in use for messages.

Voicemail

In the standby mode, press <menu> to access the **Main menu > Messages > Voice Mail**
The voice mailbox is a network service and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

10 Opera Mini

This service provided by local network provider. Please confirm and contact with network provider firstly. The icon of internet applications will display here, If some internet applications have been downloaded.

11 Web

You can use Web access internet or download image/mp3 etc from website.

While downloading a page or some other file, there is a rotating earth on the system bar which indicates data traffic.

In the standby mode, press <menu> to access the **Main menu > Web**

12 Facebook

Facebook application in BREW based version.

In the standby mode, press <menu> to access the **Main menu > Facebook**

13 Twitter

Twitter application in BREW based version.

In the standby mode, press <menu> to access the **Main menu > Twitter**

14 Freedom

UTK

You can use card operators to provide you with a variety of information services.

Brew Application Manager

This service provided by local network provider. Please confirm and contact with network provider firstly. The icon of internet applications will display here, If some internet applications have been downloaded.

In the standby mode, press<Menu> to access the **Main menu>Freedom** and one of the

following options: **Mobile Shop, Settings, Help.**

15 Tools

Your phone contains features to help organize your life, including Alarm, Scheduler, Calculator, World Time, Stopwatch, Notepad, and Currency Converter.

In the standby mode, press <menu> to access the **Main menu > Tools**

Camera

With the built-in camera, you can take pictures anytime, anywhere, and save the photos to your phone or memory card.

In the main menu, select multimedia ->camera into the viewfinder interface.

In the viewfinder, press the arrow keys to adjust the camera focal length; press the left soft key "option" open the function menu, you can operated as follows:

Scene modes: set the scene mode (auto / night);

Self Timer: Set the camera's delay time taking pictures;

Brightness: Set the brightness;

Contrast: Set the contrast;

Effect: Set special effects;

White Balance: Set white balance;

Settings: Set the image quality, size, tone, the default title and save location;

To My files: View the photo files stored on the phone and memory card.

In the camera viewfinder, press "OK" to take photo. After finished, press "OK" button to save the current picture; press "RSK" key to return to the viewfinder and the photo will not be saved. After saving, you can delete or rename the photo files. You can view the photos in [my files- phone memory / memory card my files- my photos].

Games

In the standby mode, press <menu> to access the **Main menu > Tools > Games**

The phone supports one game: Brick attack.

Profiles

In the standby mode, press <menu> to access the **Main menu>Profiles** and one of the following options:**General, Meeting, Outdoor, Silence, My Profile 1, My Profile 2.**

Personalize: You can select option for Ring type, Ring tone, Volume, Alerts

Ring Tone: You can select different rings as per you want it.

Ring Type: You can select one of the following options for call, SMS, Alarm, Scheduler : Ring, Vibration, Ring & Vibration, Ring After Vibration, One Beep ,Silence.

Volume: You can set up volume level for call, SMS Keypad Tone, Alarm, Earphone.

Alerts: You can select option for Connect Beep, Charger Beep, Minute Beep, Power on/Off, Low Battery Beep, Warning Tone, Keypad Tone.

FM Radio

Use this menu you can listen to broadcast by the local network. It can save 20 channels in your phone. Please make sure the headset is inserted in the phone firstly. The frequency channels are found according local signal strength.

Voice Record

Use this menu to record your voice.

Alarm

In the standby mode, press <menu> to access the **Main menu > Tools > Alarm**

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings.

Scheduler

In the standby mode, press <menu> to access the **Main menu > Tools > Scheduler**
Use this menu to enable you to keep track of reminders. It can even sound an alarm for any of these events.

Calculator

In the standby mode, press <menu> to access the **Main menu > Tools > Calculator**
Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

World Time

In the standby mode, press <menu> to access the **Main menu > Tools > World Time**
You can preview the time of world's major cities.

Stopwatch

In the standby mode, press <menu> to access the **Main menu >Tools > Stopwatch;**
Use this menu to time according to your needs.

Notepad

In the standby mode, press <menu> to access the **Main menu > Tools > Notepad**
Use this menu to store simple text message.

Currency Converter

In the standby mode, press <menu> to access the **Main menu > Tools > Currency Converter**
Using this menu, you can convert national currency.

16 Settings

The settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default status.

In the standby mode, press <menu> to access the **Main menu > Settings**

Display

In the standby mode, press <menu> to access the **Main menu > Settings > Display**

Wallpaper: You can select different wallpapers as per you want it.

Banner: Use this menu to choose whether the display shows a customized banner under the operation logo, when the phone is in the standby mode.

Backlight: You can control the time-out of the backlight on your phone.

Brightness: You can adjust the contrast of the display for varying lighting conditions.

Greeting Message: You can set it, its shows message in power on.

Phone setting

In the standby mode, press <menu> to access the **Main menu > Settings > Phone Setting**

Language: The phone supports two Languages: Bengali and English. You can select language as per you setting.

Auto Keypad Lock: Use this menu to set the keypad of your phone to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used.

Input Setting: Access this menu, you can set the phone's default input method

Power Off Time: Use this menu to set the phone what time power off.

Time/Date settings

Time Format

Use this menu to choose the display shows the time which 12 mode or 24 mode, when the phone is in the standby mode.

Date Format

Use this menu to choose the display shows the time which YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY mode, when the phone is in the standby mode.

Time/Date display

Use this menu to choose whether the display Time/Date.

Call Setting

In the standby mode, press <menu> to access the **Main menu > Settings > Call Setting**

Answer call: Use this menu to set the phone answer call method. Press any key to answer Call except **Left soft key** [Accept], **Right soft key** [Silence], **End key**.

Auto answer: Set the phone to answer the incoming call automatically after 5 sec.

Call forward: This network service reroutes incoming calls to a phone number that you specified.

Call waiting: Call if your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can accept, reject, or ignore the incoming call.

International prefix: International prefix setting

Voice privacy: Use this menu to protect your voice content during a call.

Firewall

In the standby mode, press <menu> to access the **Main menu > Settings > Firewall**

To access Firewall, you must enter the preset code. By default, the code is 0000. If none of this works, contact your wireless service provider for help.

Call Firewall: Use this menu to block or allow some numbers for incoming calls.

To use this facility please go to settings in menu > Firewall > Call firewall.

Black List: If you add any number under Black listed menu then it will reject the phone call automatically to Black listed number.

White List: If you add any number under White listed menu then it will reject the all phone calls automatically except to White listed number.

Settings: By settings you can disable and enable the functionality of White listed and black listed number as per your choice.

Privacy Firewall: Use this menu to protect your content of phonebook, messages and call history for accessing by other person. To access the menu, you must enter the preset lock code. By default, the preset lock code is 0000.

SMS Firewall: Use this menu to block some numbers for incoming messages.

Security

In the standby mode, press <menu> to access the **Main menu > Settings > Security**

To access security, you must enter the preset security code. By default, the code is 0000. If none of this works, contact your wireless service provider for help.

Phone lock : The phone lock feature protects your phone from unauthorized outgoing calls or unauthorized accessing to information stored in the phone. When phone is locked, to unlock, user must enter the preset security code. When the device is locked, you can still call the official emergency number programmed into your phone.

PIN Management: Enable, Disable, PIN change.

Change Security Code: By default, the preset lock code is 0000.

Factory Reset: Use this menu to reset the settings to factory settings and clear memory of the phone.

Phone info

In the standby mode, press <menu> to access the **Main menu > Settings > Phone Info**. You can get SW version 、 PRL version 、 and HW version.

17 Care And Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge	Please check if the charger is properly connects to the phone and the power source jack.
Can not power on	Please check if the battery level is too low; Please check if the batter is properly loaded; Please press Power Key enough time.
Insert the R-UIM card but can not read the information in the R-UIM card	Please check if properly inserted the R-UIM card; Please check if your R-UIM card is valid.
The mobile phone displays "Input PUK Code"	Please communicate with the service provider to get the PUK code and use it to unlock.
Can not make phone call	Please check if the phone number is valid. Please check if you are in service area.
Weak talk quality	Please check if the phone signal is strong enough; If you are in the building, please move the phone or move near the window.

Common problems	Check item
The contact can not get your voice when making phone call	Please check if your mic has blocked by fittings or other blocks.
Receiver sound is too low	Please check if your receiver volume has been adjusted to the maximum.
The mobile phone has a weak receive signal or usually drop in the phone call	Please check if the phone has a strong signal. If no signal, please use it in a strong signal place.
The screen display the information such as "No Service" or: Searching..."	Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry. Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.

18 Safe Information

Electronic Device

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your Mobile Phone. Consult the manufacturer to discuss alternatives.

Hospital

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where it is prohibited to use mobile phones.
- When you use your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not influence the person.

Storage Environment

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refueling point (service station). Users

are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger. When connecting the phone or any accessory to another device, read its user's

guide for detailed safety instructions. Do not connect incompatible products. As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Care and Maintenance

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.

- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes color. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

Emergency Call

You can use your phone for emergency calls. However, connections in call conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.

If you use the phone near the network's base station, it uses less power. Talk and

standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
 - If left unused, a fully charged battery will discharge itself over time.
 - Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
 - Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
 - Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

Select
Back

19 Troubleshooting Guide

1.Q: How long the standby time?

A: The theoretical maximum standby time is 700 hours.

2.Q: Why can not receive the SMS?

A: 1、 Please confirm whether RUIM card balance or not. Confirm whether the local network is at normal or not.

2、 SMS inbox must leaves space for the message.

3.Q: Why can not make a phone call?

A: 1、 Please confirm whether RUIM card balance or not. Confirm whether the local network is at normal or not.

2、 Whether the RUIM card is the designated operator or not.

3、 Please contact your local operator to resolve.

4.Q: Where can I see the download pictures and ringers?

A: Please enter the main menu my files directory, correspond with Image and Ringer directory.

5.Q: Whether to support the application of download brew or not?

A: Support. Make sure the adequate memory space of phone before downloading.

RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types HC-C380(FCC ID: SG71204HC-C380) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.042 W/kg and when properly worn on the body is 0.879 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must

accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help