

User Manual



Precautions

	<p>Please carefully read and observe the terms below:</p> <p>Safe power on Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.</p>
	<p>Safe transportation first Please observe all related local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.</p>
	<p>Turn off when in the hospital Please follow related limitations. Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane Please follow related limitations. Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.</p>
	<p>Turn off around exposure Area Please observe related limitations and do not use your mobile phone near an area where explosions can occur.</p>
	<p>Backup Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Use qualified after sales service Only a qualified technician can install or repair your mobile phone. Please contact the authorized service center in case of phone failure.</p>

Precautions



Accessories and batteries

Only use the authorized accessories and batteries and do not connect to incompatible manufacturers or products.

Your phone



Your phone

Back Camera

**Camera
flash**

 
Speaker



Battery Cover & Battery

Removing the Battery Cover

1. Hold the device firmly and locate the cover release latch.
2. Place your fingernail in the opening and remove the cover according to the arrow direction.




Installing the Battery

1. With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place
2. Ensure the battery is inserted in the phone. To charge the battery, plug in the charger connector at your phone (USB interface) and then plug the other end into an AC power socket. The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. Disconnect the charger from the phone. Disconnect the charger from the AC power socket.

Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

 
Battery Cover & Battery



SIM Card & microSD


Installing the SIM Card

 1. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

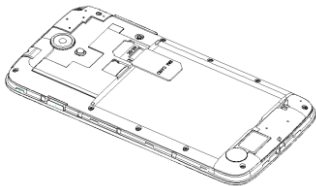

Installing the microSD Memory Card

 1. Slide microSD card into the SD card slot with the metallic pins facing downwards. Push the card until it locks into place.

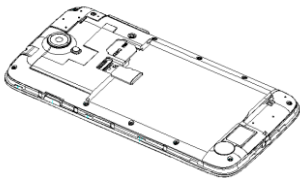


Lock & Unlock Screen

Locking the Screen

To save your battery, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing the Power Key

Unlocking the Screen

 
To wake up the touch screen, just press the Power Key again, and then drag the lock icon to the right on the screen to unlock according to the clue on the screen.

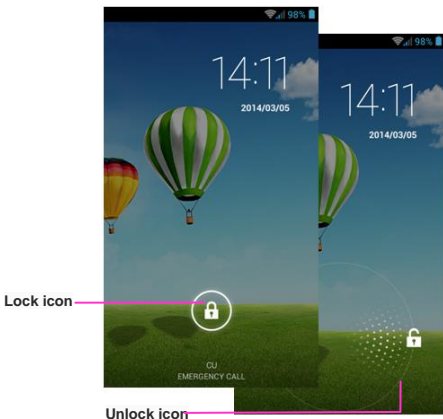

Home Screen

Status Bar and Notifications

 
The status bar at the top of the screen contains icons that tell you about messages and phone status and shows what's going on in your phone. You can drag down the status bar to open the Notification panel and get more information.

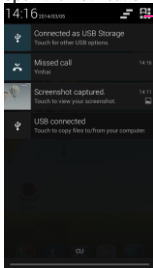

Touch to open the toolkits panel

Toolkits

 In the toolkits you can quickly start the common applications such as Bluetooth, Wi-Fi and so on.

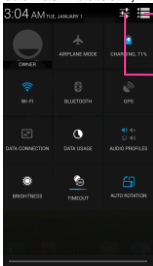

Touch to open the Notification panel

Touch to open the system settings

Customizing

The phone provides you with Options menus.
Touch the Menu Key to enter customizing :




Touch to select a wallpaper, and set it as the wallpaper of Home screen

Touch to enter the Settings, and set the system preferences

Touch to enter the Apps, and manage applications

 
Phone Function

Making a Call

Touch  to enter the Dial pad.

The phone offers you several ways of making a call.

You can make a call through the Phone, People, Messaging and Call log.

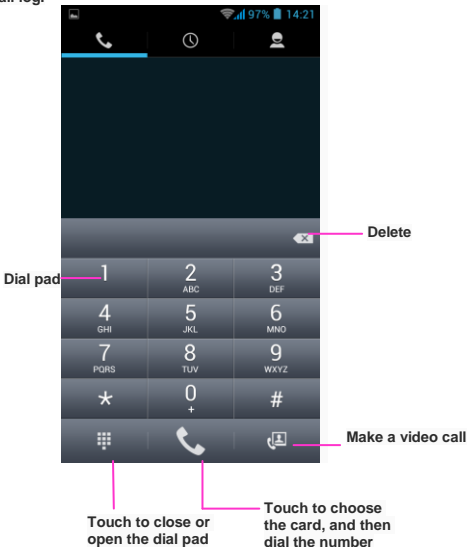


Connecting to WLAN

Connecting to WLAN

1. You can connect to the WLAN, and use it to surf the Internet at high speed and download.

Touch Launcher → Settings → WLAN.

 2. Turn on the switch to activate WLAN.




3. Touch WLAN.

4. Choose an available WLAN network to connect



 5. Secured networks are indicated with a Lock icon. If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

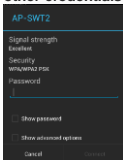

6. Touch "Connect".

Accessing the Internet

Using the Browser

Touch  to enter the Browser.



Touch to enter the Bookmarks

 
Touch to look through the thumbnails of all web page windows, and switch the web pages

Touch to forward the browser to the next web page

Touch to go back to the previous page


Accessing the Internet


When you are viewing the web page, touch the Menu Key, the following options are available to you:

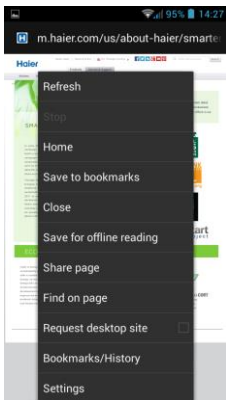

Taking Pictures/Videos


Taking pictures and videos

 
Touch  to enter the Camera.

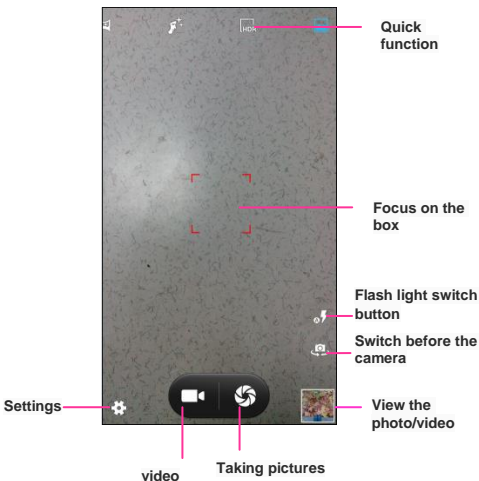


Playing Music

Music Player

 Touch  to enter Music.

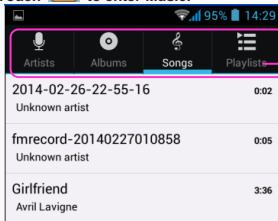

 Categories
Select Playlists,
Artists, Albums,
Songs, and so on

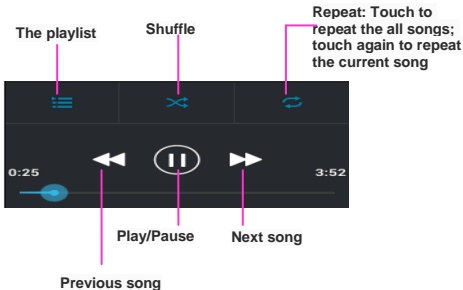

Troubleshooting

Frequently Asked Questions	Cause and Solution
Fail to turn on	<p>Press the Power Key for over 1 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, retry to turn it on;</p> <p>Check if battery is appropriately charged.</p>
Fail to connect network	<p>Weak signal. Please try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information;</p>
Poor quality of calling	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try searching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p>
SIM Card Error	<p>Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card.</p> <p>The SIM card is not installed.</p> <p>The SIM card is damaged. Please contact your network service provider.</p>
Callers cannot contact you	<p>Please check if the mobile phone is on and connected with the network.</p> <p>Please check if the Call barring or call divert is activated.</p> <p>Please check if the SIM card is valid.</p>
Fail to set some functions	<p>Wrong operation.</p> <p>The network provider does not support the function, or you have not applied for it.</p>

Radio Frequency (RF) Energy

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and Canada RSS 102, and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C, and Canada RSS 102. This device has been tested, and meets the FCC, IC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: SG71401W867

For this device, the highest reported SAR

value for usage against the head is 0.345 W/kg, for usage near the body is 1.110 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

SAR compliance for body-worn operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this device and the your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use of such body-worn accessories should be avoided.

FCC Compliance

This device complies with part 15 of the

FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION! Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful

interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.