

Haier-W716S

User Manual

FCC ID: SG71408W716S

Android 4.4(Jelly Bean) is the Operating System for your
Touch Screen Smartphone –Haier-W716S.

INTRODUCTION

Thanks for choosing the Haier W716S, Single SIM Android smart phone. This smart phone is running on Android OS, v4.4. If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

* The Manufacturer reserves the right for the changes in the manual without advanced notice.

Table of Contents

1	Safety	4
1.1	Safety Precautions	4
1.2	Using your phone safely	5
2	Understanding your Phone	8
2.1	Your Phone	8
2.2	Description Icons	9
2.3	Inserting & Removing the Battery.....	9
2.4	Charging the battery.....	10
2.5	Power ON/OFF.....	11
2.6	Enter Main Menu	11
2.7	Enter Sub Menu	11
2.8	Use Notification Panel.....	11
2.9	Expand Main Interface	11
2.10	Add icons on the main interface	12
2.11	Move icons on the main interface	12
2.12	Delete icons on the main interface	12
2.13	Change wallpapers	12
2.14	Install APK through File Manager.....	12
3	Using your Phone	14
3.1	Main Menu & Its Functions.....	14
3.2	Wi-Fi	18
4	Inputting Text	20
5	Maintenance	21
6	Taking Care of your Device	22
7	FCC Regulations:	23

1.1 Safety Precautions



Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

- Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.
- Information about the meaning of Logo WEEE (Waste Electrical and Electronic Equipment):



The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserving natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment.

- Caution: risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

1.2 Using your phone safely



On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs, radios or automated office equipment.



While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.



Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



To prevent possible hearing damage, do not listen at high volume levels for long periods.


2 Understanding your Phone


2.1 Your Phone

 


Keys/Touch Points















Power Key: To power on/off Haier W716S, press and hold power key for a few seconds of your phone. When Haier W716S is ON, press the power key once to activate or deactivate the screen.

Home key (): Touch the key to return to the home screen. In idle screen, touch and hold the key to view recently accessed features.

Options key (): In standby mode, touch the key to set wallpaper, manage apps, access to system settings. Touch it to view menu options.

Back key (): Touch to go back to the previous menu.

2.2 Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Flight Mode
	3G network in use.		2G network in use.
	You have missed calls.		A clock alarm is active.
	In call		Bluetooth ON

2.3 Inserting & Removing the Battery

Inserting the Battery

1. Open the battery cover on the back of your phone.
2. Align the battery's contact points with those of the phone and gently press the battery down into place.
3. Replace the battery cover clicking it back into position.

Inserting the Battery

Closing the Back Cover



Removing the battery

1. Switch off your phone.
2. Open the battery cover.
3. Lift the battery up and out of your phone.

Open the Back Cover

Removing the Battery



Removing the Battery the Battery

Note: The Schematics may differ from the actual product, it is just for the demonstration of function.

2.4 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged. It is easy to do & can be done in 4 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug.

2.5 Power ON/OFF

Press the power key to power-ON/OFF the phone.

When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

● **Input SIM PIN:** If you've set a PIN for your SIM.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.

2.6 Enter Main Menu

In Idle mode, press the Menu key to enter the main menu on the desktop and click the Home key to return.

2.7 Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

2.8 Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

2.9 Expand Main Interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools.

Slide your finger horizontally on the main interface to extend to the left or right area of the main interface.

2.10 Add icons on the main interface

You can long press the icon on the main menu until it's enlarged and the mobile phone vibrates, and copies the icons in the main menu to the main interface.

2.11 Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
2. Drag the icon to the desired position and then release it.

2.12 Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
2. Drag the icon to "Remove" to delete it.

2.13 Change wallpapers

1. Long press "Touch screen" to open the menu.
2. Choose from "Gallery /"Live Wallpapers"/ "Video Wallpaper" /"Wallpapers", and Select the wallpaper and press "Set wallpaper" to complete.


2.14 Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

- a)Please copy the downloaded APK file into the SD card, and then insert the SD card into the phone.
- b)In Idle mode, click Main Menu to enter the main menu.

- c)Click "File Manager" to enter the directory of SD card.
- d)Click the APK file you wish to install, and follow the installation wizard.

3.1 Main Menu & Its Functions

Select  to enter the main menu...

Allow you to view a list of features available in your phone-

1. Clock

Allow you to set the Alarm from Clock.

2. Browser

Browse the internet.

3. Calculator

 
Allow you to make tedious calculations quickly.

4. Calendar

View the calendar & add events.

5. Camera

Allow you to click pictures anytime you want. Your Haier W716S has High Definition camera supporting many special features which ensures you always click good quality of pictures and stores them under the Gallery folder. In Camera, easily choose Camcorder to record Video Files.

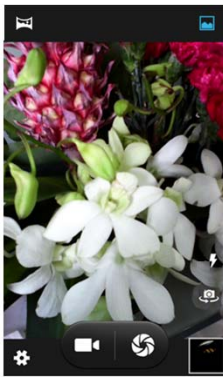


6. Contact

To see your list of Contacts. Access phonebook through this function.

7. Email

 Allows you set up your POP/IMAP email accounts.

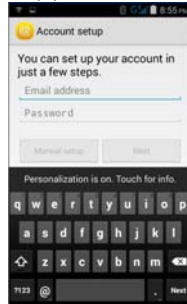

8. Gallery

 
Allow you to save & view photos & videos.

9. Messaging

Allow you to view messages sent & received as a thread.

10. Music

View the list of songs available in your phone. View the artists, albums, playlists & more.

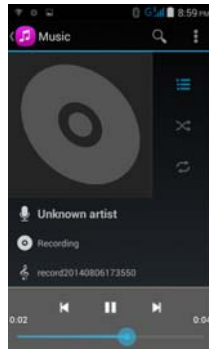

11. Phone

Allow you to make quick outgoing calls.

12. File Manager

You could install the files in APK format & also view your files.

13. Settings

Modify settings under the following-

- Wi-Fi
- Bluetooth
- Data Usage
- More...
- Audio profiles
- Display

- Storage
- Battery
- Apps
- Location access
- Security
- Language & input
- Backup & reset
- Add account
- Date & time
- Scheduled poweron & off
- Accessibility
- Developer options
- About phone

14. SIM Toolkit

This service is provided by the operator. It provides many types of personalized message services.

15. Sound Recorder

Allows you to record sounds.

16. Videos

 
View from list of videos.




3.2 Wi-Fi

Haier W716S supports Wi-Fi which allows Android later devices with the appropriate hardware to connect directly to each other via Wi-Fi without an intermediate access point. Using the APIs, you can discover and connect to other devices when each device supports Wi-Fi , then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.

1. After turning on the feature click "Search" at the bottom and it will display the available devices:

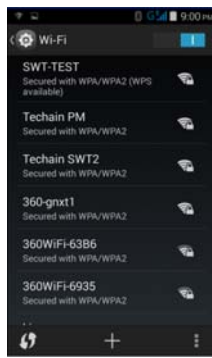

 2. Click "360-gnxt1" (in this case specifically) and it will give you option to connect:

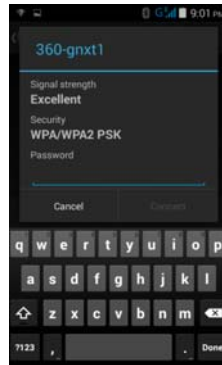


3. Click "connect" and the devices will be connected

4 Inputting Text

Intelligent keyboard

 Haier W716S automatically corrects and suggests words as you type.

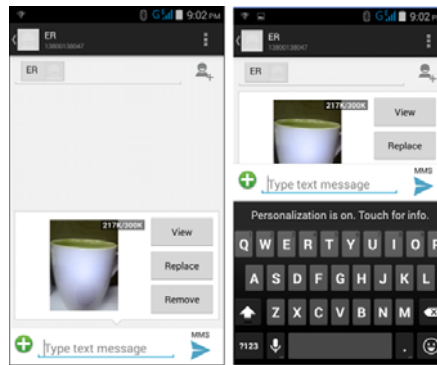

Cut, Copy and Paste

Touch and hold text content to bring up the magnifying glass, and then slide your finger to move the insertion points. Then choose to cut, copy, or paste. It is very easy to copy text from web pages, email, or text messages.

5Maintenance

Use a dry soft cloth to wipe general dirt.
Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

6 Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

7FCC Regulations:

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- SAR Information

Your device has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include safety margins designed to assure the safety of all persons, regardless of age and health.

SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1-gram of tissue. The highest SAR value reported to the FCC is 1.401 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.