

Haier W717

User Manual

Android 4.4 is the Operating System for your Touch
Screen Smartphone –Haier-W717.

INTRODUCTION

Thanks for choosing the Haier W717, Dual SIM Android smart phone based on 1.2 GHz Dual Core Processor. This smart phone is running on Android OS, v4.4. If you'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it.

And don't worry if the pictures we use to demonstrate your phone's functions look a little different from what you see on its screen. It's the functions that matter.

* The Manufacturer reserves the right for the changes in the manual without advanced notice.

Safety

1.1 Safety Precautions



Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.

- Use cell phone when the signal strength is good. Keep your calls short or instead use headset or send a text message. This advice applies especially to children, adolescents and pregnant women.
- If you are using a Bluetooth headset device, please make sure it has a low power emitter.
- Caution: risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

1.2 Using your phone safely



On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.



Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your phone may cause interference when used near TVs,

radios or automated office equipment.



While Flying

Your phone can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.



In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



At a Petrol Station

Don't use your phone at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.



Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.



Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.



Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.



Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.



Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.



Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



To prevent possible hearing damage, do not listen at high volume levels for long periods.















Understanding your Phone

1.3 Your Phone



Name	Function
Power Key	Long press To turn on / off the phone from, and short press to turn on / off the screen backlight or screen lock the phone
Ear Piece	Receive the voice
Sensors	<ol style="list-style-type: none"> 1. Ambiance sensor, for detecting the light or surrounding brightness 2. Proximity sensor, used to measure distance between the phone and turn off the display during a call
Front Camera	Capturing images using front camera
Microphone	Voice receiver
Menu Key	To enter the option menu
Home Key	Short Press to return to home screen and long press to show the list off previous application opened
Return Key	Return to the previous menu or screen
The volume keys	Increase volume level or Decrease volume level
Headset Port	To connect your 3.5" handsfree or audio port
Micro-USB Port	To connect the charger or data cable
Flash Light	Brighten the environment when you capture images.
Back Camera	Capturing images using Back camera
Loud Speaker	Produces the sound, phone ringtone, notification and loud the conversation sound

1.4 Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Flight Mode
	3G network in use.		2G network in use.
	You have missed calls.		A clock alarm is active.
	In call		Bluetooth ON

1.5 Inserting & Removing the Battery

Inserting the Battery

1. Open the battery cover on the back of your phone.
2. Align the battery's contact points with those of the phone and gently press the battery down into place.
3. Replace the battery cover clicking it back into position.

Inserting the Battery



Closing the Back Cover



Removing the battery

1. Switch off your phone.
2. Open the battery cover.

- Lift the battery up and out of your phone.

Open the Back Cover



Removing the Battery



Note: The Schematics may differ from the actual product, it is just for the demonstration of function.

1.6 Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used, but is not charged. It is easy to do & can be done in 3 simple steps below:

- Connect the charger to your phone, and plug it into a socket.
- The battery indicator in the corner of the screen will scroll to show you it's charging.
- When fully charged, the battery indicator will stop scrolling.
- Disconnect the charger from your mobile, and unplug.

1.7 Power ON/OFF

Press the power key to power-ON/OFF the phone.


When you turn your phone on, it'll automatically check the SIM and show the following information on screen:

- **Input SIM1 PIN:** If you've set a PIN for your SIM1.
- **Input SIM2 PIN:** If you've set a PIN for your SIM2.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it. It is applicable for both the SIMs if you are using 2 SIM Cards.

1.8 Enter Main Menu

In Idle mode, press the All Apps Icon  to enter the main menu on the desktop and click the Home key to return.

1.9 Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press **Back Key** to return to the previous menu, and press the **Home Screen** to return to the home screen.

1.10 Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

1.11 Expand Main Interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools.

Slide your finger horizontally on the main interface to extend to the left or right area of the main interface.

1.12 Add icons on the main interface

You can long press the icon on the main menu until it's enlarged and the mobile phone vibrates, and copies the icons in the main menu to the main interface.

1.13 Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
2. Drag the icon to the desired position and then release it.

1.14 Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the mobile phone vibrates.
2. Drag the icon to "Remove" to delete it.


1.15 Change wallpapers

1. Long press "Touch screen" to open the menu.
2. Choose from "Wallpapers", and Select the wallpaper and press "Set wallpaper" to complete.

1.16 Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

a) Please copy the downloaded APK file into the SD card, and then insert the SD card into the phone.

b) In Idle mode, click the All Apps Icon  to enter the main menu.

c) Click "File Manager" to enter the directory of SD card.

d) Click the APK file you wish to install, and follow the installation wizard.

e) Comment on the memory available for the user:

Your Smartphone Haier has an internal memory of 4 GB (eMMC) and 512 MB of RAM ; the memory used by the operating system (OS) and the preinstalled applications is 2 GB. The memory available for the user is 2 GB.

2 Using your Phone

2.1 Main Menu & Its Functions

Select the All Apps Icon  to enter the main menu...

Allow you to view a list of features available in your phone.

1. Clock

Allow you to set the Alarm from Clock.

2. Browser

Browse the internet. Search engine default set as Google.

3. Calculator

Allow you to make tedious calculations quickly.

4. Calendar

View the calendar & add events.

5. Camera

Allow you to click pictures anytime you want. Your Haier W717 has High Definition camera with LED Flash supporting many special features which ensures you always click good quality of pictures and stores them under the Gallery folder. In Camera, easily choose Camcorder to record Video Files.

 


6. Contact

To see your list of Contacts. Access phonebook through this function.

7. Email

Allows you set up your POP/IMAP email accounts.

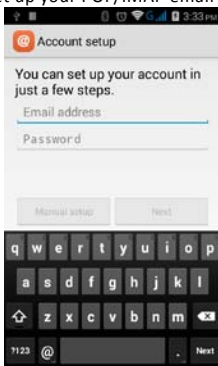

8. Gallery

Allow you to save & view photos & videos.

9. Play Store

Log in to your Gmail account to view all the applications & download from thousands of applications available under the Google Market called Play Store.

Note:

 
To use this app please connect to an internet connection.

10. Messaging

Allow you to view messages sent & received as a thread.

11. Music

View the list of songs available in your phone. View the artists, albums, playlists & more.

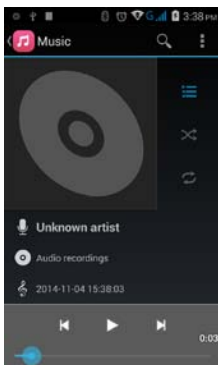

12. Phone

Allow you to make quick outgoing calls.

13. File Manager

You could install the files in APK format & also view your files.

14. Settings

Modify settings under the following-

- SIM management
- Wi-Fi
- Bluetooth
- Data Usage
- More...
- Audio profiles
- Display
- Storage
- Battery
- Apps
- Location
- Security
- Language & input
- Backup & reset
- Add account
- Date & Time
- Scheduled power on & off
- Accessibility
- Developer options
- About phone

15. SIM Toolkit

This service is provided by the operator. It provides many types of personalized message services.

16. Sound Recorder

Allows you to record sounds.

17. Videos

View from list of videos.



 
2.2 Wi-Fi Direct

Haier W717 supports Wi-Fi Direct which allows Android later devices with the appropriate hardware to connect directly to each other via Wi-Fi without an intermediate access point. Using the APIs, you can discover and connect to other devices when each device supports Wi-Fi Direct, then communicate over a speedy connection across distances much longer than a Bluetooth connection. This is useful for applications that share data among users, such as a multiplayer game or file sharing.


a. Enter "Settings" interface . Then click "Wi-Fi direct" to access Wi-Fi direct feature. Then turn on the feature.



b. After turning on the feature click "Search" at the bottom and it will display the available devices:

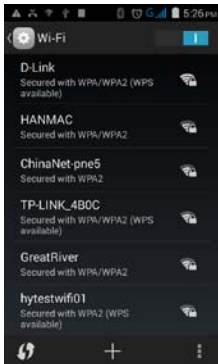

 c. Click the available devices, e.g. D-Link, and it will give you option to connect:

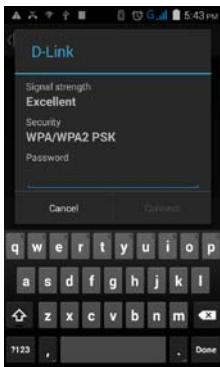


d. Click "connect" and the devices will be connected

3 Inputting Text

Intelligent keyboard

 Haier W717 automatically corrects and suggests words as you type.

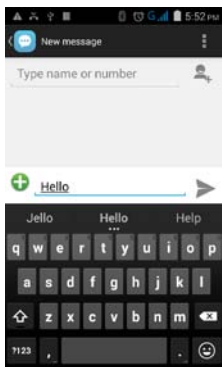

Cut, Copy and Paste

Touch and hold text content, and then slide your finger to move the insertion points, then choose to cut, copy, or paste. It is very easy to copy text from web pages, email, or text messages.

4Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

5 Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

FCC statements:

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired

operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device

types W717 (FCC ID: SG71411HW-W717) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.465 W/kg and for head is 0.527W/kg.

Simultaneous RF exposure is 1.573W/Kg.

This device was tested for typical body-worn operations with the back of the handset kept 10mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and

similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.