
Basic Functions

Switching On/Off

In the power off status, long press the **Power Key** to switch on the phone.

In the power on status, long press the **Power Key** to switch off the phone.

Making phone call

Making phone call by dialing number

1. In the standby mode, enter the phone number you want to dial, press the Dial key and select SIM 1 or SIM2 to make the call.
2. To end the call, press the End Key.

Answering the call

Answer or reject an incoming call

1. To answer the call, press the Dial key or Left soft key.
2. To reject the call, press the End key or Right soft key.

1 Phonebook

You can store names and phone numbers in the phone and the SIM 1/2 card memory

2 Message

The messages defined in the desktop location

Your phone is capable of creating, sending and receiving text and multimedia messages. On message edit screen, you can edit recipients and message contents

3 Call center

Call logs

You can enter the menu to check missed calls, dialed calls, received calls and rejected calls. You can also select Delete all to clear all call logs.

Call settings

You can set call settings.

4 File Manager

In the menu you can manage your resource files on the SD card.

5 Camera

You can take photos and then save the photos to your memory card.
In the viewfinder, press left soft key to enter and complete different kinds of operations.
You also can switch between camera and video recorder.

6 Haier Apps

Enclosed is the haier customer calls and commonly used haier applications

7 FM radio

You can play the FM radio with this application.

8 Organizr

Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and

Bluetooth

After the bluetooth connected to the equipment matching, it can support bluetooth headset to listen to music, make a phone call and transfer files

Calendar

Once you enter this menu, there is a monthly-view calendar for you to refer to.

Alarm

Use this menu to set alarms.

Torch

Turn on/off the torch as per your need. In idle screen, long key press OK key to activate/deactivate the torch light.

9 Settings

Profiles

Your phone provides you with various profiles. You can customize the ringtone and other settings for profile depending on the environment and need. You can activate or deactivate a profile

Phone settings

To set parameters related to phone, such as time and date, language, Schedule power on/off, Display, Dedicated keys, Misc. settings etc.

Security settings

You can set SIM1/2 security and phone security, the phone initial password is 1234.

Network settings

The network parameters associated Settings

Dual SIM settings

Can be arbitrary switching between single and double card or flight mode

Connectivity

Data connection options

Restore factory settings

Input default password 0000 to restore factory settings.

10 Multimedia

Image viewer

Enter this menu, you can view pictures

Video recorder

You can record videos and then save the videos to your memory card.

In the viewfinder, press left soft key to enter and complete different kinds of operations.


You also can switch between video recorder and camera.

Video player

You can play the video with this application. In the video play list interface, you can select the video from the list to play

Audio player

You can play the music with this application. In the music play interface, you can select the music from the List to play.

 Notice:

Listen to music at a moderate level. Listening to high volume music may damage your hearing.

Sound recorder

You can use this function to record audio files.

11 Games

Have a Sky Gift for you to play game.

12 Services

This function enables you to view the internet. You can start to view only by starting corresponding way.

Note: Consulting the local network operator for related fee and specific setup.

14 Other instructions

Battery warnings

1. Use only the specified battery charger.

-
2. To prevent injury or burns, do not let metal objects contact or short-circuit the battery connectors.
 3. Do not throw the battery in fire, it has the threat of explosion.

Care and Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge	*Please check if the charger is properly connected to the phone and the power source jack.
Can not power on	Please check if the battery level is too low; Please check if the batter is properly loaded; Please press Power Key enough time.
Insert the SIM card but cannot read the information in the SIM card	Please check if properly inserted the SIM card; Please check if your SIM card is valid.
The mobile phone displays "Input PUK Code"	Please communicate with the service provider to get the PUK code and use it to unlock.

Common problems	Check item
Can not make phone call	Please check if the phone number is valid. Please check if you are in service area.
Weak talk quality	Please check if the phone signal is strong enough; If you are in the building, please move the phone or move near the window.
The contact can not get your voice when making phone call	Please check if your microphone has blocked by fittings or other blocks.
Receiver sound is too low	Please check if your receiver volume has been adjusted to the maximum.
The mobile phone has a weak receive signal or usually drop in the phone call	Please check if the phone has a strong signal. If no signal, please use it in a strong signal place.

Common problems	Check item
The screen display the information such as "No Service" or: Searching..."	Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry. Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.

Packing list

No	Content	Quantity/unit
1	Handset	1pcs
2	Battery	1pcs
3	Travel Charger	1pcs
4	User Manual	1pcs
5	Warranty Card	1pcs

FCC RF Exposure Information and Statement

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. The SAR limit of USA (FCC) is 1.6 W/kg averaged. Device types: Mobile Phone (FCC ID: SG7201707M109) has also been tested against this SAR limit. SAR information on this and other pad can be viewed on - line at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device FCC ID number for search. This device was tested simulation typical 10mm to body. To maintain compliance with FCC RF exposure requirements, use accessories should maintain a separation distance between the user's bodies mentioned above. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.