

User Manual of The Bluetooth speaker

The Bluetooth speaker is a “Power Bank”, and can charge to iPhone, mobile, etc

Here is the diagram for your reference.



Using Guide of Bluetooth speaker

1. Power ON/OFF

Push the power button to ON, the blue LED will sparkle, the voice prompt of “Bluetooth music play system has been turned on” will come out. When you press the Vol. + and Vol. – at the same time, it can switch Chinese to English. Push the power button to OFF, the blue LED will off.

2. Audio

The voice prompt of “Bluetooth mode” will come out automatically once the power button turned ON. Insert the audio cable into the Aux in port, the voice prompt “Aux in mode” will come out, and then can play the audio signal and the blue LED will on for long time. When press the ►||⏏ Button, music can play or pause.

Note: When the speaker play music via Bluetooth or TF card, insert the audio cable, it will play audio signal.

3. Bluetooth

The voice prompt of “Bluetooth mode” will come out from speaker after the power button turned ON. And the Bluetooth device can search this product directly, and then the Bluetooth device can show the pairing name: customized pairing name. Please confirm and choose the pairing name on your Bluetooth device, the speaker will pair it automatically, If it needs password, please input “0000”. After it paired successfully, the voices prompt of “Bluetooth pairing successfully” will come out.

4. Bluetooth reconnection

4.1 When the speaker play the Bluetooth signal, close the Bluetooth function of speaker or Bluetooth device, open the Bluetooth function of speaker or Bluetooth device again, the voice prompt “Bluetooth pairing successfully” will come out, the Bluetooth device is paused now, press the play button can play Bluetooth signal(some Bluetooth device needn’t this step).

4.2 There is voice prompt “Bluetooth wait for pairing” when the distance between speaker and Bluetooth device more than 10m, then the voice prompt “Bluetooth pairing successfully” will come out as the distance is less than 10m(the apart time within 5 minutes). The Bluetooth device is paused now, press the play button can play Bluetooth signal (some Bluetooth device needn’t this step).



5. TF card

The voice prompt “Bluetooth mode” will come out when the speaker has been turned on. Insert the TF card, there is voice prompt “MP3 mode”, then the speaker will play TF card signal directly, and the blue LED sparkle. Now insert the audio cable, the voice prompt “Aux in mode” will come out from speaker, it turns to audio signal.

Note: When the speaker play music via Bluetooth, then insert the TF card, it will play TF card signal.

6. Play/Pause, Vol.+ /Vol.-, Next/Previous

6.1 Play/Pause

1) When the speaker plays music via Bluetooth or TF card, press  , it will be paused and the blue LED will be bright for long time, press this button  again, it will play music and the blue LED will sparkle.

6.2 Vol.+ /Vol.-

When the speaker plays music via Bluetooth or TF card, long press Vol. +, the volume will be up, press it until the volume is the highest, there is “beep” from the loudspeaker; long press Vol.-, the volume will be down.

6.3 Next/Previous

When the speaker plays music via Bluetooth or TF card, short press Vol. +, the speaker will skip to next song; short press Vol.-, it will skip to previous song.

7. Charging

It indicates the low power when play music off and on, please charging.

Make the USB cable connect to MICRO 5PUSB, and insert it into the MICRO 5PUSB port, and charging with USB or other USB port 5V. The red LED will be on during the charging, When it is full, the red LED will turn to be green.

Note: it will be better to charge another 1-2H after it is full.

Warning:

- Do choose adapter from regular manufacturer.
- Do charge the speaker if it will not be used for a long time (over three months).

8. Charge to other products

There are 8 adapters in packaging, choose proper adapter to charge for your other products. Insert the USB cable into USB output port.

9. Earphone function

When the speaker are playing the music, insert the earphone into the speaker bottom earphone port, speaker will turn to earphone output. Take out the earphone, the loudspeaker will restore.

10. Parts list

- 10.1 User Manual
- 10.2 5 & 1 Charging cable
- 10.3 Audio Cable
- 10.4 Pouch Bag



5 & 1 Charging cable



Audio Cable



Pouch Bag

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation