1-1. Please Click "Install Bluetooth Driver" Item.



1-2. Please Click "Install" icon.

Bluetooth [™] Settings
Setup Program
Install(v4.0.16(C))
Show release note
Browse this folder
Close

1-3. Please Click "Next"



1-4. Please Choose "I accept the terms in the license agreement", then click "Next"



Using the telephone kit

1-1. Double Click the "Blutooth VoIP Phone" icon on your desktop.

1-2. Check "Allow this program to use Skype". Click "OK"



Chapter 3: Exploring the Telephone kit Menu

2

Icons shown on the Handset

lcon	Meaning	lcon	Meaning
ŧ	Homepage	Ð	Contacts
\$	Ring Bell		Call List
6	Skype out account	6	Skypeme
8	Do Not Disturb	0	Online
8	Offline	0	Away
8	Not Available		
6	Making calls	6	In ChangeStatus Mode
*	Configuration	۹	Status-SkypeMe
8	Status-Offline	0	Status-Invisible
•	Status-Not Disturb	0	Status-N/A
0	Status-Away	0	Status-Online
-	Battery Full (The black area goes	N	Charging

	lower as the battery charge runs		
	low)		
INO	Battery Empty	Full	Battery Full (when you are
			charging)

Function Keys:

	Sync Contacts		Configuration
C	Cancel		Off-hook
			Make a call
			Answer a call
A	List (Up/Down)p	Ô	Power ON/OFF
			On-hook (hand-up)
			End a call
			Exit

Configurations

Press 💷 to enter configuration mode

Function Introductions

Functions	Descriptions
Call List→Missed	Display missed call lists
Call List→Incoming	Display Incoming call lists
Call List→Outgoing	Display Outgoing call lists
ChangeStatus	Status options: "SkypeMe", "Online", "Away", "N/A", "Not Disturb",
	"Invisible", "Offline"
Credit	Showing how many skype out credits you have
Ringer	Test ringer
BT Pairing	Pair Bluetooth devices
F/W Version	Showing F/W version installed in your BHP-210
F/W Upgrade	Upgrade firmware

Chapter 4: Guide to Basic Functions

How to make a call?



How to answer a call?



How to make a conference call?

A. invite another contact when you are chatting

- 1. Press **1** to go to the contact list menu.
- 2. Make 1st call



to select

- qqkoala 1. P2P CALL
- 4. Select CON CALL 2. CON CALL to invite 2nd contact to join this conference call with

1st contact

5. Select "P2P CALL" to hold 1st call and talk to 2nd contact.

B. invite contacts and conference them together

- 1. Press **(**) to go to the contact list menu.
- 2. Press "*" to mark the contact you want to include in this conference call. (Conference participants (max 4+host)
- 3. Press to start this conference call

How to redial the last call? (to be implemented)

- 1. Press **to** redial the last call.
- 2. Select the contact (from the outgoing call list) you want to dial to make a call.

How to redial any call from Call List?



Appendix

Troubleshooting

Problem: Popup "Please keyin the BT MAC address like xx:xx:xx:xx

1. Please input the MAC address of your Bluetooth Phone.

Note: You can find the device address of your BHP-210 from it's back label* Note: please remove the battery to find the back label